

STRENGTH OF MATERIALS

PART I


Elementary Theory and Problems

By

S. TIMOSHENKO

*Professor of Theoretical and Engineering Mechanics
Stanford University*

SECOND EDITION—TENTH PRINTING

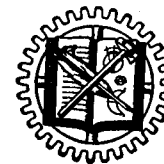

D. VAN NOSTRAND COMPANY, INC.

TORONTO

NEW YORK

LONDON

NEW YORK

D. Van Nostrand Company, Inc., 250 Fourth Avenue, New York 3

TORONTO

D. Van Nostrand Company, (Canada), Ltd., 228 Bloor Street, Toronto

LONDON

Macmillan & Company, Ltd., St. Martin's Street, London, W.C. 2

Copyright, 1930, 1940 by
D. VAN NOSTRAND COMPANY, Inc.

All Rights Reserved
This book, or any parts thereof, may not be
reproduced in any form without written per-
mission from the author and the publishers.

First Published, May 1930
Reprinted, March 1932, January 1936
February 1938

Second Edition, June 1940
Reprinted, October 1941, July 1942
January 1944, August 1944, May 1945
May 1946, February 1947, August 1947
August 1948

PRINTED IN THE UNITED STATES OF AMERICA
BY LANCASTER PRESS, INC., LANCASTER, PA.

PREFACE TO THE SECOND EDITION

In preparing the second edition of this volume, an effort has been made to adapt the book to the teaching requirements of our engineering schools.

With this in view, a portion of the material of a more advanced character which was contained in the previous edition of this volume has been removed and will be included in the new edition of the second volume. At the same time, some portions of the book, which were only briefly discussed in the first edition, have been expanded with the intention of making the book easier to read for the beginner. For this reason, chapter II, dealing with combined stresses, has been entirely rewritten. Also, the portion of the book dealing with shearing force and bending moment diagrams has been expanded, and a considerable amount of material has been added to the discussion of deflection curves by the integration method. A discussion of column theory and its application has been included in chapter VIII, since this subject is usually required in undergraduate courses of strength of materials. Several additions have been made to chapter X dealing with the application of strain energy methods to the solution of statically indetermined problems. In various parts of the book there are many new problems which may be useful for class and home work.

Several changes in the notations have been made to conform to the requirements of American Standard Symbols for Mechanics of Solid Bodies recently adopted by The American Society of Mechanical Engineers.

It is hoped that with the changes made the book will be found more satisfactory for teaching the undergraduate course of strength of materials and that it will furnish a better foundation for the study of the more advanced material discussed in the second volume.

S. TIMOSHENKO

PALO ALTO, CALIFORNIA
June 13, 1940

PREFACE TO THE FIRST EDITION

At the present time, a decided change is taking place in the attitude of designers towards the application of analytical methods in the solution of engineering problems. Design is no longer based principally upon empirical formulas. The importance of analytical methods combined with laboratory experiments in the solution of technical problems is becoming generally accepted.

Types of machines and structures are changing very rapidly, especially in the new fields of industry, and usually time does not permit the accumulation of the necessary empirical data. The size and cost of structures are constantly increasing, which consequently creates a severe demand for greater reliability in structures. The economical factor in design under the present conditions of competition is becoming of growing importance. The construction must be sufficiently strong and reliable, and yet it must be designed with the greatest possible saving in material. Under such conditions, the problem of a designer becomes extremely difficult. Reduction in weight involves an increase in working stresses, which can be safely allowed only on a basis of careful analysis of stress distribution in the structure and experimental investigation of the mechanical properties of the materials employed.

It is the aim of this book to present problems such that the student's attention will be focussed on the practical applications of the subject. If this is attained, and results, in some measure, in increased correlation between the studies of strength of materials and engineering design, an important forward step will have been made.

The book is divided into two volumes. The first volume contains principally material which is usually covered in required courses of strength of materials in our engineering

schools. The more advanced portions of the subject are of interest chiefly to graduate students and research engineers, and are incorporated in the second volume of the book. This contains also the new developments of practical importance in the field of strength of materials.

In writing the first volume of strength of materials, attention was given to simplifying all derivations as much as possible so that a student with the usual preparation in mathematics will be able to read it without difficulty. For example, in deriving the theory of the deflection curve, the *area moment method* was extensively used. In this manner, a considerable simplification was made in deriving the deflections of beams for various loading and supporting conditions. In discussing statically indeterminate systems, the *method of superposition* was applied, which proves very useful in treating such problems as continuous beams and frames. For explaining combined stresses and deriving principal stresses, use was made of the *Mohr's circle*, which represents a substantial simplification in the presentation of this portion of the theory.

Using these methods of simplifying the presentation, the author was able to condense the material and to discuss some problems of a more advanced character. For example, in discussing torsion, the twist of rectangular bars and of rolled sections, such as angles, channels, and I beams, is considered. The deformation and stress in helical springs are discussed in detail. In the theory of bending, the case of non-symmetrical cross sections is discussed, the *center of twist* is defined and explained, and the effect of shearing force on the deflection of beams is considered. The general theory of the bending of beams, the materials of which do not follow Hooke's law, is given and is applied in the bending of beams beyond the yielding point. The bending of reinforced concrete beams is given consideration. In discussing combinations of direct and bending stress, the effect of deflections on the bending moment is considered, and the limitation of the method of superposition is explained. In treating combined bending and torsion, the cases of rectangular and elliptical cross sections are dis-

cussed, and applications in the design of crankshafts are given. Considerable space in the book is devoted to methods for solving elasticity problems based on the consideration of the strain energy of elastic bodies. These methods are applied in discussing statically indeterminate systems. The stresses produced by impact are also discussed. All these problems of a more advanced character are printed in small type, and may be omitted during the first reading of the book.

The book is illustrated with a number of problems to which solutions are presented. In many cases, the problems are chosen so as to widen the field covered by the text and to illustrate the application of the theory in the solution of design problems. It is hoped that these problems will be of interest for teaching purposes, and also useful for designers.

The author takes this opportunity of thanking his friends who have assisted him by suggestions, reading of manuscript and proofs, particularly Messrs. W. M. Coates and L. H. Donnell, teachers of mathematics and mechanics in the Engineering College of the University of Michigan, and Mr. F. L. Everett of the Department of Engineering Research of the University of Michigan. He is indebted also to Mr. F. C. Wilharm for the preparation of drawings, to Mrs. E. D. Webster for the typing of the manuscript, and to the Van Nostrand Company for its care in the publication of the book.

S. TIMOSHENKO

ANN ARBOR, MICHIGAN
May 1, 1930

NOTATIONS

$\sigma_x, \sigma_y, \sigma_z$	Normal stresses on planes perpendicular to x , y and z axes.
σ_n	Normal stress on plane perpendicular to direction n .
$\sigma_{Y.P.}$	Normal stress at yield point.
σ_w	Normal working stress
τ	Shearing stress
$\tau_{xy}, \tau_{yz}, \tau_{zx}$	Shearing stresses parallel to x , y and z axes on the planes perpendicular to y , z and x axes.
τ_w	Working stress in shear
δ	Total elongation, total deflection
ϵ	Unit elongation
$\epsilon_x, \epsilon_y, \epsilon_z$	Unit elongations in x , y and z directions
γ	Unit shear, weight per unit volume
E	Modulus of elasticity in tension and compression
G	Modulus of elasticity in shear
μ	Poisson's ratio
Δ	Volume expansion
K	Modulus of elasticity of volume
M_t	Torque
M	Bending moment in a beam
V	Shearing force in a beam
A	Cross sectional area
I_y, I_z	Moments of inertia of a plane figure with respect to y and z axes
k_y, k_z	Radii of gyration corresponding to I_y, I_z
I_p	Polar moment of inertia
Z	Section modulus
C	Torsional rigidity
l	Length of a bar, span of a beam
P, Q	Concentrated forces
t	Temperature, thickness

α	Coefficient of thermal expansion, numerical coefficient
U	Strain energy
w	Strain energy per unit volume
h	Depth of a beam, thickness of a plate
q	Load per unit length
ϕ, θ	Angles
p	Pressure
D, d	Diameters
R, r	Radii
W	Weight, load

CONTENTS

CHAPTER	PAGE
I. TENSION AND COMPRESSION WITHIN THE ELASTIC LIMIT	
1. Elasticity	1
2. Hooke's Law	2
3. The Tensile Test Diagram	6
4. Working Stress	7
5. Stress and Strain Produced in a Bar by its Own Weight	14
6. Statically Indeterminate Problems in Tension and Compression	19
7. Initial and Thermal Stresses	25
8. Extension of a Circular Ring	29
II. ANALYSIS OF STRESS AND STRAIN	35
9. Variation of the Stress with the Orientation of the Cross Section for Simple Tension and Compression	35
10. The Circle of Stress	38
11. Tension or Compression in Two Perpendicular Directions	41
12. The Circle of Stress for Combined Stresses	44
13. Principal Stresses	46
14. Analysis of Strain in the Case of Simple Tension	50
15. Strain in the Case of Tension or Compression in Two Perpendicular Directions	52
16. Pure Shear. Modulus in Shear	54
17. Working Stresses in Shear	58
18. Tension or Compression in Three Perpendicular Directions	61
III. SHEARING FORCE AND BENDING MOMENT	66
19. Types of Beams	66
20. Bending Moment and Shearing Force	68
21. Relation Between Bending Moment and Shearing Force	72
22. Bending Moment and Shearing Force Diagrams	74
IV. STRESSES IN TRANSVERSALLY LOADED BEAMS	88
23. Pure Bending	88

24. Various Shapes of Cross Sections of Beams	97
25. General Case of Transversally Loaded Beams . . .	102
26. Shearing Stresses in Bending	109
27. Distribution of Shearing Stresses in the Case of a Circular Cross Section	116
28. Distribution of Shearing Stresses in I Beams . . .	118
29. Principal Stresses in Bending	121
30. Stresses in Built-up Beams	126
 V. DEFLECTION OF TRANSVERSALLY LOADED BEAMS	134
31. Differential Equation of the Deflection Curve . . .	134
32. Bending of a Uniformly Loaded Beam	137
33. Deflection of a Simply Supported Beam Loaded with a Concentrated Load	140
34. Determination of Deflections by the use of the Bending Moment Diagram; Method of Super- position	144
35. Deflection of a Cantilever Beam by the Area- Moment Method	147
36. Deflection of a Simply Supported Beam by the Area-Moment Method	153
37. Deflection of Beams with Overhangs	162
38. The Deflection of Beams When the Loads Are Not Parallel to One of the Two Principal Planes of Bending	166
39. Effect of Shearing Force on the Deflection of Beams	170
 VI. STATICALLY INDETERMINATE PROBLEMS IN BENDING . .	175
40. Redundant Constraints	175
41. Beam Built-in at One End and Supported at the Other	178
42. Beam with Both Ends Built in	184
43. Frames	188
44. Beams on Three Supports	197
45. Continuous Beams	201
 VII. BEAMS OF VARIABLE CROSS SECTION. BEAMS OF TWO MATERIALS	209
46. Beams of Variable Cross Section	209
47. Beams of Two Different Materials	216
48. Reinforced-Concrete Beams	220
49. Shearing Stresses in Reinforced-Concrete Beams .	224

VIII. COMBINED BENDING AND TENSION OR COMPRESSION; THEORY OF COLUMNS	226
50. Bending Accompanied by Compression or Tension .	226
51. Eccentric Loading of a Short Strut	230
52. The Core of a Section	235
53. Eccentric Compression of a Slender Column . . .	239
54. Critical Load	244
55. Critical Stress; Design of Columns	249
56. Design of Columns on Basis of Assumed Inaccu- cies	255
57. Empirical Formulas for Column Design	258
 IX. TORSION AND COMBINED BENDING AND TORSION	261
58. Torsion of a Circular Shaft	261
59. Torsion of a Hollow Shaft	268
60. The Shaft of Rectangular Cross Section	269
61. Helical Spring, Close Coiled	271
62. Combined Bending and Twist in Circular Shafts .	276
 X. ENERGY OF STRAIN	281
63. Elastic Strain Energy in Tension	281
64. Tension Produced by Impact	285
65. Elastic Strain Energy in Shear and Twist	292
66. Elastic Strain Energy in Bending	296
67. Bending Produced by Impact	300
68. The General Expression for Strain Energy	305
69. The Theorem of Castigliano	308
70. Application of Castigliano Theorem in Solution of Statically Indeterminate Problems	320
71. The Reciprocal Theorem	330
72. Exceptional Cases	339
 APPENDIX MOMENTS OF INERTIA OF PLANE FIGURES	343
I. The Moment of Inertia of a Plane Area with Respect to an Axis in Its Plane	343
II. Polar Moment of Inertia of a Plane Area	345
III. Transfer of Axis	347
IV. Product of Inertia, Principal Axes	348
V. Change of Direction of Axis. Determination of the Principal Axes	351
 AUTHOR INDEX	355
SUBJECT INDEX	357

STRENGTH OF MATERIALS

PART I

CHAPTER I

TENSION AND COMPRESSION WITHIN THE ELASTIC LIMIT

1. **Elasticity.**—We assume that a body consists of small particles, or molecules, between which forces are acting. These molecular forces resist the change in the form of the body which external forces tend to produce. If such external forces are applied to the body, its particles are displaced and the mutual displacements continue until equilibrium is established between the external and internal forces. It is said in such a case that the body is in a *state of strain*. During deformation the external forces acting upon the body do work, and this work is transformed completely or partially into the *potential energy of strain*. An example of such an accumulation of potential energy in a strained body is the case of a watch spring. If the forces which produced the deformation of the body are now gradually diminished, the body returns wholly or partly to its initial shape and during this reversed deformation the potential energy of strain, accumulated in the body, may be recovered in the form of external work.

Take, for instance, a prismatical bar loaded at the end as shown in Fig. 1. Under the action of this load a certain elongation of the bar will take place. The point of application of the load will then move in a downward direction and positive work will be done by the load during this motion.

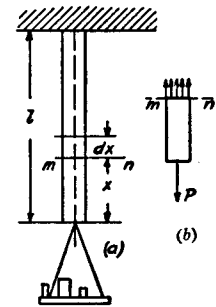


FIG. 1.

When the load is diminished, the elongation of the bar diminishes also, the loaded end of the bar moves up and the potential energy of strain will be transformed into the work of moving the load in the upward direction.

The property of bodies of returning, after unloading, to their initial form is called *elasticity*. It is said that the body is *perfectly elastic* if it recovers its original shape completely after unloading; it is *partially elastic* if the deformation, produced by the external forces, does not disappear completely after unloading. In the case of a perfectly elastic body the work done by the external forces during deformation will be completely transformed into the potential energy of strain. In the case of a partially elastic body, part of the work done by the external forces during deformation will be dissipated in the form of heat, which will be developed in the body during the non-elastic deformation. Experiments show that such structural materials as steel, wood and stone may be considered as perfectly elastic within certain limits, which depend upon the properties of the material. Assuming that the external forces acting upon the structure are known, it is a fundamental problem for the designer to establish such proportions of the members of the structure that it will approach the condition of a perfectly elastic body under all service conditions. Only under such conditions will we have continued reliable service from the structure and no *permanent set* in its members.

2. Hooke's Law.—By direct experiment with the extension of prismatical bars (Fig. 1) it has been established for many structural materials that within certain limits the elongation of the bar is proportional to the tensile force. This simple linear relationship between the force and the elongation which it produces was first formulated by the English scientist Robert Hooke¹ in 1678 and bears his name. Using the notation:

$$P = \text{force producing extension of bar,}$$

$$l = \text{length of bar,}$$

¹ Robert Hooke, De Potentia restitutiva, London, 1678.

A = cross sectional area of bar,

δ = total elongation of bar,

E = elastic constant of the material, called its *Modulus of Elasticity*,

Hooke's experimental law may be given by the following equation:

$$\delta = \frac{Pl}{AE}. \quad (1)$$

The elongation of the bar is proportional to the tensile force and to the length of the bar and inversely proportional to the cross sectional area and to the modulus of elasticity. In making tensile tests precautions are usually taken to secure central application of the tensile force. In this manner any bending of the bar will be prevented. Excluding from consideration those portions of the bar in the vicinity of the applied forces,² it may be assumed that during tension all longitudinal fibers of the prismatical bar have the same elongation and the cross sections of the bar originally plane and perpendicular to the axis of the bar remain so after extension.

In discussing the magnitude of internal forces let us imagine the bar cut into two parts by a cross section mn and let us consider the equilibrium of the lower portion of the bar (Fig. 1, b). At the lower end of this portion the tensile force P is applied. On the upper end there are acting the forces representing the action of the particles of the upper portion of the strained bar on the particles of the lower portion. These forces are continuously distributed over the cross section. A familiar example of such a continuous distribution of forces over a surface is that of a hydrostatic pressure or of a steam pressure. In handling such continuously distributed forces *the intensity of force*, i.e., the force per unit area, is of a great importance. In our case of axial tension, in which all fibers have the same elongation, the

² The more complicated stress distribution near the points of application of the forces will be discussed later in Part II.

distribution of forces over the cross section mn will be *uniform*. Taking into account that the sum of these forces, from the condition of equilibrium (Fig. 1, b), must be equal to P and denoting the force per unit of cross sectional area by σ , we obtain

$$\sigma = \frac{P}{A}. \quad (2)$$

This force per unit area is called *stress*. In the following, the force will be measured in pounds and the area in square inches so that the stress will be measured in pounds per square inch. The elongation of the bar per unit length is determined by the equation

$$\epsilon = \frac{\delta}{l} \quad (3)$$

and is called the *unit elongation* or the *tensile strain*. Using eqs. (2) and (3), Hooke's law may be represented in the following form:

$$\epsilon = \frac{\sigma}{E}, \quad (4)$$

and the unit elongation is easily calculated provided the stress and the modulus of elasticity of the material are known. The unit elongation ϵ is a pure number representing the ratio of two lengths (see eq. 3); therefore, from eq. (4), it may be concluded that the modulus of elasticity is to be measured in the same units as the stress σ , i.e., in pounds per square inch. In Table I, which follows, the average values of the modulus E for several materials are given in the first column.³

Equations (1)–(4) may be used also in the case of the compression of prismatical bars. Then δ will denote the total longitudinal contraction, ϵ the *compressive strain* and σ the *compressive stress*. The modulus of elasticity for compression is for most structural materials the same as for tension. In calculations, tensile stress and tensile strain are considered as positive, and compressive stress and strain as negative.

³ More details on the mechanical properties of materials are given in Part II.

TABLE I
MECHANICAL PROPERTIES OF MATERIALS

Materials	E lbs./in. ²	Yield Point lbs./in. ²	Ultimate Strength lbs./in. ²
Structural carbon steel 0.15 to 0.25% carbon.....	30×10^6	30×10^3 – 40×10^3	55×10^3 – 65×10^3
Nickel steel 3 to 3.5% nickel...	29×10^6	40×10^3 – 50×10^3	78×10^3 – 100×10^3
Duraluminum.....	10×10^6	35×10^3 – 45×10^3	54×10^3 – 65×10^3
Copper, cold rolled.....	16×10^6		28×10^3 – 40×10^3
Glass.....	10×10^6		3.5×10^3
Pine, with the grain.....	1.5×10^6		8×10^3 – 20×10^3
Concrete, in compression.....	4×10^6		3×10^3

Problems

1. Determine the total elongation of a steel bar 25 in. long, if the tensile stress is equal to 15×10^3 lbs. per sq. in.

Answer.

$$\delta = \epsilon \times l = \frac{25}{2,000} = \frac{1}{80} \text{ in.}$$

2. Determine the tensile force on a cylindrical steel bar of one inch diameter, if the unit elongation is equal to $.7 \times 10^{-3}$.

Solution. The tensile stress in the bar, from eq. (4), is

$$\sigma = \epsilon \cdot E = 21 \times 10^3 \text{ lbs. per sq. in.}$$

The tensile force, from eq. (2), is

$$P = \sigma \cdot A = 21 \times 10^3 \times \frac{\pi}{4} = 16,500 \text{ lbs.}$$

3. What is the ratio of the moduli of elasticity of the materials of two bars of the same size if under the action of equal tensile forces the unit elongations of the bars are in the ratio 1 : 15/8. Determine these elongations if one of the bars is of steel, the other of copper and the tensile stress is 10,000 lbs. per sq. inch.

Solution. The moduli are inversely proportional to the unit elongations. For steel

$$\epsilon = \frac{10,000}{30 \times 10^6} = \frac{1}{3,000},$$

for copper

$$\epsilon = \frac{1}{1,600}.$$

4. A prismatical steel bar 25 in. long is elongated $1/40$ in. under the action of a tensile force. Find the magnitude of the force if the volume of the bar is 25 in.³

5. A piece of wire 100 ft. long subjected to a tensile force $P = 1,000$ lbs. elongates by 1 in. Find the modulus of elasticity of the material if the cross-sectional area of the wire is 0.04 sq. in.

3. **The Tensile Test Diagram.**—The proportionality between the tensile force and the elongation holds only up to a certain limiting value of the tensile stress, called the *limit of proportionality*, which depends upon the properties of the material. Beyond this limit, the relationship between the elongation and the tensile stress becomes more complicated. For such a material as structural steel the proportionality between the load and elongation holds within a considerable range and the limit of proportionality may be taken as high

as 25×10^3 – 30×10^3 lbs. per sq. in. For such materials as cast iron or soft copper the limit of proportionality is very low, that is, deviations from Hooke's law may be noticed at a low tensile stress. In investigating the mechanical properties of materials beyond the limit of proportionality the relationship between the strain and the corresponding stress is usually presented graphically by the *tensile test diagram*. Figure 2 (a) presents a typical diagram for structural steel. Here the elongations are plotted along the horizontal axis and the corresponding stresses are given by the ordinates of the curve $OABCD$. From O to A the stress

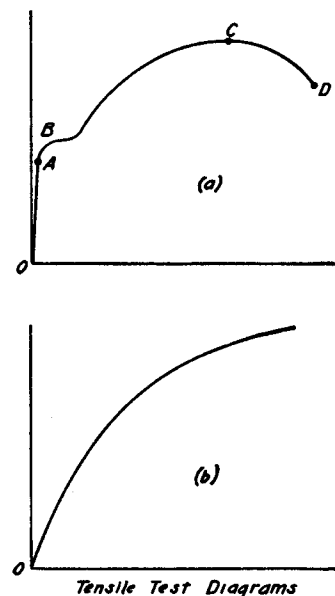


FIG. 2.

and the strain are proportional; beyond A the deviation from Hooke's law becomes marked; hence the stress at A is the *limit of proportionality*. Upon loading beyond this limit the elongation increases more quickly and the diagram becomes

curved. At B a sudden elongation of the bar takes place without an appreciable increase in the tensile force. This phenomenon, called *yielding* of the metal, is shown in the diagram by an almost horizontal portion of the curve. The stress corresponding to the point B is called the *yield point*. Upon further stretching of the bar, the material recovers and, as is seen from the diagram, the necessary tensile force increases with the elongation up to the point C , at which this force attains its maximum value. The corresponding stress is called the *ultimate strength* of the material. Beyond the point C , elongation of the bar takes place with a diminution of the load and finally fracture occurs at a load corresponding to point D of the diagram.

It should be noted that the stretching of the bar is connected with the lateral contraction but it is an established practice in calculating the yield point and the ultimate strength to use the initial cross sectional area A . This question will be discussed later in more detail (see Part II).

Figure 2 (b) represents a tensile test diagram for cast iron. This material has a very low limit of proportionality⁴ and has no definite yield point.

Diagrams analogous to those in tension may be obtained also for compression of various materials and such characteristic points as the limit of proportionality, the yield point, in the case of steel, and the ultimate strength for compression can be established. The mechanical properties of materials in tension and compression will be discussed later in more detail (see Part II).

4. **Working Stress.**—A tensile test diagram gives very valuable information on the mechanical properties of a material. Knowing the limit of proportionality, the yield point and the ultimate strength of the material, it is possible to establish for each particular engineering problem the magnitude of the stress which may be considered as a *safe stress*. This stress is usually called the *working stress*.

⁴ This limit can be established only by using very sensitive extensometers in measuring elongations. See Grüneisen, *Berichte d. deutsch. phys. Gesellschaft*, 1906.

In choosing the magnitude of the working stress for steel it must be taken into consideration that at stresses below the limit of proportionality this material may be considered as perfectly elastic and beyond this limit a part of the strain usually remains after unloading the bar, i.e., *permanent set* occurs. In order to have the structure in an elastic condition and to remove the possibility of a permanent set, it is usual practice to keep the working stress well below the limit of proportionality. In the experimental determination of this limit, sensitive measuring instruments (extensometers) are necessary and the position of the limit depends to some extent upon the accuracy with which the measurements are made. In order to eliminate this difficulty one takes usually the *yield point* or the *ultimate strength* of the material as a basis for determining the magnitude of the working stress. Denoting by σ_w , $\sigma_{Y.P.}$ and σ_u respectively the working stress, the yield point and the ultimate strength of the material, the magnitude of the working stress will be determined by one of the two following equations:

$$\sigma_w = \frac{\sigma_{Y.P.}}{n}, \quad \text{or} \quad \sigma_w = \frac{\sigma_u}{n_1} \quad (5)$$

Here n and n_1 are factors usually called *factors of safety*, which determine the magnitude of the working stress. In the case of structural steel, it is logical to take the yield point as the basis for calculating the working stress because here a considerable permanent set may occur, which is not permissible in engineering structures. In such a case a factor of safety $n = 2$ will give a conservative value for the working stress provided that only constant loads are acting upon the structure. In the cases of suddenly applied loads, or variable loads, and these occur very often in machine parts, a larger factor of safety becomes necessary. For brittle materials such as cast iron, concrete, various kinds of stone and for such material as wood, the ultimate strength is usually taken as a basis for determining the working stresses.

The magnitude of the factor of safety depends very much

upon the accuracy with which the external forces acting upon a structure are known, upon the accuracy with which the stresses in the members of a structure may be calculated and also upon the homogeneity of the materials used. This important question of working stresses will be discussed in more detail later (see Part II). Here we will include several simple examples of the determination of safe cross sectional dimensions of bars, assuming that the working stress is given.

Problems

1. Determine the diameter d of the steel bolts N of a press for a maximum compressive force $P = 100,000$ lbs. (Fig. 3), if the working stress for steel in this case is $\sigma_w = 10,000$ lbs. per sq. in. Determine the total elongation of the bolts at the maximum load, if the length between their heads is $l = 50$ in.

Solution. The necessary cross sectional area, from eq. (2),

$$A = \frac{\pi d^2}{4} = \frac{P}{2\sigma_w} = \frac{50,000}{10,000} = 5 \text{ in.}^2;$$

then

$$d = \sqrt{\frac{20}{\pi}} = 2.52 \text{ in.}$$

Total elongation, from eqs. (3) and (4),

$$\delta = \epsilon l = \frac{\sigma l}{E} = \frac{10^4 \cdot 50}{30 \cdot 10^6} = \frac{1}{60} \text{ in.}$$

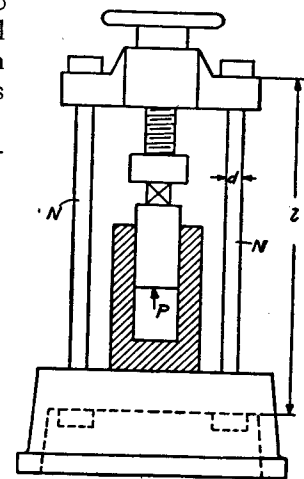


FIG. 3.

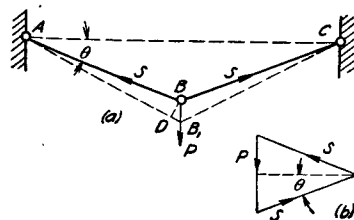


FIG. 4.

2. A structure consisting of two equal steel bars (Fig. 4) 15 feet long and with hinged ends is submitted to the action of a vertical load P . Determine the necessary cross sectional areas of the bars and the deflection of the point B when $P = 5,000$ lbs., $\sigma_w = 10,000$ lbs. per sq. in. and the initial angle of inclination of the bars $\theta = 30^\circ$.

Solution. From Fig. 4 (b), representing the condition for equi-

librium of the hinge B , the tensile force in the bars is

$$S = \frac{P}{2 \sin \theta}; \quad \text{for } \theta = 30^\circ; \quad S = P = 5,000 \text{ lbs.}$$

The necessary cross sectional area

$$A = \frac{S}{\sigma_w} = \frac{5,000}{10,000} = \frac{1}{2} \text{ in.}^2$$

The deflection BB_1 will be found from the small right triangle DBB_1 in which the arc BD , of radius equal to the length of the bars, is considered as a perpendicular dropped upon AB_1 , which is the position of the bar AB after deformation. Then the elongation of the bar AB is

$$B_1D = \epsilon \cdot l = \frac{\sigma_w l}{E} = \frac{10,000 \times 15 \times 12}{30 \times 10^6} = 0.06 \text{ in.}$$

and the deflection

$$BB_1 = \frac{B_1D}{\sin \theta} = 0.12 \text{ in.}$$

It is seen that the change of the angle due to the deflection BB_1 is very small and the previous calculation of S , based upon the assumption that $\theta = 30^\circ$, is accurate enough.

3. Determine the total elongation of the steel bar AB having a cross sectional area $A = 1 \text{ in.}^2$ and submitted to the action of forces $Q = 10,000 \text{ lbs.}$ and $P = 5,000 \text{ lbs.}$ (Fig. 5).

Solution. The tensile force in the upper and lower portions of the bar is equal to Q and that in the middle portion is $Q - P$. Then the total elongation will be

$$\begin{aligned} \delta &= 2 \frac{Ql_1}{AE} + \frac{(Q - P)l_2}{AE} = 2 \frac{10,000 \times 10}{1 \times 30 \times 10^6} \\ &+ \frac{5,000 \times 10}{1 \times 30 \times 10^6} = \frac{1}{150} + \frac{1}{600} = \frac{1}{120} = 0.00833 \text{ in.} \end{aligned}$$

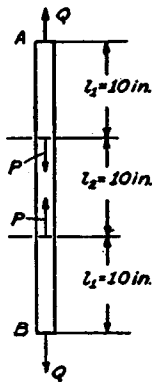


FIG. 5.

4. Determine the cross sectional dimensions of the wooden beam BC and of the steel bar AB of the structure ABC , loaded at B , when the working stress for wood is taken as $\sigma_w = 160 \text{ lbs. per sq. in.}$ and for steel $\sigma_w = 10,000 \text{ lbs. per sq. in.}$ The load

$P = 6,000 \text{ lbs.}$ The dimensions of the structure are shown in Fig. 6. Determine the vertical and the horizontal components of the displacement of the point B due to deformation of the bars.

Solution. From Fig. 6 (b) giving the condition for equilibrium of hinge B , similar to the triangle ABC of Fig. 6 (a), we have

$$S = \frac{P \cdot 15}{9} = 10,000 \text{ lbs.};$$

$$S_1 = \frac{P \cdot 12}{9} = 8,000 \text{ lbs.}$$

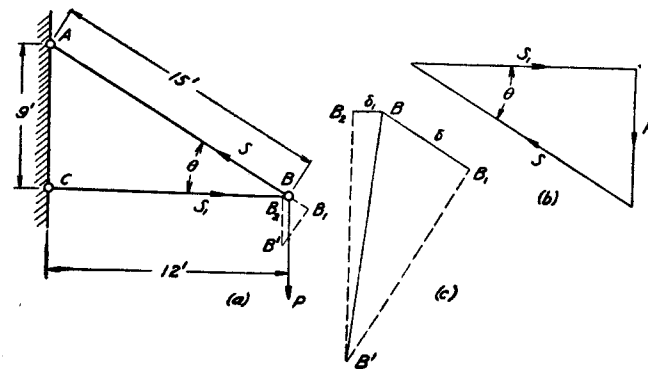


FIG. 6.

The cross sectional areas of the steel bar and of the wooden beam are

$$A = \frac{S}{\sigma_w} = \frac{10,000}{10,000} = 1 \text{ in.}^2; \quad A_1 = \frac{S_1}{\sigma_w} = \frac{8,000}{160} = 50 \text{ in.}^2$$

The total elongation of the steel bar and the total compression of the wooden beam are

$$\delta = \frac{S \cdot l}{E_s A} = \frac{10,000 \cdot 15 \cdot 12}{30 \times 10^6} = 0.060 \text{ in.};$$

$$\delta_1 = \frac{S_1 l_1}{E_w A_1} = \frac{160 \times 12 \times 12}{1.5 \times 10^6} = 0.0154 \text{ in.}$$

To determine the displacement of the hinge B , due to deformation, arcs are drawn with centers A and C (Fig. 6, a) and radii equal to the lengths of the elongated bar and of the compressed beam respectively. They intersect in the new position B' of the hinge B . This is shown on a larger scale in Fig. 6 (c), where BB_1 is the elon-

gation of the steel bar and BB_2 the compression of the wooden beam. The dotted perpendiculars replace the arcs mentioned above. Then BB' is the displacement of the hinge B . The components of this displacement may be easily obtained from the figure.

5. Determine in the previous problem the inclination of the bar AB to make its weight a minimum.

Solution. If θ denotes the angle between the bar and the horizontal beam and l_1 the length of the beam, then the length of the bar is $l = l_1/\cos \theta$, the tensile force in the bar is $S = P/\sin \theta$ and the necessary cross sectional area is $A = P/\sigma_w \sin \theta$. The volume of the bar will be

$$l \cdot A = \frac{l_1 P}{\sigma_w \sin \theta \cos \theta} = \frac{2l_1 P}{\sigma_w \sin 2\theta}.$$

It is seen that the volume and the weight of the bar become a minimum when $\sin 2\theta = 1$ and $\theta = 45^\circ$.

6. The square frame $ABCD$ (Fig. 7, *a*) consisting of five steel bars of 1 in.² cross sectional area is submitted to the action of two forces $P = 10,000$ lbs. in the direction of the diagonal. Determine the changes of the angles at A and C due to deformation of the frame. Determine the changes of the same angles if the forces are applied as shown in Fig. 7 (*b*).

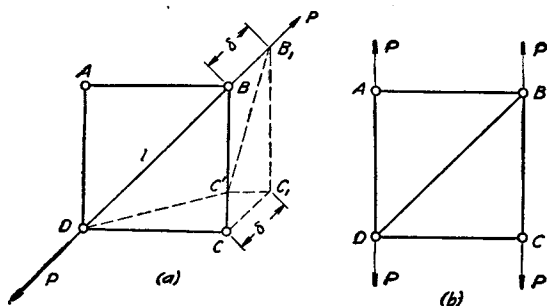


FIG. 7.

Solution. In the case shown in Fig. 7 (*a*) the diagonal will take the complete load P . Assuming that the hinge D and the direction of the diagonal are stationary, the displacement of the hinge B in the direction of the diagonal will be equal to the elongation of the diagonal $\delta = Pl/AE$. The determination of the new position C' of the hinge C is indicated in the figure by dotted lines. It is seen from the small right triangle CC_1C' that $CC' = \delta/\sqrt{2}$. Then the angle of rotation of the bar DC due to deformation of the frame is equal to

$$\frac{CC'}{DC} = \frac{\delta\sqrt{2}}{\sqrt{2}l} = \frac{\delta}{l} = \frac{P}{1 \cdot E} = \frac{1}{3,000} \text{ radian.}$$

Then the increase of the angle at C will be

$$2 \times \frac{1}{3,000} = \frac{1}{1,500} \text{ radian.}$$

The solution of the problem shown in Fig. 7 (*b*) is left to the student.

7. Determine the position of the load P on the beam ABD so that the force in the bar BC becomes a maximum. Determine the angle θ to make the volume of the bar BC a minimum (Fig. 8).

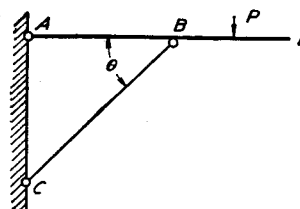


FIG. 8.

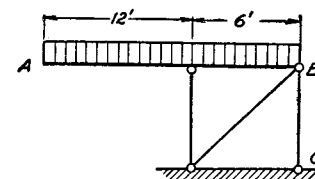


FIG. 9.

Answer. The force in the bar BC becomes maximum when the load P has its extreme position on the right at point D . The volume of the bar will be a minimum when $\theta = 45^\circ$.

8. Determine the necessary cross sectional area of the steel bar BC (Fig. 9) if the working stress $\sigma_w = 15,000$ lbs. per sq. in. and the uniformly distributed vertical load per foot of the beam AB is $q = 1,000$ lbs.

Answer. $A = 0.6$ sq. in.

9. Determine the necessary cross sectional areas of the bars AB and BC of the structures shown in Figs. 10 (*a*) and (*b*) if $\sigma_w = 16,000$ lbs. per sq. in.

Answer. In the case of structure 10 (*a*) the cross sectional area of AB should be 2.5 sq. in. and of the bar BC 2.0 sq. in. In the case of Fig. 10 (*b*) the cross sectional area of the bar AB should be 2.25 sq. in. and of the bar BC 2.03 sq. in.

10. Solve problem 3 assuming that the material is duraluminum and that $P = Q = 10,000$ lbs. per sq. in.

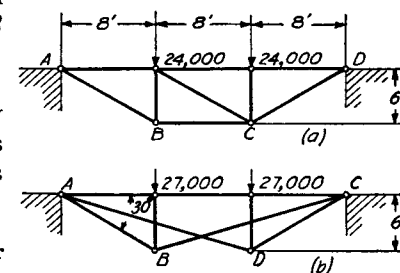


FIG. 10.

11. Find the cross-sectional areas of the bars CD in Figs. 10a and 10b and the total elongation of these bars if the material is structural steel and $\sigma_w = 16,000$ lbs. per sq. in.

12. Solve problem 9 assuming that the load is applied at only one joint of the upper chord at a distance 8 ft. from support A .

5. Stress and Strain Produced in a Bar by its Own Weight.—In discussing the extension of a bar, Fig. 1, only the load P applied at the end was taken into consideration. If the length of the bar is large, its own weight may produce a considerable additional stress and should be taken into account. In this case the maximum stress will be at the built-in upper cross section. Denoting by γ the weight per unit volume of the bar, the complete weight will be $A\gamma l$ and the maximum stress will be given by the equation:

$$\sigma_{\max} = \frac{P + A\gamma l}{A} = \frac{P}{A} + \gamma l. \quad (6)$$

The second term on the right side of eq. (6) represents the stress produced by the weight of the bar. The weight of that portion of the bar below a cross section at distance x from the lower end (Fig. 1) is $A\gamma x$ and the stress will be given by the equation:

$$\sigma = \frac{P + A\gamma x}{A}. \quad (7)$$

Substituting the working stress σ_w for σ_{\max} in eq. (6), the equation for calculating the safe cross sectional area will be

$$A = \frac{P}{\sigma_w - \gamma l}. \quad (8)$$

It is interesting to note that with increasing length l the bar's own weight becomes more and more important, the denominator of the right side of eq. (8) diminishes and the necessary cross sectional area A increases. When $\gamma l = \sigma_w$, i.e., the stress due to the weight of the bar alone becomes equal to the working stress, the right side of eq. (8) becomes infinite. Under such circumstances it is impossible to use a prismatical design and recourse to a bar of variable cross section is made.

In calculating the total elongation of a prismatical bar submitted to the action of a tensile force P at the end and its own weight, let us consider first the elongation of an element of length dx cut from the bar by two adjacent cross sections (see Fig. 1). It may be assumed that along the very short length dx the tensile stress is constant and is given by eq. (7). Then the elongation $d\delta$ of the element will be

$$d\delta = \frac{\sigma dx}{E} = \frac{P + A\gamma x}{AE} dx.$$

The total elongation of the bar will be obtained by summing the elongations of all the elements. Then

$$\delta = \int_0^l \frac{P + A\gamma x}{AE} dx = \frac{l}{AE} (P + \frac{1}{2} A\gamma l). \quad (9)$$

Comparing this with eq. (1) it is seen that the total elongation produced by the bar's own weight is equal to that produced by a load of half its weight applied at its end.

Problems

1. Determine the cross sectional area of a vertical prismatical steel bar carrying on its lower end a load $P = 70,000$ lbs., if the length of the bar is 720 feet, the working stress $\sigma_w = 10,000$ lbs. per sq. in. and the weight of a cubic foot of steel is 490 lbs. Determine the total elongation of the bar.

Solution. The cross sectional area, from eq. (8), is

$$A = \frac{70,000}{10,000 - \frac{490 \times 720 \times 12}{12^3}} = 9.27 \text{ in.}^2$$

The total elongation, from eq. (9), is

$$\delta = \frac{720 \times 12}{30 \times 10^6} \left(7,550 + \frac{1}{2} 2,450 \right) = 2.53 \text{ in.}$$

2. Determine the elongation of a conical bar under the action of its own weight (Fig. 11) if the length of the bar is l , the diameter of the base is d and the weight per unit volume of the material is γ .

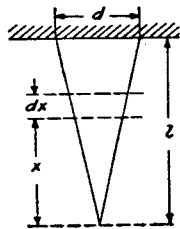


FIG. 11.

Solution. The weight of the bar will be

$$Q = \frac{\pi d^2 l \gamma}{4 \cdot 3}$$

For any cross section at distance x from the lower end of the bar the tensile force, equal to the weight of the lower portion of the bar, is

$$\frac{Qx^3}{l^3} = \frac{\pi d^2 \gamma x^3}{4 \cdot 3 l^2}$$

Assuming that the tensile force is uniformly distributed over the cross section⁵ and considering the element of length dx as a prismatical bar, the elongation of this element will be

$$d\delta = \frac{\gamma x}{3E} dx$$

and the total elongation of the bar is

$$\delta = \frac{\gamma}{3E} \int_0^l x dx = \frac{\gamma l^2}{6E}$$

This elongation is one third that of a prismatical bar of the same length (see eq. 9).

3. The vertical prismatical rod of a mine pump is moved up and down by a crank shaft (Fig. 12). Assuming that the material is steel and the working stress is $\sigma_w = 7,000$ lbs. per sq. in., determine the cross sectional area of the rod if the resistance of the piston during motion downward is 200 lbs. and during motion upward is 2,000 lbs. The length of the rod is 320 feet. Determine the necessary length of the radius r of the crank if the stroke of the pump is equal to 8 in.

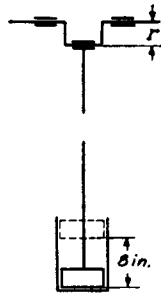


FIG. 12.

Solution. The necessary cross sectional area of the rod will be found from eq. (8) by substituting $P = 2,000$ lbs. Then

$$A = \frac{2,000}{7,000 - \frac{490 \cdot 320 \cdot 12}{12^3}} = 0.338 \text{ in.}^2$$

The difference in total elongation of the rod when it moves up and when it moves down is due to the resistance of the piston and will be

⁵ Such an assumption is justifiable when the angle of the cone is small.

equal to

$$\Delta\delta = \frac{(2,000 + 200) \cdot 320 \cdot 12}{30 \cdot 10^6 \times 0.338} = 0.833 \text{ in.}$$

The radius of the crank should be

$$r = \frac{8 + 0.833}{2} = 4.42 \text{ in.}$$

4. Lengths of wire of steel and aluminum are suspended vertically. Determine for each the length at which the stress due to the weight of the wire equals the ultimate strength if for steel wire $\sigma_u = 300,000$ lbs. per sq. in. and $\gamma = 490$ lbs. per cubic foot, and for aluminum wire $\sigma_u = 50,000$ lbs. per sq. in. and $\gamma = 170$ lbs. per cubic foot.

Answer. For steel $l = 88,200$ ft., for aluminum $l = 42,300$ ft.

5. In what proportion will the maximum stress produced in a prismatical bar by its own weight increase if all the dimensions of the bar are increased in the proportion $n : 1$ (Fig. 1)?

Answer. The stress will increase in the ratio $n : 1$.

6. A bridge pillar consisting of two prismatical portions of equal length (Fig. 13) is loaded at the upper end by a compressive force $P = 600,000$ lbs. Determine the volume of masonry if the height of the pillar is 120 ft., its weight per cubic foot is 100 lbs., and the maximum compressive stress in each portion is 150 lbs. per sq. in. Compare this volume with that of a single prismatical pillar designed for the same condition.

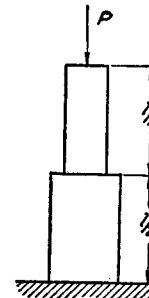


FIG. 13.

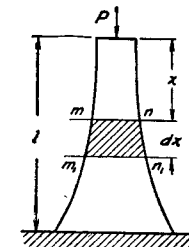


FIG. 14.

7. Solve the preceding problem assuming three prismatical portions of equal length.

8. Determine the form of the pillar in Fig. 14 such that the stress in each cross section is just equal to σ_w . The form satisfying this condition is called the *form of equal strength*.

Solution. Considering a differential element, shaded in the

figure, it is evident that the compressive force on the cross section m_1n_1 is larger than that on the cross section mn by the magnitude of the weight of the element. Thus since the stress in both cross sections is to be the same and equal to σ_w , the difference dA in the cross-sectional area must be such as to compensate for the difference in the compressive force. Hence

$$dA\sigma_w = \gamma A dx \quad (a)$$

where the right side of the equation represents the weight of the element. Dividing this equation by $A\sigma_w$ and integrating we find

$$\int \frac{dA}{A} = \int \frac{\gamma dx}{\sigma_w},$$

from which

$$\log A = \frac{\gamma x}{\sigma_w} + C_1$$

and

$$A = Ce^{\gamma x/\sigma_w}, \quad (b)$$

where e is the base of natural logarithms and $C = e^{C_1}$. At $x = 0$ this equation gives for the cross-sectional area at the top of the pillar

$$(A)_{x=0} = C.$$

But the cross-sectional area at the top is equal to P/σ_w ; hence $C = P/\sigma_w$ and equation (b) becomes

$$A = \frac{P}{\sigma_w} e^{\gamma x/\sigma_w}. \quad (c)$$

The cross-sectional area at the bottom of the pillar is obtained by substituting $x = l$ in equation (c), which gives

$$A_{\max} = \frac{P}{\sigma_w} e^{\gamma l/\sigma_w}. \quad (d)$$

9. Find the volume of the masonry for a pillar of equal strength designed to meet the conditions of problem 6.

Solution. By using equation (d) the difference of the cross-sectional areas at the bottom of the pillar and at its top is found to be

$$\frac{P}{\sigma_w} e^{\gamma l/\sigma_w} - \frac{P}{\sigma_w} = \frac{P}{\sigma_w} (e^{\gamma l/\sigma_w} - 1).$$

This difference multiplied by the working stress σ_w evidently gives the weight of the pillar; its volume is thus

$$V = \frac{P}{\gamma} (e^{\gamma l/\sigma_w} - 1) = 5,360 \text{ cubic feet.}$$

6. Statically Indeterminate Problems in Tension and Compression.—There are cases in which the axial forces acting in the bars of a structure cannot be determined from the equations of statics alone and the deformation of the structure must be taken into consideration. Such structures are called *statically indeterminate systems*.

A simple example of such a system is shown in Fig. 15. The load P produces extension in the bars OB , OC and OD , which are in the same plane. The conditions for equilibrium of the hinge O give two equations of statics which are not sufficient to determine the three unknown tensile forces in the bars, and for a third equation a consideration of the deformation of the system becomes necessary. Let us assume, for simplicity, that the system is symmetrical with respect to the vertical axis OC , that the vertical bar is of steel with A_s and

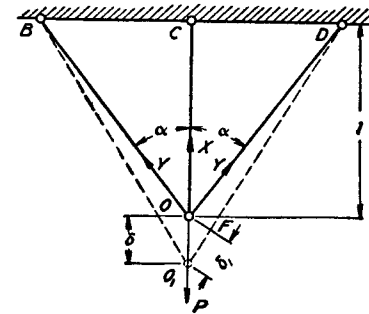


FIG. 15.

E_s as the cross sectional area and the modulus of elasticity for the material, and that the inclined bars are of copper with A_c and E_c as area and modulus. The length of the vertical bar is l and that of the inclined bars is $l/\cos \alpha$. Denoting by X the tensile force in the vertical bar and by Y the forces in the inclined bars, the only equation of equilibrium for the hinge O in this case of symmetry will be

$$X + 2Y \cos \alpha = P. \quad (a)$$

In order to derive the second equation necessary for determining the unknown quantities X and Y , the deformed configuration of the system indicated in the figure by dotted lines must be considered. Let δ be the total elongation of the vertical bar under the action of the load P ; then the elongation δ_1 of the inclined bars will be found from the triangle OFO_1 . Assuming that these elongations are very

small, the circular arc OF from the center D may be replaced by a perpendicular line and the angle at O_1 may be taken equal to the initial angle α ; then

$$\delta_1 = \delta \cos \alpha.$$

The unit elongations and the stresses for the vertical and the inclined bars will be

$$\epsilon_s = \frac{\delta}{l}; \quad \sigma_s = \frac{E_s \delta}{l} \quad \text{and} \quad \epsilon_c = \frac{\delta \cos^2 \alpha}{l}; \quad \sigma_c = \frac{E_c \delta \cos^2 \alpha}{l},$$

respectively. Then the forces in the bars will be obtained by multiplying the stresses by the cross sectional areas as follows:

$$X = \sigma_s A_s = \frac{A_s E_s \delta}{l}, \quad Y = \sigma_c A_c = \frac{A_c E_c \delta \cos^2 \alpha}{l}, \quad (b)$$

from which

$$Y = X \cos^2 \alpha \cdot \frac{A_c E_c}{A_s E_s}.$$

Substituting in eq. (a), we obtain

$$X = \frac{P}{1 + 2 \cos^3 \alpha \frac{A_c E_c}{A_s E_s}}. \quad (10)$$

It is seen that the force X depends not only upon the angle of inclination α but also upon the cross sectional areas and the mechanical properties of the materials of the bars. In the particular case in which all bars have the same cross section and the same modulus we obtain, from eq. (10),

$$X = \frac{P}{1 + 2 \cos^3 \alpha}.$$

When α approaches zero, $\cos \alpha$ approaches unity, and the force in the vertical bar approaches $1/3P$. When α approaches 90° , the inclined bars become very long and the complete load will be taken by the middle bar.

As another example of a statically indeterminate system let us consider a prismatical bar with built-in ends, loaded

axially at an intermediate cross section mn (Fig. 16). The load P will be in equilibrium with the reactions R and R_1 at the ends and we have

$$P = R + R_1. \quad (c)$$

In order to derive the second equation for determining the forces R and R_1 the deformation of the bar must be considered. The load P with the force R produces shortening of the lower portion of the bar and with the force R_1 elongation of the upper portion. The total shortening of one part is equal to the total elongation of the other. Then, by using eq. (1), we obtain

$$\frac{R_1 a}{AE} = \frac{R b}{AE}.$$

Hence

$$\frac{R}{R_1} = \frac{a}{b}, \quad (d)$$

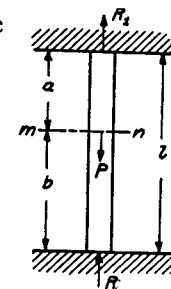


FIG. 16.

i.e., the forces R and R_1 are inversely proportional to the distances of their points of application from the loaded cross section mn . Now from eqs. (c) and (d) the magnitudes of these forces and the stresses in the bar may be readily calculated.

Problems

1. A steel cylinder and a copper tube are compressed between the plates of a press (Fig. 17). Determine the stresses in steel and copper and also the unit compression if $P = 100,000$ lbs., $d = 4$ ins. and $D = 8$ ins.

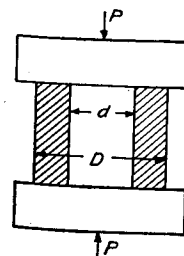


FIG. 17.

Solution. Here again static conditions are inadequate, and the deformation of cylinder and tube must be considered to get that part of the load carried by each material. The unit shortening in the steel and in the copper will be equal; therefore the stresses of each material will be in the same ratio as their moduli (eq. 4, p. 4), i.e., the compressive stress in the steel will be $15/8$ the compressive stress in the copper.

Then the magnitude σ_c of the stress in the copper will be found from the equation of statics,

$$P = \frac{\pi d^2}{4} \frac{15}{8} \sigma_c + \frac{\pi}{4} (D^2 - d^2) \sigma_c.$$

Substituting numerical values, we obtain

$\sigma_c = 1,630$ lbs. per sq. in., $\sigma_s = \frac{15}{8} \cdot \sigma_c = 3,060$ lbs. per sq. in.; unit compression

$$\epsilon = \frac{\sigma_c}{E_c} = 102 \times 10^{-6}.$$

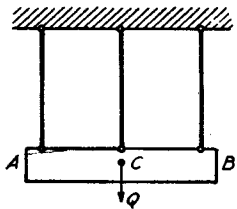


FIG. 18.

2. A column of reinforced concrete is compressed by a force $P = 60,000$ lbs. What part of this load will be taken by the concrete and what part by the steel if the cross sectional area of the steel is only 1/10 of the cross sectional area of the concrete?

3. A rigid body AB of weight Q hangs on three vertical wires symmetrically situated with respect to the center of gravity C of the body (Fig. 18). Determine the tensile forces in the wires if the middle wire is of steel and the two others of copper. Cross sectional areas of all wires are equal.

Suggestion. Use method of problem 1.

4. Determine the forces in four legs of a square table, Fig. 19, produced by the load P acting on one diagonal. The top of the table and the floor are assumed absolutely rigid and the legs are attached to the floor so that they can undergo tension as well as compression.

Solution. Assuming that the new position of the top of the table is that indicated by the dotted line mn , the compression of legs 2 and 4 will be the average of that of legs 1 and 3. Hence

$$2Y = X + Z$$

and since $2Y + X + Z = P$ we obtain

$$2Y = X + Z = \frac{1}{2}P. \quad (a)$$

An additional equation for determining X and Z is obtained by taking the moment of all the forces with respect to the horizontal axis $O - O$ parallel to y and in the plane of the force P . Then

$$X(\frac{1}{2}a\sqrt{2} + e) + \frac{1}{2}P \cdot e = Z(\frac{1}{2}a\sqrt{2} - e). \quad (b)$$

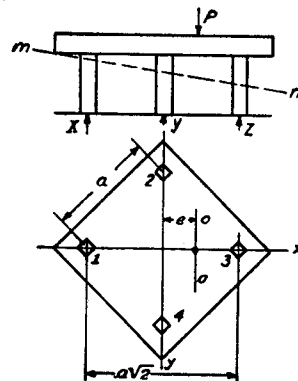


FIG. 19.

From (a) and (b) we obtain

$$X = P \left(\frac{1}{4} - \frac{e}{a\sqrt{2}} \right); \quad Y = \frac{P}{4}; \quad Z = P \left(\frac{1}{4} + \frac{e}{a\sqrt{2}} \right).$$

When $e > a\sqrt{2}/4$, X becomes negative. This indicates that there will be tension in leg 1.

5. Determine the forces in the legs of the above table when the load is applied at the point with the coordinates

$$x = \frac{a}{4}, \quad y = \frac{a}{5}.$$

Hint. In solving this problem it should be noted that when the point of application of the load P is not on the diagonal of the table, this load may be replaced by two loads statically equivalent to the load P and applied at points on the two diagonals. The forces produced in the legs by each of these two loads are found as explained above. Summarizing the effects of the two component loads, the forces in the legs for any position of the load P may be found.

6. A rectangular frame with diagonals is submitted to the action of compressive forces P (Fig. 20). Determine the forces in the bars if they are all of the same material, the cross sectional area of the verticals is A , and that of the remaining bars A_1 .

Solution. Let X be the compressive force in each vertical, Y the compressive force in each diagonal and Z the tensile force in each horizontal bar. Then from the condition of equilibrium of one of the hinges,

$$Y = 1/\sin \alpha (P - X); \quad Z = Y \cos \alpha = (P - X) \cot \alpha. \quad (a)$$

The third equation will be obtained from the condition that the frame after deformation remains rectangular by virtue of symmetry; therefore

$$(a^2 + h^2) \left(1 - \frac{Y}{A_1 E} \right)^2 = h^2 \left(1 - \frac{X}{A E} \right)^2 + a^2 \left(1 + \frac{Z}{A_1 E} \right)^2;$$

from this, neglecting the small quantities of higher order, we get

$$\frac{(a^2 + h^2)Y}{A_1 E} = \frac{h^2 X}{A E} - \frac{a^2 Z}{A_1 E}. \quad (b)$$

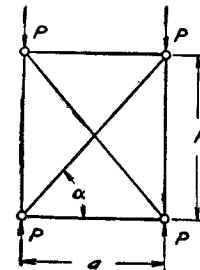


FIG. 20.

Solving eqs. (a) and (b), the following value of the force in a diagonal will be obtained:

$$Y = \frac{P}{\frac{a^2 + h^2}{h^2} \cdot \frac{A}{A_1} + \frac{a^2}{h^2} \cdot \frac{A}{A_1} \cos \alpha + \sin \alpha}$$

The forces in other bars will now be easily determined from eqs. (a).

7. Solve the above problem, assuming $a = h$, $A = 5A_1$ and $P = 50,000$ lbs.




FIG. 21.

8. What stresses will be produced in a steel bolt and a copper tube (Fig. 21) by $\frac{1}{4}$ of a turn of the nut if the length of the bolt $l = 30$ ins., the pitch of the bolt thread $h = \frac{1}{8}$ in., the area of the cross section of the bolt $A_s = 1$ sq. inch, the area of the cross section of the tube $A_c = 2$ sq. inches?

Solution. Let X denote the unknown tensile force in the bolt and the compressive force in the tube. The magnitude of X will be found from the condition that the extension of the bolt plus the shortening of the tube is equal to the displacement of the nut along the bolt. In our case, assuming the length of the tube equal to the length of the bolt, we obtain

$$\frac{Xl}{A_s E_s} + \frac{Xl}{A_c E_c} = \frac{1}{4} h,$$

from which

$$X = \frac{h A_s E_s}{4l \left(1 + \frac{A_s E_s}{A_c E_c} \right)} = \frac{30 \times 10^6}{32 \times 30 \left(1 + \frac{15}{16} \right)} = 16,100 \text{ lbs.}$$

The tensile stress in the bolt is $\sigma_s = X/A_s = 16,100$ lbs. per sq. in. The compressive stress in the tube is $\sigma_c = X/A_c = 8,050$ lbs. per sq. in.

9. What change in the stresses calculated in the above problem will be produced by tensile forces $P = 5,000$ lbs. applied to the ends of the bolt?

Solution. Let X denote the increase in the tensile force in the bolt and Y the decrease in the compressive force in the tube. Then from the condition of equilibrium,

$$X + Y = P. \quad (a)$$

A second equation may be written down from the consideration that the unit elongation of the bolt and tube under the application

of the forces P must be equal, i.e.,

$$\frac{X}{A_s E_s} = \frac{Y}{A_c E_c}. \quad (b)$$

From eqs. (a) and (b) the forces X and Y and the corresponding stresses are easily calculated.

10. A prismatical bar with built-in ends is loaded axially at two intermediate cross sections (Fig. 22) by forces P_1 and P_2 . Determine the reactions R and R_1 .

Hint. Solution will be obtained by using eq. (d) on page 21, calculating the reactions produced by each load separately and then summarizing these reactions. Determine the reactions when

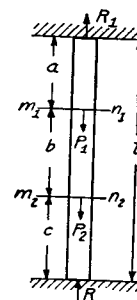


FIG. 22.

$$a = 0.3l, \quad b = 0.3l \quad \text{and} \quad P_1 = 2P_2 = 1,000 \text{ lbs.}$$

11. Determine the forces in the bars of the system, shown in Fig. 23, where OA is an axis of symmetry.

Answer. The tensile force in the bar OB is equal to the compressive force in the bar OC and is $P/2 \sin \alpha$. The force in the horizontal bar OA is equal to zero.

12. Solve problem 10 assuming that the lower portion of length c of the bar has a cross-sectional area two times larger than the cross-sectional area of the two upper parts of lengths a and b .

7. Initial and Thermal Stresses.—In a statically indeterminate system it is possible to have some initial stresses produced in assembly and due to inaccuracies in the lengths of the bars or to intentional deviations from the correct values of these lengths. These stresses will exist when external loads are absent, and depend only upon the geometrical proportions of the system, on the mechanical properties of the materials and on the magnitude of the inaccuracies. Assume, for example, that the system represented in Fig. 15 has, by mistake, $l + a$ as the length of the vertical bar instead of l . Then after assembling the bars BO and DO , the vertical bar can be put into place only after initial compression and due to this fact it will produce some tensile force in the inclined bars. Let X denote the compressive force in the vertical bar, which finally takes place after assembly. Then the corresponding tensile force in the inclined bars will be $X/2 \cos \alpha$

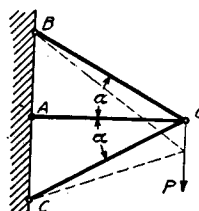


FIG. 23.

and the displacement of the hinge O due to the extension of these bars will be (see eq. b , p. 20)

$$\delta = \frac{Xl}{2A_c E_c \cos^3 \alpha} \quad (a)$$

The shortening of the vertical bar will be

$$\delta_1 = \frac{Xl}{A_s E_s} \quad (b)$$

From elementary geometrical considerations, the displacement of the hinge O , together with the shortening of the vertical bar, must be equal to the error a in the length of the vertical bar. This gives the following equation for determining X :

$$\frac{Xl}{2A_c E_c \cos^3 \alpha} + \frac{Xl}{A_s E_s} = a$$

Hence

$$X = \frac{a A_s E_s}{l \left(1 + \frac{A_s E_s}{2A_c E_c \cos^3 \alpha} \right)} \quad (11)$$

Now the initial stresses in all the bars may be calculated. Expansion of the bars of a system due to changes in temperature may have also the same effect as inaccuracies in lengths. Assume a bar with built-in ends. If the temperature of the bar is raised from t_0 to t and thermal expansion is prevented by the reactions at the ends, there will be produced in the bar compressive stresses, whose magnitude may be calculated from the condition that the length remains unchanged. Let α denote the coefficient of thermal expansion and σ the compressive stress produced by the reactions. Then the equation for determining σ will be

$$\alpha(t - t_0) = \frac{\sigma}{E},$$

from which

$$\sigma = E\alpha(t - t_0). \quad (12)$$

As a second example, let us consider the system represented in Fig. 15 and assume that the vertical bar is heated from

the assembly temperature t_0 to a new temperature t . The corresponding thermal expansion will be partially prevented by the two other bars of the system, and certain compressive stresses will develop in the vertical bar and tensile stresses in the inclined bars. The magnitude of the compressive force in the vertical bar will be given by eq. (11), in which instead of the magnitude a of the inaccuracy in length we substitute the thermal expansion $\alpha l(t - t_0)$ of the vertical bar.

Problems

1. The rails of a tramway are welded together at 50° Fahrenheit. What stresses will be produced in these rails when heated by the sun to 100° if the coefficient of thermal expansion of steel is $70 \cdot 10^{-7}$?

Answer. $\sigma = 10,500$ lbs. per sq. in.

2. What change of stresses will be produced in the case represented in Fig. 21 by increasing the temperature from t_0 to t if the coefficient of expansion of steel is α_s and that of copper α_c ?

Solution. Due to the fact that $\alpha_c > \alpha_s$, the increasing temperature produces compression in the copper and tension in the steel. The unit elongations of the copper and of the steel should be equal. Denoting by X the increase in the tensile force in the bolt due to the change of temperature, we obtain

$$\alpha_s(t - t_0) + \frac{X}{A_s E_s} = \alpha_c(t - t_0) - \frac{X}{A_c E_c},$$

from which

$$X = \frac{(\alpha_c - \alpha_s)(t - t_0) A_s E_s}{1 + \frac{A_s E_s}{A_c E_c}}.$$

The change in the stresses in the bolt and in the tube may be calculated now in the usual way.




FIG. 24.

3. A strip of copper is soldered between two strips of steel (Fig. 24). What stresses will be produced in the steel and in the copper by a rise in the temperature of the strips from t_0 to t degrees?

Suggestion. The same method as in the previous problem should be used.

4. What stresses will be produced in the bars of the system

represented in Fig. 15 if the temperature of all the bars be raised from t_0 to t ?

Solution. Let X denote the tensile force produced in the steel bar by an increase in temperature. Then from the condition of equilibrium of the hinge O it can be seen that in the copper bars compressive forces act, equal to $X/2 \cos \alpha$; consequently the elongation of the steel bar becomes

$$\delta = \alpha_s(t - t_0)l + \frac{Xl}{A_s E_s}$$

and the elongation of the copper bars is

$$\delta_1 = \alpha_c(t - t_0) \frac{l}{\cos \alpha} - \frac{Xl}{2 \cos^2 \alpha A_c E_c}.$$

Furthermore from previous considerations (see p. 20),

$$\delta_1 = \delta \cos \alpha;$$

therefore

$$\alpha_s(t - t_0)l + \frac{Xl}{A_s E_s} = \alpha_c(t - t_0) \frac{l}{\cos^2 \alpha} - \frac{Xl}{2 \cos^3 \alpha A_c E_c},$$

from which

$$X = \frac{(t - t_0) \left(\frac{\alpha_c}{\cos^2 \alpha} - \alpha_s \right) A_s E_s}{1 + \frac{1}{2 \cos^3 \alpha} \frac{A_s E_s}{A_c E_c}}.$$

The stresses in the steel and in the copper will now be obtained from the following equations:

$$\sigma_s = \frac{X}{A_s}; \quad \sigma_c = \frac{X}{2 \cos \alpha A_c}.$$

5. Assuming that in the case shown in Fig. 17 a constant load $P = 100,000$ is applied at an initial temperature t_0 , determine at what increase in temperature the load will be completely transmitted to the copper if $\alpha_s = 70 \times 10^{-7}$ and $\alpha_c = 92 \times 10^{-7}$.

Solution.

$$(\alpha_c - \alpha_s)(t - t_0) = \frac{4P}{\pi(D^2 - d^2)E_c},$$

from which

$$t - t_0 = 75.4 \text{ degrees Fahrenheit.}$$

6. A steel bar consisting of two portions of lengths l_1 and l_2 and cross-sectional areas A_1 and A_2 is fixed at the ends. Find the thermal stresses if the temperature rises by 100 degrees Fahrenheit. Assume $l_1 = l_2$, $A_1 = 2A_2$, and $\alpha_s = 70 \times 10^{-7}$.

7. Find the thermal stresses in the system shown in Fig. 24 if the temperature of all three strips rises by 100 degrees Fahrenheit. The thickness of each of the three strips is the same and the coefficients of thermal expansion are $\alpha_s = 70 \times 10^{-7}$ and $\alpha_c = 92 \times 10^{-7}$. Assume $E_c : E_s = \frac{8}{15}$.

8. The temperature of the system shown in Fig. 15 rises by 100 degrees Fahrenheit. Find the thermal stresses if all three bars are of steel and have equal cross-sectional areas. Take $\alpha_s = 70 \times 10^{-7}$ and $E_s = 30 \times 10^6$ lbs. per sq. in.

9. Find the stresses in the wires of the system shown in Fig. 18 if the cross-sectional area of the wires is 0.1 sq. in., the load $Q = 4,000$ lbs., and the temperature of the system rises after assembly by 10 degrees Fahrenheit.

10. Determine the stresses which will be built up in the system represented in Fig. 20 if the temperature of the upper horizontal bar rises from t_0 to t degrees.

8. Extension of a Circular Ring.—If uniformly distributed radial forces act along the circumference of a thin circular ring (Fig. 25), uniform enlargement of the ring will be pro-

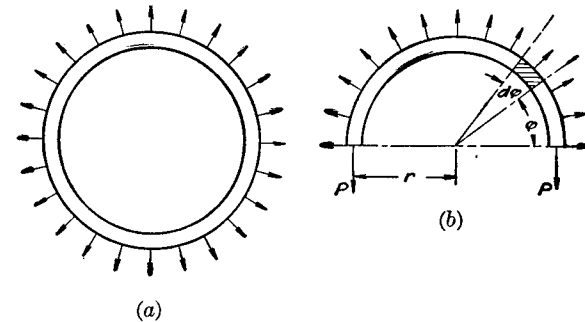


FIG. 25.

duced. In order to determine the tensile force P in the ring let us imagine that the ring is cut at the horizontal diametral section (Fig. 25, *b*) and consider the upper portion as a free body. If q denotes the uniform load per unit length of the

center line of the ring and r is the radius of the center line, the force acting on an element of the ring cut out by two adjacent cross sections will be $qrd\phi$, where $d\phi$ is the central angle, corresponding to the element. Taking the sum of the vertical components of all the forces acting on the half ring, the following equation of equilibrium will be obtained:

$$2P = 2 \int_0^{\pi/2} qr \sin \phi d\phi = 2qr,$$

from which

$$P = qr. \quad (13)$$

The tensile stress in the ring will now be obtained by dividing the force P by the cross sectional area of the ring.

In practical applications very often the determination of tensile stresses in a rotating ring is necessary. Then q represents the centrifugal force per unit length of the ring and is given by the equation:

$$q = \frac{w}{g} \frac{v^2}{r}, \quad (14)$$

in which w is the weight of the ring per unit length, r is the radius of the center line, v is the velocity of the ring at the radius r , and g is acceleration due to gravity. Substituting this expression for q in eq. (13), we obtain

$$P = \frac{wv^2}{g},$$

and the corresponding tensile stress will be

$$\sigma = \frac{P}{A} = \frac{wv^2}{Ag} = \frac{\gamma v^2}{g}. \quad (15)$$

It is seen that the stress is proportional to the density γ/g of the material and to the square of the peripheral velocity. For a steel ring and for the velocity $v = 100$ feet per second this stress becomes 1,060 lbs. per sq. in. Then for the same material and for any other velocity v_1 the stress will be $0.106 \times v^2$ in lbs. per sq. in., when v is in feet per sec.

Problems

1. Determine the tensile stress in the cylindrical wall of the press shown in Fig. 3 if the inner diameter is 10 ins. and the thickness of the wall is 1 in.

Solution. The maximum hydrostatic pressure p in the cylinder will be found from the equation:

$$p \cdot \frac{\pi 10^2}{4} = 100,000 \text{ lbs.},$$

from which $p = 1,270$ lbs. per sq. in. Cutting out from the cylinder an elemental ring of width 1 in. in the direction of the axis of the cylinder and using eq. (13) in which, for this case, $q = p = 1,270$ lbs. per in. and $r = 5$ ins., we obtain

$$\sigma = \frac{P}{A} = \frac{1,270 \times 5}{1 \times 1} = 6,350 \text{ lbs. per sq. in.}$$

2. A copper tube is fitted over a steel tube at a high temperature t (Fig. 26), the fit being such that no pressure exists between tubes at this temperature. Determine the stresses which will be produced in the copper and in the steel when cooled to room temperature t_0 if the outer diameter of the steel tube is d , the thickness of the steel tube is h_s and that of the copper tube is h_c .

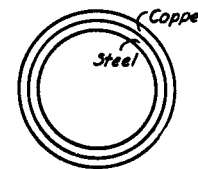


FIG. 26.

Solution. Due to the difference in the coefficients of expansion α_c and α_s there will be a pressure between the outer and the inner tubes after cooling. Let x denote the pressure per square inch; then the tensile stress in the copper tube will be

$$\sigma_c = \frac{xd}{2h_c}$$

and the compressive stress in the steel will be

$$\sigma_s = \frac{xd}{2h_s}.$$

The pressure x will now be found from the condition that during cooling both tubes have the same circumferential contraction; hence

$$\alpha_c(t - t_0) - \frac{xd}{2E_ch_c} = \alpha_s(t - t_0) + \frac{xd}{2E_sh_s},$$

from which

$$\sigma_c = \frac{\pi d}{2h_c} = \frac{(\alpha_c - \alpha_s)(t - t_0)E_c}{1 + \frac{h_c E_c}{h_s E_s}}.$$

In the same manner the stress in the steel may be calculated.

3. Referring to Fig. 26, what additional tensile stress in the tube will be produced by submitting it to a hydrostatic inner pressure $p = 100$ lbs. per sq. in. if the inner diameter $d_1 = 4$ in., $h_s = 0.1$ in. and $h_c = 15/8 \times 0.1$ in.?

Solution. Cutting out of the tube an elemental ring of width 1 in., the complete tensile force in the ring will be

$$P = \frac{p d_1}{2} = 200 \text{ lbs.}$$

Due to the fact that the unit circumferential elongations in copper and in steel are the same, the stresses will be in proportion to the moduli, i.e., the stress in the copper will be $8/15$ that in the steel. At the same time the cross sectional area of the copper is $15/8$ that of the steel; hence the force P will be equally distributed between two metals and the tensile stress in the copper produced by a hydrostatic pressure will be

$$\sigma_c = \frac{P}{2 \times h_c} = \frac{200}{2 \times 15/8 \times 0.1} = 533 \text{ lbs. per sq. in.}$$

The stress in the steel will be

$$\sigma_s = \frac{15}{8} \sigma_c = 1,000 \text{ lbs. per sq. in.}$$

4. A built-up ring consists of an inner copper ring and an outer steel ring. The inner diameter of the steel ring is smaller than the outer diameter of the copper ring by the amount δ and the structure is assembled after preliminary heating of the steel ring. When cooled the steel ring produces pressure on the copper ring (shrink fit pressure). Determine the stresses in the steel and the copper after assembly if both rings have rectangular cross sections with the dimensions h_s and h_c in radial direction and dimensions equal to unity in the direction perpendicular to the plane of the ring. The dimensions h_s and h_c may be considered small as compared with the diameter d of the surface of contact of the two rings.

Solution. Let x be the uniformly distributed pressure per square inch of the surface of contact of the rings; then the compressive stress in the copper and the tensile stress in the steel will be

found from the equations:

$$\sigma_c = \frac{x d}{2 h_c}; \quad \sigma_s = \frac{x d}{2 h_s}. \quad (a)$$

The decrease in the outer diameter of the copper ring will be

$$\delta_1 = \frac{\sigma_c}{E_c} \cdot d = \frac{x d^2}{2 h_c E_c}.$$

The increase of the inner diameter of the steel ring will be

$$\delta_2 = \frac{\sigma_s}{E_s} \cdot d = \frac{x d^2}{2 h_s E_s}.$$

The unknown pressure x will be found from the equation:

$$\delta_1 + \delta_2 = \frac{x d^2}{2} \left(\frac{1}{h_c E_c} + \frac{1}{h_s E_s} \right) = \delta,$$

from which

$$x = \frac{2 \delta h_s E_s}{d^2 \left(1 + \frac{h_s E_s}{h_c E_c} \right)}.$$

Now the stresses σ_s and σ_c , from eqs. (a), will be

$$\sigma_c = \frac{\delta}{d} \cdot \frac{h_s}{h_c} \cdot \frac{E_s}{1 + \frac{h_s E_s}{h_c E_c}}; \quad \sigma_s = \frac{\delta}{d} \cdot \frac{E_s}{1 + \frac{h_s E_s}{h_c E_c}}.$$

5. Determine the stresses which will be produced in the built-up ring of the previous problem by rotation of the ring with a constant speed n r.p.m.

Solution. Due to the fact that copper has a greater density and a smaller modulus of elasticity than steel, the copper ring will press on the steel ring during rotation. Let x denote the pressure per square inch of the surface of contact between the two rings. Then the corresponding stresses will be given by eqs. (a) of the previous problem. In addition to these stresses the stresses produced by centrifugal forces should be taken into consideration. Denoting by γ_s and γ_c the weights per unit volume of steel and copper and using eq. (15), we obtain

$$\sigma_s = \frac{\gamma_s}{g} \left(\frac{2\pi n}{60} \right)^2 \left(\frac{d + h_s}{2} \right)^2; \quad \sigma_c = \frac{\gamma_c}{g} \left(\frac{2\pi n}{60} \right)^2 \left(\frac{d - h_c}{2} \right)^2.$$

Combining these stresses with the stresses due to pressure x and

noting that the unit elongation for both rings should be the same, the following equation for determining x will be obtained:

$$\frac{1}{E_s} \left[\frac{\gamma_s}{g} \left(\frac{2\pi n}{60} \right)^2 \left(\frac{d + h_s}{2} \right)^2 + \frac{xd}{2h_s} \right] = \frac{1}{E_c} \left[\frac{\gamma_c}{g} \left(\frac{2\pi n}{60} \right)^2 \left(\frac{d - h_c}{2} \right)^2 - \frac{xd}{2h_c} \right],$$

from which x may be calculated for each particular case. Knowing x , the complete stress in the copper and the steel may be found without difficulty.

6. Determine the limiting peripheral speed of a copper ring if the working stress is $\sigma_w = 3,000$ lbs. per sq. in. and $\gamma_c = 550$ lbs. per cubic foot.

Answer.

$$v = 159 \text{ feet per sec.}$$

7. Referring to problem 2 and Fig. 26, determine the stress in the copper at room temperature if $t - t_0 = 100^\circ$ Fahrenheit,

$$\alpha_c - \alpha_s = 22 \times 10^{-7}, \quad h_s = h_c.$$

Answer.

$$\sigma_c = 2,300 \text{ lbs. per sq. in.}$$

8. Referring to problem 5, determine the number of revolutions n per minute at which the stress in the copper ring becomes equal to zero if the initial assembly stress in the same ring was a compression equal to σ_0 , and $h_c = h_s$, and $E_s = 2E_c$.

Solution. The number of revolutions n will be determined from the equation:

$$3\sigma_0 = \left(\frac{2\pi n}{60} \right)^2 \left[\frac{\gamma_c}{g} \left(\frac{d - h_c}{2} \right)^2 + \frac{\gamma_s}{g} \left(\frac{d + h_s}{2} \right)^2 \right].$$

9. Find the stresses in the built-up ring of problem 4 assuming $\delta = 0.001$ in., $d = 4$ in., $h_s = h_c$, and $E_s/E_c = 15/8$. Find the changes of these stresses if the temperature of the rings increases after assembly by 10 degrees Fahrenheit. Take $\alpha_c = 92 \times 10^{-7}$ and $\alpha_s = 70 \times 10^{-7}$.

10. Referring to problem 5, find the stresses in steel and in copper if $n = 3,000$ r.p.m., $d = 2$ ft., $h_s = h_c = \frac{1}{2}$ in., $\gamma_s = 490$ lbs. per cubic foot, and $\gamma_c = 550$ lbs. per cubic foot.

CHAPTER II

ANALYSIS OF STRESS AND STRAIN

9. Variation of the Stress with the Orientation of the Cross Section for Simple Tension and Compression.—In discussing stresses in a prismatic bar submitted to an axial tension P we have previously considered (art. 2) only the stress over cross sections perpendicular to the axis of the bar.

We now take up the case in which the cross section pq (Fig. 27a), perpendicular to the plane of the figure, is inclined to the axis. Since all longitudinal fibers have the same elongation (see p. 3) the forces representing the action of the right portion of the bar on its left portion are uniformly distributed over the cross section pq .

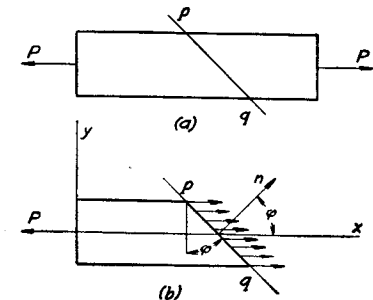


FIG. 27.

The left portion of the bar, isolated in Fig. 27b, is in equilibrium under the action of these forces and the external force P applied at the left end. Hence the resultant of the forces distributed over the cross section pq is equal to P . Denoting by A the area of the cross section normal to the axis of the bar and by φ , the angle between the axis x and the normal n to the cross section pq , the cross-sectional area of pq will be $A/\cos \varphi$ and the stress s over this cross section is

$$s = \frac{P \cos \varphi}{A} = \sigma_x \cos \varphi \quad (16)$$

where $\sigma_x = P/A$ denotes the stress on the cross section normal to the axis of the bar. It is seen that the stress s over any inclined cross section of the bar is smaller than the stress σ_x over the cross section normal to the axis of the bar and that it diminishes as the angle φ increases. For $\varphi = \pi/2$ the sec-

tion pq is parallel to the axis of the bar and the stress s becomes zero, which indicates that there is no pressure between the longitudinal fibers of the bar.

The stress s , defined by equation (16), has the direction of the force P and is not perpendicular to the cross section pq . In such cases it is usual to resolve the total stress into two components, as is shown in Fig. 28. The stress component σ_n perpendicular to the cross section is called the *normal stress*. Its magnitude is

$$\sigma_n = s \cos \varphi = \sigma_x \cos^2 \varphi. \quad (17)$$

The tangential component τ is called the *shearing stress* and has the value

$$\tau = s \sin \varphi = \sigma_x \cos \varphi \sin \varphi = \frac{\sigma_x}{2} \sin 2\varphi. \quad (18)$$

To visualize the strain which each component stress produces let us consider a thin element cut out of the bar by two adjacent parallel sections pq and p_1q_1 , Fig. 29a. The stresses acting on this element are shown in Fig. 29a. Figures 29b and 29c are obtained by resolving these stresses into normal and tangential components as explained above and show separately the action of each of these components. It is seen that the *normal stresses* σ_n produce extension of the element in the direction of the normal n to the cross section pq and the shearing stresses produce sliding of section pq with respect to p_1q_1 .

From equation (17) it is seen that the *maximum normal stress* acts over cross sections normal to the axis of the bar and we have

$$(\sigma_n)_{\max} = \sigma_x.$$

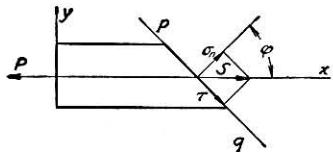


FIG. 28.

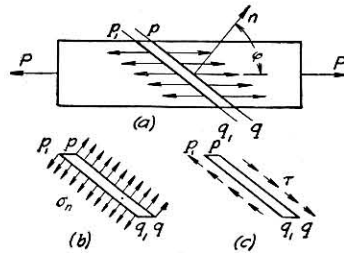


FIG. 29.

The *maximum shearing stress*, as seen from equation (18), acts over cross section s inclined at 45° to the axis of the bar, where $\sin 2\varphi = 1$, and has the magnitude

$$\tau_{\max} = \frac{1}{2}\sigma_x. \quad (19)$$

Although the maximum shearing stress is one-half the maximum normal stress, this stress is sometimes the controlling factor when considering the strength of materials which are much weaker in shear than in tension. For example, in a tensile test of a bar of mild steel with a polished surface, yielding of the metal is visible to the naked eye, Fig. 30. It

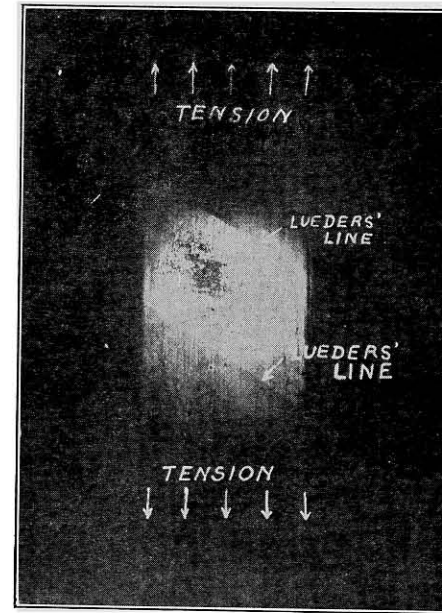


FIG. 30.

occurs along the inclined planes for which the shearing stress is a maximum and at the value of the force P which corresponds to the point B in Fig. 2a. This indicates that in the case of mild steel failure is produced by the maximum shearing stress although this stress is only equal to one-half of the maximum normal stress.

Formulas (17) and (18), derived for a bar in tension can be used also in the case of compression. Tensile stress is assumed positive and compressive negative. Hence for a bar under axial compression we have only to take σ_x with a negative sign in formulas (17) and (18). The negative sign of σ_n will then indicate that in Fig. 29*b* we obtain, instead of tension, a compressive action on the thin element between the adjacent cross sections pq and p_1q_1 . The negative sign for τ in formula (18) will indicate that for compression of the bar

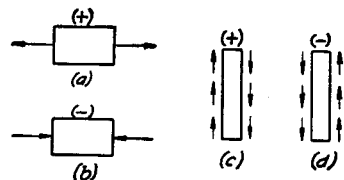


FIG. 31.

the shearing action on the element has the direction opposite to that shown in Fig. 29*c*. Figure 31 illustrates the rules for signs of normal and shearing stresses which will be used. Positive sign for shearing is taken when they

form a couple in clockwise direction and negative sign for opposite direction.

10. The Circle of Stress.—Formulas (17) and (18) can be represented graphically.¹ We take an orthogonal system of coordinates with the origin at O and with positive direction of axes as shown in Fig. 32. Beginning with the cross section pq perpendicular to the axis of the bar we have for this case $\varphi = 0$, in Fig. 28, and we find, from formulas (17) and (18) $\sigma_n = \sigma_x$, $\tau = 0$. Selecting a scale for stresses and measuring normal components along the horizontal axis and shearing components along the vertical axis, the stress acting on the plane with $\varphi = 0$ is represented in Fig. 32 by a point A having the abscissa equal to σ_x and the ordinate equal to zero. Taking now a plane parallel to the axis of the bar we have

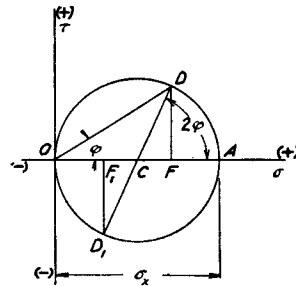


FIG. 32.

¹ This graphical representation is due to O. Mohr, *Zivilingenieur*, 1882, p. 113. See also his "Abhandlungen," p. 219, 1906. In this book the references to other publications on the same subject are given.

$\varphi = \pi/2$, and observing that both stress components vanish for such a plane we conclude that the origin O , in Fig. 32, corresponds to this plane. Constructing now on \overline{OA} as diameter a circle it can be readily proved that the stress components for any cross section pq with an arbitrarily chosen angle φ , Fig. 28, will be represented by the coordinates of a point on that circle. To obtain the point on the circle corresponding to a definite angle φ it is only necessary to measure in the counter-clockwise direction from the point A the arc subtending an angle equal to 2φ . Let D be the point obtained in this manner; then, from the figure,

$$\overline{OF} = \overline{OC} + \overline{CF} = \frac{\sigma_x}{2} + \frac{\sigma_x}{2} \cos 2\varphi = \sigma_x \cos^2 \varphi,$$

$$\overline{DF} = \overline{CD} \sin 2\varphi = \frac{\sigma_x}{2} \sin 2\varphi.$$

Comparing these expressions for the coordinates of point D with expressions (17) and (18) it is seen that this point defines the stresses acting on the plane pq , Fig. 28. As the section pq rotates in the counter-clockwise direction about an axis perpendicular to the plane of Fig. 28, φ varying from 0 to $\pi/2$, the point D moves from A to O , so that the upper half-circle determines the stresses for all values of φ within these limits. If the angle φ is larger than $\pi/2$ we obtain a cross section as shown in Fig. 33*a* cut by a plane mm the external normal ² n_1 to which makes with the x axis an angle larger than $\pi/2$. Measuring again in the counter-clockwise direction from the point A , in Fig. 32, the arc subtending an angle equal to 2φ we will obtain now a point on the lower half-circle.

Take, as an example, the case when mm is perpendicular to cross section pq which was previously considered. In such a case the corresponding point on the circle in Fig. 32 is point D_1 such that the angle DOD_1 is equal to π ; thus DD_1 is a diameter of the circle. Using the coordinates of point D_1

² The portion of the bar on which the stresses act is indicated by shading. The external normal n_1 is directed outward from that portion.

we find the stress components σ_{n_1} and τ_1 for the plane mm

$$\sigma_{n_1} = \overline{OF_1} = \overline{OC} - \overline{F_1C} = \frac{\sigma_x}{2} - \frac{\sigma_x}{2} \cos 2\varphi = \sigma_x \sin^2 \varphi \quad (20)$$

$$\tau_1 = -\overline{F_1D_1} = -\overline{CD_1} \sin 2\varphi = -\frac{\sigma_x}{2} \sin 2\varphi.^3 \quad (21)$$

Comparing these results with expressions (17) and (18) we find

$$\sigma_n + \sigma_{n_1} = \sigma_x \cos^2 \varphi + \sigma_x \sin^2 \varphi = \sigma_x \quad (22)$$

$$\tau_1 = -\tau. \quad (23)$$

This indicates that the sum of the normal stresses acting on two perpendicular planes remains constant and equal to σ_x . The shearing stresses acting on two perpendicular planes are numerically equal but of opposite sign.

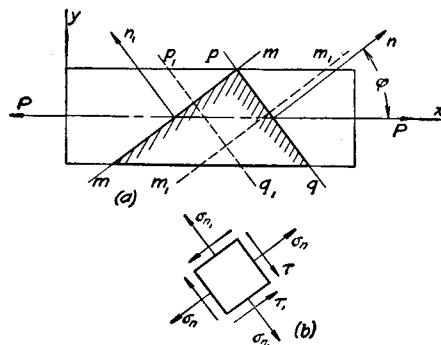


FIG. 33.

By taking the adjacent cross sections m_1m_1 and p_1q_1 parallel to mm and pq an element, such as shown in Fig. 33b, is isolated and the directions of stresses acting on this element are indicated. It is seen that the shearing stresses acting on the sides of the element parallel to the pq plane produce a couple in the clockwise direction, which, according to the accepted rule defined in Fig. 31c, must be considered positive. The shearing stresses acting on the other two sides of the element

³ The minus sign is taken since point D_1 is on the side of negative ordinates.

produce a couple in the counter-clockwise direction which, according to the rule defined in Fig. 31d, is negative.

The circle in Fig. 32 called the *circle of stress* is used to determine the stress components σ_n and τ for a cross section pq whose normal makes any angle φ with the x axis, Fig. 28. A similar construction can be used to solve the inverse problem, when the components σ_n and τ are given and it is required to find the tensile stress σ_x in the axial direction and the angle φ . We observe that the angle between the chord OD and the x axis is equal to φ , Fig. 32. Hence, after constructing the point D with coordinates σ_n and τ , we obtain φ by drawing the line OD . Knowing the angle φ , the radius DC making the angle 2φ with the axis OC can be drawn and the center C of the circle of stress obtained.

Problems

1. Determine σ_n and τ analytically and graphically if $\sigma_x = 15,000$ lbs. per sq. in. and $\varphi = 30^\circ$ or $\varphi = 120^\circ$. By using the angles 30° and 120° isolate an element as shown in Fig. 33b and show by arrows the directions of stresses acting on the element.

2. Solve the previous problem assuming that instead of tensile stress σ_x there acts compressive stress of the same amount. Observe that in this case the diameter of the circle, Fig. 32, must lie on the negative side of the abscissa.

3. On a plane pq , Fig. 28, are acting a normal stress $\sigma_n = 12,000$ lbs. per sq. in. and a shearing stress $\tau = 4,000$ lbs. per sq. in. Find the angle φ and the stress σ_x .

Answer.

$$\tan \varphi = \frac{1}{3}, \quad \sigma_x = \frac{\sigma_n}{\cos^2 \varphi} = 13,330 \text{ lbs. per sq. in.}$$

4. On the two perpendicular sides of the element in Fig. 33b are acting the normal stresses $\sigma_n = 12,000$ lbs. per sq. in. and $\sigma_{n_1} = 6,000$ lbs. per sq. in. Find σ_x and τ .

Answer. $\sigma_x = 18,000$ lbs. per sq. in., $\tau = \pm 8,485$ lbs. per sq. in.

5. Find maximum shearing stress for the case in problem 1.

6. Determine the aspect of cross sections for which the normal and the shearing stresses are numerically equal.

11. Tension or Compression in Two Perpendicular Directions.—There are cases in which the material of a structure

is submitted to the action of tension or compression in two perpendicular directions. As an example of such a stress condition let us consider stresses in the cylindrical wall of a boiler submitted to internal pressure p lbs. per sq. in.⁴ Let us cut out a small element from the cylindrical wall of the boiler by two adjacent axial sections and by two circumferential sections, Fig. 34a. Because of the internal pressure

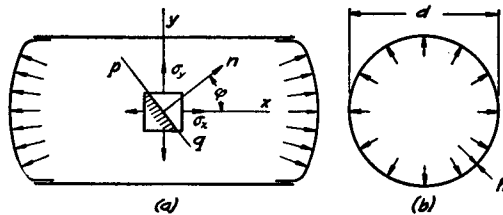


FIG. 34.

the cylinder will expand both in the circumferential and in the axial directions. The tensile stress σ_y in the circumferential direction will be determined in the same manner as in the case of a circular ring (art. 8). Denoting the inner diameter of the boiler by d and its wall thickness by h , this stress is

$$\sigma_y = \frac{pd}{2h}. \quad (24)$$

In calculating the tensile stress σ_x in the axial direction we imagine the boiler cut by a plane perpendicular to the x axis. Considering the equilibrium of one portion of the boiler it will be appreciated that the tensile force producing longitudinal extension of the boiler is equal to the resultant of the pressure on the ends of the boiler, i.e., equal to

$$P = p \left(\frac{\pi d^2}{4} \right).$$

⁴ More accurately p denotes the difference between the internal pressure and the external atmospheric pressure.

The cross sectional area of the wall of the boiler is ⁵

$$A = \pi dh.$$

Hence

$$\sigma_x = \frac{P}{A} = \frac{pd}{4h}. \quad (25)$$

It is seen that the element of the wall undergoes tensile stresses σ_x and σ_y in two perpendicular directions.⁶ The tensile stress σ_y in the circumferential direction being twice as large as the stress σ_x in the axial direction. We consider now the stress over any cross section pq , Fig. 34a, perpendicular to xy plane and whose normal n makes an angle φ with the x axis. By using formulas (17) and (18) of the previous article we conclude that the tensile stresses σ_x acting in the axial direction produces on the plane pq normal and shearing stresses of magnitude

$$\sigma_n' = \sigma_x \cos^2 \varphi, \quad \tau' = \frac{1}{2} \sigma_x \sin 2\varphi. \quad (a)$$

To calculate the stress components produced on the same plane pq by the tensile stress σ_y , we observe that the angle between σ_y and the normal n , Fig. 34a, is $\frac{\pi}{2} - \varphi$ and is measured clockwise from the y axis, while φ is measured counter-clockwise from the x axis. From this we conclude that in using equations (17) and (18) we must substitute in this case σ_y for σ_x and $-\left(\frac{\pi}{2} - \varphi\right)$, instead of φ . This gives

$$\sigma_n'' = \sigma_y \sin^2 \varphi, \quad \tau'' = -\frac{1}{2} \sigma_y \sin 2\varphi. \quad (b)$$

Summing up the stress components (a) and (b) produced by σ_x and σ_y stresses respectively, the resultant normal and shearing stress components for the case of tension in the two

⁵ The thickness of the wall is assumed small in comparison with the diameter and the approximate formula for the cross-sectional area is used.

⁶ There is also a pressure on the inner cylindrical surface of the element but this pressure is small in comparison with σ_x and σ_y and is neglected in further discussion.

perpendicular directions are obtained

$$\sigma_n = \sigma_x \cos^2 \varphi + \sigma_y \sin^2 \varphi, \quad (26)$$

$$\tau = \frac{1}{2}(\sigma_x - \sigma_y) \sin 2\varphi. \quad (27)$$

12. The Circle of Stress for Combined Stresses.—Proceeding as in article 10 the graphical representation of the formulas (26) and (27) can be readily obtained using the circle of stress. Assuming again that the abscissas and the ordinates represent to a certain scale the normal and the shearing stress components, we conclude that the points A and B , in Fig. 35,

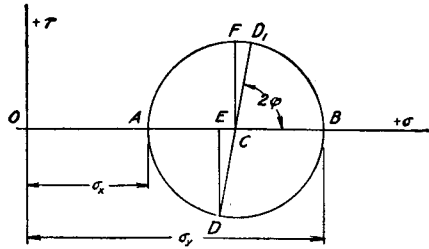


FIG. 35.

with abscissas equal to σ_x and σ_y represent the stresses acting on the sides of the element in Fig. 34a, perpendicular to the x and y axes respectively. To obtain the stress components on any inclined plane, defined by an angle φ in Fig. 34a, we have only to construct a circle on AB as a diameter and draw the radius CD making the angle ACD , measured in the counter-clockwise direction from point A , equal to 2φ . From the figure we conclude that

$$\begin{aligned} \overline{OE} &= \overline{OC} - \overline{CE} = \frac{1}{2}(\overline{OA} + \overline{OB}) - \frac{1}{2}(\overline{OB} - \overline{OA}) \cos 2\varphi \\ &= \frac{\sigma_x + \sigma_y}{2} - \frac{\sigma_y - \sigma_x}{2} \cos 2\varphi = \sigma_x \cos^2 \varphi + \sigma_y \sin^2 \varphi. \end{aligned}$$

This indicates that the abscissa \overline{OE} of the point D on the circle, if measured to the assumed scale, gives the normal stress component σ_n , (26).

The ordinate of the point D is

$$\overline{DE} = \overline{CD} \sin 2\varphi = \frac{\sigma_y - \sigma_x}{2} \sin 2\varphi.$$

Observing that this ordinate must be taken with negative sign, we conclude that the ordinate of the point D , taken with the proper sign, gives the shearing stress component (27).

When the plane pq is rotating counter-clockwise with respect to an axis perpendicular to xy plane, Fig. 34a, the corresponding point D is moving in the counter-clockwise direction along the circle of stress in Fig. 35 so that for each value of φ the corresponding values of the components σ_n and τ are obtained as the coordinates of the point D .

From this graphical representation of formulae (26) and (27) it follows at once that the maximum normal stress component in our case is equal to σ_y and the maximum shearing stress represented by the radius \overline{CF} of the circle in Fig. 35 is

$$\tau_{\max} = \frac{\sigma_y - \sigma_x}{2} \quad (28)$$

and occurs when $\sin 2\varphi = -1$ and $\varphi = 3\pi/4$. The same magnitude of shearing stress but with negative sign is acting on the plane for which $\varphi = \pi/4$.

Taking two perpendicular planes defined by the angles φ and $\pi/2 + \varphi$, which the normals n and n_1 make with the x axis, the corresponding stress components are given by the co-ordinates of points D and D_1 in Fig. 35, and we conclude

$$\sigma_n + \sigma_{n_1} = \sigma_x + \sigma_y, \quad (29)$$

$$\tau_1 = -\tau. \quad (30)$$

This indicates that the sum of the normal stresses acting on two perpendicular planes remains constant as the angle φ varies. Shearing stresses acting on two perpendicular planes are numerically equal but of opposite sign.

The circle of stress, similar to that in Fig. 35, can be constructed also if one or both stresses σ_x and σ_y are compressive, it is only necessary to measure the compressive stresses on the

negative side of the abscissa axis. Assuming, for example, that the stresses acting on an element are as shown in Fig. 36a, the corresponding circle is shown in Fig. 36b. The stress

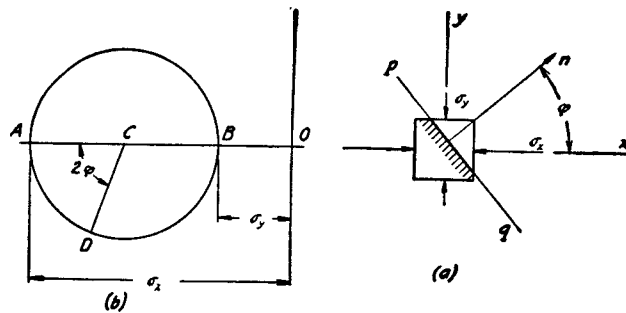


FIG. 36.

components acting on a plane pq with normal n are given by the coordinates of the point D in the diagram.

Problems

1. The boiler shown in Fig. 34 has $d = 100$ in., $h = \frac{1}{2}$ in. Determine σ_x and σ_y if $p = 100$ lbs. per sq. in. Isolate a small element by the planes for which $\phi = 30^\circ$ and 120° and show the magnitudes and the directions of the stress components acting on the lateral sides of that element.

2. Determine the stresses σ_n , σ_{n_1} , τ and τ_1 if, in Fig. 36a, $\sigma_x = 10,000$ lbs. per sq. in., $\sigma_y = -5,000$ lbs. per sq. in. and $\phi = 30^\circ$, $\phi_1 = 120^\circ$.

Answer. $\sigma_n = 6,250$ lbs. per sq. in., $\sigma_{n_1} = -1,250$ lbs. per sq. in., $\tau = -\tau_1 = 6,500$ lbs. per sq. in.

3. Determine σ_n , σ_{n_1} , τ and τ_1 in the previous problem, if the angle ϕ is chosen so that τ is a maximum.

Answer. $\sigma_n = \sigma_{n_1} = 2,500$ lbs. per sq. in., $\tau = -\tau_1 = 7,500$ lbs. per sq. in.

13. Principal Stresses.—It was shown in the previous article that for tension or compression in two perpendicular directions x and y one of the two stresses σ_x or σ_y is the maximum and the other the minimum normal stress. For all inclined planes, such as planes pq in Figs. 34a and 36a, the value of the normal stress σ_n lies between these limiting values.

At the same time there is acting on all inclined planes not only normal stresses σ_n , but also shearing stresses, τ . Such stresses as σ_x and σ_y , of which one is the maximum and the other the minimum normal stress, are called the *principal stresses* and the two perpendicular planes on which they act are called the *principal planes*. There are no shearing stresses acting on these planes.

In the example of the previous article, Fig. 34, the principal stresses σ_x and σ_y were found from very simple considerations and it was required to find the expressions for the normal and shearing stress components acting on any inclined plane, such as plane pq in Fig. 34a. In our further discussion (see p. 122) there will be cases in which it will be possible to determine the shearing and the normal stress components acting on two perpendicular planes. From the previous discussion we already know that such normal stresses do not represent the maximum stress which is the stress particularly important in design. To get the maximum value of stress, the principal stresses are required. The simplest way of solving this problem is by using the circle of stress we considered in Fig. 35. Assume that the stresses acting on an elementary rectangular parallelepiped are as shown in Fig.

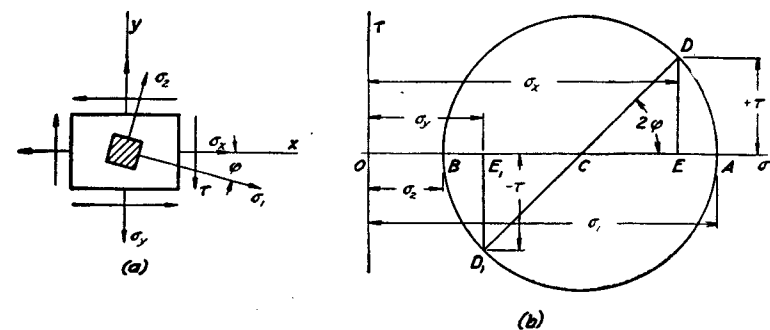


FIG. 37.

37a. The stresses σ_x and σ_y are not principal stresses, since not only normal but also shearing stresses are acting on the planes perpendicular to the x and y axes. To construct the

circle of stress in this case, we use first the stress components σ_x , σ_y and τ and construct the points D and D_1 as shown in Fig. 37*b*. Since these two points represent the stresses acting on two perpendicular planes, the length DD_1 represents a diameter of the circle of stress. The intersection of this diameter with the x axis gives the center C of the circle, so that the circle can be readily constructed. The intersection points A and B of the circle with the x axis define the magnitudes of the maximum and the minimum normal stresses, which are the principal stresses and are denoted by σ_1 and σ_2 . Using the circle, the formulas for calculating σ_1 and σ_2 can be easily obtained. From the figure we have

$$\sigma_1 = \overline{OA} = \overline{OC} + \overline{CD} = \frac{\sigma_x + \sigma_y}{2} + \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau^2}, \quad (31)$$

$$\sigma_2 = \overline{OB} = \overline{OC} - \overline{CD} = \frac{\sigma_x + \sigma_y}{2} - \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau^2}. \quad (32)$$

The directions of the principal stresses can also be obtained from the figure. We know that the angle DCA is the double angle between the stress σ_1 and the x axis and since 2φ is measured from D to A in the clockwise direction the direction of σ_1 must be as indicated in Fig. 37*a*. If we isolate the element shaded in the figure with the sides normal and parallel to σ_1 there will be only normal stresses σ_1 and σ_2 acting on its sides. For the calculation of the numerical value of the angle φ we have, from the figure,

$$|\tan 2\varphi| = \frac{\overline{DE}}{\overline{CE}}.$$

Regarding the sign of the angle φ , it must be taken negative in this case since it is measured from the x axis in the clockwise direction, Fig. 37*a*. Hence

$$\tan 2\varphi = -\frac{\overline{DE}}{\overline{CE}} = -\frac{2\tau}{\sigma_x - \sigma_y}. \quad (33)$$

The maximum shearing stress is given by the magnitude of

the radius of the circle of stress and we have

$$\tau_{\max} = \frac{\sigma_1 - \sigma_2}{2} = \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau^2}. \quad (34)$$

The equations (31)–(34) completely solve the problem of the determination of the maximum normal and the maximum shearing stresses if the normal and shearing stresses acting on any two perpendicular planes are given since a circle is fixed by two points at the ends of a diameter.

Problems

1. An element, Fig. 37*a*, is submitted to the action of stresses $\sigma_x = 5,000$ lbs. per sq. in., $\sigma_y = 3,000$ lbs. per sq. in., $\tau = 1,000$ lbs. per sq. in. Determine the magnitudes and the directions of principal stresses σ_1 and σ_2 .

Solution. By using formulas (31) and (32) we obtain

$$\begin{aligned} \sigma_1 &= \frac{5,000 + 3,000}{2} + \sqrt{\left(\frac{5,000 - 3,000}{2}\right)^2 + 1,000^2} \\ &= 4,000 + 1,414 = 5,414 \text{ lbs. per sq. in.,} \end{aligned}$$

$$\sigma_2 = 4,000 - 1,414 = 2,586 \text{ lbs. per sq. in.}$$

From formula (33) we have

$$\tan 2\varphi = -1, \quad 2\varphi = -45^\circ, \quad \varphi = -22\frac{1}{2}^\circ.$$

The minus sign indicates that φ is measured from the x axis in the clockwise direction as shown in Fig. 37*a*.

2. Determine the direction of the principal stresses in the previous problem if $\sigma_x = -5,000$ lbs. per sq. in.

Solution. The corresponding circle of stress is shown in Fig. 38, $\tan 2\varphi = \frac{1}{4}$, $2\varphi = 14^\circ 2'$. Hence the angle which the maximum compressive stress makes with the x axis is equal to $7^\circ 1'$ and is measured counter-clockwise from the x axis.

3. Find the circle of stress for the case of two equal tensions $\sigma_x = \sigma_y = \sigma$ and for two equal compressions $\sigma_x = \sigma_y = -\sigma$. $\tau = 0$ in both cases.

Answer. Circles become points on the horizontal axis with the abscissas σ and $-\sigma$ respectively.

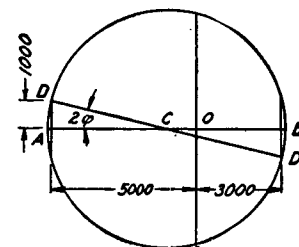


FIG. 38.

4. On the sides of the element shown in Fig. 39a are acting the stresses $\sigma_x = -500$ lbs. per sq. in., $\sigma_y = 1,500$ lbs. per sq. in., $\tau = 1,000$ lbs. per sq. in. Find, by using the circle of stress, the magnitudes of the normal and shearing stresses on (a) the principal planes, (b) the planes of maximum shearing stress.

Solution. The corresponding circle of stress is shown in Fig. 39b. The points D and D_1 represent stresses acting on the sides of the element in Fig. 39a perpendicular to the x and y axes. OB and OA represent the principal stresses. Their magnitudes are $\sigma_1 = 1,914$ lbs. per sq. in. and $\sigma_2 = -914$ lbs. per sq. in. respectively. The direction of the maximum compressive stress σ_2 makes the angle $= 22\frac{1}{2}^\circ$ with the x axis, this angle being measured from the x axis in the counter-clockwise direction as shown in Fig. 39a. The points

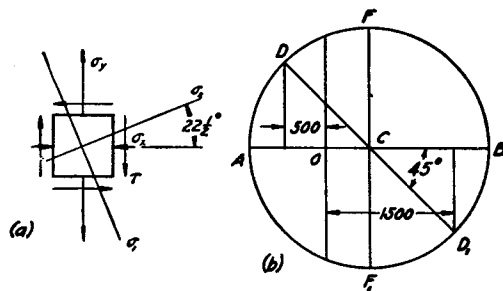


FIG. 39.

F and F_1 represent stresses acting on the planes subject to maximum shear. The magnitude of this shear is $1,414$ lbs. per sq. in. OC represents the normal stresses equal to 500 lbs. per sq. in. acting on the same plane.

5. Solve the previous problem if $\sigma_x = -5,000$ lbs. per sq. in., $\sigma_y = 3,000$ lbs. per sq. in., $\tau = 1,000$ lbs. per sq. in.

14. Analysis of Strain in the Case of Simple Tension.—

In article 2, the axial elongation of a bar in tension was discussed. Experiments show that such axial elongation is always accompanied by lateral contraction of the bar, and that the ratio $\frac{\text{unit lateral contraction}}{\text{unit axial elongation}}$ is constant for a given bar within the elastic limit. This constant will be called μ and is known as *Poisson's ratio*, after the name of the French mathematician who determined this ratio analytically by

using the molecular theory of structure of the material. For materials which have the same elastic properties in all directions, so-called *isotropic materials*, Poisson found $\mu = 1/4$. Experimental investigation of the lateral contraction in structural metals⁷ shows that μ is usually not very far off the value calculated by Poisson. For instance, in the case of structural steel it can be taken as $\mu = 0.30$. Knowing the Poisson ratio of a material, the change in volume of a bar in tension can be calculated. The length of the bar will increase in the ratio $(1 + \epsilon) : 1$. The lateral dimensions diminish in the ratio $(1 - \mu\epsilon) : 1$; hence the cross-sectional area diminishes in the ratio $(1 - \mu\epsilon)^2 : 1$. Then the volume of the bar changes in the ratio $(1 + \epsilon)(1 - \mu\epsilon)^2 : 1$, which becomes $(1 + \epsilon - 2\mu\epsilon) : 1$ if we recall that ϵ is a small quantity and neglect its powers. Then the *unit volume expansion* is $\epsilon(1 - 2\mu)$. It is unlikely that any material diminishes its volume when in tension; hence μ must be less than 0.50 . For such materials as rubber and paraffin μ approaches the above limit and the volume of these materials during extension remains approximately constant. On the other hand such material as concrete has a small magnitude of μ ($\mu = 1/8$ to $1/12$) and for cork μ can be taken equal to zero.

The above discussion of lateral contraction during tension can be applied with suitable changes to the case of compression. Longitudinal compression will be accompanied by lateral expansion and for calculating this expansion the same value for μ as in the case of extension is used.

Problems

1. Determine the increase in unit volume of the bar in tension if $\sigma_w = 5,600$ lbs. per sq. in., $\mu = 0.30$, $E = 30 \cdot 10^6$ lbs. per sq. in.

Solution. Increase in unit volume is

$$\epsilon(1 - 2\mu) = \frac{\sigma_w}{E} (1 - 2\mu) = \frac{5,600}{30 \times 10^6} (1 - 0.6) = 74.7 \times 10^{-6}.$$

2. Determine the increase in volume of a bar the extension of

⁷ These materials can be considered as isotropic (see Part II).

which is produced by the force P at the end and the weight of the bar (see article 5), p. 14.

Answer. The increase in volume is equal to

$$\frac{Al(1 - 2\mu)}{E} \left(\frac{P}{A} + \frac{\gamma l}{2} \right).$$

15. Strain in the Case of Tension or Compression in Two Perpendicular Directions.—If a bar in the form of a rectangular parallelepiped is submitted to tensile forces acting in two perpendicular directions x and y (Fig. 34), the elongation in one of these directions will depend not only upon the tensile stress in this direction but also upon the stress in the perpendicular direction. The unit elongation in the direction of the x axis due to the tensile stress σ_x will be σ_x/E . The tensile stress σ_y will produce lateral contraction into x direction equal to $\mu\sigma_y/E$; then if both stresses σ_x and σ_y act simultaneously the unit elongation in x direction will be

$$\epsilon_x = \frac{\sigma_x}{E} - \mu \frac{\sigma_y}{E}. \quad (35)$$

Similarly, for the y direction, we obtain

$$\epsilon_y = \frac{\sigma_y}{E} - \mu \frac{\sigma_x}{E}. \quad (36)$$

In the particular case, for the two tensions equal, $\sigma_x = \sigma_y = \sigma$, we obtain

$$\epsilon_x = \epsilon_y = \frac{\sigma}{E} (1 - \mu). \quad (37)$$

From eqs. (35) and (36) the stresses σ_x and σ_y can be obtained as functions of unit strains ϵ_x and ϵ_y as follows:

$$\sigma_x = \frac{(\epsilon_x + \mu\epsilon_y)E}{1 - \mu^2}; \quad \sigma_y = \frac{(\epsilon_y + \mu\epsilon_x)E}{1 - \mu^2}. \quad (38)$$

If in the case shown in Fig. 39a the elongation ϵ_x in axial direction and the elongation ϵ_y in circumferential direction are measured by an extensometer the corresponding tensile stresses σ_x and σ_y will be found from equations (38).

Problems

1. Determine the increase in the volume of the cylindrical steel boiler under internal pressure (Fig. 34), neglecting the deformation of the ends and taking $\sigma_y = 6,000$ lbs. per sq. in.

Solution. By using eqs. (35) and (36)

$$\epsilon_y = \frac{6,000}{30 \times 10^6} - 0.3 \frac{3,000}{30 \times 10^6} = \frac{5,100}{30 \times 10^6} = 17 \times 10^{-5},$$

$$\epsilon_x = \frac{3,000}{30 \times 10^6} - 0.3 \frac{6,000}{30 \times 10^6} = \frac{1,200}{30 \times 10^6} = 4 \times 10^{-5}.$$

The volume of the boiler will increase in the ratio

$$(1 + \epsilon_x)(1 + \epsilon_y)^2 : 1 = (1 + \epsilon_x + 2\epsilon_y) : 1 = 1.00038 : 1.$$

2. A cube of concrete is compressed in two perpendicular directions by the arrangement shown in Fig. 40. Determine the decrease in the volume of the cube if it is 4 inches on a side, the compressive stress is uniformly distributed over the faces, $\mu = 0.1$ and $P = 20,000$ lbs.

Solution. Neglecting friction in the hinges and considering the equilibrium of each hinge (Fig. 40, b), it can be shown that the block is submitted to equal compression in two perpendicular directions and that the compressive force is equal to $P\sqrt{2} = 28,300$ lbs. The corresponding strain, from eq. (37), is

$$\epsilon_x = \epsilon_y = - \frac{28,300}{16 \times 4 \times 10^6} (1 - 0.1) = - 0.000398.$$

In the direction perpendicular to the plane of the figure a lateral expansion of the block takes place which is

$$\epsilon_z = - \mu \frac{\sigma_x}{E} - \mu \frac{\sigma_y}{E} = 0.2 \times \frac{28,300}{16 \times 4 \times 10^6} = 0.0000885.$$

The decrease per unit volume of the block will be

$$\epsilon_x + \epsilon_y + \epsilon_z = - 2 \times 0.000398 + 0.0000885 = - 0.000707.$$

3. Determine the increase in the cylindrical lateral surface of the boiler considered in problem 1 above.

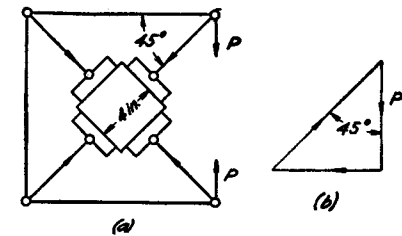


FIG. 40.

Solution. Increase per unit area of lateral surface $= \epsilon_x + \epsilon_y = 21 \times 10^{-5}$.

4. Determine the unit elongation in the σ_1 direction of a bar of steel, if the stress conditions are such as indicated in problem 1, p. 49.

Solution.

$$\epsilon_1 = \frac{1}{30 \times 10^6} (5,414 - 0.3 \times 2,586) = 154.6 \times 10^{-6}.$$

16. Pure Shear. Modulus in Shear.—Let us consider the particular case of normal stresses acting in two perpendicular directions in which the tensile stress σ_x in the horizontal direction is numerically equal to the compressive stress σ_y in the vertical direction, Fig. 41a. The corresponding circle of

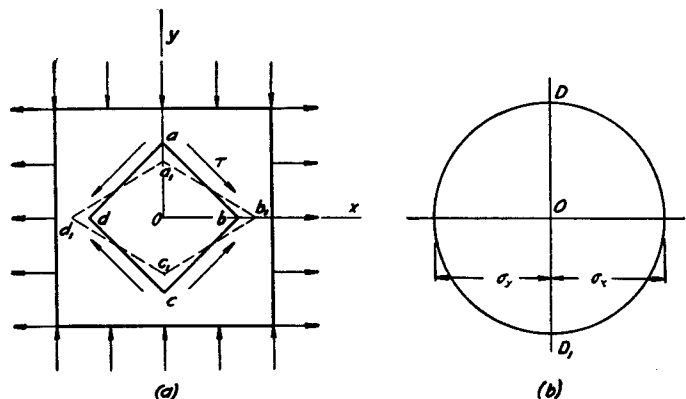


FIG. 41.

stress is shown in Fig. 41b. Point D on this circle represents the stresses acting on the planes ab and cd perpendicular to xy plane and inclined at 45° to the x axis. Point D_1 represents stresses acting on the planes ad and bc perpendicular to ab and cd . It is seen from the circle of stress that the normal stress on each of these planes is zero and that the shearing stress over the same planes, represented by the radius of the circle, is numerically equal to the normal stress σ_x , so that

$$\tau = \sigma_x = -\sigma_y. \quad (a)$$

If we imagine the element $abcd$ to be isolated it will be in equilibrium under the shearing stresses only as shown in

Fig. 41a. Such a state of stress is called *pure shear*. It may be concluded that pure shear is equivalent to the state of stress produced by tension in one direction and an equal compression in the perpendicular direction. If a rectangular element, similar to the element $abcd$ in Fig. 41a, is isolated by planes which are no longer at 45° to the x axis, normal stress as well as shearing stress will act on the sides of such an element. The magnitude of these stresses may be obtained from the circle of stress, Fig. 41b, in the usual way.

Let us consider now the deformation of the element $abcd$. Since there are no normal stresses acting on the sides of this element the lengths ab , ad , bc and cd will not change due to the deformation, but the horizontal diagonal bd will be stretched and the vertical diagonal ac will be shrunk changing the square $abcd$ into a rhombus after deformation as indicated in the figure by dotted lines. The angle at b , which was $\pi/2$ before deformation, now becomes less than $\pi/2$, say $(\pi/2) - \gamma$, and at the same time the angle at a increases and becomes equal to $(\pi/2) + \gamma$. The small angle γ determines the distortion of the element $abcd$, and is called the *shearing strain*.

The shearing strain may also be visualized as follows: The element $abcd$ of Fig. 41a is turned counter-clockwise through 45° and put into the position shown in Fig. 42. After distortion, produced by the shearing stresses τ , the same element takes the position indicated by the dotted lines. The shearing strain, represented by the magnitude of the small angle γ ,

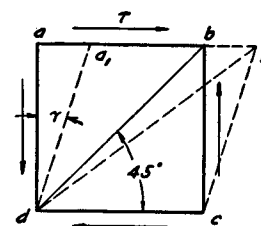


FIG. 42.

may be taken equal to the ratio $\overline{aa_1}/\overline{ad}$, equal to the horizontal sliding aa_1 of the side ab with respect to the side dc divided by the distance between these two sides. If the material obeys Hooke's law this sliding is proportional to the stress τ and we can express the relation between the shearing stress and the shearing strain by the equation

$$\gamma = \frac{\tau}{G} \quad (39)$$

in which G is a constant depending on the mechanical properties of the material. Equation (39) is similar to equation (4) which was established for simple tension and the constant G is called *modulus of elasticity in shear*, or *modulus of rigidity*.

Since the distortion of the element $abcd$, Fig. 42, is entirely defined by the elongation of the diagonal bd and the contraction of the diagonal ac , which deformations can be calculated by using the equations of the preceding article, it may be concluded that the modulus G can be expressed by the modulus in tension E and Poisson's ratio μ . To establish this relationship we consider the triangle Oab , Fig. 41a. The elongation of the side Ob and the shortening of the side Oa of this triangle during deformation will be found by using equations (35) and (36). In terms of ϵ_x and ϵ_y we have

$$Ob_1 = Ob(1 + \epsilon_x), \quad Oa_1 = Oa(1 + \epsilon_y)$$

and, from the triangle Oa_1b_1 ,

$$\tan(Ob_1a_1) = \tan\left(\frac{\pi}{4} - \frac{\gamma}{2}\right) = \frac{Oa_1}{Ob_1} = \frac{1 + \epsilon_y}{1 + \epsilon_x}. \quad (b)$$

For a small angle γ we have also

$$\tan\left(\frac{\pi}{4} - \frac{\gamma}{2}\right) = \frac{\tan\frac{\pi}{4} - \tan\frac{\gamma}{2}}{1 + \tan\frac{\pi}{4}\tan\frac{\gamma}{2}} \approx \frac{1 - \frac{\gamma}{2}}{1 + \frac{\gamma}{2}}. \quad (c)$$

Observing that in the case of pure shear

$$\begin{aligned} \sigma_x &= -\sigma_y = \tau, \\ \epsilon_x &= -\epsilon_y = \frac{\sigma_x(1 + \mu)}{E} = \frac{\tau(1 + \mu)}{E}, \end{aligned}$$

and equating expressions (b) and (c) we obtain

$$\frac{1 - \frac{\tau(1 + \mu)}{E}}{1 + \frac{\tau(1 + \mu)}{E}} = \frac{1 - \frac{\gamma}{2}}{1 + \frac{\gamma}{2}}$$

from which

$$\frac{\gamma}{2} = \frac{\tau(1 + \mu)}{E}$$

or

$$\gamma = \frac{2\tau(1 + \mu)}{E}.$$

Comparing this result with formula (39) we conclude that

$$G = \frac{E}{2(1 + \mu)}. \quad (40)$$

We see that the modulus of elasticity in shear can be easily calculated if the modulus in tension E and Poisson's ratio μ are known. In the case of steel, for example,

$$G = \frac{30 \cdot 10^6}{2(1 + 0.30)} = 11.5 \cdot 10^6 \text{ lbs. per sq. in.}$$

It should be noted that the application of a uniform shearing stress to the sides of a block as assumed in Fig. 42 is very difficult to realize so that the condition of pure shear is usually produced by the torsion of a circular tube, Fig. 43. Due to a small rotation of one end of the tube with respect to the other the generators traced on the cylindrical surface become inclined to the axis of the cylinder and an element $abcd$ formed by two generators and two adjacent circular cross sections undergoes a shearing strain similar to that shown in Fig. 42.

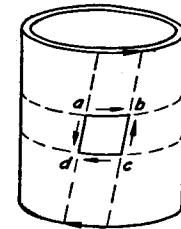


FIG. 43.

The problem of twist will be discussed later (see chapter 9) where will be shown how the shearing stress τ and the shearing strain γ of the element $abcd$ can be calculated if the torque and the corresponding angle of twist of the shaft are measured. If τ and γ are found from such a torsion test, the value of the modulus G can be calculated from equation (39). With this value of G , and knowing E from a tensile test, Poisson's ratio μ can be calculated from equation (40). The direct determination of μ by measuring lateral contraction during a tensile test is more complicated since this contraction is very

small and an extremely sensitive instrument is required to measure it with sufficient accuracy.

Problems

1. The block $abcd$, Fig. 42, is made of a material for which $E = 10 \cdot 10^6$ lbs. per sq. in. and $\mu = 0.25$. Find γ and the unit elongation of the diagonal bd if $\tau = 10,000$ lbs. per sq. in.
2. Find for the previous problem the sliding aa_1 of the side ab with respect to the side cd if the diagonal $bd = 2$ in.
3. Prove that the change in volume of the block $abcd$ in Fig. 42 is zero if the first powers only of the strain components ϵ_x and ϵ_y are considered.

17. Working Stresses in Shear.—Submitting a material to pure shear the relation between shearing stress and shearing strain can be established experimentally. Such a relationship is usually shown by a diagram, Fig. 44, in which the abscissa represents shearing strain and the ordinate—shearing stress. The diagram is similar to that of a tensile test and we can mark on it the proportional limit A and the yield point⁸ B . The experiments show that for a material such as structural steel the yield point in shear τ_{YP} is only about 0.55 — 0.60 of σ_{YP} . Since at yield point a considerable distortion occurs without an appreciable change in stress, it is logical to take as the working stress in shear only a portion of yield point stress so that

$$\tau_w = \frac{\tau_{YP}}{n} \quad (41)$$

where n is the factor of safety. Taking this factor of the same magnitude as in tension or compression we obtain

$$\tau_w = 0.55 \text{ to } 0.60 \text{ of } \sigma_w$$

which indicates that the working stress in shear should be

⁸ To obtain a pronounced yield point tubular specimens are used in the torsion test.

taken much smaller than the working stress in tension. It was already indicated that in practical applications we do not encounter a uniform distribution of shearing stress over the sides of a block as was assumed in Fig. 42 and that pure shear is realized in the case of torsion. We will see later that pure shear also occurs in the bending of beams. But there are many practical problems in which a solution is obtained on the assumption that we are dealing with pure shear although this assumption is only a rough approximation. Take, for example, the case of the joint in Fig. 45. It is evident that if

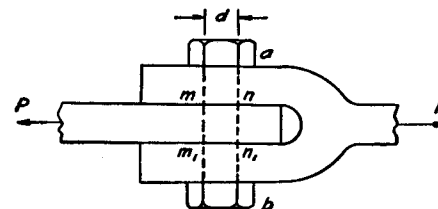


FIG. 45.

the diameter of the bolt ab is not large enough the joint may fail due to shear along the cross sections mn and m_1n_1 . Although a more rigorous study of the problem indicates that the shearing stresses are not uniformly distributed over these cross sections and that the bolt undergoes not only shear but also bending under the action of tensile forces P , a rough approximation for the required diameter of the bolt is obtained by assuming that we have along the planes mn and m_1n_1 a uniformly distributed shearing stress τ which is obtained by dividing the force P by the sum of the cross sectional areas mn and m_1n_1 . Hence

$$\tau = \frac{2P}{\pi d^2},$$

and the required diameter of the bolt is obtained from the equation

$$\tau_w = \frac{2P}{\pi d^2}. \quad (42)$$

We have another example of such a simplified treatment of shear problems in the case of riveted joints, Fig. 46. Since

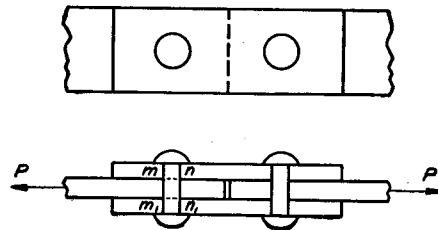


FIG. 46.

the heads of the rivets are formed at high temperature the rivets produce after cooling a great compression of the plates.⁹ If tensile forces P are applied the relative motion between the plates is prevented by friction due to the above mentioned pressure between the plates. Only after friction is overcome do the rivets begin to work in shear and if the diameter of the rivets is not sufficient failure due to shear along the planes mn and m_1n_1 may occur. It is seen that the problem of stress analysis for a riveted joint is very complicated. A rough approximate solution of the problem is usually obtained by neglecting friction and assuming that the shearing stresses are uniformly distributed along the cross section mn and m_1n_1 . Then the correct diameter of the rivets is obtained by using the equation (42) as in the previous example.

Problems

1. Determine the diameter of the bolt in the joint shown in Fig. 45 if $P = 10,000$ lbs. and $\tau_w = 6,000$ lbs. per sq. in.
2. Find the safe length $2l$ of the joint of two rectangular wooden bars, Fig. 47, submitted to tension, if $P = 10,000$ lbs., $\tau_w = 100$ lbs. per sq. in. for shear parallel to the fibers and $b = 10$ in. Determine the proper depth mn_1 , if the safe limit for the local compressive stress along the fibers of wood is 800 lbs. per sq. in.

⁹ Experiments show that tensile stress in rivets is usually approaching the yield point of the material of which the rivets are made. See C. Bach, Zeitschr. d. Ver. Deutsch. Ing. 1912.

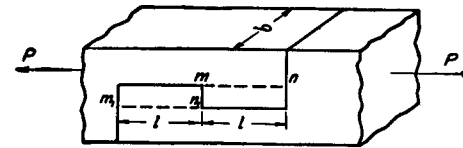


FIG. 47.

3. Find the diameter of the rivets in Fig. 46, if $\tau_w = 8,000$ lbs. per sq. in. and $P = 8,000$ lbs.
4. Determine the dimensions l and δ in the joint of two rectangular bars by steel plates, Fig. 48, if the forces, the dimensions and the working stresses are the same as in problem 2.

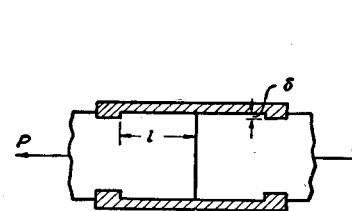


FIG. 48.

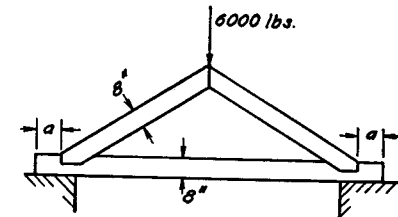


FIG. 49.

5. Determine the distance a which is required in the structure shown in Fig. 49, if the allowable shearing stress is the same as in problem 2 and the cross-sectional dimensions of all bars are 4 by 8 in. Neglect the effect of friction.

18. Tension or Compression in Three Perpendicular Directions.—If a bar in the form of a rectangular parallelepiped is submitted to the action of forces P_x , P_y and P_z (Fig. 50), the normal stresses over cross sections perpendicular to x , y and z axes are respectively

$$\sigma_x = \frac{P_x}{A_x}; \quad \sigma_y = \frac{P_y}{A_y}; \quad \sigma_z = \frac{P_z}{A_z}.$$

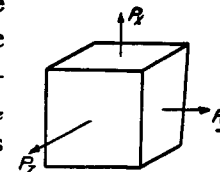


FIG. 50.

It is assumed below that $\sigma_x > \sigma_y > \sigma_z$.

Combining the effects of the forces P_x , P_y and P_z , it can be concluded that over a section through the z axis only the forces P_x and P_y produce stresses and therefore these stresses

may be calculated from eqs. (26) and (27) and represented graphically by using the Mohr circle. In Fig. 51 the stress

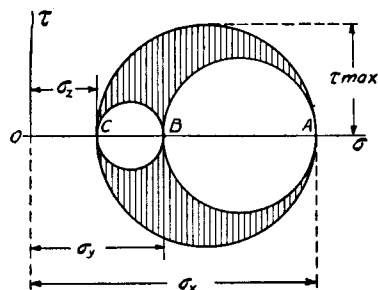


FIG. 51.

circle with a diameter AB represents these stresses. In the same manner the stresses over any section through the x axis can be represented by a circle having BC as a diameter. The circle with the diameter AC represents stresses over any section through the y axis. The three Mohr circles represent stresses over three series of sections through the x , y and z axes. For any section inclined to x , y and z axes the stress components are the coordinates of a point located in the shaded area of Fig. 51.¹⁰ On the basis of this it can be concluded that the maximum shearing stress will be represented by the radius of the largest of the three circles and will be given by the equation $\tau_{\max} = (\sigma_x - \sigma_z)/2$. It will act on the section through the y axis bisecting the angle between the x and z axes.

The equations for calculating the unit elongations in the directions of the x , y and z axes may be obtained by combining the effects of P_x , P_y and P_z in the same manner as in considering tension or compression in two perpendicular directions (see article 15). In this manner we obtain

$$\begin{aligned}\epsilon_x &= \frac{\sigma_x}{E} - \frac{\mu}{E}(\sigma_y + \sigma_z), \\ \epsilon_y &= \frac{\sigma_y}{E} - \frac{\mu}{E}(\sigma_x + \sigma_z), \\ \epsilon_z &= \frac{\sigma_z}{E} - \frac{\mu}{E}(\sigma_x + \sigma_y).\end{aligned}\quad (43)$$

¹⁰ The proof of this statement can be found in the book by A. Föppl, *Technische Mechanik*, Vol. 5, p. 18, 1918. See also H. M. Westergaard, *Z. angew. Math. Mech.*, Vol. 4, p. 520, 1924.

The volume of the bar increases in the ratio

$$(1 + \epsilon_x)(1 + \epsilon_y)(1 + \epsilon_z) : 1,$$

or, neglecting small quantities of higher order,

$$(1 + \epsilon_x + \epsilon_y + \epsilon_z) : 1.$$

It is seen that the unit volume expansion is

$$\Delta = \epsilon_x + \epsilon_y + \epsilon_z. \quad (44)$$

The relation between the unit volume expansion and the stresses acting on the sides of the bar will be obtained by adding together eqs. (43). In this manner we obtain

$$\Delta = \epsilon_x + \epsilon_y + \epsilon_z = \frac{(1 - 2\mu)}{E}(\sigma_x + \sigma_y + \sigma_z). \quad (45)$$

In the particular case of uniform hydrostatic pressure we have

$$\sigma_x = \sigma_y = \sigma_z = -p.$$

Then from eqs. (43)

$$\epsilon_x = \epsilon_y = \epsilon_z = -\frac{p}{E}(1 - 2\mu), \quad (46)$$

and from eqs. (44)

$$\Delta = -\frac{3(1 - 2\mu)}{E}p, \quad (47)$$

or, using the notation

$$\frac{E}{3(1 - 2\mu)} = K, \quad (48)$$

we obtain

$$\Delta = -\frac{p}{K}. \quad (49)$$

The unit compression is proportional to the compressive stress p and inversely proportional to the quantity K , which is called the *modulus of elasticity of volume*.

Problems

1. Determine the decrease in the volume of a solid steel sphere of 10 inch diameter submitted to a uniform hydrostatic pressure $p = 10,000$ lbs. per sq. inch.

Solution. From eq. (49)

$$\Delta = -\frac{p}{K} = -\frac{10,000 \times 3(1 - 2 \times 0.3)}{30 \times 10^6} = -\frac{4}{10^4}.$$

The decrease in the volume is, therefore,

$$\frac{4}{10^4} \times \frac{\pi d^3}{6} = 0.209 \text{ cubic inch.}$$

2. Referring to Fig. 52, a rubber cylinder A is compressed in a steel cylinder B by a force P . Determine the pressure between the rubber and the steel if $P = 1,000$ lbs., $d = 2$ ins., Poisson's ratio for rubber $\mu = 0.45$. Friction between rubber and steel is neglected.

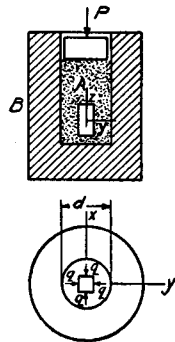


FIG. 52.

Solution. Let p denote the compressive stresses over any cross section perpendicular to the axis of the cylinder and q the pressure between the rubber and the inner surface of the steel cylinder. Compressive stress of the same magnitude will act between the lateral surfaces of the longitudinal fibers of the rubber cylinder, from which we isolate an element in the form of a rectangular parallelepiped, with sides parallel to the axis of the cylinder (see Fig. 52). This element is in equilibrium under the compressive stresses q on the lateral faces of the element and the axial compressive stress p . Assuming

that the steel cylinder is absolutely rigid, the lateral expansion of the rubber in the x and y directions should be equal to zero and from eqs. (43) we obtain

$$0 = \frac{q}{E} - \frac{\mu}{E} (p + q),$$

from which

$$q = \frac{\mu p}{1 - \mu} = \frac{0.45}{1 - 0.45} \cdot \frac{1,000 \times 4}{\pi \times 2^2} = 260 \text{ lbs. per sq. in.}$$

3. A concrete column is enclosed in a steel tube (Fig. 53). Determine the pressure between the steel and concrete and the circumfer-

ential tensile stress in the tube, assuming that there is no friction between concrete and steel and that all the dimensions and the longitudinal compressive stress in the column are known (Fig. 53).

Solution. Let p denote the longitudinal and q the lateral compressive stress, d the inner diameter and h the thickness of the tube, E_s the modulus of elasticity for steel, E_c , μ_c the modulus of elasticity and Poisson's ratio for concrete. The expansion of the concrete in a lateral direction will be, from eqs. (43),

$$\epsilon_x = -\frac{q}{E_c} + \frac{\mu_c}{E_c} (p + q). \quad (a)$$

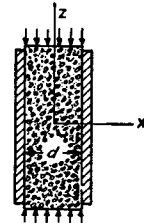


FIG. 53.

This expansion should be equal to the circumferential expansion of the tube (see eq. 13)

$$\epsilon = \frac{qd}{2hE_s}. \quad (b)$$

From eqs. (a) and (b) we obtain

$$\frac{qd}{2hE_s} = -\frac{q}{E_c} + \frac{\mu_c}{E_c} (p + q),$$

from which

$$q = p \frac{\frac{\mu_c}{E_c}}{\frac{d}{2h} \frac{E_c}{E_s} + 1 - \mu_c}.$$

The circumferential tensile stress in the tube will now be calculated from equation

$$\sigma = \frac{qd}{2h}.$$

4. Determine the maximum shearing stress in the concrete column of the previous problem, assuming that $p = 1,000$ lbs. per sq. in., $\mu_c = 0.10$, $d/2h = 7.5$.

Solution.

$$\tau_{\max} = \frac{p - q}{2} = \frac{p}{2} \left(1 - \frac{0.1}{1.9} \right) = 474 \text{ lbs. per sq. in.}$$

CHAPTER III

SHEARING FORCE AND BENDING MOMENT

19. Types of Beams.—In this chapter we will discuss the simplest types of beams such as shown in Fig. 54. Figure 54*a* represents a *beam with simply supported ends*. Points of support *A* and *B* are hinged so that the ends of the beam can rotate freely during bending. It is also assumed that one of the supports is mounted on rollers and can move freely in the horizontal direction. Figure 54*b* represents a *cantilever beam*. The end *A* of this beam is built into the wall and cannot

rotate during bending, while the end *B* is entirely free. Figure 54*c* represents a beam with an overhanging end. This beam is hinged to an immovable support at the end *A* and rests on a movable support at *C*.

All three of the foregoing cases represent *statically determinate beams* since the reactions at the supports produced by a given load can be determined from the equations of statics. For instance, considering the simply supported beam carrying a vertical load *P*, Fig. 54*a*, we see that the reaction *R*₂ at the end *B* must be vertical, since this end is free to move horizontally. Then from the equation of statics, $\Sigma X = 0$, it follows that reaction *R*₁ is also vertical. The magnitudes of *R*₁ and *R*₂ are then determined from the equations of moments. Equating to zero the sum of the moments of all forces with respect to point *B*, we obtain

$$R_1 l - Pb = 0$$

from which

$$R_1 = \frac{Pb}{l}.$$

In a similar way, by considering the moments with respect to point *A*, we obtain

$$R_2 = \frac{Pa}{l}.$$

The reactions for the beam with an overhanging end, Fig. 54*c*, can be calculated in the same manner.

In the case of the cantilever beam, Fig. 54*b*, the load *P* is balanced by the reactive forces acting on the built-in end. From the equations of statics, $\Sigma X = 0$ and $\Sigma Y = 0$, we conclude at once that the resultant of the reactive forces *R*₁ must be vertical and equal to *P*. From the equation of moments, $\Sigma M = 0$, it follows that the moment *M*₁ of the reactive forces with respect to point *A* is equal to *Pa* and acts in the counter-clockwise direction as shown in the figure.

The reactions produced by any other kind of loading on the above types of beams can be calculated by a similar procedure.

It should be noted that the special provisions permitting free rotation of the ends and free motion of the support are used in practice only in beams of large spans, such as those found in bridges. In beams of shorter span, the conditions at the support are usually as illustrated in Fig. 55. During bending of such a beam friction forces between the supporting surfaces and the beam will be

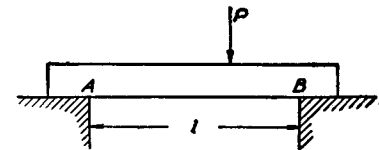


FIG. 55.

produced such as to oppose rotation and horizontal movement of the ends of the beam. These forces can be of some importance in the case of flexible bars and thin metallic strips, see p. 178; but for a rigid beam the deflection of which is very small in comparison with the length *l* of the span these forces can be neglected, and the reactions can be calculated as though the beam were simply supported, Fig. 54*a*.

20. Bending Moment and Shearing Force.—Let us now consider a simply supported beam on which act vertical forces P_1 , P_2 , and P_3 , Fig. 56a. We assume that the beam has an axial plane of symmetry and that the loads act in this plane. Then, from considerations of symmetry, we conclude that the bending also occurs in this same plane. In most practical cases this condition of symmetry is fulfilled since the usual cross-sectional shapes, such as a circle, a rectangle, an I, or a T, are symmetrical. The more general case of a non-symmetrical cross section will be discussed later (see p. 93).

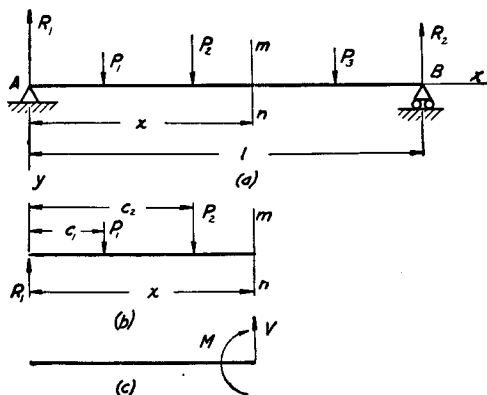


FIG. 56.

To investigate the stresses produced in a beam during bending, we proceed in the same manner as we have already used in discussing the stresses produced in a bar by a central tension, Fig. 1. We imagine that the beam AB is cut in two parts by a cross section mn taken at any distance x from the left support A , Fig. 56a, and that the right portion of the beam is removed. In discussing the equilibrium of the remaining left-hand portion of the beam, Fig. 56b, we must consider not only the external forces such as loads P_1 , P_2 , and reaction R_1 but also the internal forces which are distributed over the cross section mn and which represent the action of the right portion of the beam on the left portion. These internal forces

must be of such a magnitude as to equilibrate the above mentioned external forces P_1 , P_2 , and R_1 .

In the ensuing discussion it will be advantageous to reduce the actual system of external forces to a simplified equivalent system. From statics we know that a system of parallel forces can be replaced by one force equal to the algebraic sum of the given forces together with a couple. In our particular case we can replace the forces P_1 , P_2 , and R_1 by the vertical force V acting in the plane of the cross section mn and by the couple M . The magnitude of the force is

$$V = R_1 - P_1 - P_2, \quad (a)$$

and the magnitude of the couple is

$$M = R_1x - P_1(x - c_1) - P_2(x - c_2). \quad (b)$$

The force V , which is equal to the algebraic sum of the external forces to the left of the cross section mn , is called the *shearing force* at the cross section mn . The couple M , which is equal to the algebraic sum of the moments of the external forces to the left of the cross section mn with respect to the centroid of this cross section, is called the *bending moment* at the cross section mn . Thus the system of external forces to the left of the cross section mn can be replaced by the statically equivalent system consisting of the shearing force V acting in the plane of the cross section and the couple M , Fig. 56c. The stresses which are distributed over the cross section mn and which represent the action of the right portion of the beam on its left portion must then be such as to balance the bending moment M and the shearing force V .

If a distributed load rather than a number of concentrated forces acts on a beam, the same reasoning can be used as in the previous case. Take, as an example, the uniformly loaded beam shown in Fig. 57a. Denoting the load per unit length by q , the reactions in this case are

$$R_1 = R_2 = \frac{ql}{2}.$$

To investigate stresses distributed over a cross section mn we again consider the equilibrium of the left portion of the beam,

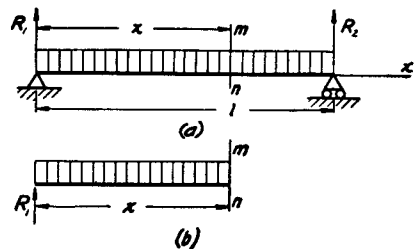


FIG. 57.

Fig. 57*b*. The external forces acting on this portion of the beam are the reaction R_1 and the load uniformly distributed along the length x . This latter load has, of course, a resultant equal to qx . The algebraical sum of all forces to the left of the cross section mn is thus $R_1 - qx$. The

algebraic sum of the moments of all forces to the left of the cross section mn with respect to the centroid of this cross section is obtained by subtracting the moment of the resultant of the distributed load from the moment R_1x of the reaction. The moment of the distributed load is evidently equal to

$$qx \times \frac{x}{2} = \frac{qx^2}{2}.$$

Thus we obtain for the algebraic sum of the moments the expression

$$R_1x - \frac{qx^2}{2}.$$

All the forces acting on the left portion of the beam can now be replaced by one force acting in the plane of the cross section mn and equal to

$$V = R_1 - qx = q \left(\frac{l}{2} - x \right) \quad (c)$$

together with a couple equal to

$$M = R_1x - \frac{qx^2}{2} = \frac{qx}{2} (l - x). \quad (d)$$

The expressions (c) and (d) represent, respectively, the shearing force and the bending moment at the cross section mn .

In the above examples the equilibrium of the left portion of the beam has been discussed. If, instead of the left portion,

the right be considered, the algebraic sum of the forces to the right of a cross section and the algebraic sum of the moments of those forces have the same magnitudes V and M as have already been found but are of opposite sense. This follows from the fact that the loads acting on a beam together with the reactions R_1 and R_2 represent a system of forces in equilibrium; and the moment of all these forces with respect to any point in their plane, as well as their algebraic sum, must be equal to zero. Hence the moment of the forces acting on the left portion of the beam with respect to the centroid of a cross section mn must be equal and opposite to the moment with respect to the same point of the forces acting on the right portion of the beam. Also the algebraic sum of forces acting on the left portion of the beam must be equal and opposite to the algebraic sum of forces acting on the right portion.

In the following discussion the bending moment and the shearing force at a cross section mn are taken as positive if in considering the left portion of a beam the directions obtained are such as shown in Fig. 57*c*. To visualize this rule of sign for bending moments, let us isolate an element of the beam by two adjacent cross sections mn and m_1n_1 , Fig. 58. If the

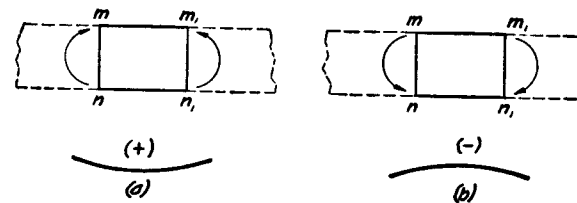


FIG. 58.

bending moments in these cross sections are positive the forces to the left of the cross section mn give a moment in the clockwise direction and the forces to the right of the cross section m_1n_1 a moment in the counter-clockwise direction as shown in Fig. 58*a*. It is thus seen that the directions of the moments are such that a bending is produced which is convex downwards. If the bending moments in the cross sections

mn and m_1n_1 are negative, a bending convex upwards is produced as shown in Fig. 58*b*. Thus in portions of a beam where the bending moment is positive, the deflection curve is convex downwards, while in portions where bending moment is negative the deflection curve is convex upwards.

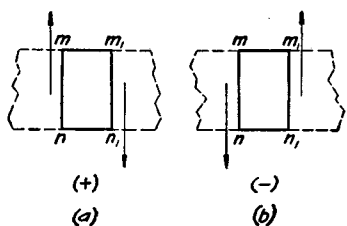


FIG. 59.

The rule of signs for shearing forces is visualized in Fig. 59.

21. Relation Between Bending Moment and Shearing Force.

—Let us consider an element of a beam cut out by two adjacent cross sections mn and m_1n_1 which are a distance dx apart, Fig. 60. Assuming that there is a positive bending moment and a positive shearing force at the cross section mn , the action of the left portion of the beam on the element is represented by the force V and the couple M as indicated in Fig. 60*a*. In the same manner, assuming that at section

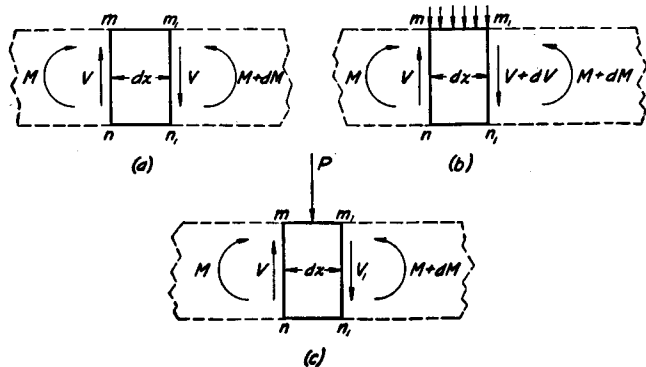


FIG. 60.

m_1n_1 the bending moment and the shearing force are positive, the action of the right portion of the beam on the element is represented by the couple and the force shown. If no forces act on the beam between cross sections mn and m_1n_1 , Fig. 60*a*, the shearing forces at these two cross sections are equal.¹

¹ The weight of the element of the beam is neglected in this discussion.

Regarding the bending moments, it can be seen from the equilibrium of the element that they are not equal at two adjacent cross sections and that the increase dM in the bending moment equals the moment of the couple represented by the two equal and opposite forces V , i.e.,

$$dM = Vdx$$

and

$$\frac{dM}{dx} = V. \quad (50)$$

Thus, on all portions of a beam between loads the shearing force is the rate of change of the bending moment with respect to x .

Let us now consider the case in which a distributed load of intensity q acts between the cross sections mn and m_1n_1 , Fig. 60*b*. Then the total load acting on the element is qdx . If q is considered positive when the load acts downward, it may be concluded from the equilibrium of the element that the shearing force at the cross section m_1n_1 is different from that at mn by an amount

$$dV = -qdx,$$

from which it follows that

$$\frac{dV}{dx} = -q. \quad (51)$$

Thus the rate of change of the shearing force is equal to the intensity of the load with negative sign.

Taking the moment of all forces acting on the element we obtain

$$dM = Vdx - qdx \times \frac{dx}{2}.$$

Neglecting the second term on the right side as a small quantity of the second order, we again arrive at equation (50) and conclude that the rate of change of the bending moment is equal to the shearing force in the case of a distributed load as well.

If a concentrated load P acts between the adjacent cross sections mn and m_1n_1 , Fig. 60c, there will be an abrupt change in the magnitude of the shearing force. Let V denote the shearing force at the cross section mn and V_1 that at the cross section m_1n_1 . Then from the equilibrium of the element $mm_1n_1n_1$, we find

$$V_1 = V - P.$$

Thus the magnitude of the shearing force changes by the amount P as we pass the point of application of the load. From equation (50) it can then be concluded that at the point of application of a concentrated force there is an abrupt change in the magnitude of the derivative dM/dx .

22. Bending Moment and Shearing Force Diagrams.—

It was shown in the preceding discussion that the stresses acting on a cross section mn of a beam are such as to balance the bending moment M and shearing force V at that cross section. Thus the magnitudes of M and V at any cross section entirely define the magnitudes of stresses acting on that cross section. To simplify the investigation of stresses in a beam it is advisable to use a graphical representation of the variation of the bending moment and the shearing force along the axis of the beam. In such a representation the abscissas indicate the position of the cross section and the ordinates, the values respectively of the bending moment and shearing force which act at this cross section, positive values being plotted above the horizontal axis and negative values below. Such graphical representations are called *bending moment and shearing force diagrams*, respectively.

Let us consider, as an example, a simply supported beam with a single concentrated load P , Fig. 61.² The reactions in this case are

$$R_1 = \frac{Pb}{l} \quad \text{and} \quad R_2 = \frac{Pa}{l}.$$

Taking a cross section mn to the left of P , it can be concluded

² For simplicity the rollers under the movable supports will usually be omitted in subsequent figures.

that at such a cross section

$$V = \frac{Pb}{l} \quad \text{and} \quad M = \frac{Pb}{l} x. \quad (a)$$

The shearing force and the bending moment have the same sense as those in Figures 58a and 59a and are therefore positive. It is seen that the shearing force remains constant along the portion of the beam to the left of the load and that the bending moment varies directly as x . For $x = 0$ the moment is zero and for $x = a$, i.e., at the cross section where the load is applied, the moment is equal to Pab/l . The corresponding portions of the shearing force and bending moment diagrams are shown in Fig. 61b and 61c, respectively, by the

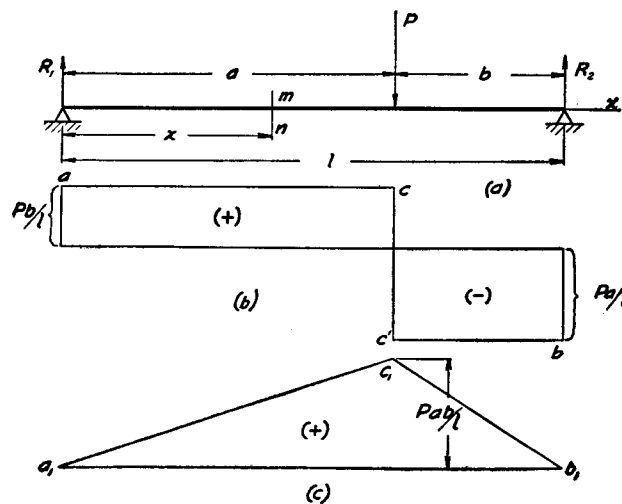


FIG. 61.

straight lines ac and a_1c_1 . For a cross section to the right of the load we obtain

$$V = \frac{Pb}{l} - P = -\frac{Pa}{l} \quad \text{and} \quad M = \frac{Pb}{l} x - P(x - a), \quad (b)$$

x always being the distance from the left end of the beam. The shearing force for this portion of the beam remains

constant and negative. In Fig. 61*b* this force is represented by the line $c'b$ parallel to the x axis. The bending moment is a linear function of x which for $x = a$ is equal to Pab/l and for $x = l$ is equal to zero. It is always positive and its variation along the right portion of the beam is represented by the straight line c_1b_1 . The broken lines $acc'b$ and $a_1c_1b_1$ in Figs. 61*b* and 61*c* represent respectively the shearing force and bending moment diagrams for the whole length of the beam. At the load P there is an abrupt change in the magnitude of the shearing force from the positive value Pb/l to the negative value $-Pa/l$ and a sharp change in the slope of the bending moment diagram.

In deriving expressions (b) for the shearing force and bending moment, we considered the left portion of the beam, a portion which is acted upon by the two forces R_1 and P . It would have been simpler in this case to consider the right portion of the beam where only the reaction Pa/l acts. Following this procedure and using the rule of signs indicated in Figures 58 and 59, we obtain

$$V = -\frac{Pa}{l} \quad \text{and} \quad M = \frac{Pa}{l}(l - x). \quad (c)$$

Expressions (b) previously obtained can also be brought to this simpler form if we observe that $a = l - b$.

It is interesting to note that the shearing force diagram consists of two rectangles the areas of which are equal. Taking into consideration the opposite signs of these areas we conclude that the total area of the shearing force diagram is zero. This result is not accidental. By integrating equation (50), we have

$$\int_A^B dM = \int_A^B V dx, \quad (d)$$

where the limits A and B indicate that the integration is taken over the entire length of the beam from the end A to the end B . The right side of equation (d) then represents the total area of the shearing force diagram. The left side of

the same equation, after integration, gives the difference $M_B - M_A$ of the bending moments at the ends B and A . In the case of a simply supported beam the moments at the ends vanish; hence the total area of the shearing force diagram vanishes.

If several loads act on a beam, Fig. 62, the beam is divided into several portions and expressions for V and M must be

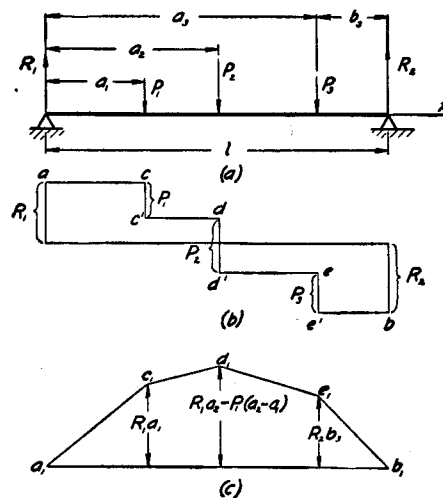


FIG. 62.

established for each portion. Measuring x from the left end of the beam and taking $x < a_1$, we obtain for the first portion of the beam

$$V = R_1 \quad \text{and} \quad M = R_1x. \quad (e)$$

For the second portion of the beam, i.e., for $a_1 < x < a_2$, we obtain

$$V = R_1 - P_1 \quad \text{and} \quad M = R_1x - P_1(x - a_1). \quad (f)$$

For the third portion of the beam, i.e., for $a_2 < x < a_3$, it is advantageous to consider the right portion of the beam rather than the left. In this way we obtain

$$V = -(R_2 - P_3) \quad \text{and} \quad M = R_2(l - x) - P_3(l - x - b_3). \quad (g)$$

Finally for the last portion of the beam we obtain

$$V = -R_2, \quad M = R_2(l - x). \quad (h)$$

From expressions (e) ... (h) we see that in each portion of the beam the shearing force remains constant; hence the shearing force diagram is as shown in Fig. 62*b*. The bending moment in each portion of the beam is a linear function of x ; hence in the corresponding diagram it is represented by an inclined straight line. To draw these lines we note from expressions (e) and (h) that at the ends $x = 0$ and $x = l$ the moments are zero. The moments under the loads are obtained by substituting in expressions (e), (f), and (h) $x = a_1$, $x = a_2$, and $x = a_3$, respectively. In this manner we obtain for the above mentioned moments the values

$$M = R_1a_1, \quad M = R_1a_2 - P_1(a_2 - a_1), \quad \text{and} \quad M = R_2b_3.$$

By using these values the bending moment diagram, shown in Fig. 62*c*, is readily constructed.

In practical applications it is of importance to find the cross sections at which the bending moment has its maximum or minimum values. In the case of concentrated loads just considered, Fig. 62, the maximum bending moment occurs under the load P_2 . This load corresponds in the bending moment diagram to point d_1 , at which point the slope of the diagram changes sign. Further, from equation (50), we know that the slope of the bending moment diagram at any point is equal to the shearing force. Hence the bending moment has its maximum or minimum values at the cross sections in which the shearing force changes its sign. If, as we proceed along the x axis, the shearing force changes from a positive to a negative value, as under the load P_2 in Fig. 62, the slope in the bending moment diagram also changes from positive to negative. Hence we have the maximum bending moment at this cross section. A change in V from a negative to a positive value indicates a minimum bending moment. In the general case a shearing force diagram may intersect the horizontal axis in several places. To each such intersection point

there then corresponds a maximum or a minimum in the bending moment diagram. The numerical values of all these maxima and minima must be investigated to find the numerically largest bending moment.

Let us next consider the case of a uniformly distributed load, Fig. 63. From our previous discussion (p. 70), we have for a cross section a distance x from the left support

$$V = q \left(\frac{l}{2} - x \right) \quad \text{and} \quad M = \frac{qx}{2} (l - x). \quad (i)$$

We see that the shearing force diagram consists in this case of an inclined straight line the ordinates of which for $x = 0$ and $x = l$ are equal to $ql/2$ and $-ql/2$ respectively, as shown in Fig. 63*b*. As can be seen from expression (i) the bending

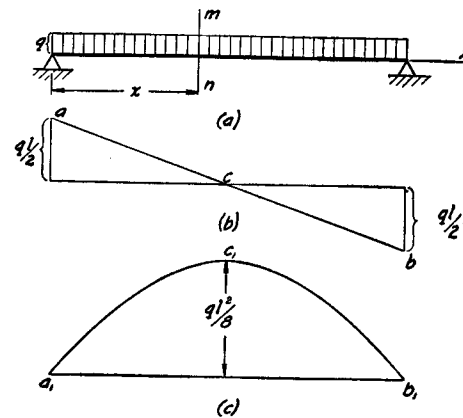


FIG. 63.

moment in this case is a parabolic curve with its vertical axis at the middle of the span of the beam, Fig. 63*c*. The moments at the ends, i.e., for $x = 0$ and $x = l$, vanish; and the maximum value of the moment occurs at the middle of the span where the shearing force changes the sign. This maximum is obtained by substituting $x = l/2$ in expression (i), which gives $M_{\max} = ql^2/8$.

If a uniform load covers only a part of the span, Fig. 64, we must consider three portions of the beam of length a , b ,

and c . Beginning with the determination of the reactions R_1 and R_2 we replace the uniformly distributed load by its resultant qb . From the equations of statics for the moments

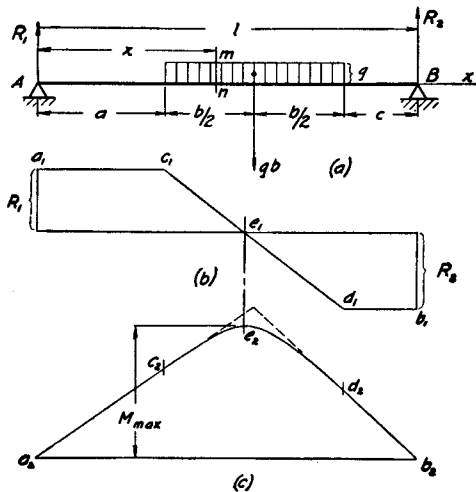


FIG. 64.

with respect to B and A , we then obtain

$$R_1 = \frac{qb}{l} \left(c + \frac{b}{2} \right) \quad \text{and} \quad R_2 = \frac{qb}{l} \left(a + \frac{b}{2} \right).$$

The shearing force and the bending moment for the left unloaded portion of the beam ($0 < x < a$) are

$$V = R_1 \quad \text{and} \quad M = R_1 x. \quad (j)$$

For a cross section mn taken in the loaded portion of the beam the shearing force is obtained by subtracting the load $q(x - a)$ to the left of the cross section from the reaction R_1 . The bending moment in the same cross section is obtained by subtracting the moment of the load to the left of the cross section from the moment of the reaction R_1 . In this manner we find

$$V = R_1 - q(x - a) \quad \text{and} \quad M = R_1 x - q(x - a) \times \frac{x - a}{2}. \quad (k)$$

For the right unloaded portion of the beam, considering the forces to the right of a cross section, we find

$$V = -R_2 \quad \text{and} \quad M = R_2(l - x). \quad (l)$$

By using expressions (j), (k), and (l) the shearing force and bending moment diagrams are readily constructed. The shearing force diagram, Fig. 64b, consists of the horizontal portions a_1c_1 and d_1b_1 corresponding to the unloaded portions of the beam and the inclined line c_1d_1 corresponding to the uniformly loaded portion. The bending moment diagram, Fig. 64c, consists of the two inclined lines a_2c_2 and b_2d_2 corresponding to the unloaded portions and of the parabolic curve c_2d_2 with vertical axis corresponding to the loaded portion of the beam. The maximum bending moment is at the point e_2 , which corresponds to the point e_1 where the shearing force changes sign. At points c_2 and d_2 the parabola is tangent to the inclined lines a_2c_2 and d_2b_2 respectively. This follows from the fact that at points c_1 and d_1 of the shearing force diagram there is no abrupt change in the magnitude of the shearing force; hence, by virtue of equation (50), there cannot occur an abrupt change in slope of the bending moment diagram at the corresponding points c_2 and d_2 .

In the case of a cantilever beam, Fig. 65, the same method as before is used to construct the shearing force and bending moment diagrams. Measuring x from the left end of the beam and considering the portion to the left of the load P_2 ($0 < x < a$), we obtain

$$V = -P_1 \quad \text{and} \quad M = -P_1 x.$$

The minus sign in these expressions follows from the rule of

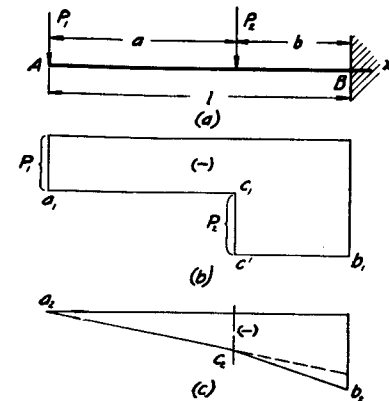


FIG. 65.

signs indicated in Fig. 58*b* and Fig. 59*b*. For the right portion of the beam ($a < x < l$) we obtain

$$V = -P_1 - P_2 \quad \text{and} \quad M = -P_1x - P_2(x - a).$$

The corresponding diagrams of shearing force and bending moment are shown in Fig. 65*b* and 65*c*. The total area of the shearing force diagram does not vanish in this case and is equal to $-P_1l - P_2b$, which is the bending moment M_B at the end B of the beam. The bending moment diagram consists of the two inclined lines a_2c_2 and c_2b_2 the slopes of which are equal to the values of the shearing force at the corresponding portions of the cantilever. The numerical maximum of the bending moment is at the built-in end B of the beam.

If a cantilever carries a uniform load, Fig. 66, the shearing force and bending moment at a distance x from the left end are

$$V = -qx \quad \text{and} \quad M = -qx \times \frac{x}{2} = -\frac{qx^2}{2}.$$

The shearing force is represented in the diagram by the inclined line ab and the bending moment by the parabola a_1b_1 which has a vertical axis and is tangent to the horizontal axis at a_1 , where the shearing force vanishes. The numerical maximum of the bending moment and shearing force occurs at the end B of the beam.

If concentrated loads and distributed loads act on the beam simultaneously it is advantageous to draw the diagrams separately for each kind of loading and obtain the total values of V or M

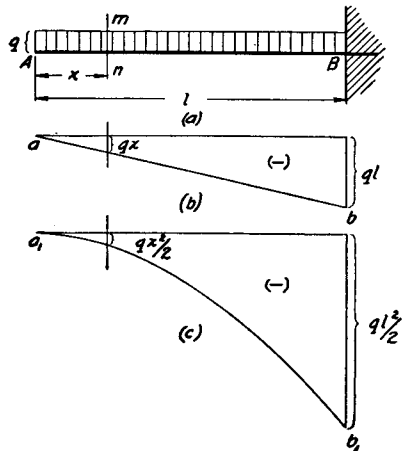


FIG. 66.

at any cross section by summing up the corresponding ordinates of the two partial diagrams. If, for example, we

have concentrated loads P_1 , P_2 and P_3 , Fig. 62, acting simultaneously with a uniform load, Fig. 63, the bending moment at any cross section is obtained by summing up the corresponding ordinates of the diagrams in Fig. 62*c* and Fig. 63*c*.

Problems

1. Draw approximately to scale the shearing force and bending moment diagrams and label the values of the largest positive and negative shearing forces and bending moments for the beams shown in Fig. 67.

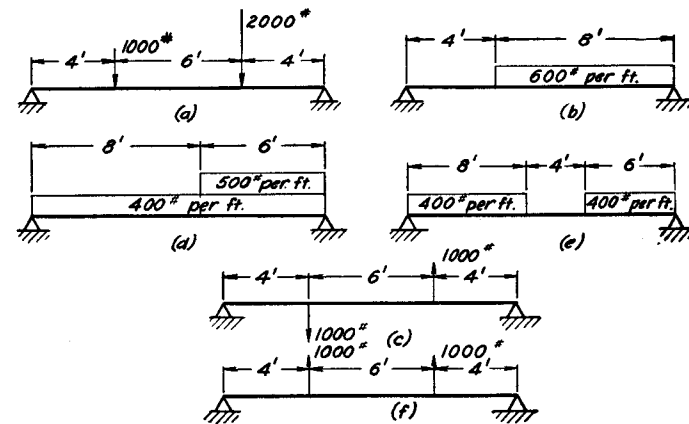


FIG. 67.

2. Draw approximately to scale the shearing force and bending moment diagrams and label the values of the largest positive and

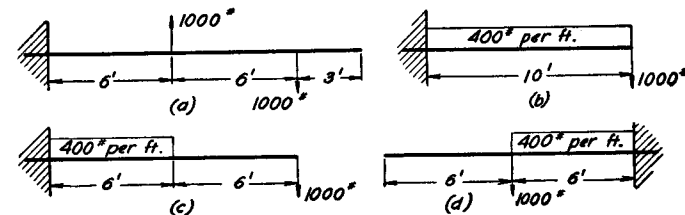


FIG. 68.

negative shearing forces and bending moments for the cantilever beams shown in Fig. 68.

3. A cantilever carrying a total load W which increases uniformly from zero at the left end as shown by the inclined line AC , Fig. 69a, is built in at the right end. Draw the diagrams of shearing force and bending moment.

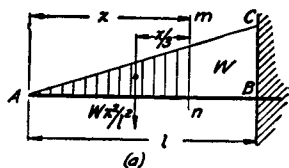


Fig. 69a, is built in at the right end. Draw the diagrams of shearing force and bending moment.

Solution. The shearing force at a cross section mn at a distance x from the left end of the cantilever is numerically equal to the shaded portion of the load. Since the total load W is represented by the triangle ACB the shaded portion is Wx^2/l^2 . By using the rule of sign previously adopted, Fig. 59, we obtain

$$V = -W \frac{x^2}{l^2}.$$

The shearing force diagram is thus represented in Fig. 69b by the parabola ab which has a vertical axis at the point a . The bending moment at the cross section mn is obtained by taking the moment of the shaded portion of the load with respect to the centroid of the cross section mn . Thus

$$M = -W \frac{x^2}{l^2} \times \frac{x}{3}.$$

This moment is represented by the curve a_1b_1 in Fig. 69c.

4. A beam of length l uniformly supported along its entire length carries at the ends two equal loads P , Fig. 70. Draw the shearing force and bending moment diagrams.




FIG. 70.




FIG. 71.

5. A beam of length l , uniformly supported along its entire length, carries at the center a concentrated load $P = 1,000$ lbs., Fig. 71. Find the numerical maximum of the bending moment. Draw the shearing force and bending moment diagrams.

6. A simply supported beam of length l carries a total distributed load W the intensity of which increases uniformly from zero at the

left end, as shown in Fig. 72a. Draw approximately to scale the shearing force and bending moment diagrams if $W = 12,000$ lbs. and $l = 24$ ft.

Solution. The reactions at the supports in this case are $R_1 = \frac{1}{3}W = 4,000$ lbs. and $R_2 = 8,000$ lbs. The shearing force at a cross section mn is obtained by subtracting the shaded portion of the load from the reaction R_1 . Hence

$$V = R_1 - W \frac{x^2}{l^2} = W \left(\frac{1}{3} - \frac{x^2}{l^2} \right).$$

The shearing force diagram is represented by the parabolic curve acb in Fig. 72b. The bending moment at a cross section mn is

$$M = R_1x - W \frac{x^2}{l^2} \times \frac{x}{3} \\ = \frac{1}{3}Wx \left(1 - \frac{x^2}{l^2} \right).$$

This moment is represented by the curve $a_1c_1b_1$ in Fig. 72c. The maximum bending moment is at c_1 where the shearing force changes its sign and where $x = l/\sqrt{3}$.

7. A simply supported beam AB carries a distributed load the intensity of which is represented by the line ACB , Fig. 73. Find

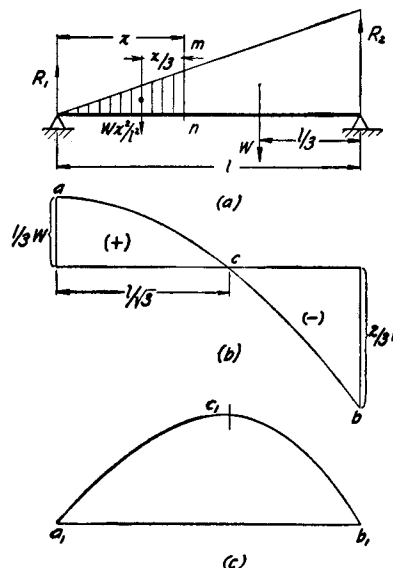


FIG. 72.

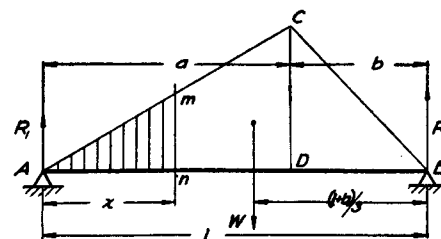


FIG. 73.

the expressions for the shearing force and the bending moment at a cross section mn .

Solution. Assuming the total load W to be applied at the cen-

centroid of the triangle ACB , the reactions at the supports are

$$R_1 = W \frac{l+b}{3l} \quad \text{and} \quad R_2 = W \frac{l+a}{3l}.$$

The total load is then divided into two parts, represented by the triangles ACD and CBD , of the amount Wa/l and Wb/l respectively.

The shaded portion of the load is $W \frac{a}{l} \times \frac{x^2}{a^2} = W \frac{x^2}{al}$. For the shearing force and the bending moment at mn we then obtain

$$V = R_1 - W \frac{x^2}{al} \quad \text{and} \quad M = R_1 x - W \frac{x^2}{al} \times \frac{x}{3}.$$

In a similar manner the shearing force and bending moment for a cross section in the portion DB of the beam can be obtained.

8. Find M_{\max} in the previous problem if $l = 12$ ft., $b = 3$ ft., $W = 12,000$ lbs.

Answer. $M_{\max} = 22,400$ ft. lbs.

9. Draw approximately to scale the shearing force and bending moment diagrams and label the values of the largest positive and negative shearing forces and bending moments for the beams with overhangs shown in Fig. 74.

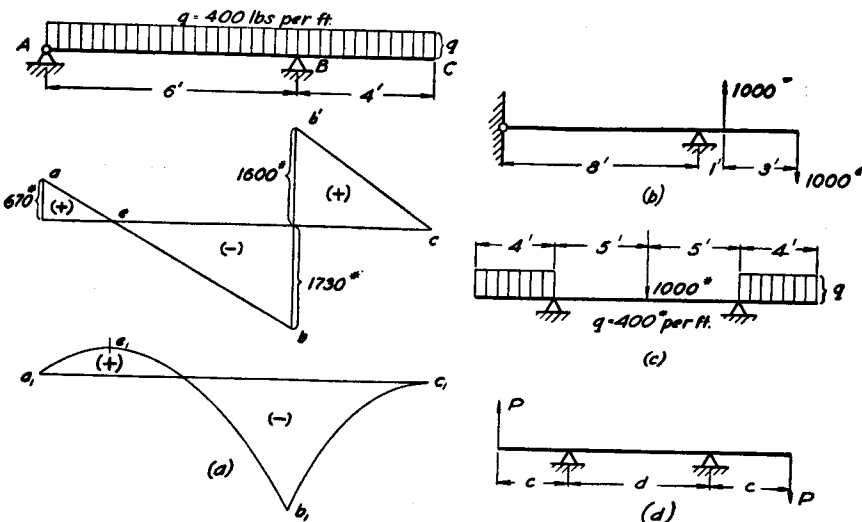


FIG. 74.

Solution. In the case shown in Fig. 74a the reactions are 670 lbs. and 3,330 lbs. The shearing force for the left portion of the

beam is $V = 670 - 400x$. It is represented in the figure by the inclined line ab . The shearing force for the right portion of the beam is found as for a cantilever beam and is shown by the inclined line $b'c$. The bending moment for the left portion of the beam is $M = 670x - 400x^2/2$. It is represented by the parabola $a_1e_1b_1$. The maximum of the moment at e_1 corresponds to the point e , at which the shearing force changes its sign. The bending moment diagram for the right portion is the same as for a cantilever and is represented by the parabola b_1c_1 tangent at c_1 .




FIG. 75.

10. A beam with two equal overhangs, Fig. 75, loaded by a uniformly distributed load, has a length l . Find the distance d between the supports such that the bending moment at the middle of the beam is numerically equal to the moments at the supports. Draw the shearing force and bending moment diagrams for this case.

Answer. $d = 0.586l$.

CHAPTER IV

STRESSES IN TRANSVERSALLY LOADED BEAMS

23. Pure Bending.—It was mentioned in the previous chapter that the magnitude of the stresses at a cross section is defined by the magnitude of the shearing force and bending moment at that cross section. To calculate the stresses we shall begin with the instance in which the shearing force vanishes and only the bending moment acts. This case is called *pure bending*. An example of such bending is shown in Fig. 76. From sym-

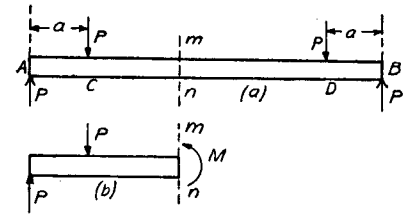


FIG. 76.

metry we can conclude that the reactions in this case are equal to P . Considering the equilibrium of the portion of the beam to the left of a cross section mn , it can be concluded that the internal forces which are distributed over the cross section mn and which represent the action of the removed right portion of the beam on the left portion must be statically equivalent to a couple equal and opposite to the bending moment Pa . To find the distribution of these internal forces over the cross section, the deformation of the beam must be considered. For the simple case of a beam having a longitudinal plane of symmetry with the external bending couples acting in this plane, bending will take place in this same plane. If the beam is of rectangular cross section and two adjacent vertical lines mm and pp are drawn on its sides, direct experiment shows that these lines remain straight during bending and rotate so as to remain perpendicular to the longitudinal fibers of the beam (Fig. 77). The following theory of bending is based on the assumption that not only such lines as mm remain straight but that the entire transverse section of the beam, originally

plane, remains plane and normal to the longitudinal fibers of the beam after bending. Experiment shows that the theory based on this assumption gives very accurate results for the deflection of beams and the strain of longitudinal fibers. From the above assumption it follows that during bending the cross sections mm and pp rotate with respect to each other about

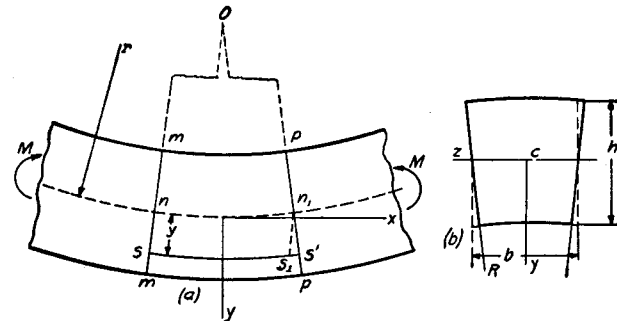


FIG. 77.

axes perpendicular to the plane of bending, so that longitudinal fibers on the convex side suffer extension and those on the concave side compression. The line nn_1 is the trace of the surface in which the fibers do not undergo strain during bending. This surface is called the *neutral surface* and its intersection with any cross section is called the *neutral axis*. The elongation $s's_1$ of any fiber, at distance y from the neutral surface, is obtained by drawing the line n_1s_1s' parallel to mm (Fig. 77, a). Denoting by r the radius of curvature of the deflected axis¹ of the beam and using the similarity of the triangles non_1 and s_1n_1s' , the unit elongation of the fiber ss' is

$$\epsilon_x = \frac{s's_1}{nn_1} = \frac{y}{r}. \quad (52)$$

It can be seen that the strains of the longitudinal fibers are proportional to the distance y from the neutral surface and inversely proportional to the radius of curvature.

Experiments show that longitudinal extension in the fibers

¹ The axis of the beam is the line through the centroids of its cross sections. O denotes the center of curvature.

on the convex side of the beam is accompanied by *lateral contraction* and longitudinal contraction on the concave side, by lateral expansion, as in the case of simple tension or compression (see article 14). This changes the shape of all cross sections, the vertical sides of the rectangular section becoming inclined to each other as in Fig. 77 (b). The unit strain in the lateral direction is

$$\epsilon_z = -\mu\epsilon_x = -\mu\frac{y}{r}, \quad (53)$$

where μ is *Poisson's ratio*. Due to this distortion all straight lines in the cross section, parallel to the z axis, curve so as to remain normal to the sides of the section. Their radius of curvature R will be larger than r in the same proportion in which ϵ_x is numerically larger than ϵ_z (see eq. 53) and we obtain

$$R = \frac{1}{\mu} r. \quad (54)$$

From the strains of the longitudinal fibers the corresponding stresses follow from Hooke's law (eq. 4, p. 4):

$$\sigma_x = \frac{Ey}{r}. \quad (55)$$

The distribution of these stresses is shown in Fig. 78. The stress in any fiber is proportional to its distance from the neutral axis nn . The position of the neutral axis and the radius of curvature r , the two unknowns in eq. (55), can now be determined from the condition that the forces distributed over any cross section of the beam must give rise to a *resisting couple* which balances the

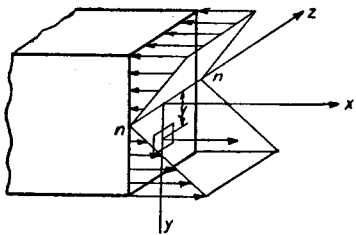


FIG. 78.

external couple M (Fig. 76).

Let dA denote an elemental area of a cross section distant y from the neutral axis (Fig. 78). The force acting on this elemental area is the product of the stress (eq. 55)

and its area dA , i.e., $(Ey/r)dA$. Due to the fact that all such forces distributed over the cross section represent a system equivalent to a couple, the resultant of these forces must be equal to zero and we obtain

$$\int \frac{Ey}{r} dA = \frac{E}{r} \int y dA = 0,$$

i.e., the moment of the area of the cross section with respect to the neutral axis is equal to zero; hence the *neutral axis passes through the centroid of the section*.

The moment of the force on the above element with respect to the neutral axis is $(Ey/r) \cdot dA \cdot y$. Summarizing such moments over the cross section and putting the resultant equal to the moment M of the external forces, the following equation for determining the radius of curvature r is obtained:

$$\int \frac{E}{r} y^2 dA = \frac{EI_z}{r} = M \quad \text{or} \quad \frac{1}{r} = \frac{M}{EI_z}, \quad (56)$$

in which

$$I_z = \int y^2 dA$$

is the *moment of inertia* of the cross section with respect to the neutral axis z (see appendix, p. 343). From eq. (56) it is seen that the curvature varies directly as the bending moment and inversely as the quantity EI_z , which is called the *flexural rigidity* of the beam. Elimination of r from eqs. (55) and (56) gives the following equation for the stresses:

$$\sigma_x = \frac{My}{I_z}. \quad (57)$$

The preceding discussion was for the case of a rectangular cross section. It will hold also for a bar of any type of cross section which has a longitudinal plane of symmetry and is bent by end couples acting in this plane, since for such cases also bending takes place in the plane of the couples and cross-sectional planes remain plane and normal to the longitudinal fibers after bending.

In eq. (57) M is positive when it produces a deflection

of the bar convex down, as in Fig. 77; y is positive downwards. A negative sign for σ_x indicates compressive stress.

The maximum tensile and compressive stresses occur in the outermost fibers, and for the rectangular cross section or any other type which has its centroid at the middle of the depth h they occur for $y = \pm h/2$ and are

$$(\sigma_x)_{\max} = \frac{Mh}{2I_z} \quad \text{and} \quad (\sigma_x)_{\min} = -\frac{Mh}{2I_z}. \quad (58)$$

For simplification we will use the following notation:

$$Z = \frac{2I_z}{h}. \quad (59)$$

Then

$$(\sigma_x)_{\max} = \frac{M}{Z}; \quad (\sigma_x)_{\min} = -\frac{M}{Z}. \quad (60)$$

The quantity Z is called the *section modulus*. In the case of a rectangular cross section (Fig. 77, b) we have

$$I_z = \frac{bh^3}{12}; \quad Z = \frac{bh^2}{6}.$$

For a circular cross section of diameter d

$$I_z = \frac{\pi d^4}{64}; \quad Z = \frac{\pi d^3}{32}.$$

For the various profile sections, e.g., for I beams, channels and so on, the magnitudes of I_z and Z for the sizes manufactured are tabulated in handbooks.

When the centroid of the cross section is not at the middle of the depth, as, for instance, in the case of a T beam, let h_1 and h_2 denote the distances from the neutral axis to the outermost fibers in the downward and upward directions respectively. Then for a *positive* bending moment we obtain

$$(\sigma_x)_{\max} = \frac{Mh_1}{I_z}; \quad (\sigma_x)_{\min} = -\frac{Mh_2}{I_z}. \quad (61)$$

For a negative bending moment we obtain

$$(\sigma_x)_{\max} = -\frac{Mh_2}{I_z}; \quad (\sigma_x)_{\min} = \frac{Mh_1}{I_z}. \quad (62)$$

The preceding derivations were made on the assumption that the beam has a longitudinal plane of symmetry in which the bending couples act. However *they can also* be used when no such plane of symmetry exists, provided the bending couples act in an axial plane which contains one of the two *principal axes* of the cross section (see appendix, p. 351). These planes are called the *principal planes of bending*.

When there is a plane of symmetry and the bending couples act in this plane, deflection occurs also in this plane. The moments of the internal forces such as shown in Fig. 78 about the horizontal axis are balanced by the external couple. The moments of these forces about the vertical axis cancel each other, because the moments of the forces on one side of this axis are just balanced by the moments of the corresponding forces on the other side.

When there is no plane of symmetry, but the bending couples act in an axial plane through one principal axis of the cross section, xy in Fig. 79, a distribution of the stresses

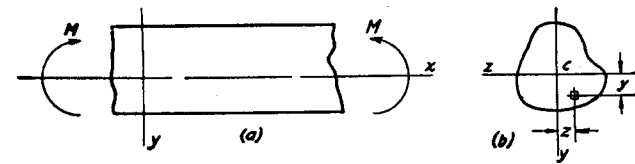


FIG. 79.

following eq. (56) will still satisfy all the conditions of equilibrium. This distribution gives a couple about the horizontal axis which balances the external couple. About the vertical axis y , it gives a resultant moment:

$$M_y = \int z \frac{E y}{r} dA = \frac{E}{r} \int y z dA.$$

The integral on the right side is the *product of inertia* of the

cross section (see appendix, p. 348) and it is zero if the y and z axes are the principal axes of the section. Therefore this couple is zero and, since the component about the y axis of the applied couple is zero, the conditions of equilibrium are satisfied.

Problems

1. Determine the maximum stress in a locomotive axle (Fig. 80) if $c = 13.5$ in., diameter d of the axle is 10 in. and the spring-borne load P per journal is 26,000 lbs.




FIG. 80.

Solution. The bending moment acting in the middle portion of the axle is $M = P \times c = 26,000 \times 13.5$

lbs. in. The maximum stress, from eq. (60), is

$$\sigma_{\max} = \frac{M}{Z} = \frac{32 \cdot M}{\pi d^3} = \frac{32 \times 26,000 \times 13.5}{\pi \times 10^3} = 3,580 \text{ lbs. per sq. in.}$$

2. Determine the radius of curvature r and the deflection of the axle of the previous problem, if the material is steel and the distance between the centers of the journals is 59 in.

Solution. The radius of curvature r is determined from eq. (55) by substituting $y = d/2 = 5$ in., $(\sigma_x)_{\max} = 3,580$ lbs. per sq. in. Then

$$r = \frac{E}{\sigma} \cdot \frac{d}{2} = \frac{30 \times 10^6 \times 5}{3,580} = 41,900 \text{ in.}$$

For calculating δ (Fig. 80), the deflection curve is an arc of a circle of radius r and \overline{DB} is one leg of the right triangle DOB , where O is the center of curvature. Therefore

$$\overline{DB}^2 = r^2 - (r - \delta)^2 = 2r\delta - \delta^2.$$

δ is very small in comparison with the radius r and the quantity δ^2 can be neglected in the above equation; then

$$\delta = \frac{\overline{DB}^2}{2r} = \frac{59^2}{8 \times 41,900} = 0.0104 \text{ in.}$$

3. A wooden beam of square cross section 10×10 inches is supported at A and B , Fig. 80, and the loads P are applied at the ends. Determine the magnitude of P and the deflection δ at the middle if $AB = 6'$; $c = 1'$; $(\sigma_x)_{\max} = 1,000$ lbs. per sq. in. and

$E = 1.5 \times 10^6$ lbs. per sq. in. The weight of the beam is to be neglected.

Answer. $P = 13,900$ lbs.; $\delta = 0.0864$ in.

4. A standard $30''$ girder beam is supported as shown in Fig. 81 and loaded on the overhangs by a uniformly distributed load of 10,000 lbs. per foot. Determine the maximum stress in the middle portion of the beam and the deflection at the middle of the beam if $I_z = 9,150$ in.⁴




FIG. 81.

Solution. The bending moment for the middle portion of the beam is $M = 10,000 \times 10 \times 60 = 6 \times 10^6$ lbs. in.

$$(\sigma_x)_{\max} = \frac{M}{Z} = \frac{6 \times 10^6 \times 15}{9,150} = 9,840 \text{ lbs. per sq. in.,}$$

$$\delta = 0.157 \text{ in.}$$

5. Determine the maximum stress produced in a steel wire of diameter $d = 1/32$ in. when coiled round a pulley of diameter $D = 20$ in.

Solution. The maximum elongation due to bending, from eq. (52), is

$$\epsilon = \frac{d}{D} = \frac{1}{32 \times 20}$$

and the corresponding tensile stress is

$$(\sigma_x)_{\max} = \epsilon E = \frac{30 \times 10^6}{32 \times 20} = 46,900 \text{ lbs. per sq. in.}$$

6. A steel rule having a cross section $1/32 \times 1$ in. and a length $l = 10$ in. is bent by couples at the ends into a circular arc of 60° . Determine the maximum stress and deflection.

Solution. The radius of curvature r is determined from the equation $l = \frac{1}{2} 2\pi r$, from which $r = 9.55$ in., and the maximum stress will be given by eq. (55),

$$(\sigma_x)_{\max} = \frac{E \times 1/64}{r} = \frac{30 \times 10^6}{64 \times 9.55} = 49,100 \text{ lbs. per sq. in.}$$

The deflection, calculated as for a circular arc, will become

$$\delta = r(1 - \cos 30^\circ) = 1.28 \text{ in.}$$

7. Determine the maximum stress and the magnitude of the couples applied at the ends of the rule in the previous problem if maximum deflection at the middle is 1 in.

Answer.

$$(\sigma_x)_{\max} = 38,300 \text{ lbs. per sq. in.}, \quad M = 6.23 \text{ lbs. ins.}$$

8. Determine the curvature produced in a freely supported steel beam of rectangular cross section by non-uniform heating over the depth h of the cross section. The temperature at any point at distance y from the middle plane xz of the beam (Fig. 77) is given by the equation:

$$t = \frac{t_1 + t_0}{2} + \frac{(t_1 - t_0)y}{h},$$

where t_1 is the temperature at the bottom of the beam, t_0 temperature at the top, $t_1 - t_0 = 123$ degrees Fahrenheit, and the coefficient of expansion $\alpha_s = 70 \times 10^{-7}$. What stresses will be produced if the ends of the beam are clamped?

Solution. The temperature of the middle plane xz is the constant $(t_1 + t_0)/2$, and the change in temperature of other fibers is proportional to y . The corresponding unit thermal expansions are also proportional to y , i.e., they will follow the same law as the unit elongations given by eq. (52). As a result of this non-uniform expansion of the fibers bending of the beam will occur and the radius r of curvature is found from eq. (52) with $\alpha_s(t_1 - t_0)/2$ for ϵ_x and $h/2$ for y . Then

$$r = \frac{h}{\alpha_s(t_1 - t_0)} = 1,160h.$$

If the ends of the beam are clamped, reactive couples at the ends will be produced of magnitude such as to remove the curvature due to non-uniform heating. Hence

$$M = \frac{E \cdot I_x}{r} = \frac{EI_x}{1,160h}.$$

Substituting this in eq. (57), we obtain

$$\sigma_x = \frac{Ey}{1,160h},$$

and the maximum stress is

$$(\sigma_x)_{\max} = \frac{E}{2 \times 1,160} = 12,900 \text{ lbs. per sq. in.}$$

9. Solve problems 6 and 7 if the arc is of 10° and material is copper.

10. Solve problem 4, assuming that the beam is of wood, has a square cross section $12'' \times 12''$ and the intensity of distributed load is 1,000 lbs. per foot.

24. Various Shapes of Cross Sections of Beams.²—From the discussion in the previous article it follows that the maximum tensile and compressive stresses in a beam in pure bending are proportional to the distances of the most remote fibers from the neutral axis of the cross section. Hence if the material has the same strength in tension and compression, it will be logical to choose those shapes of cross section in which the centroid is at the middle of the depth of the beam. In this manner the same factor of safety for fibers in tension and fibers in compression will be obtained. This is the underlying idea in the choice of sections symmetrical with respect to the neutral axis for materials such as structural steel, which have the same yield point in tension and compression. If the section is not symmetrical with respect to the above axis, e.g., a rail section, the material is so distributed between the head and the base as to have the centroid at the middle of its height.

For a material of small strength in tension and high strength in compression, e.g., cast iron or concrete, the advisable cross section for a beam is not symmetrical with respect to the neutral axis but such that the distances h_1 and h_2 from the neutral axis to the most remote fibers in tension and compression are in the same proportion as the strengths of the material in tension and in compression. In this manner equal strength in tension and compression is obtained. For example, with a T section, the centroid of the section may be put in any prescribed position along the height of the section by properly proportioning its flange and web.

For a given bending moment the maximum stress depends upon the section modulus and it is interesting to note that

² A very complete discussion of various shapes of cross sections of beams is given by Barré de Saint Venant in his notes to the book by Navier, *Resistance des Corps Solides*, 3d ed., 1864. See pp. 128-162.

there are cases in which increase in area does not give a decrease in this stress. As an example, a bar of square cross section bent by couples acting in the vertical plane through a diagonal of the cross section (Fig. 82) will have a lower maximum stress if the corners shown shaded on the figure are cut off. Letting a denote the length of the side of the square cross section, the moment of inertia with respect to the z axis is (see appendix) $I_z = a^4/12$ and the corresponding section modulus is

$$Z = \frac{I_z \sqrt{2}}{a} = \frac{\sqrt{2}}{12} a^3.$$

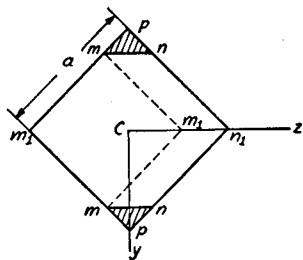


FIG. 82.

Let us now cut off the corners so that $\overline{mp} = \alpha a$, where α is a fraction to be determined later. The new cross section consists of a square mm_1mm_1 with the sides $a(1 - \alpha)$ and of two parallelograms mnn_1m_1 . The moment of inertia of such a cross section with respect to the z axis is

$$I_z' = \frac{a^4(1 - \alpha)^4}{12} + 2 \cdot \frac{\alpha a \sqrt{2}}{3} \left[\frac{a(1 - \alpha)}{\sqrt{2}} \right]^3 = \frac{a^4(1 - \alpha)^3}{12} (1 + 3\alpha)$$

and the corresponding section modulus is

$$Z' = \frac{I_z' \sqrt{2}}{a(1 - \alpha)} = \frac{\sqrt{2}}{12} \cdot a^3(1 - \alpha)^2 (1 + 3\alpha).$$

Now if we determine the value of α to make this section modulus a maximum, we find $\alpha = 1/9$. With this value of α in Z' it is found that cutting off the corners decreases the maximum bending stress by about 5 per cent. This result is easily understood once we consider that the section modulus is the quotient of the moment of inertia and half the depth of the cross section. By cutting off the corners the moment of inertia of the cross section is diminished in a smaller proportion than the depth; hence the section modulus increases and $(\sigma_x)_{\max}$ decreases. A similar effect may be obtained in other cases. For a rectangle with narrow outstanding por-

tions (Fig. 83, *a*) the section modulus is increased, under certain conditions, by cutting off these portions. For a circular cross section (Fig. 83, *b*) the section modulus is increased by 0.7 per cent by cutting off the two shaded segments which have a depth $\delta = 0.011d$. In the case of a triangular section (Fig. 83, *c*) the section modulus can be increased by cutting off the shaded corner.

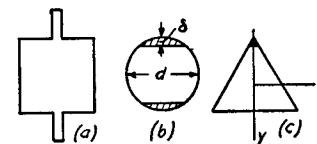


FIG. 83.

In designing a beam to undergo pure bending, not only the conditions of strength should be satisfied but also the condition of economy in the beam's own weight. Of two cross sections having the same section modulus, i.e., satisfying the condition of strength with the same factor of safety, that with the smaller area is more economical. In comparing various shapes of cross sections, we consider first the rectangle of depth h and width b . The section modulus is

$$Z = \frac{bh^2}{6} = \frac{1}{6} Ah, \quad (a)$$

where A denotes the cross-sectional area.

It is seen that the rectangular cross section becomes more and more economical with increase in its depth h . However, there is a certain limit to this increase, and the question of the stability of the beam arises as the section becomes narrower. The collapse of a beam of very narrow rectangular section may be due not to overcoming the strength of the material but to sidewise buckling (see part II).

In the case of a circular cross section we have

$$Z = \frac{\pi d^3}{32} = \frac{1}{8} A \cdot d. \quad (b)$$

Comparing circular and square cross sections of the same area, we find that the side h of the square will be $h = d\sqrt{\pi}/2$, for which eq. (a) gives

$$Z = 0.147 A \cdot d.$$

Comparison of this with (b) shows a square cross section to be more economical than a circular one.

Consideration of the stress distribution along the depth of the cross section (Fig. 78) leads to the conclusion that for economical design most of the material of the beam should be put as far as possible from the neutral axis. The most favorable case for a given cross-sectional area A and depth h would be to distribute each half of the area at a distance $h/2$ from the neutral axis. Then

$$I_z = 2 \times \frac{A}{2} \times \left(\frac{h}{2}\right)^2 = \frac{Ah^2}{4}; \quad Z = \frac{1}{2}Ah. \quad (c)$$

This is a limit which may be approached in practice by use of an I section with most of the material in the flanges. Due to the necessity of putting part of the material in the web of the beam, the limiting condition (c) can never be realized, and for standard I profiles we have approximately

$$Z \approx 0.30Ah. \quad (d)$$

Comparison of (d) with (a) shows that an I section is more economical than a rectangular section of the same depth. At the same time, due to its wide flanges, an I beam will always be more stable with respect to sidewise buckling than a beam of rectangular section of the same depth and section modulus.

Problems

1. Determine the width x of the flange of a cast iron beam having the section shown in Fig. 84, such that the maximum




FIG. 84.

tensile stress is one third of the maximum compressive stress. The depth of the beam $h = 4$ in., the thickness of the web and of the flange $t = 1$ in.

Solution. In order to satisfy the conditions, it is necessary for the beam to have dimensions such that the distance of the centroid

from the extreme bottom edge will satisfy the equation $c = \frac{1}{4}h$. Now, referring to Fig. 84, the position of the centroid is calculated from the equation:

$$c = \frac{ht \cdot \frac{h}{2} + (x - t) \frac{t^2}{2}}{ht + (x - t)t} = \frac{h}{4},$$

from which

$$x = t + \frac{h^2}{h - 2t} = 1 + \frac{16}{4 - 2} = 9 \text{ in.}$$




FIG. 85.

2. Determine the ratio $(\sigma_x)_{\max} : (\sigma_x)_{\min}$ for a channel, bent as shown in Fig. 85, if $t = 2$ in., $h = 10$ in., $b = 24$ in.

Answer.

$$(\sigma_x)_{\max} : (\sigma_x)_{\min} = 3 : -7.$$

3. Determine the condition at which the diminishing of the depth h_1 of the section shown in Fig. 86 is accompanied by an increase in section modulus.

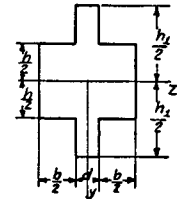


FIG. 86.

Solution.

$$Z = \frac{bh^3}{6h_1} + \frac{dh_1^2}{6},$$

$$\frac{dZ}{dh_1} = -\frac{bh^3}{6h_1^2} + \frac{dh_1}{3}.$$

The condition for increase in Z with decrease of h_1 is

$$\frac{bh^3}{6h_1^2} > \frac{dh_1}{3} \quad \text{or} \quad \frac{b}{2d} > \frac{h_1^3}{h^3}.$$

4. Determine what amount should be cut from an equilateral triangular cross section (Fig. 83, c) in order to obtain the maximum Z .

5. Determine the ratio of the weights of three beams of the same length under the same M and $(\sigma_x)_{\max}$ and having as cross sections respectively a circle, a square and a rectangle with proportions $h = 2b$.

Solution.

$$1.12 : 1 : 0.793.$$

25. General Case of Transversally Loaded Beams.—In the general case of transversally loaded beams, the stresses distributed over a cross section of a beam must balance the shearing force and the bending moment at that cross section. The calculation of the stresses is usually made in two steps by determining first the stresses produced by the bending moment, the so-called *bending stresses*, and afterwards the *shearing stresses* produced by the shearing force. In this article we shall limit ourself to the calculation of the bending stresses; the discussion of shearing stresses will be given in the next article. In calculating bending stresses we assume that these stresses are distributed in the same manner as in the case of pure bending and will use the formulas derived for the stresses in article 23. Experiments show that such a procedure gives satisfactory results if we are dealing with sections which are not very close to the point of application of a concentrated force. In the vicinity of the application of a concentrated load the stress distribution is more complicated. This problem will be discussed in Part II.

The calculation of bending stresses is usually made for the cross sections at which the bending moment has the largest positive or negative value. Having the numerical maximum of the bending moment and the magnitude of the allowable stress σ_w in bending, the required cross-sectional dimensions of a beam can be obtained from the equation

$$\sigma_w = \frac{M_{\max}}{Z} \tag{63}$$

The application of this equation will now be shown by a number of examples.

Problems

1. Determine the necessary dimensions of a standard I beam to support a distributed load of 400 lbs. per foot, as shown in Fig. 87, when the working stress $\sigma_w = 16,000$ lbs. per sq. in. Only the normal stresses σ_x are to be taken into consideration and the weight of the beam is neglected.

Solution. To obtain the dangerous section the shearing force diagram should be constructed (Fig. 87, *b*). The reaction at the

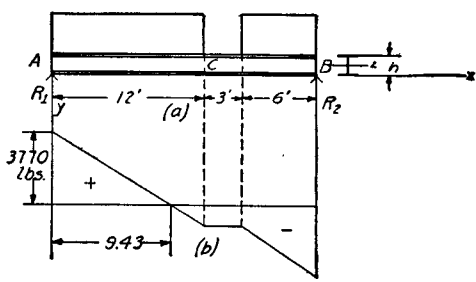


FIG. 87.

left support is

$$R_1 = \frac{12 \times 400 \times 15 + 6 \times 400 \times 3}{21} = 3,770 \text{ lbs.}$$

The shearing force for any cross section of the portion AC of the beam is

$$V = R_1 - qx = 3,770 - 400 \times x.$$

This force is zero for $x = 3,770/400 = 9.43$ feet. For this section the bending moment is a maximum,

$$M_{\max} = 3,770 \times 9.43 - 400 \times \frac{1}{2} \times 9.43^2 = 17,800 \times 12 \text{ lbs. in.}$$

The necessary section modulus

$$Z = \frac{17,800 \times 12}{16,000} = 13.4 \text{ in.}^3$$

This condition is satisfied by a standard I beam of depth 8 in., cross-sectional area 5.33 sq. in., and $Z = 14.2 \text{ in.}^3$

2. A wooden dam (Fig. 88) consists of vertical bars such as AB of rectangular cross section and dimension $h = 1$ foot supported at the ends. Determine $(\sigma_x)_{\max}$ if the length of the bars $l = 18$ feet and the weight of the bar is neglected.

Solution. If b is the width of one bar, the complete hydrostatic pressure on the bar, represented by the triangular prism ABC, is

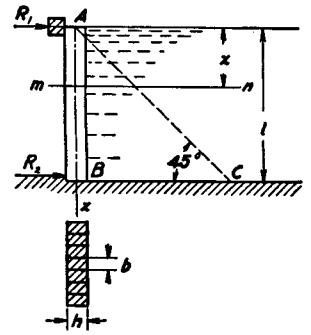


FIG. 88.

$W = \frac{1}{2}bl^2 \times 62.4$ lbs. The reaction at A is $R_1 = \frac{1}{3}W = \frac{1}{6}bl^2 \times 62.4$ lbs. and the shearing force at any cross section mn is equal to the reaction R_1 minus the weight of the prism Amn of water, i.e.,

$$V = R_1 - W \frac{x^2}{l^2} = W \left(\frac{1}{3} - \frac{x^2}{l^2} \right).$$

The position of the cross section corresponding to M_{\max} is found from the condition $V = 0$ or

$$\frac{1}{3} - \frac{x^2}{l^2} = 0,$$

from which

$$x = \frac{l}{\sqrt{3}} = 10.4 \text{ feet.}$$

The bending moment at any cross section mn is equal to the moment of the reaction R_1 minus the moment of the distributed load represented by the triangular prism Amn . Then

$$M = R_1x - \frac{Wx^2}{l^2} \cdot \frac{x}{3} = \frac{Wx}{3} \left(1 - \frac{x^2}{l^2} \right).$$

Substituting, from the above, $x^2/l^2 = \frac{1}{3}$ and $x = 10.4$ feet, we obtain

$$M_{\max} = \frac{1}{3}bl^2 \times 62.4 \times 10.4 \text{ lbs. feet,}$$

$$(\sigma_x)_{\max} = \frac{M_{\max}}{Z_s} = \frac{6M_{\max}}{bh^2} = \frac{2}{3} \left(\frac{l}{h} \right)^2 \frac{62.4 \times 10.4}{12^2} = 973 \text{ lbs. per sq. in.}$$

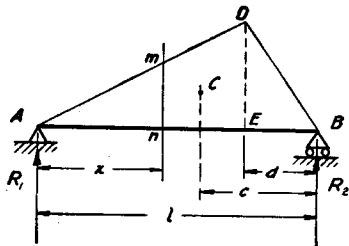


FIG. 89.

3. Determine the magnitude of M_{\max} in a beam loaded by a triangular load ADB equal to $W = 12,000$ lbs. if $l = 12$ feet and $d = 3$ feet (Fig. 89).

Solution. The distance c to the vertical through the center of gravity C from the support B is, in the case of a triangle,

$$c = \frac{1}{3}(l + d) = 5'.$$

The reaction at the support A is then

$$R_1 = \frac{W \cdot c}{l} = \frac{12,000 \times 5}{12} = 5,000 \text{ lbs.}$$

The shearing force at any cross section mn is equal to the reaction R_1 minus the weight of the load represented by area Amn . Since the load represented by the area

$$ADE = \frac{W(l-d)}{l} = \frac{3}{4}W,$$

we obtain

$$V = R_1 - \frac{3}{4}W \frac{x^2}{(l-d)^2}.$$

The position of the section with M_{\max} is found from the condition

$$R_1 - \frac{3}{4}W \frac{x^2}{(l-d)^2} = 0$$

or

$$\frac{x^2}{(l-d)^2} = \frac{4R_1}{3W} = \frac{5}{9},$$

from which

$$x = 6.71 \text{ feet.}$$

The bending moment at any cross section mn is equal to the moment of the reaction R_1 minus the moment of the load Amn . Then

$$M = R_1x - \frac{3}{4}W \frac{x^2}{(l-d)^2} \cdot \frac{x}{3}.$$

Substituting for the above value x ,

$$M_{\max} = 22,400 \text{ lbs. ft.}$$

4. Construct the bending moment and shearing force diagrams for the case in Fig. 90 (a) and determine the necessary standard I beam if $a = c = l/4 = 6$ feet, $P = 2,000$ lbs., $q = 400$ lbs. per foot, $\sigma_w = 15,000$ lbs. per sq. in. The weight of the beam can be neglected.

Solution. In Fig. 90 (b) and (c) the bending moment and shearing force diagrams produced by the distributed loads are shown. To this the moment and the shearing force produced by P should be added. The

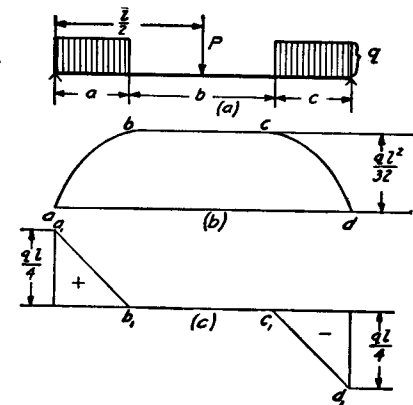


FIG. 90.

maximum bending moment will be at the middle of the span,

$$M_{\max} = 19,200 \text{ lbs. ft.}$$

The necessary

$$Z = \frac{19,200 \times 12}{15,000} = 15.4 \text{ in.}^3$$

The standard I beam of depth 8 in. and cross-sectional area 6.71 sq. in., $Z = 16.1 \text{ in.}^3$, is the nearest cross section satisfying the strength conditions.

5. Determine the most unfavorable position of the hoisting carriage of a crane which rides on a beam as in Fig. 91. Find M_{\max} if the load per wheel is $P = 10,000 \text{ lbs.}$, $l = 24 \text{ feet}$, $d = 6 \text{ feet}$. The weight of the beam is neglected.




FIG. 91.

wheel is

$$\frac{2P(l - x - \frac{1}{2}d)x}{l}$$

This moment becomes a maximum when

$$x = \frac{l}{2} - \frac{d}{4};$$

hence in order to obtain the maximum bending moment under the left wheel the carriage must be displaced from the middle position by a distance $d/4$ towards the right support. The same magnitude of bending moment can be obtained also under the right wheel by displacing the carriage by $d/4$ from the middle position towards the left support.

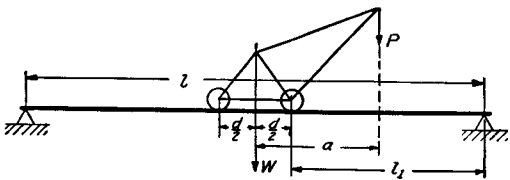


FIG. 92.

6. The rails of a crane (Fig. 92) are supported by two standard I beams. Determine the most unfavorable position of the crane, the

corresponding M_{\max} and the dimensions of the I beams if $\sigma_w = 15,000 \text{ lbs. per sq. in.}$, $l = 30 \text{ feet}$, $a = 12 \text{ feet}$, $d = 6 \text{ feet}$, the weight of the crane $W = 10,000 \text{ lbs.}$, the load lifted by the crane $P = 2,000 \text{ lbs.}$ The loads are acting in the middle plane between the two I beams and are equally distributed between them.

Solution. The maximum bending moment will be under the right wheel when the distance of this wheel from the right support is equal to $l_1 = \frac{1}{2}(l - \frac{1}{2}d)$; $M_{\max} = 1,009,000 \text{ lbs. in.}$ Dividing the moment equally between the two beams, we find the necessary

$$Z = \frac{M_{\max}}{2\sigma_w} = 33.6 \text{ in.}^3$$

The necessary I beam has a depth 12 in., cross-sectional area 9.26 sq. in.; $Z = 36.0 \text{ in.}^3$ The weight of the beam is neglected.

7. A circular wooden beam supported at C and attached to the foundation at A (Fig. 93) carries a load $q = 300 \text{ lbs. per foot uni-}$

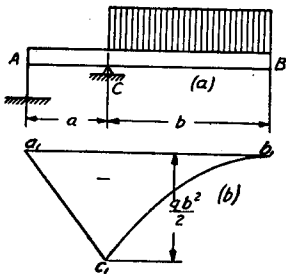


FIG. 93.

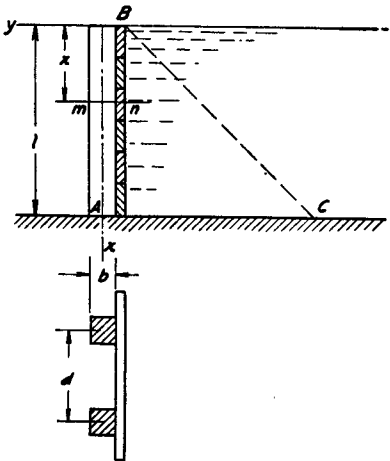


FIG. 94.

formly distributed along the portion BC. Construct the bending moment diagram and determine the necessary diameter d if $\sigma_w = 1,200 \text{ lbs. per sq. in.}$, $a = 3 \text{ feet}$, $b = 6 \text{ feet}$.

Solution. The bending moment diagram is shown in Fig. 93 (b). Numerically the largest moment will be at C and is equal to 64,800 lbs. in.:

$$d = \sqrt[3]{\frac{32}{\pi} \cdot \frac{M}{\sigma_w}} = 8.2 \text{ in.}$$

8. The wooden dam backed by vertical pillars built in at the lower ends (Fig. 94) consists of horizontal boards. Determine the dimension of the square cross section of the pillars if $l = 6$ feet, $d = 3$ feet and $\sigma_w = 500$ lbs. per sq. in. Construct the bending moment and shearing force diagrams.

Solution. The total lateral load on one pillar is represented by the weight W of the triangular prism ABC of water. At any cross section mn , the shearing force and the bending moment are

$$V = -\frac{W \cdot x^2}{l^2}; \quad M = -\frac{W x^2}{l^2} \cdot \frac{x}{3}.$$

In determining the signs of V and M it is assumed that Fig. 94 is rotated 90° in the counter-clockwise direction so as to bring the axes x and y into coincidence with those of Fig. 56. The necessary dimension b is found from equation

$$Z = \frac{b^3}{6} = \frac{M_{\max}}{\sigma_w} = \frac{3 \times 6^2 \times 62.4 \times 12}{500},$$

from which
 $b = 9.90$ in.

The construction of diagrams is left to the reader.
9. Determine the necessary dimensions of a cantilever beam of a standard I section which carries a uniform load $q = 200$ lbs. per foot and a concentrated load $P = 500$ lbs. at the end if the length $l = 5$ feet and $\sigma_w = 15,000$ lbs. per sq. in.

Solution.

$$Z = \frac{(500 \times 5 + 1,000 \times 2.5)12}{15,000} = 4 \text{ in.}^3$$

The necessary standard I beam is 5 in. deep and of 2.87 in.² cross-sectional area.

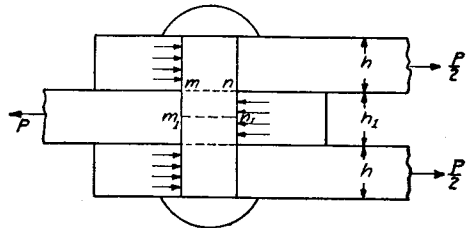


FIG. 95.

10. Determine the bending stresses in a rivet by assuming that the loads acting on the rivet are distributed as shown in Fig. 95.

The diameter of the rivet $d = 3/4$ in., $h = 1/4$ in., $h_1 = 3/8$ in., $P = 10,000$ lbs. per sq. in.

Solution. The bending moment at the cross section mn is $P/2 \times h/2$. The bending moment at the middle cross section m_1n_1 is

$$\frac{P}{2} \left(\frac{h}{2} + \frac{h_1}{4} \right).$$

This latter moment is the one to be taken into account in calculating the stresses. Then

$$(\sigma_x)_{\max} = \frac{P}{2} \left(\frac{h}{2} + \frac{h_1}{4} \right) : \frac{\pi d^3}{32} = \frac{4P}{\pi d^2} \cdot \frac{2h + h_1}{d} = 26,400 \text{ lbs. per sq. in.}$$

11. Determine the necessary standard I beams for the cases in Figures 67a, 67d, and 68b, assuming working stress of 16,000 lbs. per sq. in.

12. Determine the necessary dimensions of a simply supported beam of standard I-section such as to carry a uniform load of 400 lbs. per ft. and a load of $P = 4000$ lbs. placed at the middle. The length of the beam is 15 ft. and working stress $\sigma_w = 16,000$ lbs. per sq. in.

13. A channel the cross section of which is shown in Fig. 85 is simply supported at the ends and carries a concentrated load at the middle. Calculate the maximum value of the load which the beam will carry if the working stress is 1,000 lbs. per sq. in. for tension and 2,000 lbs. per sq. in. for compression.

26. Shearing Stresses in Bending.—In the preceding article it was shown that when a beam is bent by transverse loads not only normal stresses

σ_x but also shearing stresses τ are produced in any cross section mn of the beam, Fig. 96. Considering the action on the right portion of the beam, Fig. 96, it can be concluded from the conditions of equilibrium

that the magnitude of these shearing stresses is such that their summation is equal to the shearing force V . In investigating the law of their distribution over the area of the cross section we begin with the simple case of a rectangular cross section, Fig. 97. In such a case it is natural to assume that the shear-

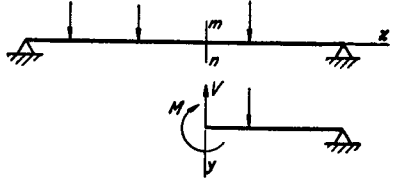


FIG. 96.

ing stress at each point of the cross section is parallel to the shearing force V , i.e., parallel to the sides mn of the cross section. We denote the stress in such a case by τ_{yx} . The subscript y in τ_{yx} indicates that the shearing stress is parallel to the y axis and the subscript x that the stress acts in a plane perpendicular to the x axis. As a second assumption we take

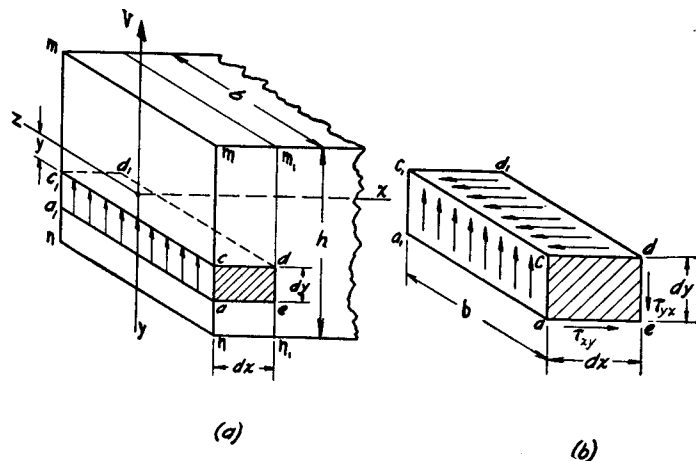


FIG. 97.

the distribution of the shearing stresses to be uniform across the width of the beam cc_1 . These two assumptions will enable us to determine completely the distribution of the shearing stresses. A more elaborate investigation of the problem shows that the approximate solution thus obtained is usually sufficiently accurate and that for a narrow rectangle (h large in comparison with b , Fig. 97) it practically coincides with the exact solution.³

If an element be cut from the beam by adjacent cross sections and by adjacent planes parallel to the neutral plane,

³ The exact solution of this problem is due to de Saint Venant, *Journal de Math. (Liouville)*, 1856. An account of de Saint Venant's famous work is given in Todhunter and Pearson's "History of the Theory of Elasticity." The approximate solution given below is by Jouravski. For the French translation of his work see *Annales des Ponts et Chaussées*, 1856. The exact theory shows that when the depth of the beam is small in comparison with the width the discrepancy between the exact and the approximate theories becomes considerable.

as in Fig. 97 (b), in accordance with our assumption there is a uniform distribution of the shearing stresses τ_{yx} over the vertical face acc_1a_1 . These stresses have a moment $(\tau_{yx}b dy)dx$ about the lower rear edge ee of the element which must be balanced by the moment $(\tau_{xy}b dx)dy$ due to shearing stresses distributed over the horizontal face of the element, cdd_1c_1 . Then

$$\tau_{yx}b dy dx = \tau_{xy}b dx dy \quad \text{and} \quad \tau_{yx} = \tau_{xy},$$

i.e., the shearing stresses acting on the two perpendicular faces of the element are equal. The same conclusion was met before in simple tension (see p. 40) and also in tension or compression in two perpendicular directions (see p. 45). The existence of these shearing stresses in the planes parallel to the neutral plane can be demonstrated by simple experiments. Take two equal rectangular bars put together on simple supports as shown in Fig.

98 and bent by a concentrated load P . If there is no friction between the bars, the bending of each bar will be independent of that of the other; each will have compression of the upper and tension of the lower longitudinal fibers and the condition will be that indicated in Fig. 98 (b). The lower

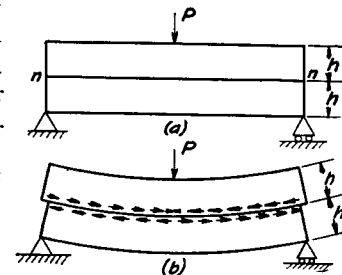


FIG. 98.

longitudinal fibers of the upper bar slide with respect to the upper fibers of the lower bar. In a solid bar of depth $2h$ (Fig. 98, a) there will be shearing stresses along the neutral plane nn of such magnitude as to prevent this sliding of the upper portion of the bar with respect to the lower, shown in Fig. 98 (b). Due to this prevention of sliding the single bar of depth $2h$ is much stiffer and stronger than two bars each of depth h . In practice keys such as a , b , c , . . . are sometimes used with built-up wooden beams in order to prevent sliding (Fig. 99, a). Observation of the clearances around a key, Fig. 99 (b), enables us to determine the direction of sliding in the case of a built-up beam and therefore

the direction of the shearing stresses over the neutral plane in the case of a solid beam.

The above discussion shows that the shearing stress τ_{yz}

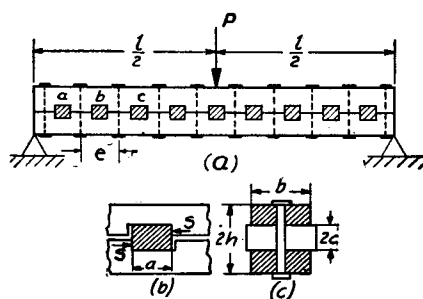


FIG. 99.

at any point of the vertical cross section is vertical in direction and numerically equal to the horizontal shearing stress τ_{xy} in the horizontal plane through the same point. This latter stress can easily be calculated from the condition of equilibrium of the element

pp_1nn_1 cut out from the

beam by two adjacent cross sections mn and m_1n_1 and by the horizontal plane pp_1 , Fig. 100 (a) and (b). The only forces on

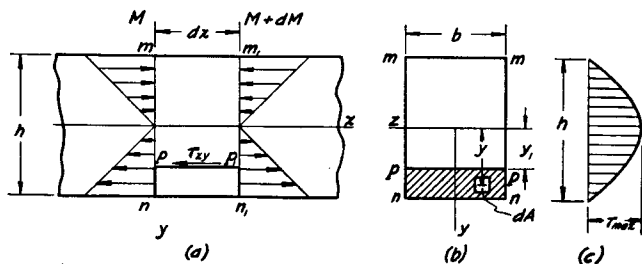


FIG. 100.

this element in the direction of the x axis are the shearing stresses τ_{xy} over the side pp_1 and the normal stress σ_x over the sides pn and p_1n_1 . If the bending moments at cross sections mn and m_1n_1 are equal, i.e., in the case of pure bending, the normal stresses σ_x over the sides np and n_1p_1 will be also equal and will be in balance between themselves. Then the shearing stress τ_{xy} must be equal to zero.

Let us consider now the more general case of a varying bending moment, denoting by M and $M + dM$ the moments in the cross sections mn and m_1n_1 respectively. Then the normal force acting on an elemental area dA of the side $nppn$

will be (eq. 57)

$$\sigma_x dA = \frac{My}{I_z} dA.$$

The sum of all these forces distributed over the side $nppn$ of the element will be

$$\int_{y_1}^{h/2} \frac{My}{I_z} dA. \quad (a)$$

In the same manner the sum of the normal forces acting on the side $n_1p_1p_1n_1$ is

$$\int_{y_1}^{h/2} \frac{(M + dM)y}{I_z} dA. \quad (b)$$

The force due to the shearing stresses τ_{xy} acting on the top side pp_1 of the element is

$$\tau_{xy} b dx. \quad (c)$$

The forces given in (a), (b) and (c) must satisfy eq. $\Sigma X = 0$, hence

$$\tau_{xy} b dx = \int_{y_1}^{h/2} \frac{(M + dM)y}{I_z} dA - \int_{y_1}^{h/2} \frac{My}{I_z} dA,$$

from which

$$\tau_{xy} = \frac{dM}{dx} \frac{1}{b \cdot I_z} \int_{y_1}^{h/2} y dA,$$

or, by using eq. (50),

$$\tau_{xy} = \tau_{yz} = \frac{V}{b I_z} \int_{y_1}^{h/2} y dA. \quad (64)$$

The integral in this equation has a very simple meaning. It represents the moment of the shaded portion of the cross section, Fig. 100 (b), with respect to the neutral axis z . For the rectangular section discussed

$$dA = b dy$$

and the integral becomes

$$\int_{y_1}^{h/2} b y dy = \left[\frac{b y^2}{2} \right]_{y_1}^{h/2} = \frac{b}{2} \left(\frac{h^2}{4} - y_1^2 \right). \quad (d)$$

The same result can be obtained by multiplying the area

$b[(h/2) - y_1]$ of the shaded portion by the distance $\frac{1}{2}[(h/2) + y_1]$ of its centroid from the neutral axis.

Substituting (d) in eq. (64), we obtain for the rectangular section

$$\tau_{xy} = \tau_{yx} = \frac{V}{2I_z} \left(\frac{h^2}{4} - y_1^2 \right). \quad (65)$$

It is seen that the shearing stresses τ_{yx} are not uniformly distributed from top to bottom of the beam. The maximum value of τ_{yx} occurs for $y_1 = 0$, i.e., for points on the neutral axis; and is, from equation (65),

$$(\tau_{yx})_{\max} = \frac{Vh^2}{8I_z}$$

or, since $I_z = bh^3/12$,

$$(\tau_{yx})_{\max} = \frac{3}{2} \cdot \frac{V}{bh}. \quad (66)$$

Thus the maximum shearing stress in the case of a rectangular cross section is 50 per cent greater than the average shearing stress, obtained by dividing the shearing force by the area of the cross section.

For the bottom and for the top of the cross section, $y_1 = \pm h/2$ and equation (65) gives $\tau_{yx} = 0$. The graph of equation (65) (Fig. 100, c) shows that the distribution of the shearing stresses along the depth of the beam follows a parabolic law. The shaded area bounded by the parabola multiplied with the width b of the beam gives $\frac{2}{3}(\tau_{yx})_{\max}hb = V$, as it should.

A natural consequence of these shearing stresses is shearing strain, which causes cross sections, initially plane, to become warped. This warping can be easily demonstrated by bending with a

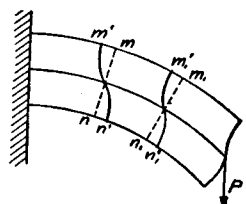


FIG. 101.

force on the end a rectangular piece of rubber (Fig. 101), on whose sides vertical lines have been drawn. The lines will not remain straight as indicated by the dotted lines, but become curved, so that the maximum shear strain occurs at the neutral surface. At the points m' , m_1' , n' , n_1'

the shearing strain is zero, so that the curves $m'n'$ and $m_1'n_1'$ are normal to the upper and lower surfaces of the bar after bending. At the neutral surface the angles between the tangents to the curves $m'n'$ and $m_1'n_1'$ and the normal sections mn and m_1n_1 are equal to $\gamma = 1/G \cdot (\tau_{yx})_{\max}$. As long as the shearing force remains constant along the beam, the warping of all cross sections is the same, so that $mm' = m_1m_1'$, $nn' = n_1n_1'$ and the stretching or the shrinking produced by the bending moment in the longitudinal fibers is unaffected. This fact explains the validity here of eq. (57), which was developed for pure bending and based on the assumption that cross sections of a bar remain plane during bending.

A more elaborate investigation of the problem⁴ shows that the warping of cross sections also does not substantially affect the strain in longitudinal fibers if a distributed load acts on the beam and the shearing force varies continuously along the beam. In the case of concentrated loads the stress distribution near the loads is more complicated, but this deviation from the straight line law is of a local type (see Part II).

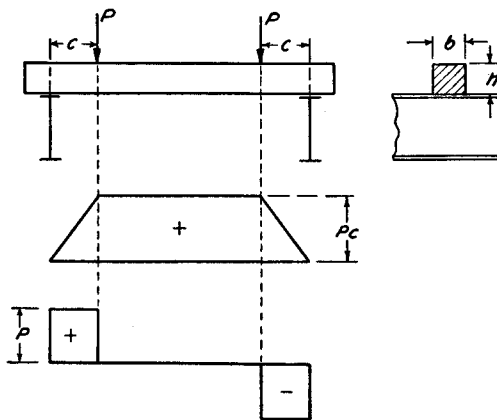


FIG. 102.

Problems

1. Determine the limiting values of the loads P acting on the wooden rectangular beam, Fig. 102, if $b = 8$ in., $h = 10$ in., $\sigma_w = 800$ lbs. per sq. in., $\tau_w = 200$ lbs. per sq. in., $c = 1.5$ feet.

Solution. The bending moment and shearing force diagrams are given in Fig. 102.

⁴ See W. Voigt, Göttingen Abhandlungen, Bd. 34 (1887); J. H. Michell, Quart. J. of Math., Vol. 32 (1901); and L. N. G. Filon, Phil. Trans. Roy. Soc. (Ser. A), Vol. 201 (1903), and London Roy. Soc. Proc., Vol. 72 (1904).


From equations $V_{\max} = P;$ $M_{\max} = P \cdot c.$

$\frac{Pc}{Z} = \sigma_w$ and $\frac{3}{2} \frac{P}{bh} = \tau_w,$

we obtain

$P = 5,930 \text{ lbs.}$ and $P = 10,700 \text{ lbs.};$

therefore $P = 5,930 \text{ lbs.}$ is the limiting value of the load $P.$

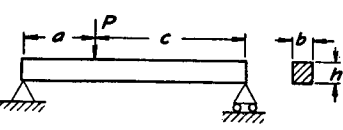

2. Determine the maximum normal stress σ_x and the maximum shearing stress τ_{yx} in the neutral plane of the beam represented in Fig. 103 if $a = 2 \text{ feet}, c = 4 \text{ feet}, b = 8 \text{ in.}, h = 10 \text{ in.}$ and $P = 6,000 \text{ lbs.}$

Answer.
 $(\sigma_x)_{\max} = 720 \text{ lbs. per sq. in.};$ $(\tau_{yx})_{\max} = 75 \text{ lbs. per sq. in.}$


3. Determine the maximum shearing stress in the neutral plane of a uniformly loaded rectangular beam if the length of the beam $l = 6 \text{ feet},$ the load per foot $q = 1,000 \text{ lbs.},$ the depth of the cross section $h = 10 \text{ in.}$ and the width $b = 8 \text{ in.}$

Answer.
 $\tau_{\max} = 56.3 \text{ lbs. per sq. in.}$

4. Determine the maximum shearing stresses in problem 2 of article 25.


27. Distribution of Shearing Stresses in the Case of a Circular Cross Section.—In considering the distribution over a circular

cross section (Fig. 104) there is no foundation for the assumption that the shearing stresses are all parallel to the shearing force $V.$ In fact we can readily show that at points p (Fig. 104, b) of the cross section along the boundary the shearing stress is tangent to the boundary.

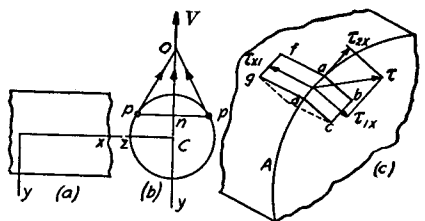

Let us consider an infinitesimal element $abcd$ (Fig. 104, c) in the form of a rectangular parallelepiped with the face $adfg$ in the surface of the beam and the face $abcd$ in the plane yz of the cross section. If the shearing stress acting over the side $abcd$ of the element has a direction stress such as $\tau,$ it can always be resolved

into two components τ_{1x} in a radial direction and τ_{2x} in the direction of the tangent to the boundary. Now it has been proved before (see p. 111), by using the equation of equilibrium of an element, that if a shearing stress τ acts over an elemental area, an equal shearing stress will act also over an elemental area perpendicular to $\tau.$ Applying this in our case it must be concluded that if a shearing stress τ_{1x} is acting on the element $abcd$ in a radial direction there must be an equal shearing stress τ_{x1} on the side $adfg$ of the element lying in the surface of the beam. If the lateral surface of the beam is free from shearing stresses, the radial component τ_{1x} of the shearing stress τ must be equal to zero, i.e., τ must be in the direction of the tangent to the boundary of the cross section of the beam. At the midpoint n of the chord pp symmetry requires that the shearing stress have the direction of the shearing force $V.$ Then the directions of the shearing stresses at the points p and n will intersect at some point O on the y axis (Fig. 104, b). Assuming now that the shearing stress at any other point of the line pp is also directed toward the point $O,$ we have a complete determination of the directions of the shearing stresses. As a second assumption we take the vertical components of the shearing stresses equal for all points of the line $pp.$ ⁵ As this assumption coincides completely with that made in the case of a rectangular cross section, we can use eq. (64) for calculating this component. Knowing the actual direction of the shearing stress and its vertical component, its magnitude may be easily calculated for any point of the cross section.

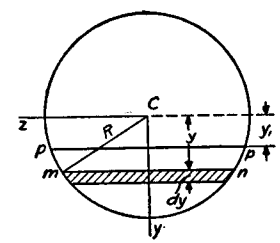

Let us calculate now the shearing stresses along the line pp of the cross section (Fig. 105). In applying eq. (64) to the calculation of the vertical component τ_{yz} of these stresses we must find the moment of the segment of the circle below the line pp with respect to the z axis. The elemental area mn has the length $2\sqrt{R^2 - y^2}$ and the width $dy.$ The area is $dA = 2\sqrt{R^2 - y^2}dy.$ The moment of this strip about Cz is $y dA$ and the total moment for the entire segment is

⁵ The approximate theory based on the above two assumptions gives satisfactory accuracy and comparison with the exact theory shows that the error in the magnitude of the maximum shearing stress is about 5 per cent, which is not high for practical application. See Saint Venant, loc. cit., p. 110. See also the book by A. E. H. Love, "Mathematical Theory of Elasticity," 4th ed., 1927, p. 346.

$$\int_{y_1}^R 2\sqrt{R^2 - y^2} \cdot y dy = \frac{2}{3}(R^2 - y_1^2)^{3/2}.$$

Substituting this in eq. (64) and taking $2\sqrt{R^2 - y_1^2}$ for b , we obtain

$$\tau_{yx} = \frac{V(R^2 - y_1^2)}{3I_z}, \tag{67}$$

and the total shearing stress at points p (Fig. 105) is

$$\tau = \frac{\tau_{yx} \cdot R}{\sqrt{R^2 - y_1^2}} = \frac{VR\sqrt{R^2 - y_1^2}}{3I_z}.$$

It is seen that the maximum τ is obtained for $y_1 = 0$, i.e., for the neutral axis of the cross section. Then, substituting $I_z = \pi R^4/4$,

$$\tau_{\max} = \frac{4}{3} \frac{V}{\pi R^2} = \frac{4}{3} \cdot \frac{V}{A}. \tag{68}$$

In the case of a circular cross section, therefore, the maximum shearing stress is 33 per cent larger than the average value obtained by dividing the shearing force by the cross-sectional area.

28. Distribution of Shearing Stresses in I Beams.—In

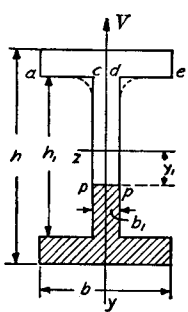


FIG. 106.

considering the distribution of the shearing stresses in I beams (Fig. 106) for the section of the web, the same assumptions are made as for a rectangular cross section; these were that the shearing stresses are parallel to the shearing force V and are uniformly distributed over the thickness b_1 of the web. Then eq. (64) will be used for calculating the stresses τ_{yx} . For points on the line pp at a distance y_1 from the neutral axis, where the width of the cross section

is b_1 , the moment of the shaded portion with respect to the neutral axis z is

$$\int_{y_1}^{h_1/2} y dA = \frac{b}{2} \left(\frac{h^2}{4} - \frac{h_1^2}{4} \right) + \frac{b_1}{2} \left(\frac{h_1^2}{4} - y_1^2 \right).$$

Substituting in eq. (64), we obtain

$$\tau_{yx} = \frac{V}{b_1 I_z} \left[\frac{b}{2} \left(\frac{h^2}{4} - \frac{h_1^2}{4} \right) + \frac{b_1}{2} \left(\frac{h_1^2}{4} - y_1^2 \right) \right]. \tag{69}$$

The stress then varies along the depth of the beam following a parabolic law. The maximum and minimum values of τ_{yx} in the web of the beam are obtained by putting $y_1 = 0$ and $y_1 = h_1/2$:

$$(\tau_{yx})_{\max} = \frac{V}{b_1 I_z} \left[\frac{bh^2}{8} - \frac{h_1^2}{8} (b - b_1) \right]; \tag{70}$$

$$(\tau_{yx})_{\min} = \frac{V}{b_1 I_z} \left(\frac{bh^2}{8} - \frac{bh_1^2}{8} \right). \tag{71}$$

When b_1 is very small in comparison with b there is no great difference between $(\tau_{yx})_{\max}$ and $(\tau_{yx})_{\min}$ and the distribution of the shearing stresses over the cross section of the web is practically uniform.

A good approximation for $(\tau_{yx})_{\max}$ is obtained by dividing the complete shearing force V by the cross-sectional area of the web alone. This follows from the fact that the shearing stresses distributed over the cross section of the web yield a force which is nearly equal to V , which means that the web takes nearly all the shearing force, and the flanges have only a secondary part in its transmission. To prove this the summation of the stresses τ_{yx} over the web which we will call

V_1 is $\int_{-h_1/2}^{h_1/2} \tau_{yx} b_1 dy$, from eq. (69):

$$V_1 = \frac{V}{b_1 I_z} \int_{-h_1/2}^{h_1/2} \left[\frac{b}{2} \left(\frac{h^2}{4} - \frac{h_1^2}{4} \right) + \frac{b_1}{2} \left(\frac{h_1^2}{4} - y_1^2 \right) \right] b_1 dy$$

and, after integration,

$$V_1 = \frac{V}{I_z} \left[\frac{b(h - h_1)}{2} \cdot \frac{h + h_1}{2} \cdot \frac{h_1}{2} + \frac{b_1 h_1^3}{12} \right]. \tag{a}$$

For small thickness of flanges, i.e., when h_1 approaches h , the moment of inertia I_z is represented with sufficient accuracy by the equation:

$$I_z = \frac{b(h - h_1)}{2} \cdot \frac{(h + h_1)^2}{8} + \frac{b_1 h_1^3}{12}, \tag{b}$$

in which the first term represents the cross-sectional area of

the flanges multiplied by the square of the distance $(h + h_1)/4$ of their centers from the z axis, which is approximately the moment of inertia of the cross section of the flanges. The second term is the moment of inertia of the cross section of the web. Comparing (a) and (b), we see that as h_1 approaches h the force V_1 approaches V and the shearing force will be taken by the web alone.

In considering the distribution of the shearing stresses over the cross sections of the flanges the assumption of no variation along the width of the section cannot be made. For example, at the level ae (Fig. 106), along the lower boundary of the flange, ac and de , the shearing stress τ_{yx} must be zero since the corresponding equal stress τ_{xy} in the free bottom surface of the flange is zero (see p. 116 and also Fig. 104, c). In the part cd , however, the shearing stresses are not zero, but have the magnitudes calculated above for $(\tau_{yx})_{\min}$ in the web. This indicates that at the junction cd of the web and the flange the distribution of shearing stresses follows a more complicated law than can be investigated by our elementary analysis. In order to dissipate a stress concentration at the points c and d , the sharp corners are usually replaced by fillets as indicated in the figure by dotted lines. A more detailed discussion of the distribution of shearing stresses in flanges will be given later (see Part II).

Problems

1. Determine $(\tau_{yx})_{\max}$ and $(\tau_{yx})_{\min}$ in the cross section of the web of an I beam, Fig. 106, if $b = 5$ in., $b_1 = \frac{1}{2}$ in., $h = 12$ in., $h_1 = 10\frac{1}{2}$ in., $V = 30,000$ lbs. Determine the shearing force transmitted by the web V_1 .
Answer. $(\tau_{yx})_{\max} = 5,870$ lbs. per sq. in., $(\tau_{yx})_{\min} = 4,430$ lbs. per sq. in., $V_1 = 0.945V$.
2. Determine the maximum shearing stress in the web of a T beam (Fig. 107) if $h = 8$ in., $h_1 = 7$ in., $b = 4$ in., $b_1 = 1$ in. and $V = 1,000$ lbs.
Answer. Using the same method as in the case of an I beam, we find $(\tau_{yx})_{\max} = 176$ lbs. per sq. in.
3. Determine the maximum shearing stress in problems 1 and 6 of article 25.

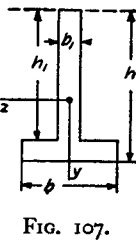


FIG. 107.

29. Principal Stresses in Bending.—By using eqs. (57) and (64) the normal stress σ_x and the shearing stress τ_{yx} can easily be calculated for any point of a cross section provided the bending moment M and the shearing force V are known for this cross section. The maximum numerical value of σ_x will be in the fiber most remote from the neutral axis, and the maximum value of τ_{yx} usually at the neutral axis. In the majority of cases only the maximum values of σ_x and τ_{yx} obtained in this manner are used in design and the cross-sectional dimensions of beams are taken so as to satisfy the conditions

$$(\sigma_x)_{\max} \equiv \sigma_w \quad \text{and} \quad (\tau_{yx})_{\max} \equiv \tau_w.$$

It is assumed here that the material is equally strong in tension and compression and σ_w is the same for both. Other-

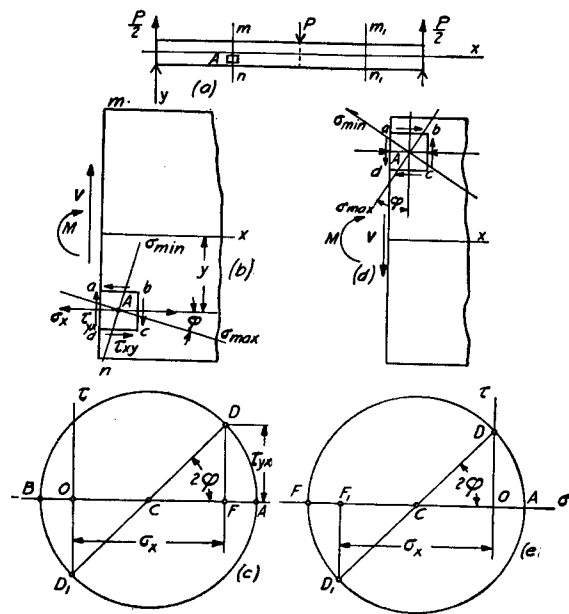


FIG. 108.

wise the conditions of strength in tension and in compression must be satisfied separately and we obtain

$$(\sigma_x)_{\max} \equiv \sigma_w \text{ in tension; } (\sigma_x)_{\min} \equiv \sigma_w \text{ in compression.}$$

There are cases, however, which require a more detailed analysis of stress conditions. We shall now demonstrate the method of analysis necessary for such cases with a beam simply supported and loaded at the middle (Fig. 108). For a point *A* below the neutral axis in the cross section *mn*, the magnitudes of the stresses σ_x and $\tau_{yx} = \tau_{xy}$ are given by eqs. (57) and (64). In Fig. 108 (*b*) those stresses are shown acting on an infinitesimal element cut out of the beam at the point *A*, their senses being easily determined from those of *M* and *V*. For such an infinitesimal element the changes in stresses σ_x and τ_{yx} for various points of the element can be neglected and it can be assumed that the element is in a *homogeneous state of stress*, i.e., the quantities σ_x and τ_{yx} may be regarded as the same throughout the element. Such a state of stress is illustrated by the element of finite dimensions in Fig. 37*a*.

From our previous investigation (see p. 46) we know that the stresses on the sides of an element cut out from a stressed body vary with the directions of these sides and that it is possible to so rotate the element that only normal stresses are present (see p. 47). The directions of the sides are then called *principal directions* and the corresponding stresses *principal stresses*. The magnitudes of these stresses can be found from eqs. (31) and (32) by substituting in these equations $\sigma_y = 0$. Then we obtain

$$\sigma_{\max} = \frac{\sigma_x}{2} + \sqrt{\left(\frac{\sigma_x}{2}\right)^2 + \tau_{yx}^2}, \tag{72}$$

$$\sigma_{\min} = \frac{\sigma_x}{2} - \sqrt{\left(\frac{\sigma_x}{2}\right)^2 + \tau_{yx}^2}. \tag{73}$$

It should be noted that σ_{\max} is always tension and σ_{\min} always compression. Knowing principal stresses, the maximum shearing stress at any point will be obtained from eq. (34) (see p. 49):

$$\tau_{\max} = \frac{\sigma_{\max} - \sigma_{\min}}{2} = \sqrt{\left(\frac{\sigma_x}{2}\right)^2 + \tau_{yx}^2}. \tag{74}$$

For determining the directions of principal stresses Mohr's circle will be used. For an element such as at point *A* (Fig.

108, *b*), the corresponding Mohr's circle is shown in Fig. 108 (*c*). By taking the distance $\overline{OF} = \sigma_x$ and $\overline{DF} = \tau_{yx}$, the point *D*, representing stresses over the sides *bc* and *ad* of the element, is obtained. The distance \overline{OF} is taken in the direction of positive σ and \overline{DF} in the upward direction because σ_x is tensile stress and shearing stresses τ_{yx} over sides *bc* and *ad* give a clockwise couple (see p. 38). Point *D*₁ represents the stresses over the sides *ab* and *dc* of the element on which the normal stresses are zero and the shearing stresses are negative. The circle constructed on the diameter *DD*₁ determines $\sigma_{\max} = \overline{OA}$ and $\sigma_{\min} = -\overline{OB}$. From the same construction the angle 2φ is determined and the direction of σ_{\max} in Fig. 108 (*b*) is obtained by measuring φ from the *x* axis in the clockwise direction. Of course σ_{\min} is perpendicular to σ_{\max} .

By taking a section *m*₁*n*₁ to the right of the load *P* (Fig. 108, *a*) and considering a point *A* above the neutral axis, the direction of the stresses acting on an element *abcd* at *A* will be that indicated in Fig. 108 (*d*). The corresponding Mohr's circle is shown in Fig. 108 (*e*). Point *D* represents the stresses for the sides *ab* and *dc* of the element *abcd* and point *D*₁ the stresses over the sides *ad* and *bc*. The angle φ determining the direction σ_{\max} must be measured in the clockwise direction from the outer normal to the side *ab* or *cd* as shown in Fig. 108 (*d*).

If we take a point at the neutral surface, then σ_x becomes zero. An element at this point will be in the condition of pure shear. The directions of the principal stresses will be at 45° to the *x* and *y* axes.

It is possible to construct two systems of orthogonal curves whose tangents at each point are in the directions of the principal stresses at this point. Such curves are called the *trajectories of the stresses*. Figure 109 shows the stress trajectories for a rectangular cantilever beam, loaded at the end. All these curves intersect the neutral surface at 45° and have horizontal or vertical tangents at points where the shearing stress τ_{yx} is zero, i.e., at the top and at the bottom surfaces of the beam. The trajectories giving the directions of σ_{\max}

(tension) are represented by full lines and the other system of trajectories by dotted lines. Figure 110 gives the trajectories and the stress distribution diagrams for σ_x and τ_{yx} over several cross sections of a simply supported rectangular

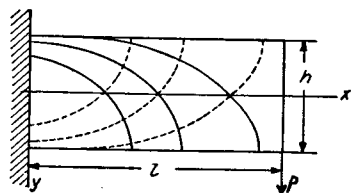


FIG. 109.

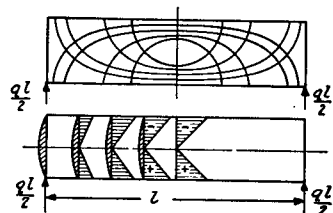


FIG. 110.

beam under uniform load. It is clearly seen that σ_x has a maximum value at the middle, where the bending moment M is a maximum, and τ_{yx} is maximum at the supports, where the maximum shearing force acts.⁶ In the design of beams the concern is for the numerically maximum values of σ . From eq. (72) it can be seen that for the most remote fibers in tension, where the shear is zero, the longitudinal normal stress σ_x becomes the principal stress, i.e., $\sigma_{\max} = (\sigma_x)_{\max}$. For fibers nearer to the neutral axis the longitudinal fiber stress σ_x is less than at the extreme fiber; however we now have a shear stress τ_{yx} also and the stresses σ_x and τ_{yx} acting together at this point may produce a principal stress, given by eq. (72), which will be numerically larger even than that at the extreme fiber. In the case of beams of rectangular or circular cross section, in which the shearing stress τ_{yx} varies continuously down the depth of the beam, this is not usually the case, that is, the stress $(\sigma_x)_{\max}$ calculated for the most remote fiber at the section of maximum bending moment is the maximum stress acting in the beam. However, in such a case as an I beam, where a sudden change occurs in the magnitude of shearing stress at the junction of flange and web (see p. 120), the maximum stress calculated at this joint

⁶ Several examples of construction of the trajectories of stresses are discussed by I. Wagner, Zeitschr. d. Österr. Ing. u. Archit. Ver., 1911, p. 645.

from eq. (72) may be larger than the tensile stress $(\sigma_x)_{\max}$ in the most remote fiber and should be taken into account in design. To illustrate, consider the case represented in Fig. 108 (a) with a beam of I section and the same dimensions as in problem 1, page 120, the length $l = 2$ feet and $P = 60,000$ lbs. Then $M_{\max} = 30,000$ lbs. feet; $V_{\max} = 30,000$ lbs. From eq. (57) the tensile stress in the most remote fiber is

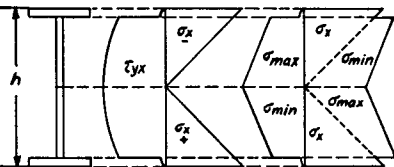


FIG. 111.

$$(\sigma_x)_{\max} = \frac{30,000 \times 12 \times 6}{286} = 7,550 \text{ lbs. per sq. in.}$$

Now for a point at the junction of flange and web we obtain the following values of normal and shearing stresses:

$$\sigma_x = \frac{7,550 \times 10\frac{1}{2}}{12} = 6,610 \text{ lbs. per sq. in.};$$

$$\tau_{yx} = 4,430 \text{ lbs. per sq. in.}$$

Then, from eq. (72), the principal stress is

$$\sigma_{\max} = 8,830 \text{ lbs. per sq. in.}$$

It can be seen that σ_{\max} at the joint between the flange and the web is larger than the tensile stress at the most remote fiber and therefore it must be considered in design. The variations of σ_x , τ_{yx} , σ_{\max} and σ_{\min} along the depth of the beam are shown in Fig. 111.

Problems

1. Determine σ_{\max} and σ_{\min} at a point 2 in. below the neutral axis in the section 3 feet from the loaded end of the cantilever (Fig. 109) if the depth $h = 8$ in., the width $b = 4$ in. and $P = 2,000$ lbs. Determine the angle between σ_{\max} at this point and the x axis.
Solution. $(\sigma_x) = -844$ lbs. per sq. in.; $(\tau_{yx}) = 70.3$ lbs. per sq. in.; $\sigma_{\max} = 5.7$ lbs. per sq. in.; $\sigma_{\min} = -849.7$ lbs. per sq. in. The angle between σ_{\max} and the x axis is $85^\circ 16'$ measured clockwise.
2. Determine σ_{\max} and σ_{\min} at the neutral axis and in the cross section 1 foot from the left support for the uniformly loaded

rectangular beam supported at the ends (Fig. 110). The cross-sectional dimensions are the same as in the previous problem, and $q = 1,000$ lbs. per foot; $l = 10$ feet.

Answer.
 $\sigma_{\max} = -\sigma_{\min} = 187.5$ lbs. per sq. in.

3. Determine the length of the I beam considered on p. 125 if $(\sigma_x)_{\max}$ is equal to σ_{\max} at the junction of flange and web.
Answer. $l = 39.8$ in.

30. Stresses in Built-up Beams.—In engineering practice built-up beams are frequently used and the stresses in them are usually calculated on the assumption that their parts are rigidly connected. The computation will then involve (a) the designing of the beam as a solid beam and (b) the designing and spacing of the elements which unite the parts of the beam. In the first case the formulas for solid beams are used, making an allowance for the effect of rivet holes, bolts, slots, etc., by the use of reduced sections. The computations necessary for the uniting of the elements will be indicated by illustrations.

Let us discuss first a wooden beam built up as shown in Fig. 99. It is assumed that the keys used between the two parts of the beam are strong enough to resist the shearing forces S (Fig. 99, b). Then eq. (57) can be used for calculating σ_x . In order to take into account the weakening of the section by the keyways and the bolt holes, only the shaded portion of the section, indicated in Fig. 99 (c), should be taken into consideration. Then

$$I_z = \frac{(b-d)}{12} [(2h)^3 - (2c)^3].$$

In calculating the shearing force S acting on each key we assume that this force is equal to the shearing force distributed in a solid beam over the area eb of the neutral surface where b is the width of the beam and e is the distance between the middle points of the keys (see Fig. 99, a). Then by using eq. (66) and considering that the depth of the beam

is equal to $2h$ in this case, we obtain

$$S = eb \cdot \frac{3}{2} \frac{V}{b2h} = \frac{3}{2} \frac{Ve}{2h}. \tag{75}$$

The dimensions of the keys and the distance e between them should be chosen so as to insure sufficient strength against shear of the key and against crushing of the wood on the lateral sides of the key and the keyway. In such calculations the rough assumption is usually made that the shearing stresses are uniformly distributed over the middle section $a \times b$ of the key and that the pressure on the lateral sides of the keys is uniformly distributed over the areas $c \times b$. Then denoting by τ_w the working shearing stress for the keys, and by σ_w' the working stress in lateral compression of the wood of the keys or the keyways, the following equations for designing the keys are obtained:

$$\frac{S}{ab} \leq \tau_w; \quad \frac{S}{bc} \leq \sigma_w'.$$

It is necessary to insure also sufficient strength against shearing of the wood of the beam along the fibers between two keys. The shearing force will be again equal to S and the resisting area is $b \times (e - a)$. Denoting with τ_w' the working stress in shear of the material of the beam along the fibers, the condition of strength becomes

$$\frac{S}{b(e-a)} \leq \tau_w'.$$

In addition to keys there are bolts (Fig. 99) uniting the parts of the beam. By tightening them friction between the parts of the beam is produced. This friction is usually neglected in calculations and it is assumed that the total shearing force is taken by keys. Experiments show that such built-up wooden beams are weaker than solid beams of the same dimensions.⁷

⁷ The experiments made by Prof. E. Kidwell at the Michigan College of Mines show that built-up wooden beams have about 75 per cent of the strength of the solid beam of the same dimensions.

In calculating the σ_x stresses in built-up I beams the weakening effect of rivet holes is usually taken into account by assuming that all the holes are in the same cross section (Fig. 112, *a*) of the beam⁸ and subtracting their diametral sections in calculating I_z in eq. (57).

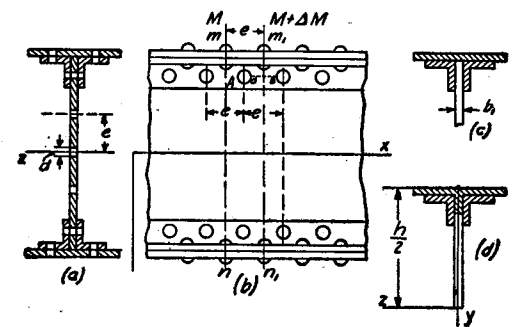


FIG. 112.

In calculating the maximum shearing stress τ_{yx} it is also the practice to take into account the weakening effect of the rivet holes. It can be seen that the cross-sectional area of the web is diminished, by holes, in the ratio $(e - d)/e$, where e is the distance between the centers of the holes and d the diameter of the holes. Hence the factor $e/(e - d)$ is usually included in the right side of eq. (64) for calculating τ_{yx} in the web of built-up I beams. It should be noted that this manner of calculating the weakening effect of rivet holes is only a rough approximation. The actual distribution of stresses near the holes is very complicated. Some discussion of stress concentration near the edge of a hole will be given later (see Part II).

In calculating the shearing force acting on one rivet, such as rivet *A* (Fig. 112, *b*), let us consider the two cross sections *mn* and *m₁n₁*. Due to the difference of bending moments in these two cross sections the normal stresses σ_x on sections *mn* and *m₁n₁* will be different and there is a tendency for the

⁸ The holes in vertical web are present in sections where vertical stiffeners are riveted to the girder.

flange of the beam shaded in Fig. 112 (*c*) to slide along the web. This sliding is prevented by friction forces and by the rivet *A*. Neglecting friction, the force acting on the rivet becomes equal to the difference of forces acting in sections *mn* and *m₁n₁* of the flange. The force in the flange in the cross section *mn* is (see eq. (*a*), p. 113)

$$\frac{M}{I_z} \int y dA,$$

where the integration should be extended over the shaded cross sectional area of the flange. In the same manner for the cross section *m₁n₁* we obtain

$$\frac{(M + \Delta M)}{I_z} \int y dA.$$

Then the force transmitted by the rivet *A* from the flange to the web will be

$$S = \frac{\Delta M}{I_z} \int y dA. \tag{a}$$

By using eq. (50) and substituting the distance e between the rivets instead of dx , we obtain

$$\Delta M = Ve,$$

where V is the shearing force in the cross section of the beam through the rivet *A*. Substituting in eq. (*a*), we obtain

$$S = \frac{Ve}{I_z} \int y dA. \tag{76}$$

The integral entering in this equation represents the moment of the shaded cross section (Fig. 112, *c*) of the flange with respect to the neutral axis z .

It is easy to see that in order to get sliding of the flange along the web the rivet must be sheared through two cross sections. Assuming that the force S is uniformly distributed over these two cross sections, the shearing stress in the rivet

will be

$$\tau = \frac{S}{2 \cdot \frac{\pi d^2}{4}} = \frac{2Ve}{\pi d^2 I_z} \int y dA. \tag{77}$$

The force S sometimes produces considerable shearing stress in the web of the beam along the plane ab (see Fig. 112, b) which must be taken into consideration. Assuming that these stresses are uniformly distributed and dividing S by the area $b_1(e - d)$, we obtain

$$\tau' = \frac{V}{b_1 I_z} \cdot \frac{e}{e - d} \int y dA. \tag{b}$$

In addition to this stress produced by forces S transmitted from the flanges there will act along the same plane ab shearing stresses τ'' due to bending of the web. The magnitude of these stresses will be obtained by using the above eq. (b) and substituting for the integral $\int y dA$ the statical moment with respect to the neutral axis z of the portion of the rectangular cross section of the web above the plane ab . In this manner we arrive at the following equation for the shearing stress τ_{xy} in the web along the plane ab :

$$\tau_{xy} = \tau' + \tau'' = \frac{V}{b_1 I_z} \cdot \frac{e}{e - d} \int y dA, \tag{78}$$

in which the integral is extended over the shaded area of the cross section shown in Fig. 112 (d). Knowing σ_x and τ_{xy} , the σ_{\max} and σ_{\min} for the points in the plane ab can be calculated from eqs. (72) and (74), as was explained in the previous article, and the directions of principal stresses can be determined.

From the above discussion it is seen that in calculating stresses in built-up I beams several assumptions are made for simplifying the calculations. This to a certain extent reduces the accuracy of the calculated stresses, which fact should be considered in choosing the working stresses for built-up I beams.⁹

⁹ Experiments show that the failure of I beams usually occurs due to buckling of the compressed flanges or of the web (see H. F. Moore,

Problems

1. A built-up wooden beam (Fig. 99) consists of two bars of rectangular cross section connected by keys. Determine the shearing force acting on the keys, the shearing stress in the key and pressure per unit area on its lateral sides if the load $P = 5,000$ lbs., the width of the beam $b = 5$ in., the depth $2h = 16$ in., the width of the key $a = 3$ in., the depth of the key $2c = 2\frac{1}{2}$ in., and the distance between centers of the keys $e = 11$ in.

Answer.

$$S = \frac{3}{2} \cdot \frac{2,500 \times 11}{16} = 2,580 \text{ lbs.}$$

Shearing stress in the key is

$$\tau = \frac{2,580}{5 \times 3} = 172 \text{ lbs. per sq. in.}$$

The pressure per unit area on the lateral side is

$$p = \frac{S}{bc} = \frac{2,580 \times 2}{2\frac{1}{2} \times 5} = 413 \text{ lbs. per sq. in.}$$

2. Determine the shearing stress at the neutral axis of a girder, the web of which is $\frac{3}{4}$ in. thick and 50 in. high, the flanges consisting of two pairs of angles 6 in. \times 6 in. \times $\frac{1}{2}$ in., when the total shearing force on the section is 150,000 lbs. Determine also the shearing stresses in the rivets attaching the flanges to the web if the diameter of these rivets is 1 in. and the pitch $e = 4$ in. (Fig. 112).

Solution. For the dimensions given we have

$$I_z = \frac{3}{4} \times \frac{50^3}{12} + 4(19.9 + 5.75 \times 23.3^2) = 20,400 \text{ in.}^4$$

The moment of half of the cross section with respect to the neutral axis is

$$\int_0^{h/2} y dA = \frac{3 \cdot 25 \times 25}{4 \cdot 2} + 2 \times 5.75 \times 23.3 = 502 \text{ in.}^3$$

In this calculation 5.75 in.² is the cross sectional area of an angle, 19.9 in.⁴ is the moment of inertia of the cross section of an angle with

University of Illinois, Bulletin 68, 1913). This question of buckling will be considered later. The effect of bending of rivets on the distribution of stresses in I beams has been discussed by I. Arnovlevic, Zeitschr. f. Architekt. u. Ingenieurwesen, 1910, p. 57. He found that due to this bending stresses for usual proportions increase about 6 per cent.

respect to the axis through its centroid parallel to the neutral axis of the beam, 23.3 in. is the distance of the centroid of each angle from the neutral axis z of the beam. All such numerical data can be taken directly from a handbook. Now we obtain, from eq. (64),

$$(\tau_{xy})_{\max} = \frac{150,000 \times 502}{\frac{3}{4} \times 20,400} = 4,920 \text{ lbs. per sq. in.}$$

If we consider weakening of the web by the rivet holes, then

$$(\tau_{xy})_{\max} = \frac{e}{e - d} \cdot 4,920 = \frac{4}{3} 4,920 = 6,560 \text{ lbs. per sq. in.}$$

The force S transmitted by one rivet, from eq. (76),

$$S = \frac{150,000 \times 4 \times 268}{20,400} = 7,880 \text{ lbs.}$$

The shearing stress in the rivet, from eq. (77),

$$\tau = \frac{7,880 \times 2}{3.14} = 5,020 \text{ lbs. per sq. in.}$$

3. Determine σ_{\max} in points of the plane ab (Fig. 112) a distance of 21.5 in. from the neutral axis if the dimensions of the beam are the same as in the previous problem, $V = 150,000$ and the bending moment $M = 3 \times 10^6$ lbs. in.

Solution. From eq. (78),

$$\tau_{xy} = \frac{150,000}{\frac{3}{4} \times 20,400} \cdot \frac{4}{3} (268 + 61) = 4,300 \text{ lbs. per sq. in.,}$$

$$\sigma_x = \frac{3 \times 10^6 \times 21.5}{20,400} = 3,160 \text{ lbs. per sq. in.,}$$

$$\sigma_{\max} = \frac{\sigma_x}{2} + \sqrt{\frac{\sigma_x^2}{4} + \tau_{xy}^2} = 6,160 \text{ lbs. per sq. in.}$$

4. Determine the shearing force in the rivets connecting the two rails of the beam shown in Fig. 113 if the cross-sectional area of a rail is $A = 10$ sq. in., the distance from the bottom of the rail to the centroid of its cross section $c = 3$ in., the moment of inertia of the cross section of the rail with respect to the axis through its centroid c and parallel to the z axis is 40 in.⁴, the distance between the rivets $e = 6$ in., and the shearing force $V = 5,000$ lbs.

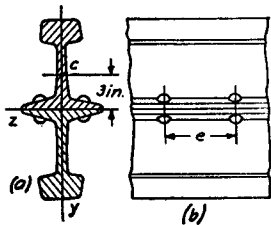


FIG. 113.

Solution.

$$S = \frac{1}{2} \cdot \frac{5,000 \times 6 \times 30}{2(40 + 10 \times 9)} = 1,730 \text{ lbs.}$$

CHAPTER V

DEFLECTION OF TRANSVERSALLY LOADED BEAMS

31. Differential Equation of the Deflection Curve.—In

the design of a beam the engineer is usually interested not only in the stresses produced by the loads acting but also in the deflections produced by these loads. In many cases, furthermore, it is specified that the maximum deflection shall not exceed a certain small portion of the span.

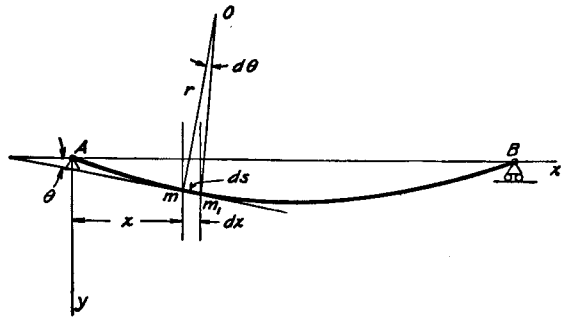


FIG. 114.

Let the curve AmB in Fig. 114 represent the shape of the axis of the beam after bending. This curve is called the *deflection curve*. To derive the differential equation of this curve we take the coordinate axes as shown in the figure and assume that the curvature of the deflection curve at any point depends only on the magnitude of the bending moment M at that point.¹ In such a case the relation between the curvature and the moment is the same as in the case of pure bending (see equation (56)), and we obtain

$$\frac{1}{r} = \frac{M}{EI_z} \quad (a)$$

¹ The effect of shearing force on the curvature will be discussed later (see art. 39). It will be shown that this effect is usually small and can be neglected.

To derive an expression for the relation between the curvature and the shape of the curve, we shall consider two adjacent points m and m_1 , ds apart on the deflection curve. If the angle which the tangent at m makes with the x axis is denoted by θ , the angle between the normals to the curve at m and m_1 is $d\theta$. The intersection point O of these normals gives the center of curvature and defines the length r of the radius of the curvature. Then

$$ds = r d\theta \quad \text{and} \quad \frac{1}{r} = \left| \frac{d\theta}{ds} \right|, \quad (b)$$

the bars indicating that we consider here only the numerical value of the curvature. Regarding the sign, it should be noted that the bending moment is taken positive in equation (a) if it produces upward concavity (see p. 71). Hence the curvature is positive when the center of curvature is above the curve as in Fig. 114. However, it is easy to see that for such a curvature the angle θ decreases as the point m moves along the curve from A to B . Hence, to a positive increment ds corresponds a negative $d\theta$. Thus to have the proper sign equation (b) must be written in the form

$$\frac{1}{r} = - \frac{d\theta}{ds}. \quad (c)$$

In practical applications only very small deflections of beams are allowable, and the deflection curves are very flat. In such cases we can assume with sufficient accuracy that

$$ds \approx dx \quad \text{and} \quad \theta \approx \tan \theta = dy/dx. \quad (d)$$

Substituting these approximate values for ds and θ in equation (c) we obtain

$$\frac{1}{r} = - \frac{d^2y}{dx^2}. \quad (e)$$

Equation (a) thus becomes

$$EI_z \frac{d^2y}{dx^2} = - M. \quad (79)$$

This is the differential equation of the deflection curve which must be integrated in each particular case to find deflections of beams.

It should be noted that the sign in equation (79) depends upon the direction of the coordinate axes. For example, if we take y positive upwards, it is necessary to put

$$\theta \approx - dy/dx$$

in place of equation (d); and we obtain plus instead of minus on the right side of equation (79).

In the case of very slender bars, in which the deflection may be large, it is not permissible to use the simplifications (d); and we must have recourse to the exact expression

$$\theta = \arctan \left(\frac{dy}{dx} \right).$$

Then

$$\begin{aligned} \frac{1}{r} &= -\frac{d\theta}{ds} = -\frac{d \arctan \left(\frac{dy}{dx} \right)}{dx} \frac{dx}{ds} \\ &= -\frac{\frac{d^2y}{dx^2}}{\left[1 + \left(\frac{dy}{dx} \right)^2 \right]^{3/2}}. \quad (f) \end{aligned}$$

Comparing this result with equation (e), it can be concluded that the simplifications shown in equation (d) are equivalent to assuming that the quantity $(dy/dx)^2$ in the denominator of the exact formula (f) is small in comparison with unity and can therefore be neglected.²

By differentiating equation (79) with respect to x and using equations (50) and (51), we obtain

$$EI_z \frac{d^3y}{dx^3} = -V$$

² The exact expression (f) for the curvature was used by the first investigators of the deflection curves. It was used, for example, by L. Euler in his famous work on "Elastic Curves," an English translation of which was published in "Isis," No. 58 (vol. XX, 1) November, 1933.

and

$$EI_z \frac{d^4y}{dx^4} = q. \quad (80)$$

The last equation is sometimes used in considering the deflection of beams under a distributed load.

32. Bending of a Uniformly Loaded Beam.—In the case of a *simply supported beam* which is uniformly loaded, Fig. 63, the bending moment at a cross section mn , a distance x from the left support, is

$$M = \frac{qlx}{2} - \frac{qx^2}{2}$$

and the differential equation (79) becomes

$$EI_z \frac{d^2y}{dx^2} = -\frac{qlx}{2} + \frac{qx^2}{2}.$$

Multiplying both sides by dx and integrating, we obtain

$$EI_z \frac{dy}{dx} = -\frac{qlx^2}{4} + \frac{qx^3}{6} + C \quad (a)$$

where C is the constant of integration which is to be adjusted to satisfy the conditions of this particular problem. To this end, we note that as a result of symmetry the slope at the middle of the span is zero. Setting $dy/dx = 0$ when $x = l/2$, we thus obtain

$$C = \frac{ql^3}{24}$$

and equation (a) becomes

$$EI_z \frac{dy}{dx} = -\frac{qlx^2}{4} + \frac{qx^3}{6} + \frac{ql^3}{24}. \quad (b)$$

A second integration gives

$$EI_z y = -\frac{qlx^3}{12} + \frac{qx^4}{24} + \frac{ql^3x}{24} + C_1. \quad (c)$$

The new constant of integration C_1 is determined from the condition that the deflection at the supports is zero. Sub-


stituting $y = 0$ and $x = 0$ into equation (c) we find $C_1 = 0$. Equation (c) then becomes

$$y = \frac{q}{24EI_z} (l^3x - 2lx^3 + x^4). \quad (81)$$

This is the deflection curve of a simply supported and uniformly loaded beam. The maximum deflection of this beam is evidently at the middle of the span. Substituting $x = l/2$ in equation (81) we thus find

$$y_{\max} = \frac{5}{384} \frac{ql^4}{EI_z}. \quad (82)$$

The maximum slope occurs at the left end of the beam where, by substituting $x = 0$ in equation (b), we obtain

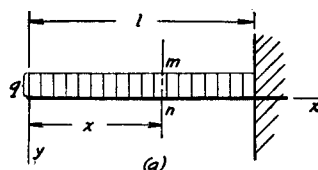

$$\left(\frac{dy}{dx} \right)_{\max} = \frac{ql^3}{24EI_z}. \quad (83)$$

In the case of a *uniformly loaded cantilever beam*, Fig. 115a, the bending moment at a cross section mn a distance x from the left end is

$$M = -\frac{qx^2}{2},$$

and equation (79) becomes

$$EI_z \frac{d^2y}{dx^2} = \frac{qx^2}{2}.$$

The first integration gives

$$EI_z \frac{dy}{dx} = \frac{qx^3}{6} + C. \quad (a)$$

The constant of integration is found from the condition that the slope at the built-in end is zero, that is $dy/dx = 0$ for $x = l$. Substituting these values in equation (a) we find

$$C = -\frac{ql^3}{6}.$$

The second integration gives

$$EI_z y = \frac{qx^4}{24} - \frac{ql^3x}{6} + C_1. \quad (b)$$

The constant C_1 is found from the condition that the deflection vanishes at the built-in end. Thus, by substituting $x = l$, $y = 0$ in equation (b), we obtain

$$C_1 = \frac{ql^4}{8}.$$

Substituting this value in equation (b), we find

$$y = \frac{q}{24EI_z} (x^4 - 4l^3x + 3l^4). \quad (84)$$

This equation defines the deflection curve of the uniformly loaded cantilever.

If the left end, instead of the right end, is built in, as in Fig. 115b, the deflection curve is evidently obtained by substituting $l - x$ instead of x in equation (84). In this way we find

$$y = \frac{q}{24EI_z} (x^4 - 4lx^3 + 6l^2x^2). \quad (85)$$

Problems

1. A simply supported and uniformly loaded wooden beam of square cross section has a span $l = 10$ ft. Find the maximum deflection if $(\sigma_x)_{\max} = 1,000$ lbs. per sq. in., $E = 1.5 \times 10^6$ lbs. per sq. in. and $q = 400$ lbs. per ft.

2. Find the depth of a uniformly loaded and simply supported steel I beam having a span of 10 ft., if the maximum bending stress is 16,000 lbs. per sq. in. and the maximum deflection $\delta = 0.1$ in.

Answer: $h = 16$ in.

3. A uniformly loaded cantilever beam of a span $l = 10$ ft. has a deflection at the end equal to $0.01l$. What is the slope of the deflection curve at the end?

4. What is the length of a uniformly loaded cantilever beam if its deflection at the free end is 1 in. and the slope of the deflection curve at the same point is 0.01 ?

5. A uniformly loaded steel I beam supported at the ends has a deflection at the middle of $\delta = 5/16$ in. while the slope of the deflection curve at the end $\theta = 0.01$. Find the depth h of the beam if the maximum bending stress is $\sigma = 18,000$ lbs. per sq. in.

Solution:

We use the known formulas

$$\delta = \frac{5}{384} \frac{ql^4}{EI}, \quad \theta = \frac{ql^3}{24EI}, \quad \sigma_{\max} = \frac{ql^2}{8} \times \frac{h}{2I}.$$

From the first two formulas we find

$$\frac{5}{16} l = \frac{\delta}{\theta} = \frac{5}{16} \times 100 \text{ in.} \quad \text{and} \quad l = 100 \text{ in.}$$

The second formula then gives

$$\frac{ql^2}{8I} = \frac{3E\theta}{l} = \frac{3 \times 30 \times 10^6 \times 0.01}{100}.$$

Substituting this in the third formula, we obtain

$$h = \frac{2 \times 18,000 \times 100}{3 \times 30 \times 10^6 \times 0.01} = 4 \text{ in.}$$

33. Deflection of a Simply Supported Beam Loaded with a Concentrated Load.—In this case there are two different

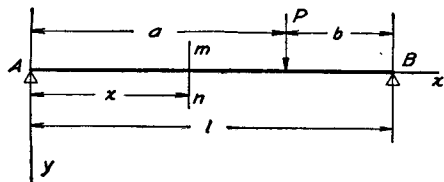


FIG. 116.

expressions for the bending moment (see p. 75) corresponding to the two portions of the beam, Fig. 116. Equation (79) for the deflection curve must therefore be written for

each portion. In this way we obtain

$$EI_z \frac{d^2y}{dx^2} = -\frac{Pb}{l} x \quad \text{for} \quad x \leq a$$

and

$$EI_z \frac{d^2y}{dx^2} = -\frac{Pb}{l} x + P(x - a) \quad \text{for} \quad x \geq a.$$

By integrating these equations we obtain

$$EI_z \frac{dy}{dx} = -\frac{Pbx^2}{2l} + C \quad \text{for} \quad x \leq a \quad \left. \vphantom{EI_z \frac{dy}{dx}} \right\} (a)$$

and

$$EI_z \frac{dy}{dx} = -\frac{Pbx^2}{2l} + \frac{P(x-a)^2}{2} + C_1 \quad \text{for} \quad x \geq a.$$

Since the two branches of the deflection curve must have a common tangent at the point of application of the load P , the above expressions (a) for the slope must be equal for $x = a$. From this we conclude that the constants of integration are equal, i.e., $C = C_1$. Performing the second integration and substituting C for C_1 , we obtain

$$EI_z y = -\frac{Pbx^3}{6l} + Cx + C_2 \quad \text{for} \quad x \leq a \quad \left. \vphantom{EI_z y} \right\} (b)$$

and

$$EI_z y = -\frac{Pbx^3}{6l} + \frac{P(x-a)^3}{6} + Cx + C_3 \quad \text{for} \quad x \geq a.$$

Since the two branches of the deflection curve have a common deflection at the point of application of the load, the two expressions (b) must be identical for $x = a$. From this it follows that $C_2 = C_3$. Finally we need to determine only two constants C and C_2 , for which determination we have two conditions, namely that the deflection at each of the two ends of the beam is zero. Substituting $x = 0$ and $y = 0$ in the first of expressions (b), we find

$$C_2 = C_3 = 0. \quad (c)$$

Substituting $y = 0$ and $x = l$ in the second of expressions (b) we obtain

$$C = \frac{Pbl}{6} - \frac{Pb^3}{6l} = \frac{Pb(l^2 - b^2)}{6l}. \quad (d)$$

Substituting the values (c) and (d) of the constants into equations (b) for the deflection curve, we obtain

$$EI_z y = \frac{Pbx}{6l} (l^2 - b^2 - x^2) \quad \text{for} \quad x \leq a \quad (86)$$

and

$$EI_z y = \frac{Pbx}{6l} (l^2 - b^2 - x^2) + \frac{P(x-a)^3}{6} \quad \text{for} \quad x \geq a. \quad (87)$$

The first of these equations gives the deflections for the left portion of the beam and the second gives the deflections for the right portion.

Substituting the value (d) into equations (a) we obtain

$$\left. \begin{aligned} EI_z \frac{dy}{dx} &= \frac{Pb}{6l} (l^2 - b^2 - 3x^2) \quad \text{for} \quad x \leq a \\ EI_z \frac{dy}{dx} &= \frac{Pb}{6l} (l^2 - b^2 - 3x^2) + \frac{P(x-a)^2}{2} \quad \text{for} \quad x \geq a. \end{aligned} \right\} \quad (e)$$

From these equations the slope at any point of the deflection curve can readily be calculated. Often we need the values of the slopes at the ends of the beam. Substituting $x = 0$ in the first of equations (e), $x = l$ in the second, and denoting the slopes at the corresponding ends by θ_1 and θ_2 we obtain³

$$\theta_1 = \left(\frac{dy}{dx} \right)_{x=0} = \frac{Pb(l^2 - b^2)}{6lEI_z}, \quad (88)$$

$$\theta_2 = \left(\frac{dy}{dx} \right)_{x=l} = -\frac{Pab(l+a)}{6lEI_z}. \quad (89)$$

The maximum deflection occurs at the point where the tangent to the deflection curve is horizontal. If $a > b$ as in Fig. 116, the maximum deflection is evidently in the left portion of the beam. We can find the position of this point by equating the first of the expressions (e) to zero to obtain

$$l^2 - b^2 - 3x^2 = 0,$$

³ For flat curves, which we have in most cases, the slopes θ_1 and θ_2 can be taken numerically equal to the angles of rotation of the ends of the beam during bending, the slopes being taken positive when the rotation is clockwise.

from which

$$x = \frac{\sqrt{l^2 - b^2}}{\sqrt{3}}. \quad (f)$$

This is the distance from the left support to the point of maximum deflection. To find the maximum deflection itself we substitute expression (f) in equation (86), which gives

$$y_{\max} = \frac{Pb(l^2 - b^2)^{3/2}}{9\sqrt{3}lEI_z}. \quad (g)$$

If the load P is applied at the middle of the span the maximum deflection is evidently at the middle also. Its magnitude is obtained by substituting $b = l/2$ in equation (g), which gives

$$(y)_{x=l/2} = \frac{Pl^3}{48EI_z}. \quad (90)$$

From equation (f) it can be concluded that in the case of one concentrated force the maximum deflection is always near the middle of the beam. When $b = l/2$ it is at the middle; in the limiting case, when b is very small and P is at the support, the distance x as given by equation (f) is $l/\sqrt{3}$, and the point of maximum deflection is only a distance

$$\frac{l}{\sqrt{3}} - \frac{l}{2} = 0.077l$$

from the middle. Due to this fact the deflection at the middle is a close approximation to the maximum deflection. To obtain the deflection at the middle we substitute $x = l/2$ in equation (86), which gives

$$(y)_{x=l/2} = \frac{Pb}{48EI_z} (3l^2 - 4b^2). \quad (91)$$

The difference of the deflections (g) and (91) in the most unfavorable case, that is when b approaches zero, is only about 2.5 per cent of the maximum deflection.

Problems

1. Find the position of the load P , Fig. 116, if the ratio of the numerical values of the slopes at the ends of the beam is $|\theta_1/\theta_2| = \frac{3}{4}$.
2. Find the difference between the maximum deflection and the deflection at the middle of the beam in Fig. 116 if $b = 2a$.
3. Find the maximum deflection of the beam shown in Fig. 116 if AB is an American Standard I beam, 8 in. in depth and 5.34 sq. in. in cross-sectional area, and $a = 12$ ft., $b = 8$ ft., and $P = 2000$ lbs.
4. What will be the maximum deflection if the I beam of the previous problem is replaced by a wooden beam having a cross section 10 in. by 10 in. The modulus of elasticity for wood can be taken as $E = 1.5 \times 10^6$ lbs. per sq. in.

34. Determination of Deflections by the use of the Bending Moment Diagram; Method of Superposition.

—In the preceding articles it was shown how the deflection curve of a beam can be determined by integration of the differential equation (79). In many cases, however, especially if we need the deflection in a prescribed point rather than the general equation of the deflection curve, the calculation can be considerably simplified by the use of the bending moment diagram as will be described in the following discussion.⁴

In Fig. 117 AB represents a portion of a deflection curve and a_1b_1 the corresponding portion of the bending moment

⁴ The use of the bending moment diagram in calculating deflections of beams was developed by O. Mohr, see Zeitschr. d. Architekten und Ingenieur-Vereins zu Hannover, p. 10, 1868. See also O. Mohr, Abhandlungen aus dem Gebiete der Technischen Mechanik, p. 294, Berlin, 1906. A similar method was developed independently of O. Mohr by Prof. C. E. Green, University of Michigan, 1874.

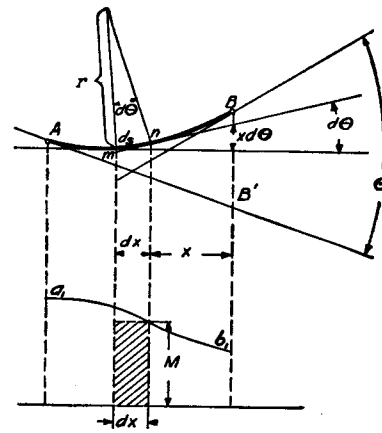


FIG. 117.

diagram. Two adjacent cross sections of the beam at distance ds apart will intersect after bending, at an angle $d\theta$, and, from eq. (56),

$$d\theta = \frac{1}{r} ds = \frac{M}{EI_z} ds.$$

For beams used in structures, the curvature is very small, and we may use dx for ds . Then

$$d\theta = \frac{1}{EI_z} (Mdx). \quad (a)$$

Graphically interpreted, this means that the elemental angle $d\theta$ between two consecutive radii or two consecutive tangents to the deflection curve equals the shaded elemental area Mdx of the bending moment diagram, divided by the flexural rigidity.⁵ This being so for each element, the angle θ between the tangents at A and B will be obtained by summarizing such elements as given by eq. (a). Then

$$\theta = \int_A^B \frac{1}{EI_z} Mdx, \quad (92)$$

that is, the angle between the tangents at two points A and B of the deflection curve equals the area of the bending moment diagram between the corresponding verticals, divided by the flexural rigidity of the beam.

Let us consider now the distance of the point B from the tangent AB' at point A . Recalling that a deflection curve is a flat curve, the above distance can be measured along the vertical BB' . The contribution made to this distance by the bending of an element mn of the beam and included between the two consecutive tangents at m and n is equal to

$$xd\theta = x \frac{Mdx}{EI_z}.$$

Interpreted graphically this is $1/EI_z$ (moment of shaded area Mdx with respect to the vertical through B). Integration

⁵ By way of dimensional check: $d\theta$ is in radians, i.e., a pure number, Mdx in inch lbs. \times inches, EI_z in lbs. per sq. in. \times (inches)⁴.

gives the total deflection BB' :

$$\overline{BB'} = \delta = \int_A^B \frac{1}{EI_z} x M dx, \quad (93)$$

that is, the distance of B from the tangent at A is equal to the moment with respect to the vertical through B of the area of the bending moment diagram between A and B , divided by the flexural rigidity EI_z . By using eqs. (92) and (93) the slope of the deflection curve and the magnitude of deflection at any cross section of the beam can easily be calculated. This method of calculating deflections is called *Area-Moment Method*.

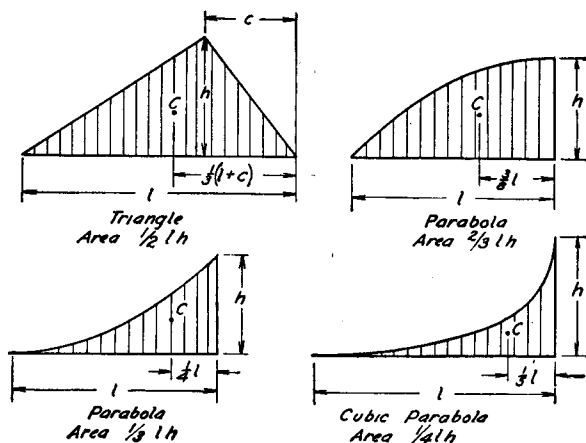


FIG. 118.

It should be noted that the deflection of a beam of a given flexural rigidity (see equation (93)) is entirely defined by the bending moment diagram. From this fact a very important conclusion can be drawn. It will be appreciated from the definition of the bending moment (art. 19) that the bending moment produced at a cross section mn of a beam by several simultaneously acting loads is equal to the sum of the moments produced at the same cross section by the individual loads acting separately. On the basis of this conclusion, together with equation (93), it can be stated that the deflection produced at a point of a beam by a system of simultane-

ously acting loads can be obtained by summing up the deflections produced at that point by the individual loads. For example, if the deflection curve produced by a single load (equations (86) and (87)) is known, the deflection produced by several loads is obtained by simple summation. This method of calculating deflections will be called *the method of superposition* in the subsequent discussion.

The calculation of the integrals in equations (92) and (93) can often be simplified by the use of known formulas concerning areas and centroids. Several formulas which are often encountered in applications are given in Fig. 118.

35. Deflection of a Cantilever Beam by the Area-Moment Method.—For the case of a cantilever beam with a concentrated load at the end (Fig. 119, *a*) the bending moment diagram is shown in Fig. 119 (*b*). Since a tangent at the built-in end A remains fixed, the distances of points of the deflection curve from this tangent are actual deflections. The angle θ_b which the tangent to the deflection curve at B makes with the tangent at A is called the *angular deflection* of B with respect to A . Then from eq. (92) ⁶

$$\theta_b = Pl \times \frac{l}{2} \times \frac{1}{EI_z} = \frac{Pl^2}{2EI_z}. \quad (94)$$

The deflection δ is calculated from eq. (93) as the moment of the area aba_1 about the vertical through b divided by EI_z . Then

$$\delta = Pl \times \frac{l}{2} \times \frac{2}{3} l \times \frac{1}{EI_z} = \frac{Pl^3}{3EI_z}. \quad (95)$$

For any cross section such as mn , the angular deflection from

⁶ The numerical value of the angular deflection is calculated. The direction of the deflection is readily seen from the loading conditions.

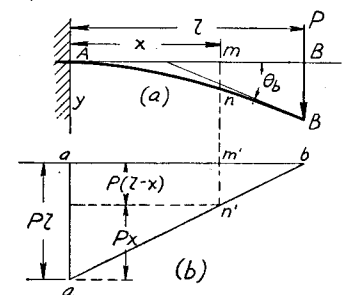


FIG. 119.

A is the area $m'n'aa_1$ of Fig. 119 (b), divided by EI_z . In the case of flat curves such as deflection curves of beams, angular deflection can be taken equal to the slope of the curve and we obtain

$$\theta = \frac{dy}{dx} = \frac{Pl^2}{2EI_z} \left[1 - \frac{(l-x)^2}{l^2} \right]. \quad (96)$$

The deflection y at the same cross section is the moment of the area $m'n'aa_1$ about $m'n'$ divided by EI_z (see eq. 93). Separating this area into the rectangle and the triangle indicated in the figure, this is

$$y = \frac{1}{EI_z} \left[P(l-x) \frac{x^2}{2} + \frac{Px^2}{2} \frac{2x}{3} \right] = \frac{P}{EI_z} \left(\frac{lx^2}{2} - \frac{x^3}{6} \right). \quad (97)$$

For a cantilever with a concentrated load P at a cross section a distance c from the support (Fig. 120, a) the bending moment diagram is shown in Fig. 120 (b). The slope and the deflection for any section to the left of the point of application of the load are determined from eqs. (96) and (97) with c in place of l . For any cross section to the right of the load the bending moment and the curvature are zero; hence this portion of the beam remains straight. The slope is constant and equal to the slope at D , i.e., from eq. (94), $Pc^2/2EI_z$. The deflection at any cross section mn is the moment of the area of the triangle aa_1d about the vertical $m'n'$ divided by EI_z , which gives

$$y = \frac{1}{EI_z} \frac{Pc^2}{2} \left(x - \frac{1}{3}c \right). \quad (98)$$

In the case of a cantilever with a uniform load of intensity q (Fig. 121, a) the bending moment at any cross section

mn distant x_1 from the built-in end is

$$M = -\frac{q(l-x_1)^2}{2}.$$

The slope at any cross section a distance x from the support is, from eq. (92),

$$\begin{aligned} \theta = \frac{dy}{dx} &= \frac{1}{EI_z} \int_0^x \frac{q(l-x_1)^2}{2} dx_1 \\ &= \frac{q}{2EI_z} \left(l^2x - lx^2 + \frac{x^3}{3} \right). \end{aligned} \quad (99)$$

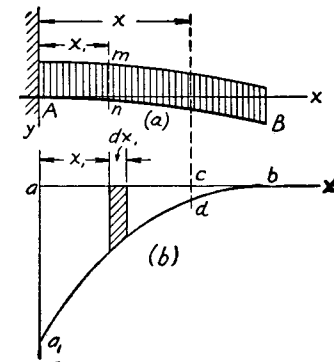


FIG. 121.

The slope at the end is obtained by substituting l for x in the above equation, giving

$$\left(\frac{dy}{dx} \right)_{x=l} = \frac{ql^3}{6EI_z}. \quad (100)$$

The deflection at any section a distance x from the built-in end is the moment of the area aa_1cd about the vertical cd divided by EI_z (Fig. 121, b). The moment of the element of this area, shown shaded, is

$$(x-x_1) \frac{q(l-x_1)^2}{2} dx_1$$

and the total moment is the integral of this with respect to x_1 from $x_1 = 0$ to $x_1 = x$. Hence

$$y = \frac{1}{EI_z} \frac{q}{2} \int_0^x (x-x_1)(l-x_1)^2 dx_1.$$

The deflection at any point a distance x from the support is then, after integration,

$$y = \frac{q}{2EI_z} \left(\frac{l^2x^2}{2} - \frac{lx^3}{3} + \frac{x^4}{12} \right). \quad (101)$$

For the deflection at the end $x = l$,

$$\delta = (y)_{x=l} = \frac{ql^4}{8EI_z}. \quad (102)$$

The same problem can be solved by using the method of superposition. The uniform load can be considered as a system of infinitesimal loads qdc as indicated by the shaded area in Fig. 122. The deflection produced at the cross section mn by each elemental load qdc to its left can be found from eq. (98) by substituting qdc for P . The deflection y_1 produced by the total load to the left of mn is the summation of the deflections produced

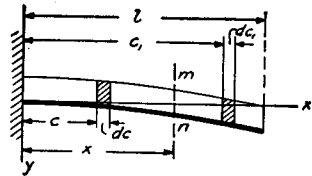


FIG. 122

by all such elemental loads with c varying from $c = 0$ to $c = x$:

$$y_1 = \frac{1}{EI_z} \int_0^x \frac{qc^2}{2} (x - \frac{1}{3}c) dc = \frac{q}{2EI_z} \frac{x^4}{4}.$$

The deflection produced at the cross section mn by an elemental load qdc_1 to its right is found from eq. (97) by substituting qdc_1 for P and c_1 for l . The deflection y_2 produced at mn by the total load to the right is the summation of the deflections due to all such elemental load, with c_1 varying from $c_1 = x$ to $c_1 = l$:

$$y_2 = \frac{1}{EI_z} \int_x^l q \left(\frac{c_1^3}{2} - \frac{x^3}{6} \right) dc_1 = \frac{q}{2EI_z} \left(-\frac{x^4}{6} + \frac{x^2 l^2}{2} - \frac{l^3 x}{3} \right).$$

Then the total deflection at the section mn is

$$y = y_1 + y_2 = \frac{q}{2EI_z} \left(\frac{l^2 x^2}{2} - \frac{l x^3}{3} + \frac{x^4}{12} \right),$$

which agrees with eq. (101) found above.

Problems

1. Determine the deflection and the slope of the cantilever beam in problem 9, p. 108.

Solution.

$$\delta = \frac{Pl^3}{3EI_z} + \frac{ql^4}{8EI_z}.$$

2. Determine the deflection of the top of the pillar represented in Fig. 94.

Solution. The bending moment at any cross section mn , a distance x from the top, is

$$M = -\frac{Wx^3}{3l^2},$$

where $W = \frac{1}{2}dl^2 \times 62.4$ lbs. is the total hydrostatic pressure transmitted to one pillar. Using eq. (93), the deflection of the top of the pillar is

$$\delta = \frac{W}{EI_z} \int_0^l \frac{x^4 dx}{3l^2} = \frac{Wl^3}{15EI_z} = \frac{3 \times 6^2 \times 62.4 \times 6^3 \times 12^3 \times 12}{2 \times 15 \times 1.5 \times 10^6 \times 9.9^4} = 0.070 \text{ in.}$$

3. Determine the deflection and the slope at the end of a cantilever bent by a couple M (Fig. 123).

Answer.

$$(y)_{x=l} = -\frac{Ml^2}{2EI_z}; \quad \left(\frac{dy}{dx} \right)_{x=l} = -\frac{Ml}{EI_z}.$$

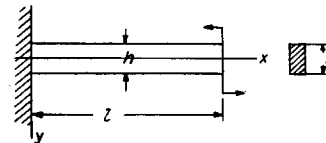


FIG. 123.

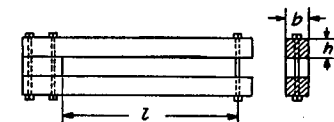


FIG. 124.

4. Two wooden rectangular beams clamped at the left end (Fig. 124) are bent by tightening the bolt at the right end. Determine the diameter d of the bolt to make the factors of safety for the wooden beams and for the steel bolt the same. The length of the beams $l = 3$ feet, the depth $h = 8$ in., the width $b = 6$ in., working stress for steel $\sigma_w = 12,000$ lbs. per sq. in., for wood $\sigma_w = 1,200$ lbs. per sq. in. Determine the deflection of the beams when the tensile stress in the bolt is 12,000 lbs. per sq. in.

Solution. If P is the force in the bolt, the equation for determining the diameter d will be

$$\frac{4P}{\pi d^2} : \frac{6Pl}{bh^2} = \frac{12,000}{1,200} = 10,$$

from which

$$d = 0.476 \text{ in.} \quad \text{and} \quad P = 12,000 \times \frac{\pi d^2}{4} = 2,130 \text{ lbs.}$$

Then from eq. (95), by taking $E = 1.5 \times 10^6$ lbs. per sq. in. the deflection $\delta = 0.0864$ in.

5. What is the ratio of the deflections at the ends of the cantilevers shown in Fig. 125 if the intensity of uniform load is the same in both cases?

Answer. 7 : 41.

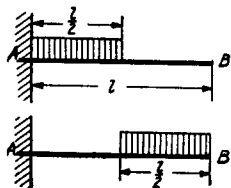


FIG. 125.




FIG. 126.

6. What must be the equation of the axis of the curved bar AB before it is bent if the load P , moving along the bar, remains always on the same level (Fig. 126)?

Answer.

$$y = -\frac{Px^3}{3EI_z}$$

7. Determine the safe deflection of the beam shown in Fig. 123 when the working stress σ_w is given. Determine this also for a cantilever loaded at the end (Fig. 119).

Answer.




FIG. 127.

8. A circular disc N of radius R (Fig. 127) produces on a thin steel strip of thickness h an attraction of q lbs. per sq. in. uniformly distributed. Determine the length l of the unsupported part AC of the strip and the maximum stress in it if $h = 0.01$ inch, $R = 3$ in., and $q = 15$ lbs. per sq. in.

Solution. The length of the unsupported part of the strip can be determined from the condition that at the point C the curvature produced by the uniformly distributed load q must be equal to

$1/R$. Therefore

$$\frac{ql^2}{2} = \frac{EI_z}{R},$$

from which

$$l = \sqrt{\frac{2EI_z}{qR}} = 1/3 \text{ in.}$$

The maximum stress is determined from the equation $\sigma_{\max} = Eh/2R = 50,000$ lbs. per sq. in.

9. Determine the deflections of the cantilever beams shown in Fig. 68, assuming that the material is steel, the depth of each beam is 10 in., and the maximum bending stress is 16,000 lbs. per sq. in.

36. Deflection of a Simply Supported Beam by the Area-Moment Method.—Let us consider the case of a simply supported beam with a load P applied at point F , Fig. 128. The bending moment diagram is the triangle $a_1b_1f_1$.

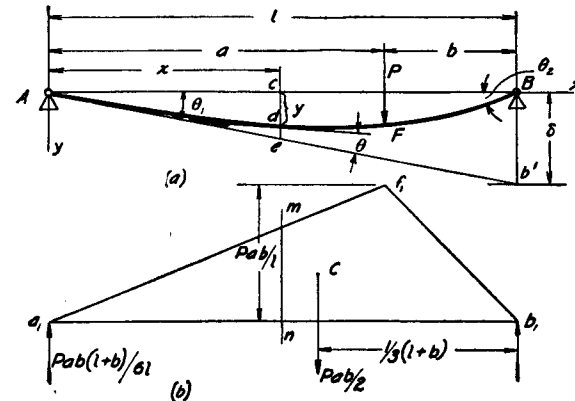


FIG. 128.

Its area is $Pab/2$, and its centroid C is at distance $(l+b)/3$ from the vertical Bb_1 . The distance δ from the end B to the line Ab' which is tangent to the deflection curve at A is obtained from equation (93) and is

$$\delta = \frac{1}{EI_z} \frac{Pab}{2} \times \frac{l+b}{3} = \frac{Pab(l+b)}{6EI_z}.$$

By using this value the slope θ_1 at the left end of the beam is found to be

$$\theta_1 = \frac{\delta}{l} = \frac{Pab(l+b)}{6lEI_z}, \quad (a)$$

which coincides with previously obtained formula (88).⁷ A simple interpretation of the formula (a) is obtained if we consider a_1b_1 as a simply supported beam, carrying the triangular load represented by the triangle $a_1f_1b_1$. The reaction at the left support a_1 of this imaginary beam is evidently

$$R = \frac{Pab}{2} \times \frac{l+b}{3} \times \frac{1}{l} = \frac{Pab(l+b)}{6l}.$$

By comparing this with formula (a), it can be concluded that the slope θ_1 is equal to the reaction at the corresponding support of the imaginary beam divided by the flexural rigidity of the real beam. The slope θ_2 at the right end of the beam can be obtained in a similar way; to get the correct sign for θ_2 the reaction at the right end must be taken with minus sign, which represents the shearing force at the right end of the imaginary beam. The imaginary beam a_1b_1 which carries the fictitious load represented by the area of the bending moment diagram is called a *conjugate beam*. It can thus be concluded that the numerical values of the slopes at the ends of a simply supported beam can be obtained by dividing the reactions at the ends of the conjugate beam by the flexural rigidity EI_z . This conclusion, which was derived for the case of a single load, holds for any transverse loading, since, as has been shown (p. 146) the moments and the deflections in the case of several loads can be obtained by the superposition of the moments and deflections due to single loads.

To calculate the slope at any point d of the deflection curve, Fig. 128, it is necessary to subtract the angle θ between the tangents at A and at d from the angle θ_1 at the support. Using equation (92) for the calculation of the angle θ , we obtain

⁷ Note that $a = l - b$.

$$\frac{dy}{dx} = \theta_1 - \theta = \frac{1}{EI_z} (R - \Delta a_1mn).$$

The first term in the parenthesis is the reaction at the left support of the conjugate beam a_1b_1 and the second is the load on the conjugate beam to the left of the cross section mn . The expression in the parenthesis therefore represents the shearing force at the cross section mn of the conjugate beam. Consequently the slope of the actual beam at a point d can be obtained by dividing the shearing force at the corresponding cross section of the conjugate beam by the flexural rigidity EI_z .

Considering next the deflection y at a point d , it may be seen from Fig. 128 that

$$y = \overline{ce} - \overline{de}. \quad (b)$$

From the triangle Ace we obtain the relation

$$\overline{ce} = \theta_1 x = \frac{Rx}{EI_z} \quad (c)$$

where R is the reaction at the left support of the conjugate beam. The second term on the right side of equation (b) represents the distance of the point d of the deflection curve from the tangent Ae and is obtained from equation (93) as

$$\overline{de} = \frac{1}{EI_z} \text{area } \Delta a_1mn \times \frac{x}{3}. \quad (d)$$

Substituting expressions (c) and (d) in equation (b), we obtain

$$y = \frac{1}{EI_z} \left(Rx - \Delta a_1mn \times \frac{x}{3} \right). \quad (e)$$

The expression in parenthesis is seen to be the bending moment at the cross section mn of the conjugate beam. Thus the deflection at any point of a simply supported beam is obtained by dividing the bending moment at the corresponding cross section of the conjugate beam by the flexural rigidity EI_z . Substituting the actual value of R in equation (e) and noting that

$$\text{area } \triangle a_1mn = \frac{Pbx^2}{2l},$$

we obtain

$$y = \frac{1}{EI_z} \left[\frac{Pabx(l+b)}{6l} - \frac{Pbx^3}{6l} \right] = \frac{Pbx}{6lEI_z} (l^2 - b^2 - x^2).$$

This checks with equation (86), which was previously obtained by integration of the differential equation of the deflection curve. The deflection for a point to the right of the load P can be calculated in a similar manner. The result will, of course, be the same as equation (87).

Having the deflection curve produced by a single load P , the deflection curve produced by any system of transverse concentrated loads can readily be obtained by employing the method of superposition. It is simply necessary to use equations (86) and (87) for each individual load.

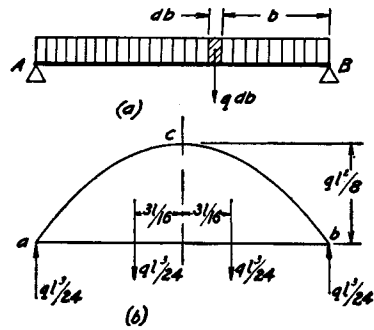


FIG. 129.

ment of load qdb shown in the Fig. 129 is

$$d\theta_1 = \frac{qabdb(l+b)}{6lEI_z} = \frac{qb(l^2 - b^2)db}{6lEI_z}.$$

The slope θ_1 produced by the total load is then the summation of the increments of slope produced by all the elements qdb from $b = 0$ to $b = l$. Thus

$$\theta_1 = \int_0^l \frac{qb(l^2 - b^2)db}{6lEI_z} = \frac{ql^3}{24EI_z}. \quad (f)$$

The deflection at the middle is obtained from equation (91), which was derived on the assumption that the load is to the right of the middle. Any element of load qdb to the right of the middle produces at the middle a deflection

$$(dy)_{x=l/2} = \frac{qbdb}{48EI_z} (3l^2 - 4b^2).$$

Summing up the deflections produced by all such elements of load to the right of the middle, and noting that the load on the left half of the beam produces the same deflection at the middle as the load on the right half, we obtain for the total deflection

$$\delta = (y)_{x=l/2} = 2 \int_0^{l/2} \frac{qbdb}{48EI_z} (3l^2 - 4b^2) = \frac{5}{384} \frac{ql^4}{EI_z}. \quad (g)$$

The results (f) and (g) coincide with formulas (83) and (82) previously obtained by integration of the differential equation of the deflection curve.

The same results are readily obtained by considering the conjugate beam ab , Fig. 129b, loaded by the parabolic segment acb , which is the bending moment diagram in this case. The total fictitious load on the conjugate beam is

$$\frac{2}{3} \times \frac{ql^2}{8} \times l,$$

and each reaction is equal to $ql^3/24$. The slope (f) is then obtained by dividing this reaction by EI_z . To calculate the deflection at the middle we find the bending moment at the middle \bar{d} of the conjugate beam, which is

$$\frac{ql^3}{24} \left(\frac{l}{2} - \frac{3l}{16} \right) = \frac{5ql^4}{384}.$$

The deflection (g) is then obtained by dividing this moment by EI_z .

The method of superposition is especially useful if the distributed load covers only a part of the span as in Fig. 130. Using the expression developed above for



FIG. 130.

$(dy)_{x=l/2}$, the deflection produced at the middle by the load to the right of the middle is

$$\delta_1 = \int_a^{l/2} \frac{q b d b}{48 E I_z} (3l^2 - 4b^2).$$

The load to the left of the middle produces the deflection

$$\delta_2 = \int_c^{l/2} \frac{q b d b}{48 E I_z} (3l^2 - 4b^2).$$

The total deflection at the middle is therefore

$$\delta = \delta_1 + \delta_2 = \int_a^{l/2} \frac{q b d b}{48 E I_z} (3l^2 - 4b^2) + \int_c^{l/2} \frac{q b d b}{48 E I_z} (3l^2 - 4b^2).$$

In the case of a simply supported beam AB with a couple M acting at the end, Fig.

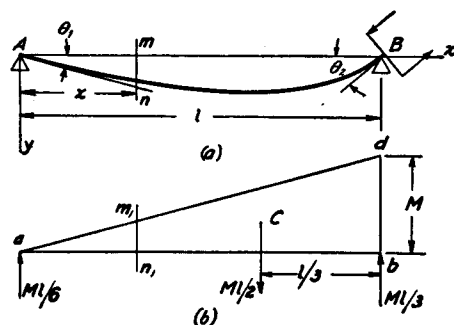


FIG. 131.

131, the bending moment diagram is a triangle abd , as shown in Fig. 131b. Considering ab as the conjugate beam, the total fictitious load is $Ml/2$. The reactions at the ends of the conjugate beam are thus $Ml/6$ and $Ml/3$. Hence the numerical values of the slopes

at the ends of the actual beam are

$$\theta_1 = \frac{Ml}{6EI_z} \quad (103)$$

and

$$\theta_2 = \frac{Ml}{3EI_z}. \quad (104)$$

The sign of the slope at the right end is of course negative. The deflection at a cross section mn of the beam is obtained by dividing the bending moment at the corresponding cross section m_1n_1 of the conjugate beam by EI_z , which gives

$$y = \frac{1}{EI_z} \left(\frac{Ml}{6} x - \frac{Ml}{2} \cdot \frac{x^2}{l^2} \cdot \frac{x}{3} \right) = \frac{Mlx}{6EI_z} \left(1 - \frac{x^2}{l^2} \right). \quad (105)$$

Problems

1. Determine the angles at the ends and the deflection under the loads and at the middle of the beam shown in Fig. 132.

Solution. The conjugate beam will be loaded by the trapezoid $adeb$, the area of which is $Pc(l-c)$. The angles at the ends are

$$\theta_1 = \theta_2 = \frac{1}{EI_z} \frac{Pc(l-c)}{2}$$

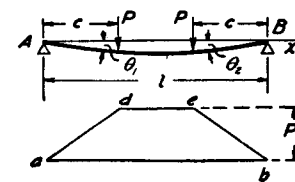


FIG. 132.

The deflection under the loads is

$$(y)_{x=c} = \frac{1}{EI_z} \left[\frac{Pc^2(l-c)}{2} - \frac{Pc^2}{2} \cdot \frac{c}{3} \right] = \frac{Pc^2}{EI_z} \left(\frac{l}{2} - \frac{2}{3}c \right).$$

The deflection at the middle, from eq. (91), is

$$(y)_{x=l/2} = \frac{Pc}{24EI_z} (3l^2 - 4c^2).$$

2. Determine the slope at the ends of the beam shown in Fig. 88.

Answer.

$$\left(\frac{dy}{dx} \right)_{x=0} = \frac{7}{180} \frac{Wl^2}{EI_z}; \quad \left(\frac{dy}{dx} \right)_{x=l} = -\frac{8}{180} \frac{Wl^2}{EI_z}.$$

3. Determine the deflection at the middle of the beam AB , shown in Fig. 133, when $I_z = 91.4 \text{ in.}^4$, $q = 500 \text{ lbs. per foot}$, $l = 24 \text{ feet}$, $a = 12 \text{ feet}$, $b = 8 \text{ feet}$. $E = 30 \times 10^6 \text{ lbs. per sq. in.}$




FIG. 133.

Solution. Due to the fact that $a = l/2$ the deflection produced at the middle by the load acting on the left half of the beam, from eq. (82), is

$$(y_1)_{x=l/2} = \frac{1}{2} \frac{5}{384} \frac{q l^4}{EI_z}.$$

The deflection produced at the middle by the load on the right

half of the beam is

$$(y_2)_{x=l/2} = \int_0^b \frac{qcdc}{48EI_z} (3l^2 - 4c^2) = \frac{25}{48 \times 162} \times \frac{ql^4}{EI_z}.$$

The total deflection is

$$(y)_{x=l/2} = (y_1)_{x=l/2} + (y_2)_{x=l/2} = \left(\frac{1}{2} \frac{5}{384} + \frac{25}{48 \times 162} \right) \frac{ql^4}{EI_z} = 1.02 \text{ in.}$$

4. Determine the deflection at the middle of the beam shown in Fig. 91 when the load is in a position to produce the maximum bending moment.

Suggestion. The deflection can be obtained by using eq. (91) together with the method of superposition and substituting $b = l/2 - d/4$ in this equation for one load and $b = l/2 - \frac{3}{4}d$ for the other.

5. Determine the deflections at the middle and the angles of

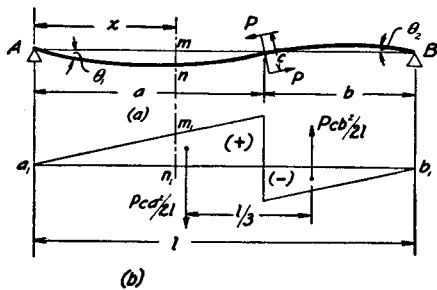


FIG. 134.

Solution. The loading of the conjugate beam is indicated in Fig. 134 (b). The reactions at a_1 and b_1 are

$$R_a = \frac{1}{l} \left[\frac{Pca^2}{2l} \left(b + \frac{a}{3} \right) - \frac{Pcb^2}{2l} \cdot \frac{2}{3} b \right];$$

$$R_b = \frac{1}{l} \left[\frac{Pca^2}{2l} \frac{2a}{3} - \frac{Pcb^2}{2l} \left(a + \frac{b}{3} \right) \right].$$

Therefore

$$\theta_1 = \frac{Pc}{2l^2EI_z} \left[a^2 \left(b + \frac{a}{3} \right) - \frac{2}{3} b^3 \right] = \frac{Pc}{2lEI_z} \left(\frac{l^2}{3} - b^2 \right);$$

$$\theta_2 = -\frac{Pc}{2l^2EI_z} \left[\frac{2}{3} a^3 - b^2 \left(a + \frac{b}{3} \right) \right] = \frac{Pc}{2lEI_z} \left(\frac{l^2}{3} - a^2 \right).$$

rotation of the ends of the beams shown in Figs. 67 (b) and 67 (e). Assume in these calculations a standard I beam of 8 in. depth and 5.97 sq. in. area, $E = 30 \times 10^6$ lbs. per sq. in.

6. Determine the angles θ_1 and θ_2 and the deflection at any cross section mn of a beam simply supported at the ends and bent by a couple Pc (Fig. 134).

If $a = b = l/2$, we obtain

$$\theta_1 = \theta_2 = \frac{Pcl}{24EI_z}.$$

If $a > l/\sqrt{3}$ the angle θ_2 changes its sign. The bending moment at the cross section m_1n_1 of the conjugate beam is

$$A_1x - \frac{Pca^2}{2l} \frac{x^2}{2} = \frac{Pcx}{2l^2} \left[a^2 \left(b + \frac{a}{3} \right) - \frac{2}{3} b^3 \right] - \frac{Pcx^3}{6l}.$$

Therefore the deflection curve for the left part of the actual beam is

$$y = \frac{Pcx}{2l^2EI_z} \left[a^2 \left(b + \frac{a}{3} \right) - \frac{2}{3} b^3 \right] - \frac{Pcx^3}{6lEI_z}.$$

7. A beam with supported ends is bent by two couples M_1 and M_2 , applied at the ends (Fig. 135). Determine the angles of rotation of the ends and the position of the cross section in which the deflection is a maximum.




FIG. 135.

Solution. The absolute values of the angles are

$$\theta_1 = \frac{M_1l}{3EI_z} + \frac{M_2l}{6EI_z}; \quad \theta_2 = \frac{M_2l}{3EI_z} + \frac{M_1l}{6EI_z}.$$

The deflection curve, by using eq. (105), is

$$y = \frac{M_1l(l-x)}{6EI_z} \left[1 - \left(\frac{l-x}{l} \right)^2 \right] + \frac{M_2lx}{6EI_z} \left(1 - \frac{x^2}{l^2} \right).$$

The position of maximum deflection can be found from this equation by equating the first derivative to zero.

8. A beam is bent by two couples as shown in Fig. 136. Determine the ratio $M_1 : M_2$ if the point of inflection is at a distance $l/3$ from the left support.




FIG. 136.

Answer. $M_2 = 2M_1$.

9. Two planks of different thicknesses h_1 and h_2 , resting one on the other, support a uniformly distributed load as shown in Fig. 137. Determine the ratio of the maximum stresses occurring in each.

Solution. Both planks have the same deflection curves and curvature; hence their bending moments are in the same ratio as the moments of inertia of their cross sections, i.e., in the ratio $h_1^3 : h_2^3$. The section moduli are in the ratio $h_1^2 : h_2^2$; hence the maximum stresses are in the ratio $h_1 : h_2$.




FIG. 137.




FIG. 138.

10. A steel bar AB has such an initial curvature that after being straightened by the forces P (Fig. 138) it produces a uniformly distributed pressure along the length of the rigid plane surface MN . Determine the forces P necessary to straighten the bar and the maximum stress produced in it if $l = 20$ in., $\delta = 0.1$ in., and the cross section of the bar is a square having 1 in. sides.

Solution. To obtain a uniformly distributed pressure, the initial curvature of the bar must be the same as the deflection curve of a simply supported beam carrying a uniformly distributed load of intensity $2P/l$. Then we obtain

$$M_{\max} = \frac{2Pl^2}{l^3} = \frac{Pl}{4}, \quad (a)$$

$$\delta = \frac{5}{384} \times \frac{2P}{l} \times \frac{l^4}{EI_z}. \quad (b)$$

The maximum stress will be

$$\sigma_{\max} = \frac{M_{\max}}{Z} = \frac{Plh}{8I_z}. \quad (c)$$

Now from (b) and (c)

$$\sigma_{\max} = \frac{24E\delta h}{5l^2} = \frac{24 \times 30 \times 10^6 \times 0.1 \times 1}{5 \times 20^2} = 36,000 \text{ lbs. per sq. in.}$$

and from (c)

$$P = 1,200 \text{ lbs.}$$

37. Deflection of Beams with Overhangs.—A beam with an overhang can be divided into two parts: the one between the supports which is to be treated as a beam with supported ends and the overhang which is to be treated as a cantilever. As an

illustration, we consider the bending of a beam with an overhang under the action of a uniformly distributed load q (Fig. 139). The beam is divided into the parts AB and BC and the action of the overhang on the portion of the beam between the supports is replaced by a shearing force qa and a couple $M = qa^2/2$. We find that the shearing force is directly transmitted to the support

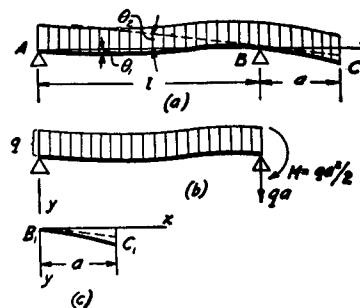


FIG. 139.

and that only the couple $qa^2/2$ need be considered. Then the deflection at any cross section between the supports is obtained by subtracting the deflection produced by the couple $qa^2/2$ from the deflections produced by the uniform load q (Fig. 139, b). Using eqs. (81) and (105), we obtain

$$y = \frac{q}{24EI_z} (l^3x - 2lx^3 + x^4) - \frac{qa^2lx}{12EI_z} \left(1 - \frac{x^2}{l^2} \right).$$

The angle of rotation of the cross section at B is obtained by using eqs. (83) and (104), from which, by considering rotation positive when in the clockwise direction, we have

$$\theta_2 = \frac{qa^2l}{6EI_z} - \frac{ql^3}{24EI_z}.$$

The deflection at any cross section of the overhang (Fig. 139, c) is now obtained by superposing the deflection of a cantilever (eq. 101) on the deflection

$$\theta_2x = \left(\frac{qa^2l}{6EI_z} - \frac{ql^3}{24EI_z} \right) x$$

due to the rotation of the cross section B .

Problems

1. Determine the deflection and the slope at the end C of the beam shown in Fig. 141a.

Answer. Deflection = $\frac{Pa^2(l+a)}{3EI_z}$; Slope = $\frac{Pa(2l+3a)}{6EI_z}$.

2. For the beam shown in Fig. 140 determine the deflection at the end C and also that at the midpoint between the supports.

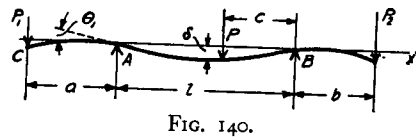


FIG. 140.

Solution. That part of the beam between the supports will be in the condition of a beam loaded by the force P and by the couples P_1a and P_2b at the supports. By using

eqs. (91) and (105), pp. 143, 159, and the method of superposition, the deflection at the middle is

$$\delta = \frac{Pc}{48EI_z} (3l^2 - 4c^2) - \frac{P_1al^2}{16EI_z} - \frac{P_2bl^2}{16EI_z}.$$

The angle θ_1 at the support A is obtained from eqs. (88), (103) and (104) on pp. 142, 158,

$$\theta_1 = \frac{Pc(l^2 - c^2)}{6EI_z} - \frac{P_1al}{3EI_z} - \frac{P_2bl}{6EI_z}.$$

From eq. (95) the deflection at the end C is

$$\frac{P_1a^3}{3EI_z} - a\theta_1.$$

3. A beam with an overhang is bent in one case by the force P at the end (Fig. 141, a), and in another case by the same force applied at the middle of the span (Fig. 141, b). Prove that the deflection at the point D in the first case is equal to the deflection at the end C in the second case.

Answer. In each case the deflection is

$$\frac{P^2a}{16EI_z}.$$

4. A beam of length l with two equal overhangs is loaded by two equal forces P at the ends (Fig. 142). Determine the ratio x/l

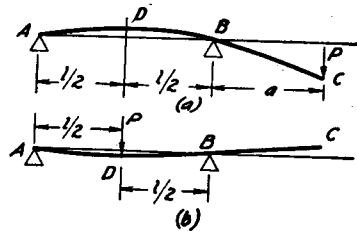


FIG. 141.

at which (1) the deflection at the middle is equal to the deflection at either end, (2) the deflection at the middle has its maximum value.

Answer. (1) $x = 0.152l$; (2) $x = l/6$.




FIG. 142.




FIG. 143.

5. A wooden beam of circular cross section supported at C , with the end attached at A , carries a uniformly distributed load q on the overhang CD (Fig. 143). Determine the diameter of the cross section and the deflection at D if $l = 3$ feet, $a = 6$ feet, $q = 300$ lbs. per foot, $\sigma_w = 1,200$ lbs. per sq. in.

Solution. The diameter d is found from equation

$$\frac{qa^2}{2} : \frac{\pi d^3}{32} = \sigma_w.$$

Then the deflection at the end D is

$$\delta = \frac{qa^4}{8EI_z} + \frac{qa^3l}{6EI_z}.$$

6. A beam of length l carries a uniformly distributed load of intensity q (Fig. 144). Determine the length of overhangs to make the numerical maximum value of the bending moment as small as possible. Determine the deflection at the middle for this condition.




FIG. 144.

Solution. Making the numerical values of the bending moments at the middle and at the supports equal we obtain

$$x = 0.207l.$$

The deflection at the middle is determined from the equation

$$\delta = \frac{5}{384} \cdot \frac{q(l-2x)^4}{EI_z} - \frac{qx^2(l-2x)^2}{16EI_z},$$

in which the first term on the right side represents the deflection produced by the load between the support (eq. 82) and the second, the deflection produced by the load on the overhangs (eq. 105).

7. Determine the deflections at the ends of the overhangs for the beams represented in Fig. 74 a , b , c . Assume a standard I beam of 8 in. depth and 5.97 sq. in. area. $E = 30 \times 10^6$ lbs. per sq. in.

38. The Deflection of Beams When the Loads Are Not Parallel to One of the Two Principal Planes of Bending.—

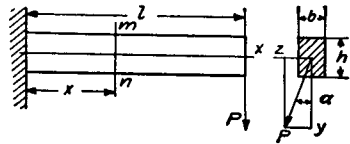


FIG. 145.

Let us consider first a simple example of a cantilever, whose cross section has two axes of symmetry (Fig. 145). The load P at the end is perpendicular to the axis of the beam and makes an angle α with the principal axis y of the cross section. In calculating the stresses and deflections of the beam the method of superposition will be used. The load P will be resolved into two components $P \cos \alpha$ and $P \sin \alpha$ in the directions of the two principal axes of the cross section. The deflection produced by each of these components can easily be obtained by using the theory of bending in the plane of symmetry. Then the resultant deflection is obtained by superposition. The absolute values of the two components of the bending moment at any cross section mn of the cantilever are $M_z = P \cos \alpha(l - x)$ about the z axis, and $M_y = P \sin \alpha(l - x)$ about the y axis. From the directions of the two components and of the axes y and z , it will be seen that the moment M_z produces compression in points with a positive y and M_y produces compression in points with a positive z . Then the normal stress σ_x at any point of the cross section (y, z) is obtained by adding together the stresses produced by M_z and M_y separately. We thus arrive at the equation:

$$\sigma_x = -\frac{P \cos \alpha(l - x)y}{I_z} - \frac{P \sin \alpha(l - x)z}{I_y}$$

$$= -P(l - x) \left[\frac{y \cos \alpha}{I_z} + \frac{z \sin \alpha}{I_y} \right]. \quad (a)$$

The neutral axis is found by taking points with such coordinates that the expression in brackets in eq. (a) equals zero. The equation of the neutral axis is therefore

$$\frac{y \cos \alpha}{I_z} + \frac{z \sin \alpha}{I_y} = 0. \quad (b)$$

This is an axis through the centroid of the cross section making an angle β with the z axis (see Fig. 146) such that, from eq. (b),

$$\tan \beta = -\frac{y}{z} = \tan \alpha \frac{I_z}{I_y}. \quad (c)$$

It will be seen that, in general, $\tan \beta$ is not equal to $\tan \alpha$; hence the neutral axis nn is not perpendicular to the plane of the bending forces and the plane of the deflection curve, which is perpendicular to nn , does not coincide with the plane of the bending forces. These two planes coincide only when $\tan \alpha$

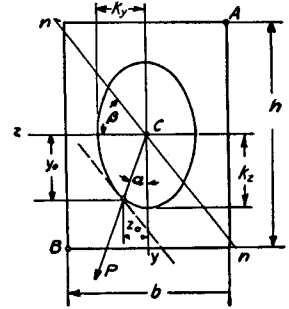


FIG. 146.

$= 0$ or ∞ or $I_z = I_y$. In the first two cases the plane of the bending forces coincides with one of the principal planes of bending. In the last case the ellipse of inertia becomes a circle since the two principal moments of inertia are equal and any two perpendicular directions may be taken as the two principal axes of the cross section. When I_z/I_y is a large number, i.e., when the rigidity of the beam in the xy plane is much larger than that in the xz plane, $\tan \beta$ becomes large in comparison with $\tan \alpha$ and when angle α is small, angle β will approach 90° and the neutral axis will approach the vertical axis. The deflection will be principally in the xz plane, i.e., there is a tendency to deflect in the plane of greatest flexibility. This can be demonstrated in a very simple manner on a thin rule. The slightest deviation of the bending force from the plane of greatest rigidity results in a bending in the perpendicular direction. This can be shown also by resolving the force P (Fig. 145) into two components and calculating deflections produced by each component. If the flexural rigidity of the cantilever in the horizontal plane is very small in comparison with the rigidity in vertical plane, a small horizontal component may produce a much greater horizontal deflection than the deflection in the vertical plane; hence the resultant deflection will be principally in the plane of

greatest flexibility. It is interesting to note that the neutral axis nn is parallel to the tangent drawn to the ellipse of inertia at the point of intersection of this ellipse with the direction of the force P . This can be proved as follows. The equation of the ellipse is

$$\frac{y^2}{k_z^2} + \frac{z^2}{k_y^2} = 1$$

and the equation of the tangent at the point with the coordinates y_0 and z_0 (Fig. 146) is

$$\frac{yy_0}{k_z^2} + \frac{zz_0}{k_y^2} = 1.$$

The tangent of the angle between the z axis and this tangent will be

$$\frac{z_0}{y_0} \cdot \frac{k_z^2}{k_y^2} = \tan \alpha \frac{I_z}{I_y} = \tan \beta.$$

When the direction of the neutral axis is determined the points of maximum normal stress will be those most distant from it. In our case the maximum tension will be at point A and maximum compression at point B . Substituting in eq. (a) $x = 0$; $y = -(h/2)$; $z = -(b/2)$, we obtain

$$(\sigma_x)_{\max} = Pl \left(\frac{h \cos \alpha}{2I_z} + \frac{b \sin \alpha}{2I_y} \right). \quad (d)$$

The compressive stresses at the point B will have the same magnitude. The method developed above for the case of a cantilever with two planes of symmetry and loaded at the end can be applied also to beams supported at the ends and loaded by several loads. Resolving each force into two components parallel to the two axes of symmetry of the cross section, the problem is reduced to two simple problems of bending of a beam in the two principal planes. The resultant deflections will be obtained by superposing the two deflections in the principal planes.

Problems

1. A cantilever beam of Z section is loaded at the end by a vertical load $P = 400$ lbs. (Fig. 147). Determine the maximum normal stress σ_x and the vertical and horizontal components of the deflection at the end. The dimensions are as indicated in the figure. $\alpha = 17^\circ 20'$, principal moments of inertia

$$I_{z_1} = 60.3 \text{ in.}^4; \quad I_{y_1} = 3.54 \text{ in.}^4$$

Answer. $(\sigma_x)_{\max} = 6,420$ lbs. per sq. in. at B ; $\delta_{\text{vert.}} = 0.178$ in.; $\delta_{\text{horiz.}} = 0.336$ in.

2. A cantilever of rectangular cross section is bent by a force P at the end. What curve will be described by the loaded end, when the angle α (Fig. 145) varies from 0 to 2π ?

Answer. The curve will be an ellipse with the semi axes

$$\frac{Pl^3}{3EI_z} \quad \text{and} \quad \frac{Pl^3}{3EI_y}.$$

3. A wooden beam of rectangular cross section carries a uniformly distributed load of intensity q and is supported at the ends in the position shown in Fig. 148. Determine the maximum normal stress and the vertical deflection at the middle if the length of the beam $l = 10$ feet, $q = 200$ lbs. per foot, $h = 8$ in., $b = 6$ in., $\tan \alpha = 1/3$.

Solution. The maximum bending moment will be at the middle

$$M_{\max} = \frac{ql^2}{8} = \frac{200 \times 10^2}{8} = 2,500 \text{ lbs. feet} = 30,000 \text{ lbs. ins.}$$

The components of the bending moment in the principal planes are $M_z = M_{\max} \cos \alpha = 30,000 \times 0.949 = 28,500$ lbs. ins. and $M_y = M_{\max} \sin \alpha = 30,000 \times 0.316 = 9,480$ lbs. in. The maximum stress at the point B is

$$(\sigma_x)_{\max} = \frac{6 \times 28,500}{bh^2} + \frac{6 \times 9,480}{hb^2} = 643 \text{ lbs. per sq. in.}$$

The deflections at the middle in the two principal planes are

$$\delta_y = \frac{5}{384} \frac{q l^4 \cos \alpha}{EI_z} \quad \text{and} \quad \delta_z = \frac{5}{384} \frac{q l^4 \sin \alpha}{EI_y}.$$

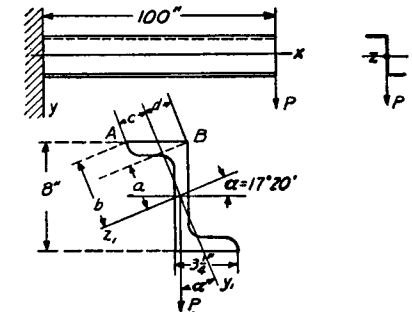


FIG. 147.

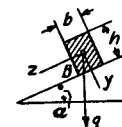


FIG. 148.

The vertical deflection at the middle is

$$\delta = \delta_y \cos \alpha + \delta_z \sin \alpha = \frac{5}{384} \frac{ql^4}{EI_z} \left(\cos^2 \alpha + \frac{I_z}{I_y} \sin^2 \alpha \right) \\ = 0.117 \text{ in.} \times 1.08 = .126 \text{ in.}$$

4. Solve the above problem if the distance between the supports is 6 feet and the beam has two equal overhangs each 2 feet long.

39. Effect of Shearing Force on the Deflection of Beams.—In the previous discussion (see p. 134) only the action of the bending moment in causing deflection was considered. An additional deflection will be produced by the shearing force, in the form of a mutual sliding of adjacent cross sections along each other. As a result of the non-uniform distribution of the shearing stresses, the cross sections, previously plane, become curved as in Fig. 149, which shows the bending due to shear alone.⁸ The elements of the cross sections at the centroids remain vertical and slide along one another; therefore the slope of the deflection

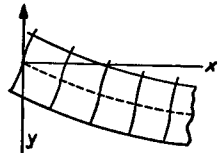


FIG. 149.

curve, due to the shear alone, is equal at each cross section to the shearing strain at the centroid of this cross section. Denoting by y_1 the deflections due to shear, we obtain for any cross section the following expression for the slope:

$$\frac{dy_1}{dx} = \frac{(\tau_{yx})_{y=0}}{G} = \frac{\alpha V}{AG}, \quad (a)$$

in which V/A is the average shearing stress τ_{yx} , G is the modulus in shear and α is a numerical factor with which the average shearing stress must be multiplied in order to obtain the shearing stress at the centroid of the cross sections. For a rectangular cross-section $\alpha = 3/2$ (see eq. 66, p. 114); for a circular cross-section $\alpha = 4/3$ (see eq. 68, p. 118). With a continuous load on the beam, the shearing force V is a continuous function which may be differentiated with respect to x . The curvature caused by the shear alone is then

$$\frac{d^2 y_1}{dx^2} = \frac{\alpha}{AG} \frac{dV}{dx} = -\frac{\alpha}{AG} q.$$

⁸ The deformation produced by the bending moment and consisting of a mutual rotation of adjacent cross sections is removed.

The sum of this and the curvature produced by the bending moment (see eq. 79) gives

$$\frac{d^2 y}{dx^2} = -\frac{1}{EI_z} \left(M + \frac{\alpha EI_z}{AG} q \right). \quad (106)$$

This equation must be used instead of eq. (79) to determine deflections in all cases in which the effect of the shearing force should be taken into consideration.⁹ Knowing M and q as functions of x , eq. (106) can be easily integrated in the same manner as has been shown in article 32.

The conjugate beam method (see p. 154) may also be applied to good advantage in this case by taking as ordinates of the imaginary load diagram

$$M + \alpha \frac{EI_z}{AG} q, \quad (b)$$

instead of only M .

Let us consider, for example, the case of a simply supported beam with a uniform load (Fig. 150). The bending moment at any section x is

$$M = \frac{ql}{2} x - \frac{qx^2}{2}. \quad (c)$$

The load on the conjugate beam consists of two parts: (1) that represented by the first term of (b) and given by the parabolic bending moment diagram (Fig. 150, b) and (2) that represented by the second term of (b), which is $\alpha(EI_z/AG)q$. Since q is constant, the second term is a uniformly distributed load shown in Fig. 150 (c).

The additional deflection at any section due to the shearing force is the bending moment produced at this section of the conjugate beam by such a load, divided by EI_z . At the middle of the beam the additional deflection is consequently

$$\delta_1 = \frac{1}{EI_z} \left(\alpha \frac{EI_z}{AG} q \right) \frac{l^2}{8} = \frac{\alpha l^2 q}{8AG}.$$

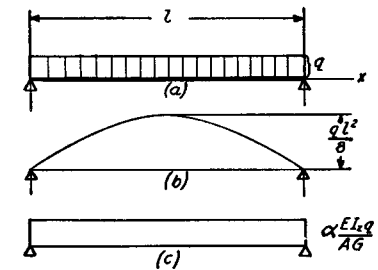


FIG. 150.

Adding this to the deflection due to the bending moment (see eq.

⁹ Another way of determining additional deflection due to shear is discussed on page 298.

82, p. 138), we obtain the total deflection

$$\delta = \frac{5}{384} \frac{ql^4}{EI_z} + \frac{\alpha l^2 q}{8AG} = \frac{5}{384} \frac{ql^4}{EI_z} \left(1 + \frac{48\alpha}{5} \frac{k_z^2 E}{l^2 G} \right), \quad (d)$$

in which $k_z = \sqrt{I_z/A}$ is the radius of gyration of the cross section with respect to the z axis.

For a rectangular cross-section of depth h , $k_z^2 = \frac{1}{12}h^2$, $\alpha = 3/2$. Putting $E/G = 2(1 + \mu) = 2.6$, we obtain from (d)

$$\delta = \frac{5}{384} \frac{ql^4}{EI_z} \left(1 + 3.12 \frac{h^2}{l^2} \right).$$

It may be seen that for $l/h = 10$ the effect of the shearing force on the deflection is about 3 per cent. As the ratio l/h decreases this effect increases.

The factor α is usually larger than 2 for I beams and when they are short the effect of the shearing force may be comparatively great. Using eq. (70) and Fig. 106, we have

$$\frac{\alpha V}{A} = \frac{V}{b_1 I_z} \left[\frac{bh^2}{8} - \frac{h_1^2}{8} (b - b_1) \right],$$

from which

$$\alpha = \frac{A}{b_1 I_z} \left[\frac{bh^2}{8} - \frac{h_1^2}{8} (b - b_1) \right]. \quad (e)$$

For example, suppose $h = 24$ in., $A = 31.0$ sq. in., $I_z = 2,810$ in.⁴, the thickness of the web $b_1 = 5/8$ in., $l = 6h$. Then eq. (e) gives $\alpha = 2.42$. Substituting in eq. (d), we find

$$\delta = \frac{5}{384} \frac{ql^4}{EI_z} \left(1 + \frac{48}{5} \times 2.42 \times \frac{2,810}{31 \times 144^2} \times 2.6 \right) = 1.265 \frac{5ql^4}{384EI_z}.$$

The additional deflection due to shear in this case is equal to 26.5 per cent of the deflection produced by the bending moment and must therefore be considered.

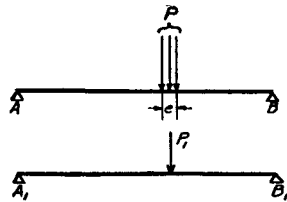


FIG. 151.

In the case of a concentrated load P (Fig. 151) such a load can be considered as the limiting case of a load distributed over a very short portion ϵ of the beam. The amount of the imaginary loading P_1 on the conjugate beam A_1B_1 , corresponding to the second term in expression (b),

will be

$$P_1 = \alpha \frac{EI_z}{AG} P. \quad (f)$$

The additional deflection due to shearing forces is obtained by dividing by EI_z the bending moment produced in the conjugate beam by the imaginary concentrated load given by eq. (f). For instance, for central loading of a beam the bending moment at the middle of the conjugate beam produced by the load (f) will be $\alpha(EI_z/AG)Pl/4$ and the additional deflection at the middle due to shearing forces is

$$\delta_1 = \frac{\alpha}{AG} \frac{Pl}{4}. \quad (g)$$

Adding this to the deflection produced by the bending moment alone (see eq. 90, p. 143), the following expression for the complete deflection is obtained:

$$\delta = \frac{Pl^3}{48EI_z} + \frac{\alpha}{AG} \cdot \frac{Pl}{4} = \frac{Pl^3}{48EI_z} \left(1 + \frac{12\alpha k_z^2 E}{l^2 G} \right).$$

For a beam of rectangular cross-section of depth h we have

$$\frac{k_z^2}{l^2} = \frac{h^2}{12l^2}; \quad \alpha = \frac{3}{2},$$

and we obtain

$$\delta = \frac{Pl^3}{48EI_z} \left(1 + 3.90 \frac{h^2}{l^2} \right). \quad (h)$$

For $h/l = 1/10$ the additional effect of the shearing force is about 4 per cent.

It has been assumed throughout the above discussion that the cross sections of the beam can warp freely as shown in Fig. 149. The uniformly loaded beam is one case in which this condition is approximately satisfied. The shearing force at the middle of such a beam is zero and there will be no warping here. The warping increases gradually with the shearing force as we proceed along the beam to the left or to the right of the middle. The condition of symmetry of deformation with respect to the middle section is therefore satisfied. Consider now bending by a concentrated load at the middle. From the condition of symmetry the middle cross section of the beam must remain plane. At the same time, adjacent cross sections to the right and to the left of the load carry a shearing force equal to $P/2$, and warping of cross sections caused by these shearing forces should take place. From

the condition of continuity of deformation, however, there can be no abrupt change from a plane middle section to warped adjacent sections. There must be a continuous increase in warping as we proceed along the beam in either direction from the middle, and only at some distance from the load can the warping be such as a shearing force $P/2$ produces under conditions of freedom in warping. From this discussion it must be concluded that in the neighborhood of the middle cross section the stress distribution will not be that predicted by the elementary theory of bending (see p. 113). Warping will be partially prevented and the additional deflection due to shearing forces will be somewhat less than that found above (see eq. g). A more detailed investigation¹⁰ shows that in the case of a concentrated load at the middle the deflection at the middle is

$$\delta = \frac{Pl^3}{48EI} \left[1 + 2.85 \frac{h^2}{l^2} - 0.84 \left(\frac{h}{l} \right)^3 \right]. \quad (k)$$

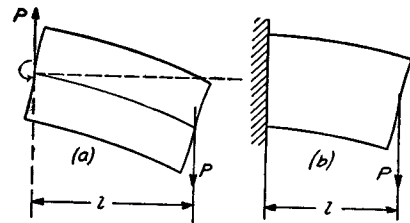


FIG. 152.

We have an analogous condition also in the case of a cantilever beam. If the built-in cross section can warp freely as shown in Fig. 152 (a), the conditions will be as assumed in the derivation of eq. (h). The deflection of a cantilever of rectangular cross section will be obtained

by substituting l for $l/2$ and P for $P/2$ in this equation, giving

$$\delta = \frac{Pl^3}{3EI} \left(1 + 0.98 \frac{h^2}{l^2} \right). \quad (l)$$

When the built-in cross section is completely prevented from warping (Fig. 152, b), the conditions will be the same as assumed in the derivation of eq. (k) and the deflection will be

$$\delta = \frac{Pl^3}{3EI} \left[1 + 0.71 \frac{h^2}{l^2} - 0.10 \left(\frac{h}{l} \right)^3 \right], \quad (m)$$

which is less than the deflection given by (l).

¹⁰ See L. N. G. Filon, Phil. Trans. Roy. Soc. (A), Vol. 201, p. 63, 1903, and S. Timoshenko, Phil. Mag., Vol. 47, p. 1095, 1924. See also Th. v. Kármán, Scripta Universitatis atque Bibliothecae Hierosolimitanarum, 1923, and writer's "Theory of Elasticity," p. 95, 1934.

CHAPTER VI

STATICALLY INDETERMINATE PROBLEMS IN BENDING

40. Redundant Constraints.—In our previous discussion three types of beams have been considered: (a) a cantilever beam, (b) a beam supported at the ends and (c) a beam with overhangs. In all three cases the reactions at the supports can be determined from the fundamental equations of statics; hence the problems are *statically determinate*. We will now consider problems on the bending of beams in which the equations of statics are not sufficient to determine all the reactive forces at the supports, so that additional equations, based on a consideration of the deflection of the beams, must be derived. Such problems are called *statically indeterminate*.

Let us consider the various types of supports which a beam may have. The support represented in Fig. 153 (a) is

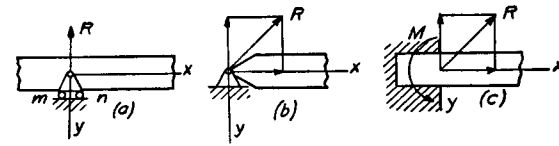


FIG. 153.

called a *hinged movable support*. Neglecting the friction in the hinge and in the rollers, it is evident that in this type of support the reaction must act through the center of the hinge and must be perpendicular to the plane mn on which the rollers are moving. Hence we know the point of application of the reaction and its direction. There remains only one unknown element, the magnitude of the reaction.

In Fig. 153 (b) a *hinged immovable* support is shown. In this case the reaction must go through the center of the hinge but it may have any direction in the plane of the figure. We have two unknowns to determine from the equations of

statics, the direction of the reaction and its magnitude, or, if we like, the vertical and horizontal components of the reaction.

In Fig. 153 (c) a *built-in end* is represented. In this case not only the direction and the magnitude of the reaction are unknown, but also the point of application. The reactive forces distributed over the built-in section can be replaced by a force R applied at the centroid of the cross section and a couple M . We then have three unknowns to determine from the equations of statics, the two components of the reactive force R and the magnitude of the couple M .

For beams loaded by transverse loads in one plane we have, for determining the reactions at the supports, the three equations of statics, namely,

$$\Sigma X = 0; \quad \Sigma Y = 0; \quad \Sigma M = 0. \quad (a)$$

If the beam is supported so that there are only three unknown *reactive elements*, they can be determined from eqs. (a); hence the problem is statically determinate. These three elements are just sufficient to assure the immovability of the beam. When the number of reactive elements is larger than three, we say there are *redundant constraints* and the problem is statically indeterminate.

A cantilever is supported at the built-in end. In this case, as was explained above, the number of unknown reactive elements is three and they can be determined from the equations of statics. For beams supported at both ends and beams with overhangs it is usually assumed that one of the supports is an immovable and the other a movable hinge. In

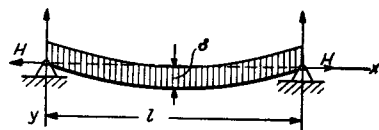


FIG. 154.

such a case we have again three unknown reactive elements, which can be determined from the equations of statics.

If the beam has immovable hinges at both ends (Fig. 154), the problem becomes statically indeterminate. At each end we have two unknown elements, the two components of the

corresponding reaction, and for determining these four unknowns we have only the three equations (a). Hence we have one redundant constraint and a consideration of the deformation of the beam becomes necessary to determine the reactions. The vertical components of the reactions can be calculated from the equations of statics. In the case of vertical loads it can be concluded also from statics that the horizontal components H are equal and opposite in direction. To find the magnitude of H let us consider the elongation of the axis of the beam during bending. A good approximation to this elongation can be obtained by assuming that the deflection curve of the beam is a parabola,¹ the equation of which is

$$y = \frac{4\delta x(l-x)}{l^2} \quad (b)$$

where δ is the deflection at the middle. The length of the curve is

$$s = 2 \int_0^{l/2} \sqrt{dx^2 + dy^2} = 2 \int_0^{l/2} dx \sqrt{1 + \left(\frac{dy}{dx}\right)^2}. \quad (c)$$

In the case of a flat curve the quantity $(dy/dx)^2$ is small in comparison with unity and neglecting small quantities of order higher than the second we obtain approximately

$$\sqrt{1 + \left(\frac{dy}{dx}\right)^2} \approx 1 + \frac{1}{2} \left(\frac{dy}{dx}\right)^2.$$

Substituting this expression in equation (c) and using equation (b) we find the length of the curve to be

$$s = l \left(1 + \frac{8}{3} \frac{\delta^2}{l^2} \right).$$

Then the difference between the length of the curve and the distance l between the supports represents the total axial elongation of the beam and is $(8/3)(\delta^2/l)$; the unit elongation

¹ The exact expression for the deflection curve will be given later (see Part II).

is then $(8/3)(\delta^2/l^2)$. Knowing this and denoting by E the modulus of elasticity of the material of the beam and by A its cross-sectional area, we obtain the horizontal reaction from equation:

$$H = \frac{8}{3} \frac{\delta^2}{l^2} EA. \quad (b)$$

It is interesting to note that for most beams in practice the deflection δ is very small in comparison with the length and the tensile stress $(8/3)(\delta^2/l^2)E$ produced by the forces H is usually small in comparison with bending stresses and can be neglected. This justifies the usual practice of calculating beams with supported ends by assuming that one of the two supports is a movable hinge, although the special provisions for permitting free motion of the hinge are actually used only in cases of large spans such as bridges.

In the case of the bending of flexible bars and thin metallic strips, where the deflection δ is no longer very small in comparison with l , the tensile stresses produced by the longitudinal forces H can not be neglected. Such problems will be discussed later (see Part II). In the following discussion of statically indeterminate problems of bending the method of superposition will be used and the solutions will be obtained by combining statically determinate cases in such a manner as to satisfy the conditions at the supports.

41. Beam Built-in at One End and Supported at the Other.—Consider first the case where there is a single concentrated load P (Fig. 155).² In this case we have three unknown reactive elements at the left end and one at the right end. Hence the problem is statically indeterminate with one redundant constraint. In the solution of this problem let us consider as redundant the constraint which prevents the left end A of the beam from rotating during bending. Removing this constraint, we obtain the statically determinate problem shown in Fig. 155 (b). The bending produced by the statically indeterminate couple M_a will be studied separately

as shown in Fig. 155 (c).² It is evident that the bending of the beam represented in Fig. 155 (a) can be obtained by a combination of cases (b) and (c).

It is only necessary to adjust the magnitude of the couple M_a at the support in such a manner as to satisfy the condition

$$\theta_1 = -\theta_1'. \quad (a)$$

Thus, the rotation of the left end of the beam, due to the force P , will be annihilated by M_a and the condition of a built-in end with zero slope will be satisfied. To obtain the statically indeterminate couple M_a it is necessary only to substitute in eq. (a) the known values for the angles θ_1 and θ_1' from equations (88), p. 142, and (104), p. 158. Then

$$\frac{Pc(l^2 - c^2)}{6lEI_z} = -\frac{M_al}{3EI_z},$$

from which

$$M_a = -\frac{Pc(l^2 - c^2)}{2l^2}. \quad (107)$$

The bending moment diagram can now be obtained by combining the diagrams for cases (b) and (c) as shown by the shaded area in Fig. 155 (d). The maximum bending moment will be either that at a or that at d .

The deflection at any point can easily be obtained by subtracting from the deflection at this point produced by the load P the deflection produced by the couple M_a . The equations of the deflection curves for both these cases have already been given in (86) and (87), p. 142, and in (105), p. 159. Let us take, for instance, the case $c < \frac{1}{2}l$ and calcu-

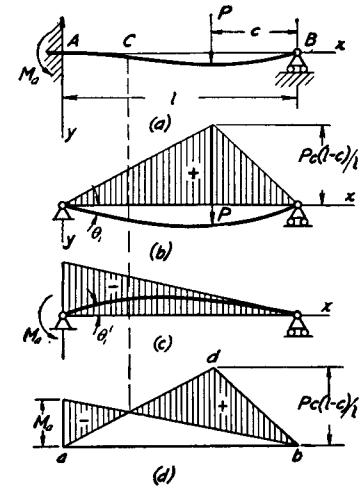


FIG. 155.

² Deflection curves and bending moment diagrams are shown together.

late the deflection at the middle of the span. From eqs. (91) and (105)

$$\delta = \frac{Pc}{48EI_z} (3l^2 - 4c^2) + \frac{M_a l^2}{16EI_z}$$

or, by using eq. (107),

$$\delta = \frac{Pc}{96EI_z} (3l^2 - 5c^2).$$

At the point *C* where the bending moment becomes zero, the curvature of the deflection curve is also zero and we have a point of inflection, i.e., a point where the curvature changes sign.

It may be seen from eq. (107) that the bending moment at the built-in end depends on the position of the load *P*. If we equate to zero the derivative of eq. (107) with respect to *c*, we find that the moment *M_a* has its numerical maximum value when $c = l/\sqrt{3}$. Then

$$|M_a|_{\max} = \frac{Pl}{3\sqrt{3}} = 0.192Pl. \quad (108)$$

The bending moment under the load, from Fig. 155 (*d*), is

$$M_d = \frac{Pc(l-c)}{l} - \frac{c}{l} \frac{Pc(l^2 - c^2)}{2l^2} = \frac{Pc}{2l^3} (l-c)^2 (2l+c). \quad (b)$$

If we take the derivative of (*b*) with respect to *c* and equate it to zero, we find that *M_d* becomes a maximum when

$$c = \frac{l}{2} (\sqrt{3} - 1) = 0.366l.$$

Substituting this in eq. (*b*), we obtain

$$(M_d)_{\max} = 0.174Pl.$$

Comparing this with eq. (108), we find that in the case of a moving load the maximum normal stresses σ_x are at the built-in section.

Having the solution for the single concentrated load and

using the method of superposition, the problem can be solved for other types of transverse loading by simple extension of the above theory. Take, for instance, the case represented in Fig. 156. The moment at the support *A*, produced by any element *qdc* of the load, is obtained from eq. (107) by substituting *qdc* for *P*. The total moment *M_a* at the support will be

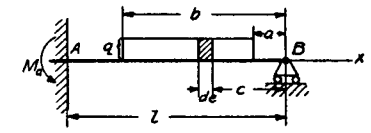


FIG. 156.

$$M_a = - \int_a^b \frac{qcdc(l^2 - c^2)}{2l^2} = - \frac{q}{2l^2} \left[\frac{l^2(b^2 - a^2)}{2} - \frac{b^4 - a^4}{4} \right]. \quad (c)$$

If the load be distributed along the entire length of the beam, then substituting in eq. (*c*) $a = 0$, $b = l$, we obtain

$$M_a = - \frac{ql^2}{8}. \quad (109)$$

The bending moment diagram is obtained by subtracting the triangular diagram due to the couple *M_a* (Fig. 157) from the parabolic diagram, due to uniform loading. It can

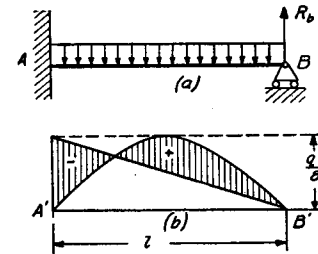


FIG. 157.

be seen that the maximum bending stresses will be at the built-in section. The deflection at any point is obtained by subtracting the deflection at this point produced by the couple *M_a* (see eq. 105, p. 159) from the deflection at the same point produced by the uniform load (see eq. 81, p. 138).

For the middle of the span we will obtain

$$\delta = \frac{5}{384} \frac{ql^4}{EI_z} + \frac{M_a l^2}{16EI_z} = \frac{ql^4}{192EI_z}. \quad (110)$$

Problems

1. Draw shearing force diagrams for the cases shown in Figures 155 and 157.

2. Determine the maximum deflection for the case of a uniformly distributed load shown in Fig. 157.

Solution. Combining eqs. (81) and (105), the following equation for the deflection curve is obtained:

$$y = \frac{q}{48EI_z} (3l^2x^2 - 5lx^3 + 2x^4). \quad (d)$$

Setting the derivative dy/dx equal to zero, we find the point of maximum deflection at $x = (l/16)(15 - \sqrt{33}) = 0.579l$. Substituting in (d), we obtain

$$\delta_{\max} = \frac{ql^4}{185EI_z}.$$

3. Determine the reaction at the right support of the beam shown in Fig. 157, considering this reaction as the redundant constraint.

Solution. Removing support B , the deflection of this end of the beam, considered as a cantilever, will be $ql^4/8EI_z$ from eq. (84). Reaction R_b at B (Fig. 157, a) must be such as to eliminate the above deflection. Then by using eq. (95) we obtain the equation:

$$\frac{ql^4}{8EI_z} = \frac{R_b l^3}{3EI_z},$$

from which

$$R_b = \frac{3}{8}ql.$$

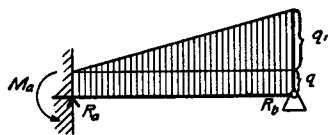


FIG. 158.

4. A beam is loaded as shown in Fig. 158. Determine the moment M_a and the reactions R_a and R_b at the supports.

Answer.

$$-M_a = \frac{ql^2}{8} + \frac{7}{120}ql^2; \quad R_a = \frac{5}{8}ql + \frac{9}{40}ql; \quad R_b = \frac{3}{8}ql + \frac{11}{40}ql.$$

5. Determine the reaction R_b at the support B of a uniformly loaded beam such as shown in Fig. 157 if the support B is elastic, so that a downward force of the magnitude k lowers the support a unit distance.

Solution. Using the same method as in problem 3 above, the

equation for determining R_b will be

$$\frac{ql^4}{8EI_z} - \frac{R_b l^3}{3EI_z} = \frac{R_b}{k},$$

from which

$$R_b = \frac{3}{8}ql \frac{1}{1 + \frac{3EI_z}{kl^3}}.$$

6. Construct the bending moment diagram for a uniformly loaded beam supported at three equidistant points.

Suggestion. From the condition of symmetry the middle cross section does not rotate during bending and each half of the beam will be in the condition of a beam built in at one end and supported at the other.

7. Determine the deflection of the end C of the beam shown in Fig. 159.

Solution. Replacing the action of the overhang by a couple Pa , the bending of the beam between the supports will be obtained by superposing cases (b) and (c). The statically indeterminate couple M_a will be found from the equation $\theta_1 = -\theta_1'$ or

$$\frac{Pal}{6EI_z} = \frac{M_a l}{3EI_z},$$

from which $M_a = Pa/2$. The deflection at C will be

$$\delta = \frac{Pa^3}{3EI_z} + a(\theta_2 - \theta_2') = \frac{Pa^3}{3EI_z} + \frac{Pa^2 l}{4EI_z}.$$

The first term on the right side represents the deflection of a cantilever and the second represents the deflection due to rotation of the cross section at B .

8. Determine the additional pressure of the beam AB on the support B (Fig. 155) due to non-uniform heating of the beam, provided that the temperature varies from t_0 at the bottom to t at the top of the beam according to a linear law.

Solution. If the support at B is removed, the non-uniform heating will cause the deflection curve of the beam to become an arc of a circle. The radius of this circle can be determined from the equation $1/r = \alpha(t - t_0)/h$, in which h = the depth of the beam

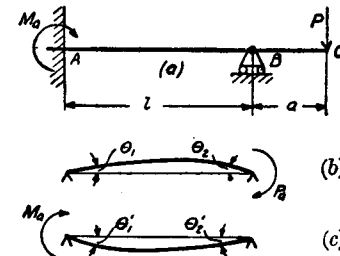


FIG. 159.

and α = the coefficient of thermal expansion. The corresponding deflection at B can be found as in problem 2, p. 94, and is

$$\delta = \frac{l^2}{2r} = \frac{l^2 \alpha (t - t_0)}{2h}$$

This deflection is eliminated by the reaction of the support B . Letting R_b denote this reaction,

$$\frac{R_b l^3}{3EI_z} = \frac{l^2 \alpha (t - t_0)}{2h},$$

from which

$$R_b = \frac{3EI_z}{2hl} \cdot \alpha (t - t_0).$$




FIG. 160.

9. A cantilever AB , loaded at the end, is supported by a shorter cantilever CD of the same cross section as cantilever AB . Determine the pressure X between the two beams at C .

Solution. Pressure X will be found from the condition that at C both the cantilevers have the same deflection. Using eq. (95) for the lower cantilever and eq. (97) together with eq. (95) for the upper we obtain

$$\frac{Xl_1^3}{3EI_z} = \frac{P}{EI_z} \left(\frac{l_1^2}{2} - \frac{l_1^3}{6} \right) - \frac{Xl_1^3}{3EI_z},$$

from which

$$X = \frac{3P}{4} \left(\frac{l}{l_1} - \frac{1}{3} \right).$$

From a consideration of the bending moment diagrams for the upper and lower cantilevers it can be concluded that at C the upper cantilever has a larger angular deflection than the lower has. This indicates that there will be contact between the two cantilevers only at points D and C .

10. Solve problem 7 assuming, instead of a concentrated load P , a uniformly distributed load of intensity q to be distributed (1) along the length a of the overhand, (2) along the entire length of the beam.

11. Draw the bending moment and shearing force diagrams for the case shown in Fig. 156 if $a = 4$ ft., $b = 12$ ft., $l = 15$ ft. and $q = 400$ lbs. per ft.

42. Beam with Both Ends Built in.—In this case we have six reactive elements (three at each end), i.e., the problem has

three statically indeterminate elements. However, for ordinary beams, the horizontal components of the reactions can be neglected (see p. 178), which reduces the number of statically indeterminate quantities to two. Let us take the moments M_a and M_b at the supports for the statically indeterminate quantities. Then for the case of a single concentrated load P (Fig. 161, a) the solution can be obtained by combining the two statically determinate problems shown in Fig. 161 (b) and (c). It is evident that the conditions at the built-in ends of the beam AB will be satisfied if the couples M_a and M_b are adjusted so as to make

$$\theta_1 = -\theta_1'; \quad \theta_2 = -\theta_2'. \quad (a)$$

From these two equations the two statically indeterminate couples are obtained. Using eqs. (88) and (89) for a concentrated load and eqs. (103) and (104) for the couples, eqs. (a) become

$$\begin{aligned} -\frac{Pc(l^2 - c^2)}{6lEI_z} &= \frac{M_a l}{3EI_z} + \frac{M_b l}{6EI_z}, \\ -\frac{Pc(l - c)(2l - c)}{6lEI_z} &= \frac{M_a l}{6EI_z} + \frac{M_b l}{3EI_z}, \end{aligned}$$

from which

$$M_a = -\frac{Pc^2(l - c)}{l^2}; \quad M_b = -\frac{Pc(l - c)^2}{l^2}. \quad (111)$$

Combining the bending moment diagrams for cases (b) and (c), the diagram shown in Fig. 161 (d) is obtained. The maximum

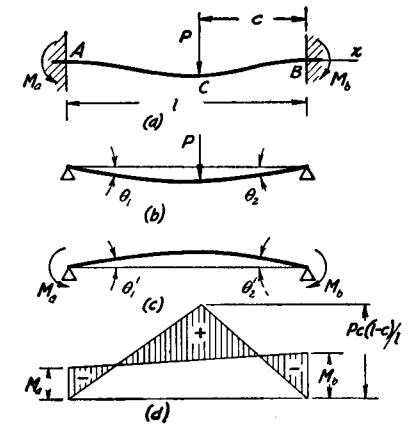


FIG. 161.

positive bending moment is under the load at the point C . Its magnitude can be found from Fig. 161 (d) and is given by the following:

$$M_c = \frac{Pc(l-c)}{l} + \frac{M_a c}{l} + \frac{M_b(l-c)}{l} = \frac{2Pc^2(l-c)^2}{l^3}. \quad (112)$$

From Fig. 161 (d) it may be seen that the numerically maximum bending moment is either that at C or that at the nearest support. For a moving load, i.e., when c varies, assuming $c < l/2$, the maximum numerical value of M_b is obtained by putting $c = 1/3l$ in eq. (111). This maximum is equal to $4/27Pl$. The bending moment under the load is a maximum when $c = l/2$ and this maximum, from eq. (112), is equal to $1/8Pl$. Hence for a moving load the greatest moment is at the end.

By using the method of superposition the deflection at any point can also be obtained by combining the deflection produced by load P with that produced by couples M_a and M_b .

Having the solution for a single concentrated load P , any other type of transverse loading can easily be studied by using the method of superposition.

Problems

1. Draw the shearing force diagram for the case in Fig. 161 (a) if $P = 1,000$ lbs., $l = 12$ ft., and $c = 4$ ft.

2. Construct the bending moment diagram for a uniformly loaded beam with built-in ends (Fig. 162).

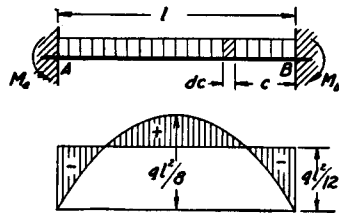


FIG. 162.

The moment produced by the load over the entire span is then

$$M_a = - \int_0^l \frac{q d c c^2 (l-c)}{l^2} = - \frac{q l^2}{12};$$

Solution. The moment at A produced by one element $q d c$ of the load (Fig. 162, a) is, from eq. (111),

$$dM_a = - \frac{q d c c^2 (l-c)}{l^2}.$$

the moment at the support B will have the same magnitude. Combining the parabolic bending moment diagram produced by the uniform load with the rectangular diagram given by two equal couples applied at the ends, we obtain the diagram shown in Fig. 162 (b) by the shaded area.

3. Determine the moments at the ends of a beam with built-in ends and loaded by the triangular load shown in Fig. 163.




FIG. 163.

Solution. The intensity of the load at distance c from the support B is $q_a c / l$ and the load represented by the shaded element is $q_a c d c / l$. The couples acting at the ends, produced by this elementary load, as given by eqs. (111), are

$$dM_a = - \frac{q_a c^3 (l-c) d c}{l^3}; \quad dM_b = - \frac{q_a c^2 (l-c)^2 d c}{l^3};$$

therefore

$$M_a = - \int_0^l \frac{q_a c^3 (l-c) d c}{l^3} = - \frac{q_a l^2}{20};$$

$$M_b = - \int_0^l \frac{q_a c^2 (l-c)^2 d c}{l^3} = - \frac{q_a l^2}{30}.$$

4. Determine the reactive couples M_a and M_b in a beam with built-in ends and bent by a couple Pc (Fig. 164).




FIG. 164.

Solution. By using the solution of problem 5, p. 160, and eqs. (104) and (105), the following equations are obtained:

$$2M_a + M_b = - \frac{3Pc}{l^2} \left[a^2 \left(b + \frac{a}{3} \right) - \frac{2}{3} b^3 \right],$$

$$2M_b + M_a = \frac{3Pc}{l^2} \left[\frac{2}{3} a^3 - b^2 \left(a + \frac{b}{3} \right) \right],$$

from which M_a and M_b can easily be calculated.

5. Determine the bending moments at the ends of a built-in beam due to non-uniform heating of the beam if the temperature varies from t_0 at the bottom to t at the top of the beam according to a linear law.

Answer.

$$M_a = M_b = \frac{\alpha EI_z(t - t_0)}{h},$$

where α is the coefficient of thermal expansion and h is the depth of the beam.

6. Determine the effect on the reactive force and reactive couple at A of a small vertical displacement δ of the built-in end A of the beam AB (Fig. 161).

Solution. Remove the support A ; then the deflection δ_1 at A and the slope θ_1 at this point will be found as for a cantilever built in at B and loaded by P , i.e.,

$$\delta_1 = \frac{Pc^3}{3EI_z} + \frac{Pc^2}{2EI_z}(l - c); \quad \theta_1 = \frac{Pc^2}{2EI_z}.$$

Applying at A an upward reactive force X and a reactive couple Y in the same direction as M_a , of such magnitude as to annihilate the slope θ_1 and to make the deflection equal to δ , the equations for determining the unknown quantities X and Y become

$$\begin{aligned} \frac{Xl^2}{2EI_z} - \frac{Yl}{EI_z} &= \frac{Pc^2}{2EI_z}, \\ \frac{Xl^3}{3EI_z} - \frac{Yl^2}{2EI_z} &= \delta_1 - \delta. \end{aligned}$$

7. Draw the shearing force and bending moment diagrams for the beam shown in Fig. 163 if $q_a = 400$ lbs. per ft. and $l = 15$ ft.

8. Draw the shearing force and bending moment diagrams for a beam with built-in ends if the left half of the beam is uniformly loaded with a load $q = 400$ lbs. per ft. The length of the beam is $l = 16$ ft.

43. Frames.—The method used above for the cases of statically indeterminate beams can be applied also to the study of frames. Take, as a simple example, the symmetrical and symmetrically loaded frame, Fig. 165, hinged at C and D . The shape of the frame after deformation is shown by the dotted lines. Neglecting the change in the length of the bars and the effect of axial forces on the bending of bars,³ the frame can be considered to be made up of three beams as shown in

³ Simultaneous action of bending and thrust will be discussed later (see Part II).

Fig. 165 (b). It is evident that there will be couples M at the ends of the horizontal beam AB which oppose the free rotation of these ends and represent the action of the vertical bars on the horizontal beam. This couple M can be considered as the only statically indeterminate quantity. Knowing M , the

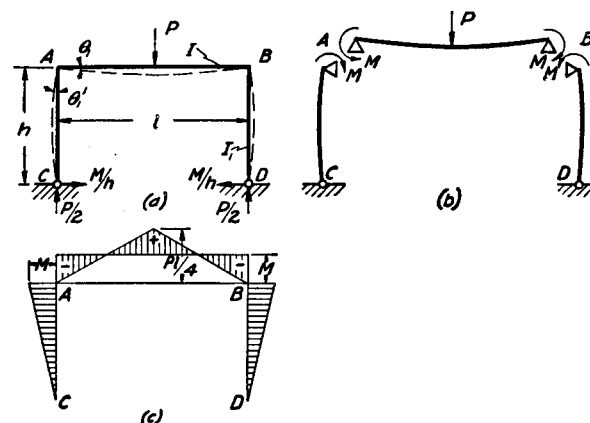


FIG. 165.

bending of all three bars can be investigated without any difficulty. For determining M we have the condition that at A and at B there are rigid joints between the bars so that the rotation of the top end of the vertical bar AC must be equal to the rotation of the left end of the horizontal bar. Hence the equation for determining M is

$$\theta_1 = \theta_1'. \quad (a)$$

θ_1 must be determined from the bending of the horizontal beam AB . Denoting by l the length of this beam and by EI its flexural rigidity, the rotation of the end A due to the load P , by eq. (88) ($b = l/2$), is $Pl^2/16EI$. The couples at the ends resist this bending and give a rotation in the opposite direction, which, from eqs. (103) and (104), equals $Ml/2EI$. The final value of the angle of rotation will be

$$\theta_1 = \frac{Pl^2}{16EI} - \frac{Ml}{2EI}.$$

Considering now the vertical bar AC as a beam with supported ends, bent by a couple M , and denoting by h its length and by EI_1 its flexural rigidity, the angle at the top, from eq. (104), will be

$$\theta_1' = \frac{Mh}{3EI_1}.$$

Substituting in eq. (a), we obtain

$$\frac{Pl^2}{16EI} - \frac{Ml}{2EI} = \frac{Mh}{3EI_1},$$

from which

$$M = \frac{Pl}{8} \frac{1}{1 + \frac{2h}{3l} \frac{I}{I_1}}. \quad (113)$$

This is the absolute value of M . Its direction is shown in Fig. 165 (b). Knowing M , the bending moment diagram can be constructed as shown in Fig. 165 (c). The reactive forces at the hinges C and D are also shown (Fig. 165, a). The vertical components of these forces, from considerations of symmetry, are each equal to $P/2$. As regards the horizontal components, their magnitude M/h is obtained by considering the vertical bars as simply supported beams loaded at the top by the couples M .

The same problem can be solved in another way by taking the horizontal reaction H at the hinges C and D as the statically indeterminate quantity, instead of M (Fig. 166). The statically indeterminate problem is solved by superposing the two statically determinate problems shown in Fig.

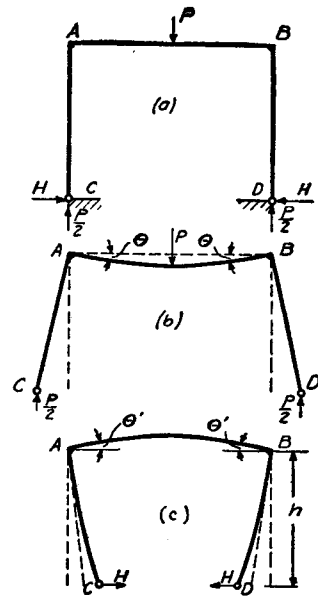


FIG. 166.

166 (b) and (c). In case (b) the redundant constraint prevent-

ing the horizontal motion of the hinges C and D is removed. The vertical bars no longer have any bending. The horizontal bar AB is in the condition of a bar with simply supported ends whose angles of rotation are equal to $Pl^2/16EI$, and the horizontal motion of each hinge C and D is therefore $h(Pl^2/16EI)$. In case (c) the effect of the forces H is studied. These forces produce bending couples on the ends of the horizontal bar AB equal to $H \cdot h$, so that the angles of rotation of its ends θ' will be $Hh \cdot l/2EI$. The deflection of each hinge C and D consists of two parts, the deflection $\theta' h = Hh^2 l/2EI$ due to rotation of the upper end and the deflection $Hh^3/3EI_1$ of the vertical bars as cantilevers. In the actual case (Fig. 166, a) the hinges C and D do not move; hence the horizontal displacements produced by the force P (Fig. 166, b) must be counteracted by the forces H (Fig. 166, c), i.e.,

$$\frac{Pl^2}{16EI} h = \frac{Hh^2 l}{2EI} + \frac{Hh^3}{3EI_1},$$

from which

$$H = \frac{1}{h} \frac{Pl}{8} \frac{1}{1 + \frac{2h}{3l} \cdot \frac{I}{I_1}}.$$

Remembering that $Hh = M$, this result agrees with the equation (113) above.

This latter method of analysis is especially useful for nonsymmetrical loading such as shown in Fig. 167. Removing the constraint preventing the hinges C and D from horizontal motion, we have the condition represented in Fig. 167 (b). It is evident that the increase in distance between C and D may be obtained by multiplying by h the sum of the angles θ_1 and θ_2 . Using eqs. (88) and (89), this increase in distance

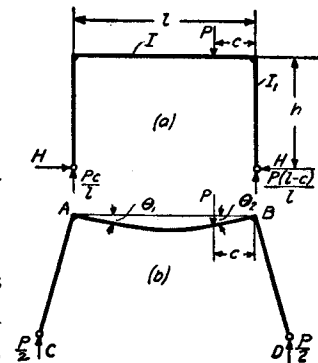


FIG. 167.

becomes

$$h \left[\frac{Pc(l^2 - c^2)}{6EI} + \frac{Pc(l - c)(2l - c)}{6EI} \right] = \frac{Pc(l - c)h}{2EI}.$$

It must be eliminated by the horizontal reactions H (Fig. 166, c). Then, using the results obtained in the previous problem, we get the following equation for determining H :

$$2 \left(\frac{Hh^2l}{2EI} + \frac{Hh^3}{3EI_1} \right) = \frac{Pc(l - c)h}{2EI},$$

from which

$$H = \frac{Pc(l - c)}{2hl} \frac{I}{1 + \frac{2}{3} \frac{I}{I_1} \frac{h}{l}}. \quad (114)$$

Having the solution for one concentrated load, any other case of loading of the beam AB of the frame can easily be studied by the method of superposition.

Let us consider now a frame with built-in supports and an unsymmetrical loading as shown in Fig. 168. In this case we have

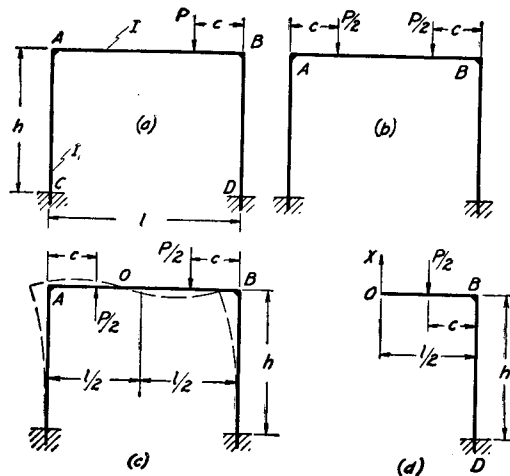


FIG. 168.

three reactive elements at each support and the system has three statically indeterminate elements. In the solution of this problem

we will use a method based on the method of superposition in which the given system of loading is split into parts such that for each partial loading a simple solution can be found.⁴ The problem shown in Fig. 168 (a) can be solved by superposing the solutions of the two problems shown in Fig. 168 (b) and (c). The case shown in (b) is a symmetrical one and can be considered in the same manner as the first example shown in Fig. 165. A study of the case shown in (c) will show that the point of inflection O of the horizontal bar AB is situated at the middle of the bar. This follows from the condition that the loads $P/2$ are equally distant from the vertical axis of symmetry of the frame and are opposite in sense. The moment, the deflection, and the axial force produced at the mid point O of the horizontal beam AB by one of the loads $P/2$ will be removed by the action of the other load $P/2$. Hence there will be no bending moment, no vertical deflection and no axial force at O . The magnitude of the shearing force at the same point X can be found from the condition that the vertical deflection of O is equal to zero (Fig. 168, d). This deflection consists of two parts, a deflection δ_1 due to the bending of the cantilever OB and a deflection δ_2 due to rotation of the end B of the vertical bar BD . Using the known equations for a cantilever (eq. 98), and using the notations given in the figure, the following equations are obtained:

$$\delta_1 = \frac{P}{2} \frac{c^3}{3EI} + \frac{P}{2} \frac{c^2}{2EI} \left(\frac{l}{2} - c \right) - \frac{X \left(\frac{l}{2} \right)^3}{3EI},$$

$$\delta_2 = \left(\frac{Pc}{2} - X \frac{l}{2} \right) \frac{h}{EI_1} \frac{l}{2}.$$

Substituting this in the equation $\delta_1 + \delta_2 = 0$, the magnitude X of the shearing force can be found. Having determined X , the bending moment at every cross section of the frame for case (c) can be calculated. Combining this with the bending moments for the symmetrical case (b), the solution of the problem (a) is obtained.⁵

Problems

1. Determine the bending moments at the corners of the frame shown in Fig. 169.

⁴ Such a method was extensively used by W. L. Andréé; see his book "Das B-U Verfahren," München and Berlin, 1919.

⁵ Solutions of many important problems on frames can be found in the book by Kleinlogel, "Mehrstielige Rahmen," Berlin, 1927.

Solution. Considering the bar AB as a beam supported at the

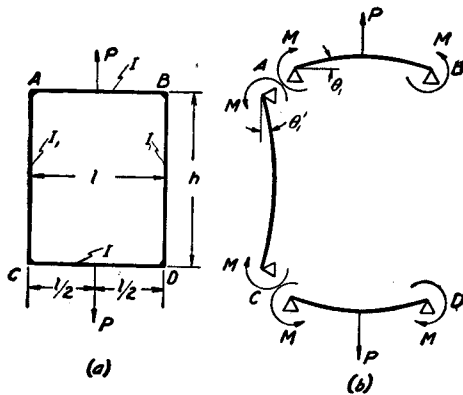


FIG. 169.

ends (Fig. 169, b) and denoting by M the moments at the corners, the angle θ_1 will be

$$\frac{Pl^2}{16EI} - \frac{Ml}{2EI}.$$

Putting this equal to the angle θ_1' at the ends of the vertical bars which are bent by the couples M only, the following equation for M is obtained:

$$\frac{Pl^2}{16EI} - \frac{Ml}{2EI} = \frac{Mh}{2EI_1},$$

from which

$$M = \frac{Pl}{8} \frac{1}{1 + \frac{h}{l} \frac{I}{I_1}}.$$

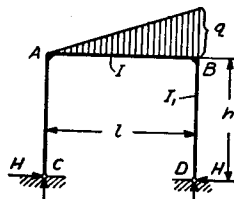


FIG. 170.

2. Determine the horizontal reactions H for the case shown in Fig. 170.

Suggestion. By using eq. (114) and applying the method of superposition, we get

$$H = \frac{ql^2}{24h} \frac{1}{1 + \frac{2}{3} \frac{I}{I_1} \frac{h}{l}}.$$

3. Draw the bending moment diagram for the three bars of the preceding problem assuming $h = l$ and $I = I_1$.

4. Determine the bending moments at the joints of the frame shown in Fig. 171.

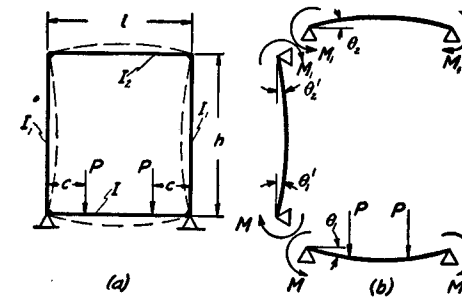


FIG. 171.

Solution. Disjoining the frame as shown in Fig. 171 (b), the equations for determining the couples M and M_1 are

$$\theta_1 = \theta_1' \quad \text{and} \quad \theta_2 = \theta_2'.$$

Substituting in these equations

$$\theta_1 = \frac{Pc(l-c)}{2EI} - \frac{Ml}{2EI};$$

$$\theta_1' = \frac{Mh}{3EI_1} - \frac{M_1h}{6EI_1};$$

$$\theta_2 = \frac{M_1l}{2EI_2};$$

$$\theta_2' = \frac{Mh}{6EI_1} - \frac{M_1h}{3EI_1},$$

we obtain two equations for determining M and M_1 .

5. A symmetrical rectangular frame is submitted to the action of a horizontal force H as shown in Fig. 172. Determine the bending moments M and M_1 at the joints.

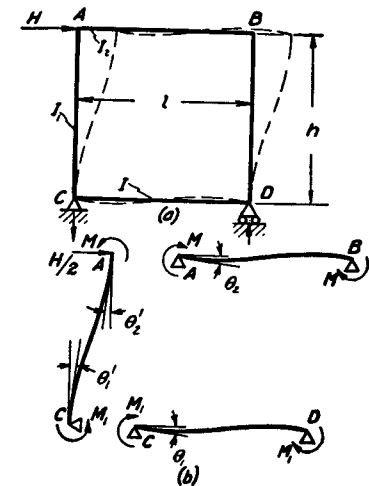


FIG. 172.

Solution. The deformed shape of the frame is shown in Fig. 172 (a). Disjoining the frame as shown in Fig. 172 (b), and applying moments the directions of which are chosen to comply with the distorted shape of the frame, Fig. 172 (a), we have

for the bar CD

$$\theta_1 = \frac{M_1 l}{6EI} = \left(\frac{Hh}{2} - M \right) \frac{l}{6EI}. \quad (a)$$

Considering now the vertical bar AC as a cantilever built in at the end C at an angle θ_1 , the slope at the end A will be

$$\theta_2' = \theta_1 + \frac{H}{2} \frac{h^2}{2EI_1} - \frac{Mh}{EI_1}. \quad (b)$$

Finally, due to bending of the bar AB ,

$$\theta_2 = \theta_2' = \frac{Ml}{6EI_2}. \quad (c)$$

Then, from eqs. (a), (b) and (c),

$$M = \frac{Hh}{2} \left(1 + \frac{3h}{l} \frac{I}{I_1} \right) \frac{1}{1 + \frac{I}{I_2} + 6 \frac{h}{l} \frac{I}{I_1}}. \quad (d)$$

Substituting in eq. (a), the bending moment M_1 can be found. When the horizontal bar CD has very great rigidity, we approach the condition of the frame shown in Fig. 168, submitted to a lateral load H . Substituting in (d) $I = \infty$, we obtain for this case

$$M = \frac{Hh}{4} \frac{1}{1 + \frac{1}{6} \frac{l}{h} \frac{I_1}{I_2}}. \quad (e)$$

The case of a frame such as shown in Fig. 165 with hinged supports and submitted to the action of a lateral load applied at A can also be obtained by substituting $I = 0$ in eq. (d).

6. Determine the horizontal reactions H , and the moments M_a and M_b at the joints A and B for the frame shown in Fig. 173.

Answer.

$$H = \frac{qh}{20} \frac{11m + 20}{2m + 3},$$

$$M_a = M_b = \frac{qh^2}{60} \frac{7m}{2m + 3},$$

where

$$m = \frac{I}{I_1} \cdot \frac{h}{l}.$$

7. A frame consists of two bars joined rigidly at B and built in at A and C (Fig. 174). Determine the bending moment M at

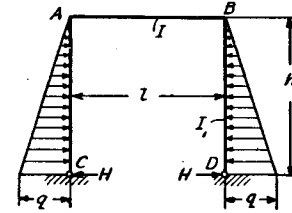


FIG. 173.

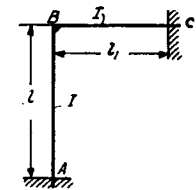


FIG. 174.

B and the compressive force P in AB when, due to a rise in temperature, the bar AB increases in length by $\Delta = \alpha l(t - t_0)$.

Answer. P and M can be found from equations:

$$\frac{Pl_1^3}{3EI} - \frac{Ml_1^2}{2EI} = \Delta,$$

$$\frac{Pl_1^2}{2EI} - \frac{Ml_1}{EI} = \frac{Ml}{4EI}.$$

44. Beams on Three Supports.—In the case of a beam on three supports (Fig. 175, *a*) there is one statically indeterminate reactive element. Let the reaction of the intermediate support be this element. Then by using the method of superposition the solution of case (*a*) may be obtained by combining the cases represented in (*b*) and (*c*), Fig. 175. The intermediate reaction X is found by using the condition that the deflection δ produced at C by the load P must be eliminated by the reaction X . Using eq. (86), we get the following equation for determining X :

$$\frac{Pcl_1[(l_1 + l_2)^2 - c^2 - l_1^2]}{6(l_1 + l_2)EI_z} = \frac{Xl_1^2l_2^2}{3(l_1 + l_2)EI_z},$$

from which

$$X = \frac{Pc[(l_1 + l_2)^2 - c^2 - l_1^2]}{2l_1l_2^2}. \quad (115)$$

If P is acting on the left span of the beam, the same equation can be used, but the distance c must be measured from the

support A and l_1 and l_2 must be interchanged. For $l_1 = l_2 = l$, from (115),

$$X = \frac{Pc(3l^2 - c^2)}{2l^3}. \quad (116)$$

Having the solution for a single load P , any other loading can easily be studied by using the method of superposition.

The same problem can be solved in another manner. Imagine the beam cut into two parts at C (Fig. 175, d) and let

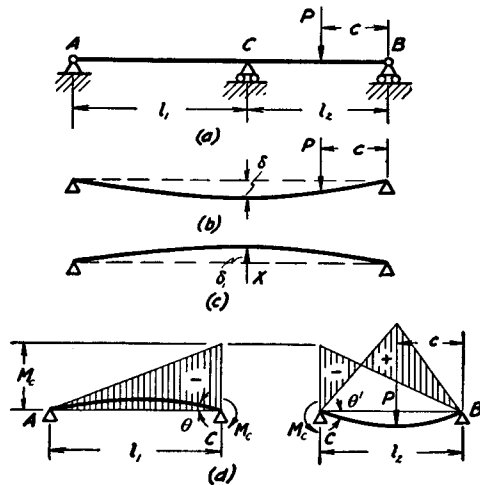


FIG. 175.

M_c denote the magnitude of the bending moment of the original beam at this cross section. In this manner the problem is reduced to the consideration of the two simply supported beams shown in (d) which are statically determinate. The magnitude of M_c is determined from the condition of continuity of the deflection curve at the support C . From this $\theta = \theta'$, whence, using the eqs. (88), p. 142, and (104), p. 158, we obtain

$$-\frac{M_c l_1}{3EI_z} = \frac{Pc(l_2^2 - c^2)}{6l_2 EI_z} + \frac{M_c l_2}{3EI_z},$$

from which

$$M_c = -\frac{Pc(l_2^2 - c^2)}{2l_2(l_1 + l_2)}. \quad (117)$$

The direction of M_c as determined from the condition of bending is shown by arrows in Fig. 175 (d). The bending moment diagram is shown by the shaded area in Fig. 175 (d).

Problems

1. For the example in Fig. 175 prove that the magnitude of the bending moment M_c given by eq. (117) is the same as that given for the cross section C by eq. (115).

2. Draw the shearing force diagram for the beam of the preceding problem if $l_1 = l_2$, $c = l_2/2$, and $P = 1,000$ lbs.

3. A beam on three supports (Fig. 175, a) is carrying a uniformly distributed load of intensity q . Determine the bending moment at the support C .

Solution. By the method of superposition, substituting qdc for P in eq. (117) and integrating along both spans, we obtain

$$M_c = -\int_0^{l_2} \frac{qc(l_2^2 - c^2)dc}{2l_2(l_1 + l_2)} - \int_0^{l_1} \frac{qc(l_1^2 - c^2)dc}{2l_1(l_1 + l_2)} = -\frac{q}{8} \frac{l_2^3 + l_1^3}{l_1 + l_2},$$

when

$$l_1 = l_2 = l, \quad M_c = -\frac{ql^2}{8}.$$

The direction of this moment is as shown in Fig. 175 (d).

4. Draw the shearing force diagram for the preceding problem assuming $l_1 = l_2$ and $q = 500$ lbs. per ft.

5. Determine the numerical maximum bending moment in the beam ACB (Fig. 175) if $P = 10,000$ lbs., $l_1 = 9$ ft., $l_2 = 12$ ft., $c = 6$ ft.

Answer. $M_{\max} = 23,600$ lbs. ft.

6. A beam on three equidistant supports is carrying a uniformly distributed load of intensity q . What effect will it have on the middle reaction if the middle support is lowered a distance δ ?

Solution. Using the method shown in Fig. 175 (b) and (c), the middle reaction X is found from the equation:

$$\frac{5}{384} \frac{q(2l)^4}{EI} = \frac{X(2l)^3}{48EI} + \delta,$$

from which

$$X = \frac{5}{8} 2ql - \frac{6\delta EI}{l^3}.$$

7. Determine the additional pressure of the beam AB on the support C (Fig. 175, a) due to non-uniform heating of the beam

if the temperature varies from t at the bottom to t_1 at the top of the beam according to a linear law, $t > t_1$ and $l_1 = l_2 = l$.

Solution. If the support at C were removed, then, due to the non-uniform heating, the deflection curve of the beam would become the arc of a circle. The radius of this circle is determined by the equation:

$$\frac{1}{r} = \frac{\alpha(t - t_1)}{h},$$

in which h = the depth of the beam and α = the coefficient of thermal expansion. The corresponding deflection at the middle is $\delta = l^2/2r$ and the reaction X at C can be found from the equation:

$$\frac{X(2l)^3}{48EI} = \delta.$$

8. Determine the bending moment diagram for the beam ABC supported by three pontoons (Fig. 176) if the horizontal cross-sectional area of each pontoon is A and the weight of unit volume of water is γ .

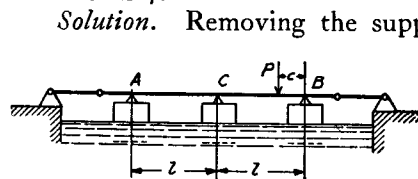


FIG. 176.

Solution. Removing the support at C , the deflection δ produced at this point by the load P consists of two parts: (a) the deflection due to bending of the beam and (b) the deflection due to sinking of pontoons A and B . From eq. (91) we obtain

$$\delta = \frac{Pc}{48EI_z} [3(2l)^2 - 4c^2] + \frac{P}{2A\gamma}. \quad (a)$$

The reaction X of the middle support diminishes the above deflection by

$$\frac{X(2l)^3}{48EI_z} + \frac{X}{2A\gamma}. \quad (b)$$

The difference between (a) and (b) represents the distance the middle pontoon sinks, from which we get the following equation for determining X :

$$\frac{Pc}{48EI_z} [3(2l)^2 - 4c^2] + \frac{P}{2A\gamma} - \frac{X(2l)^3}{48EI_z} - \frac{X}{2A\gamma} = \frac{X}{A\gamma}.$$

Knowing X , the bending moment diagram can readily be obtained.

45. Continuous Beams.—In the case of a continuous beam on many supports (Fig. 177) one support is usually considered as an immovable hinge while the other supports are hinges on rollers. In this arrangement every intermediate support has only one unknown reactive element, the magnitude of the vertical reaction; hence the number of statically indeterminate

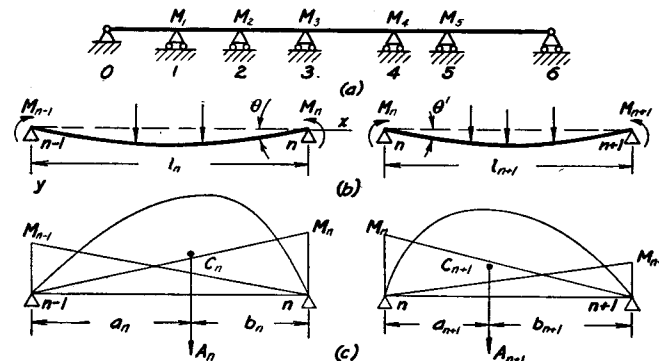


FIG. 177.

elements is equal to the number of intermediate supports. For instance, in the case shown in Fig. 177 (a) the number of statically indeterminate elements is five. Both methods shown in the previous article can be used here also. But if the number of supports is large, the second method, in which the bending moments at the supports are taken as the statically indeterminate elements, is by far the simpler method. Let Fig. 177 (b) represent two adjacent spans n and $n + 1$ of a continuous beam cut at supports $n - 1$, n and $n + 1$. Let M_{n-1} , M_n and M_{n+1} denote the bending moments at these supports. The directions of these moments depend on the loads on the beam. We will assume the directions shown in the figure.⁶ It is evident that if the bending moments at the supports are known the problem of the continuous beam will be reduced to that of calculating as many simply supported

⁶ If finally we would obtain negative signs for some moments, this will indicate that the directions of these moments are opposite to that shown in the figure.

beams as there are spans in the continuous beam. For calculating the bending moments M_{n-1} , M_n , M_{n+1} the condition of continuity of the deflection curve at the supports will be used. For any support n this condition of continuity is satisfied if the deflection curves of the two adjacent spans have a common tangent at the support n , i.e., if the slope at the right end of span n is equal to the slope at the left end of span $n+1$. To calculate these slopes the area moment method will be used. Let A_n denote the area of the bending moment diagram for the span n , considered as a simply supported beam, due to the actual load on this span; let a_n and b_n represent the horizontal distances of the centroid C_n of the moment area from the supports $n-1$ and n . Then the slope at the right end for this condition of loading is (see Art. 35)

$$-\frac{A_n a_n}{l_n EI_z}.$$

In addition to the deflection caused by the load on the span itself, the span n is also bent by the couples M_{n-1} and M_n . From equations (103) and (104) the slope produced at the support n by these couples is

$$-\left(\frac{M_n l_n}{3EI_z} + \frac{M_{n-1} l_n}{6EI_z}\right).$$

The total angle of rotation is then *

$$\theta = -\left(\frac{M_n l_n}{3EI_z} + \frac{M_{n-1} l_n}{6EI_z} + \frac{A_n a_n}{l_n EI_z}\right). \quad (a)$$

In the same manner, for the left end of the span $n+1$, we obtain

$$\theta' = \frac{A_{n+1} b_{n+1}}{l_{n+1} EI_z} + \frac{M_n l_{n+1}}{3EI_z} + \frac{M_{n+1} l_{n+1}}{6EI_z}. \quad (b)$$

From the condition of continuity it follows that

$$\theta = \theta'. \quad (c)$$

* The angle is taken positive if rotation is in clockwise direction.

Substituting expressions (a) and (b) in this equation we obtain

$$M_{n-1} l_n + 2M_n(l_n + l_{n+1}) + M_{n+1} l_{n+1} = -\frac{6A_n a_n}{l_n} - \frac{6A_{n+1} b_{n+1}}{l_{n+1}}. \quad (118)$$

This is the well-known *equation of three moments*.⁷ It is evident that the number of these equations is equal to the number of intermediate supports and the bending moments at the supports can be calculated without difficulty.

In the beginning it was assumed that the ends of the continuous beam were supported. If one or both ends are built in, then the number of statically indeterminate quantities will be larger than the number of intermediate supports and derivation of additional equations will be necessary to express the condition that no rotation occurs at the built-in ends (see problem 5 below).

Knowing the moments at the supports, there is no difficulty in calculating the reactions at the supports of a continuous beam. Taking, for instance, the two adjacent spans n and $n+1$ (Fig. 177, *b*), and considering them as two simply supported beams, the reaction R_n' at the support n , due to the loads on these two spans, can easily be calculated. In addition to this there will be a reaction due to the moments M_{n-1} , M_n and M_{n+1} . Taking the directions of these moments as indicated in Fig. 177 (*b*), the additional pressure on the support n will be

$$\frac{M_{n-1} - M_n}{l_n} + \frac{-M_n + M_{n+1}}{l_{n+1}}.$$

Adding this to the above reaction R_n' , the total reaction will be

$$R_n = R_n' + \frac{M_{n-1} - M_n}{l_n} + \frac{-M_n + M_{n+1}}{l_{n+1}}. \quad (119)$$

If concentrated forces are applied at the supports they will

⁷ This equation was established by Bertot; see *Comptes rendus de la Société des Ingenieurs civils*, p. 278, 1855; see also Clapeyron, *Paris, C. R.*, t. 45 (1857).

be transmitted directly to the corresponding supports and must be added to the right side of equation (119).

The general equation of continuity (*c*) can also be used for those cases where, by mis-alignment, the supports are not situated on the same level (Fig. 178). Let β_n and β_{n+1} denote the angles of inclination to the horizontal of the straight lines connecting the points of supports in the n th and $(n+1)$ th spans. The angle of rotation given by eqs. (a) and (b) was measured from the line connecting the centers of the hinges; hence the angle θ between the tangent at n and the horizontal line will be, for the span n ,

$$\theta = - \left(\frac{M_n l_n}{3EI_z} + \frac{M_{n+1} l_n}{6EI_z} + \frac{A_n a_n}{l_n EI_z} - \beta_n \right).$$

In the same manner for the span $n+1$

$$\theta' = \frac{A_{n+1} b_{n+1}}{l_{n+1} EI_z} + \frac{M_n l_{n+1}}{3EI_z} + \frac{M_{n+1} l_{n+1}}{6EI_z} + \beta_{n+1}.$$

Equating these angles we obtain

$$M_{n-1} l_n + 2M_n(l_n + l_{n+1}) + M_{n+1} l_{n+1} = - \frac{6A_n a_n}{l_n} - \frac{6A_{n+1} b_{n+1}}{l_{n+1}} - 6EI_z(\beta_{n+1} - \beta_n). \quad (120)$$

If h_{n-1} , h_n , h_{n+1} denote the vertical heights of the supports $n-1$, n and $n+1$ above a horizontal reference line, we have

$$\beta_n = \frac{h_{n-1} - h_n}{l_n}; \quad \beta_{n+1} = \frac{h_n - h_{n+1}}{l_{n+1}}.$$

Substituting in eq. (120), the bending moments at the supports due to mis-alignment can easily be calculated.

Problems

1. Determine the bending moment and shearing force diagrams for a continuous beam with three equal spans carrying a uniformly distributed load of intensity q (Fig. 179).

Solution. For a simply supported beam and a uniformly distributed load the bending moment diagram is a parabola with

maximum ordinate $ql_n^2/8$. The area of the parabolic segment is

$$A_n = \frac{2}{3} l_n \frac{ql_n^2}{8} = \frac{ql_n^3}{12}.$$

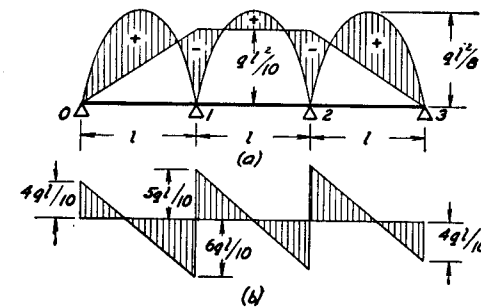


FIG. 179.

The centroid is at the middle of the span, so $a_n = b_n = l_n/2$. Substituting in eq. (118), we obtain

$$M_{n-1} l_n + 2M_n(l_n + l_{n+1}) + M_{n+1} l_{n+1} = - \frac{ql_n^3}{4} - \frac{q(l_{n+1})^3}{4}. \quad (118')$$

Applying this equation to our case (Fig. 179) for the first and the second span and noting that at the support 0 the bending moment is zero, we obtain

$$4M_1 l + M_2 l = - \frac{ql^3}{2}. \quad (d)$$

From the condition of symmetry it is evident that $M_1 = M_2$. Then, from (d), $M_1 = -(ql^2/10)$. The bending moment diagram is shown in Fig. 179 (a) by the shaded area. The reaction at support 0 is

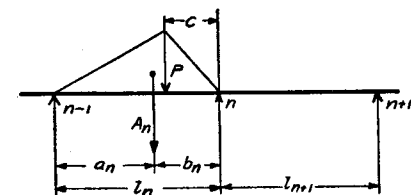


FIG. 180.

$$R_0 = \frac{ql}{2} - \frac{ql^2}{10l} = \frac{4}{10} ql.$$

The reaction at support 1 is

$$R_1 = ql + \frac{ql^2}{10l} = \frac{11}{10} ql.$$

The shearing force diagram is shown in Fig. 179 (b). The maximum moment will evidently be at a distance $4l/10$ from the ends of the

beam, where the shearing force is zero. The numerical maximum bending moment is at the intermediate supports.

2. Set up the expression for the right side of eq. (118) when there is a concentrated force in the span n and no load in the span $n + 1$ (Fig. 180).

Solution. In this case A_n is the area of the triangle of height $Pc(l_n - c)/l_n$ and with the base l_n ; hence $A_n = Pc(l_n - c)/2$ and $a_n = l_n - b_n = l_n - (l_n + c)/3$. Substituting in (118), we get

$$M_{n-1}l_n + 2M_n(l_n + l_{n+1}) + M_{n+1}l_{n+1} = -\frac{Pc(l_n - c)(2l_n - c)}{l_n}.$$

3. Determine the bending moments at the supports and the reactions for the continuous beam shown in Fig. 181.

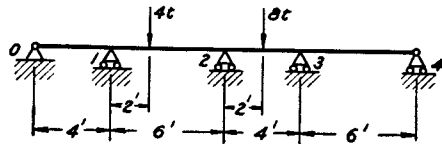


FIG. 181.

Answer. $M_1 = -1.54$ ton ft.; $M_2 = -3.74$ ton ft.; $M_3 = -1.65$ ton ft. The reactions are $R_0 = -0.386$ ton; $R_1 = 2.69$ tons; $R_2 = 6.22$ tons; $R_3 = 3.75$ tons; $R_4 = -0.275$ ton. The moments at the supports are negative and produce bending convex up.

4. Construct the bending moment and shearing force diagrams for the continuous beam shown in Fig. 182 (a) if $P = ql$, $c = l/4$.

Solution. In this case the imaginary loading for the first span is $A_1 = ql^3/12$, for the second span $A_2 = 0$, and for the third span

$$A_3 = \frac{Pc(l - c)}{2}; \quad a_3 = \frac{2l - c}{3}; \quad b_3 = \frac{l + c}{3}.$$

Substituting in eq. (118) gives the following equations for determining the bending moments M_1 and M_2 :

$$4M_1l + M_2l = -\frac{ql^3}{4},$$

$$M_1l + 4M_2l = -\frac{Pc(l^2 - c^2)}{l},$$

from which

$$M_1 = -\frac{49}{960}ql^2; \quad M_2 = -\frac{44}{960}ql^2.$$

Both these moments are negative, so that the bending moment diagram will be as shown in Fig. 182 (b). To obtain the shearing

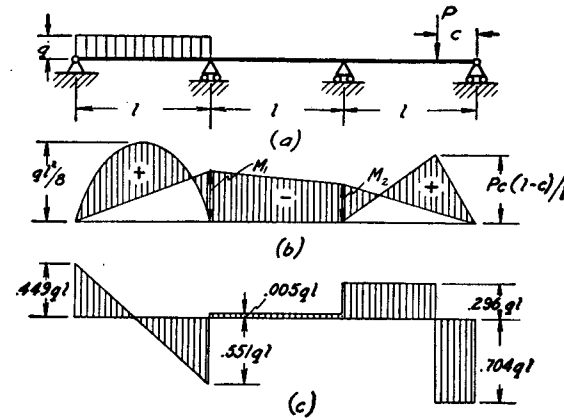


FIG. 182.

force diagram it is necessary to find the reactions at the supports of the separate spans (eq. 119). The pressures on supports 0 and 1 for the first span of the beam are

$$\frac{ql}{2} + \frac{M_1}{l} = 0.449ql \quad \text{and} \quad \frac{ql}{2} - \frac{M_1}{l} = 0.551ql.$$

The pressure on supports 1 and 2 of the second span of the beam are

$$\frac{-M_1 + M_2}{l} = 0.005ql \quad \text{and} \quad \frac{-M_2 + M_1}{l} = -0.005ql$$

and on supports 2 and 3 of the third span

$$\frac{Pc}{l} - \frac{M_2}{l} = 0.296ql \quad \text{and} \quad \frac{P(l - c)}{l} + \frac{M_2}{l} = 0.704ql.$$

From this, the shearing force diagram is obtained as shown in Fig. 182 (c).

5. Determine the bending moment diagram for the case shown in Fig. 183 (a).

Solution. Equation (118) for this case becomes

$$M_0l + 4M_1l + M_2l = 0.$$

Now, $M_2 = -Pc$, while the condition at the built-in end (sup-

port o) gives (from eqs. 103, 104)

$$\frac{M_0 l}{3EI} + \frac{M_1 l}{6EI} = 0.$$

From the above equations we obtain $M_0 = -\frac{1}{7}Pc$; $M_1 = +\frac{2}{7}Pc$; $M_2 = -Pc$. The bending moment diagram is as shown in Fig. 183 (b).

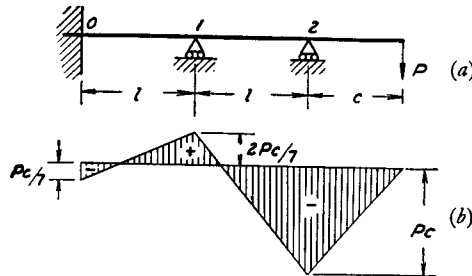


FIG. 183.

6. Determine the bending moments at the supports of a continuous beam with seven equal spans when the middle span alone is loaded by a uniformly distributed load q .

Answer.

$$M_3 = M_4 = -\frac{ql^2}{18.9}; \quad M_2 = M_5 = -\frac{1}{3.75}M_3; \quad M_1 = M_6 = \frac{1}{15}M_3.$$

7. A continuous beam having four equal spans of length 16 ft. each is uniformly loaded over the last span. Draw the shearing force and bending moment diagrams if $q = 400$ lbs. per ft.

8. Solve problem 5 assuming that a uniform load of intensity q is distributed along the entire length of the beam and that $c = l/2$. Draw the shearing force diagram for this loading condition.

CHAPTER VII

BEAMS OF VARIABLE CROSS SECTION. BEAMS OF TWO MATERIALS

46. Beams of Variable Cross Section.—In the preceding discussion all of the beams considered were of prismatical form. More elaborate investigation shows that equations (56) and (57), which were derived for prismatical bars, can also be used with sufficient accuracy for bars of variable cross section provided the variation is not too extreme. Cases of abrupt changes in cross section, in which considerable stress concentration takes place, will be discussed in Part II.

As a first example of a beam of a variable cross section let us consider the deflection of a cantilever beam of *uniform strength*, i.e., a beam in which the section modulus varies along the beam in the same proportion as the bending moment. Then, as is seen from eqs. (60), $(\sigma_x)_{\max}$ remains constant along the beam and can be taken equal to σ_w . Such a condition is favorable as regards the amount of material used, because each cross section will have only the area necessary to satisfy the conditions of strength.

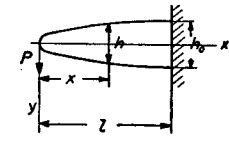


FIG. 184.

For a cantilever with an end load (Fig. 184), the bending moment at a cross section a distance x from the load is numerically equal to Px . In order to have a beam of uniform strength the section modulus also must be proportional to x . This condition can be fulfilled in various ways.

Let us take as a first example the case of a rectangular cross section of constant width b and variable depth h . From the definition of the beam of equal strength it follows that

$$\frac{M}{Z} = \frac{6Px}{bh^2} = \frac{6Pl}{bh_0^2} = \text{const.},$$

in which h_0 is the depth of the beam at the built-in end. Then

$$h^2 = \frac{h_0^2 x}{l}.$$

It may be seen that in this case the depth of the beam varies following a parabolic law. At the loaded end the cross-sectional area is zero. This result is obtained because the shearing stress was neglected in the derivation of the form of the beam of uniform strength. In practical applications this stress must be taken into account by making certain changes in the above form at the loaded end to have a cross-sectional area sufficient to transmit the shearing force. The deflection of the beam at the end is found from eq. (93):

$$\delta = \int_0^l \frac{12Px^2 dx}{Ebh^3} = \frac{12Pl^{3/2}}{Ebh_0^3} \int_0^1 \sqrt{x} dx = \frac{2}{3} \frac{Pl^3}{EI_0}, \quad (121)$$

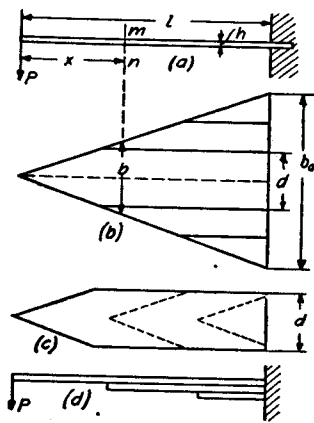


FIG. 185.

where $I_0 = bh_0^3/12$ represents the moment of inertia of the cross section at the built-in end. Comparison with eq. (95) shows that this deflection is twice that of a prismatical bar having the flexural rigidity EI_0 and subjected to the same load. That is, the bar has the same strength, but not the same stiffness as the prismatical bar.

As a second example we consider a cantilever of rectangular cross section of constant depth h and variable width b (Fig. 185a, b). As the section modulus and moment of inertia I_z of a beam of triangular shape increases with x in the same proportion as the bending moment, the maximum stress $(\sigma_x)_{\max}$ and the curvature (see eq. 56) remain constant along the beam and the magnitude of the radius of curvature can be determined from the equation (see eq. 55):

$$(\sigma_x)_{\max} = \frac{hE}{2r}. \quad (c)$$

The deflection at the end of a circular arc can be taken, for small deflections, equal to

$$\delta = \frac{l^2}{2r} = \frac{Pl^3}{2EI_0} \quad (122)$$

or, by using (c),

$$\delta = (\sigma_x)_{\max} \frac{l^2}{hE}. \quad (123)$$

It is seen from this equation that for this type of cantilever of uniform strength the deflection at the end varies as the square of the length and inversely as the depth.

These results may be used to compute the approximate stresses and deflections in a *spring of leaf type*. The triangular plate considered above is thought of as divided into strips, arranged as shown in Fig. 185 (b, c, d). The initial curvature and the friction between the strips are neglected for a first approximation and eq. (123) can then be considered as sufficiently accurate.¹

The conjugate beam theory can also be used in calculating the deflection of beams of variable cross section. In this connection it is only necessary to bear in mind that the curvature of the deflection line at any cross section is equal to the ratio M/EI_z (eq. 56, p. 91). Therefore an increase in the flexural rigidity at a given section will have the same effect on the deflection as a decrease of the bending moment there in the same ratio. Consequently the problem of the deflection of beams of variable cross section can be reduced to that of beams of constant cross section, by using the *modified*

¹ This solution was obtained by E. Phillips, *Annales des Mines*, Vol. 1, pp. 195-336, 1852. See also Todhunter and Pearson, *History of Elasticity*, Vol. 2, part 1, p. 330, and *Theorie der Biegungs- und Torsions-Federn* v. A. Castigliano, Wien, 1888. The effect of friction between the leaves was discussed by G. Marié, *Annales des Mines*, Vols. 7-9, 1905 and 1906. D. Landau and P. H. Parr investigated the distribution of load between the individual leaves of the spring, *Journ. of the Franklin Inst.*, Vols. 185, 186, 187. A complete bibliography on mechanical springs was published by the Amer. Soc. Mech. Eng., New York, 1927. See also the book by S. Gross and E. Lehr, "Die Federn," V. D. I. Verlag, 1938.

bending moment diagram in which each ordinate is multiplied by I_0/I , where I is the moment of inertia at that cross section and I_0 is the constant moment of a uniform bar to the deflection of which we will reduce our bar of variable cross section.

For example, the problem of the deflection of a circular shaft (Fig. 186) which has sections of two different diameters,

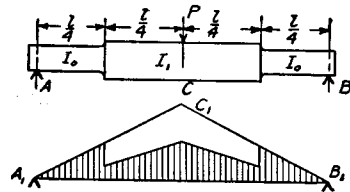


FIG. 186.

with moments of inertia I_0 and I_1 , and loaded by P , can be reduced to that for a circular shaft having a constant moment of inertia of the cross section I_0 as follows. In considering the conjugate beam A_1B_1 instead of a triangular loading $A_1C_1B_1$ representing the bending moment diagram, we use the loading represented by the shaded area. This area is obtained by reducing ordinates of the diagram along the middle portion of the shaft in the ratio I_0/I_1 . Determination of deflections and slopes can now be made as in the case of prismatical bars, the magnitude of the deflection and slope at any cross section of the beam being equal to the bending moment and shearing force of the conjugate beam divided by EI_0 . It should be noted that in the case represented in Fig. 186 an abrupt change in the diameter of the shaft takes place at a distance $l/4$ from the supports, producing local stresses at these points. These have no substantial effect upon the deflection of the shaft provided the difference in diameter of the two portions is small in comparison with the lengths of these portions.

The method used for a shaft of variable cross section can be applied also to built-up I beams of variable cross section. An example of an I beam supported at the ends and uniformly loaded is shown in Fig. 187. The bending moment decreases from the middle towards the ends of the beam and the weight of the beam can be reduced by diminishing the number of plates in the flanges as shown schematically in the figure. The deflection of such a beam may be calculated on the basis of the moment of inertia of the middle cross section. The load on

the conjugate beam, instead of being a single parabola indicated by the dotted line, is taken as represented by the shaded

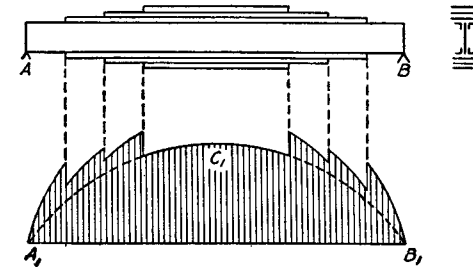


FIG. 187.

diagram in Fig. 187, each diminution in the cross section being compensated for by an increase of the ordinates of the moment diagram in the ratio I_{middle}/I .

Problems

1. A steel plate of the form shown in Fig. 188 is built in at one end and loaded by a force P at the other. Determine the deflection at the end if the length is $2l$, a is the width, h the thickness of the plate, and P the load at the end.

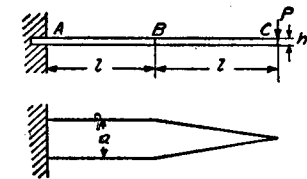


FIG. 188.

Solution. The deflection will consist of three parts:

$$(1) \delta_1 = \frac{Pl^3}{3EI_z} + \frac{Pl^3}{2EI_z}, \text{ the deflection at } B,$$

$$(2) \delta_2 = \frac{3Pl^3}{2EI_z}, \text{ the deflection at } C \text{ due to the slope at } B,$$

and

$$(3) \delta_3 = \frac{Pl^3}{2EI_z}, \text{ the deflection due to bending of part } BC \text{ of the plate.}$$

The complete deflection is given by $\delta = \delta_1 + \delta_2 + \delta_3$.

2. Solve the previous problem assuming $l = 10$ in., $a = 3$ in., $P = 1,000$ lbs. and $\sigma_{\text{max}} = 70,000$ lbs. per sq. in.

3. Determine the width d of a carriage leaf spring (Fig. 185) and its deflection if $P = 6,000$ lbs., $h = \frac{1}{2}$ in., $l = 24$ in., $\sigma_w = 70,000$ lbs. per sq. in., and the number of leaves $n = 10$.

Solution. Considering the leaves of the spring as cut out of a triangular plate (Fig. 185, b), the maximum stress will be

$$\sigma_{\max} = \frac{6Pl}{ndh^2},$$

from which

$$d = \frac{6Pl}{n\sigma_w h^2} = \frac{6 \times 6,000 \times 24 \times 4}{10 \times 70,000} = 4.94 \text{ in.}$$

The deflection is determined from eq. (123),

$$\delta = \frac{70,000 \times 24^2}{\frac{1}{2} \times 30 \times 10^6} = 2.69 \text{ in.}$$

4. Compare the deflection at the middle and the slope at the ends of the shaft shown in Fig. 186 with those of a shaft of the same length but of constant cross section whose moment of inertia is equal to I_0 . Take $I_1 : I_0 = 2$.

Solution. Due to the greater flexural rigidity at the middle, the slopes at the ends of the shaft shown in Fig. 186 will be less than those at the ends of the cylindrical shaft in the ratio of the shaded area to the total area of the triangle $A_1C_1B_1$. The total area is the loading for the case of the cylindrical shaft. For the values given, this ratio is $5/8 : 1$.

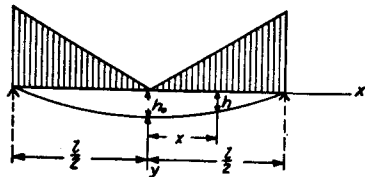


FIG. 189.

5. A beam supported at the ends is loaded as shown in Fig. 189. How should the depth h of the beam vary in order to have a form of equal strength if the width b of the rectangular cross section remains constant along the beam?

Answer.

$$h^2 = h_0^2 \left(1 - 8 \frac{x^2}{l^2} \right).$$

6. Determine the deflection of a steel plate $\frac{1}{2}$ in. thick shown in Fig. 190 under the action of the load $P = 20$ lbs. at the middle.

Solution. Reducing the problem to that of the deflection of a plate of constant width = 4 in., the transformed moment area for this case will be represented by the trapezoid $adeb$, and we obtain

$$\delta = \frac{11}{8} \cdot \frac{Pl^3}{48EI_z},$$

where I_z is the moment of inertia at the middle of the span. The numerical value of the deflection can now be easily calculated.

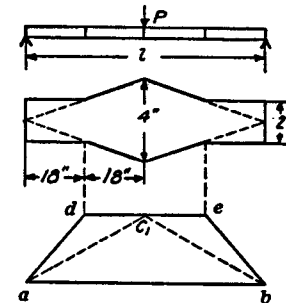


FIG. 190.

7. Determine the maximum deflection of a leaf spring (Fig. 185) if $l = 36$ in., $h = \frac{1}{2}$ in., $E = 30 \times 10^6$ lbs. per sq. in., $\sigma_w = 60,000$ lbs. per sq. in.

Answer. $\delta = 5.18$ in.

8. A simply supported rectangular beam carries a load P which moves along the span. How should the depth h of the beam vary in order to have a form of equal strength if the width b of the rectangular cross section remains constant along the beam?

Solution. For any given position of the load, the maximum moment occurs under the load. Denoting the distance of the load from the middle of the span by x , the bending moment under the load is

$$M = \frac{P \left(\frac{l}{2} - x \right) \left(\frac{l}{2} + x \right)}{l}.$$

The required depth h of the beam under the load is obtained from the equation

$$\sigma_w = \frac{6M}{bh^2},$$

from which

$$h^2 = \frac{6M}{b\sigma_w} = \frac{6P}{lb\sigma_w} \left(\frac{l^2}{4} - x^2 \right)$$

and

$$\frac{h^2}{6Pl/4b\sigma_w} + \frac{x^2}{l^2/4} = 1.$$

It may be seen that in this case the depth of the beam varies following an elliptical law, the semi-axes of the ellipse being

$$l/2 \quad \text{and} \quad \sqrt{6Pl/4b\sigma_w}.$$

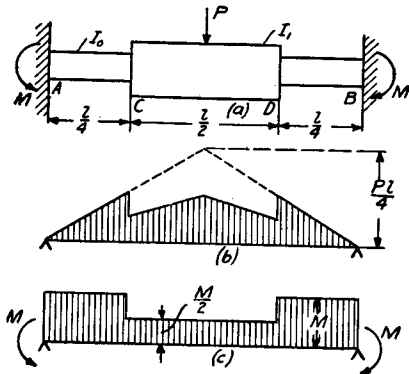


FIG. 191.

(b) and (c) are equal. Therefore the equation for calculating the numerical value of M is

$$\frac{Pl}{4} - \frac{3Pl}{8} = Ml - \frac{Ml}{4},$$

from which

$$M = 5/48 Pl.$$

10. Solve the above problem on the assumption that two equal loads P are applied at C and D .

Answer. $M = Pl/6$.

47. Beams of Two Different Materials.—There are cases when beams of two or more different materials are used. Figure 192 (a) represents a simple case, a wooden beam reinforced by a steel plate bolted to the beam at the bottom. Assuming that there is no sliding between the steel and wood during bending, the theory of solid beams can also be used here. According to this theory elongations and contractions of longitudinal fibers are proportional to the distance from the neutral axis. Due to the fact that the modulus of elasticity of wood is much smaller than that of steel, the wooden part of the beam in bending will be equivalent to a much narrower web of steel as shown in Fig. 192 (b). To have the moment

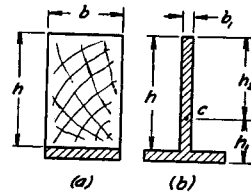


FIG. 192.

of the internal forces unchanged, for a given curvature, i.e., for a given elongation and contraction, the thickness b_1 of this web must be as follows:

$$b_1 = \frac{bE_w}{E_s}. \quad (a)$$

In this manner the problem is reduced to that of the bending of a steel beam of T section, which can be solved on the basis of the previous theory. Consider, for instance, a simply supported beam 10 feet long loaded at the middle by 1,000 lbs. The cross-sectional dimensions of the wooden part of the beam are $b = 4$ in. and $h = 6$ in. and at the convex side it is reinforced by a steel plate 1 inch wide and $\frac{1}{2}$ inch thick. Assuming $E_w/E_s = 1/20$ and using eq. (a), the equivalent section will have a web 6×0.20 and the flange 1×0.50 . The distances of the outermost fibers from the neutral axis (Fig. 192, b) are $h_1 = 2.54$ in. and $h_2 = 3.96$ in. The moment of inertia with respect to the neutral axis is $I_z = 7.37$ in.⁴, whence the stresses in the outermost fibers are (from eqs. 61, p. 92)

$$\sigma_{\max} = \frac{M_{\max} h_1}{I_z} = \frac{30,000 \times 2.54}{7.37} = 10,300 \text{ lbs. per sq. in.,}$$

$$\sigma_{\min} = -\frac{M_{\max} h_2}{I_z} = -\frac{30,000 \times 3.96}{7.37} = -16,000 \text{ lbs. per sq. in.}$$

To obtain the maximum compressive stress in the wood of the actual beam the stress σ_{\min} obtained above for steel must be multiplied by $E_w/E_s = 1/20$.

As another example of the bending of a beam of two different materials let us consider the case of a bi-metallic strip built up of nickel steel and monel metal (Fig. 193). The bending of such a strip by external forces can be discussed in the same manner as in the above problem of wood and steel, it being necessary only to know the ratio E_m/E_s , in which E_m and E_s are respectively the moduli of elasticity of monel metal and steel. Let us consider now the bending of such a strip due to a change in temperature. The coefficient of thermal expansion of monel metal is larger than that of nickel steel and when the temperature rises bending will occur concave on the side of the steel. This phenomenon of bending of

bi-metallic strips under varying temperatures is used in various automatic instruments for regulating temperature³ (thermostats). Let $h/2$ be the thickness of each metal, b the width of the strip, t the increase in temperature, r the radius of curvature, α_s and α_m

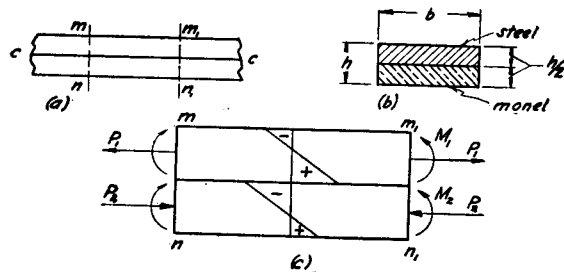


FIG. 193.

the coefficients of thermal expansion of steel and monel respectively, $E_s I_s$ = the flexural rigidity of the steel, $E_m I_m$ = the flexural rigidity of monel metal. When the temperature rises, the strip of monel metal, having a greater coefficient of expansion, will be subjected to both bending and compression and the steel will be subjected to bending and tension. Considering an element of the strip cut out by two adjacent cross sections mn and $m_1 n_1$ (Fig. 193, c), the internal forces over the cross section of the steel can be reduced to a tensile force P_1 and a couple M_1 . In the same manner for the monel metal, the internal forces can be reduced to a compressive force P_2 and a couple M_2 . The internal forces over any cross section of the beam must be in equilibrium; therefore

$$P_1 = P_2 = P$$

and

$$\frac{Ph}{2} = M_1 + M_2. \quad (a)$$

Using equations:

$$M_1 = \frac{E_s I_s}{r}; \quad M_2 = \frac{E_m I_m}{r}.$$

Then, from eq. (a),

$$\frac{Ph}{2} = \frac{E_s I_s}{r} + \frac{E_m I_m}{r}, \quad (b)$$

another equation for determining P and r can be derived from the condition that at the joining surface, $c-c$, the unit elongation of monel metal and steel must be the same; therefore

$$\alpha_s t + \frac{2P_1}{E_s h b} + \frac{h}{4r} = \alpha_m t - \frac{2P_2}{E_m h b} - \frac{h}{4r}$$

or

$$\frac{2P}{hb} \left(\frac{1}{E_s} + \frac{1}{E_m} \right) = (\alpha_m - \alpha_s)t - \frac{h}{2r}. \quad (c)$$

From eqs. (b) and (c) we obtain

$$\frac{4}{bh^2 r} (E_s I_s + E_m I_m) \left(\frac{1}{E_s} + \frac{1}{E_m} \right) = (\alpha_m - \alpha_s)t - \frac{h}{2r}. \quad (d)$$

Substituting in this equation

$$I_s = I_m = \frac{bh^3}{96} \quad \text{and} \quad E_s = 1.15 E_m,$$

the following approximate equation is obtained:

$$\frac{1}{r} = \frac{3}{2} \frac{(\alpha_m - \alpha_s)t}{h}. \quad (e)$$

Now, from eq. (b),

$$P = \frac{3}{h^2} (\alpha_m - \alpha_s)t (E_s I_s + E_m I_m) = \frac{bh}{32} (\alpha_m - \alpha_s)t (E_s + E_m) \quad (f)$$

and

$$M_1 = \frac{3}{2} \frac{(\alpha_m - \alpha_s)t}{h} E_s I_s; \quad M_2 = \frac{3}{2} \frac{(\alpha_m - \alpha_s)t}{h} E_m I_m. \quad (g)$$

From eqs. (f) and (g) P , M_1 and M_2 can be determined. The maximum stress in the steel is obtained by adding to the tensile stress produced by the force P the tensile stress due to the curvature $1/r$:

$$\sigma_{\max} = \frac{2P}{bh} + \frac{h E_s}{4r} = \frac{4}{bh^2 r} \left(E_s I_s + E_m I_m + \frac{bh^3}{16} E_s \right).$$

Assuming, for example, that both metals have the same modulus E , we obtain

$$\sigma_{\max} = \frac{hE}{3r},$$

or, by using eq. (e),⁴

$$\sigma_{\max} = \frac{1}{2} Et (\alpha_m - \alpha_s).$$

³ See author's paper in Journal of the Optical Soc. of Amer., Vol. 11, 1925, p. 233.

⁴ This equation holds also for $E_s = E_m$.

For $E = 27 \times 10^6$ lbs. per sq. in., $t = 200$ degrees Centigrade and $\alpha_m - \alpha_s = 4 \times 10^{-6}$ we find

$$\sigma_{\max} = 10,800 \text{ lbs. per sq. in.}$$

The distribution of stresses due to heating is shown in Fig. 193 (c).

Problems

1. Find the safe bending moment for the wooden beam reinforced by a steel plate, Fig. 192, if $b = 6$ in., $h = 8$ in., and the thickness of the steel plate is $\frac{1}{2}$ in. Assume $E_w = 1.5 \times 10^6$ lbs. per sq. in., $E_s = 30 \times 10^6$ lbs. per sq. in., $\sigma_w = 1,200$ lbs. per sq. in. for wood and $\sigma_s = 16,000$ lbs. per sq. in. for steel.

2. Assume that the wooden beam of the previous problem is reinforced at the top with a steel plate 2 in. wide and 1 in. thick and at the bottom with a steel plate 6 in. wide and $\frac{1}{2}$ in. thick. Calculate the safe bending moment if E and σ_w are the same as in the previous problem.

Answer. $M = 308,000$ in. lbs.

3. A bimetallic strip has a length $l = 1$ in. Find the deflection at the middle produced by a temperature increase equal to 200 degrees Centigrade if $E_s = 1.15E_m$ and $\alpha_m - \alpha_s = 4 \times 10^{-6}$.

48. Reinforced-Concrete Beams.—It is well known that the strength of concrete is much greater in compression than in tension. Hence a rectangular beam of concrete will fail from the tensile stresses on the convex side. The beam can be greatly strengthened by the addition of steel bars on the convex side as shown in Fig. 194. As concrete grips the steel strongly there will be no sliding of the steel bars with respect to the concrete during bending and the methods developed in the previous article can also be used here for calculating bending stresses.

In practice the cross-sectional area of the steel bars is usually such that the tensile strength of the concrete on the convex side is overcome before yielding of the steel begins and at larger loads the steel alone takes practically all the tension. Hence it is the established practice in calculating bending stresses in reinforced-concrete beams to assume that all the

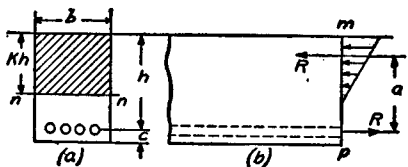


FIG. 194.

tension is taken by the steel and all the compression by the concrete. Replacing the tensile forces in the steel bars by their resultant R , the distribution of internal forces over any cross section mp will be as shown in Fig. 194 (b). Assuming as before that cross sections remain plane during bending and denoting by kh the distance of the neutral axis nn from the top,⁵ the maximum longitudinal unit contraction in the concrete ϵ_c , and the unit elongation of the axes of the steel bars ϵ_s , are given by the following:

$$\epsilon_c = -\frac{kh}{r}; \quad \epsilon_s = \frac{(1-k)h}{r}. \quad (a)$$

Concrete does not follow Hooke's law and a compression test diagram for this material has a shape similar to that for cast iron in Fig. 2 (b). As the compression stress increases, the slope of the tangent to the diagram decreases, i.e., the modulus of concrete decreases with an increase in stress. In calculating stresses in reinforced-concrete beams it is the usual practice to assume that Hooke's law holds for concrete, and to compensate for the variable modulus by taking a lower value for this modulus than that obtained from compression tests when the stresses are small. In specifications for reinforced-concrete it is usually assumed that $E_s/E_c = 15$. Then, from eqs. (a), the maximum compressive stress in the concrete and the tensile stress in the steel⁶ are, respectively,

$$\sigma_c = -\frac{kh}{r} E_c; \quad \sigma_s = \frac{(1-k)h}{r} E_s. \quad (b)$$

We will now calculate the position of the neutral axis from the condition that the normal forces over the cross section mp reduce to a couple equal to the bending moment. The sum of the compressive forces in the concrete must equal the tensile force R in the steel bars, or

$$-\frac{bkh\sigma_c}{2} = \sigma_s A_s, \quad (c)$$

⁵ k is a numerical factor less than unity.

⁶ The cross-sectional dimensions of the steel bars are usually small and the average tensile stress is used instead of the maximum stress.

where A_s is the total cross sectional area of steel. Using the notation $A_s/bh = n_1$ and $E_s/E_c = n$, we get from (c) and (b)

$$k^2 = 2(1 - k)nn_1, \quad (d)$$

from which

$$k = -nn_1 + \sqrt{(nn_1)^2 + 2nn_1}. \quad (124)$$

After determining the position of the neutral axis from eq. (124), the ratio between the maximum stress in the concrete and the stress in the steel becomes, from eqs. (b),

$$-\frac{\sigma_c}{\sigma_s} = \frac{k}{(1 - k)n}. \quad (125)$$

The distance a between the resultants R of the compressive and tensile forces acting over the cross section of the beam (Fig. 194, b) is

$$a = \frac{2}{3}kh + (1 - k)h = \left(1 - \frac{k}{3}\right)h \quad (126)$$

and the moment of the internal forces equal to the bending moment M is

$$aR = aA_s\sigma_s = -\frac{akbh}{2}\sigma_c = M,$$

from which

$$\sigma_s = \frac{M}{aA_s}, \quad (127)$$

$$\sigma_c = -\frac{2M}{akbh}. \quad (128)$$

By using eqs. (124) to (128) the bending stresses in reinforced-concrete beams are easily calculated.

Problems

1. If $E_s/E_c = 15$ and $A_s = 0.008bh$, determine the distance of the neutral axis from the top of the beam (Fig. 194).

Solution. Substituting in eq. (124) $n = 15$, $n_1 = 0.008$, we obtain $k = 0.384$ and the distance from the top of the beam is $kh = 0.384h$.

2. Determine the ratio $n_1 = A_s/bh$ if the maximum tensile stress

in the steel is 12,000 lbs. per sq. in., the maximum compressive stress in the concrete is 645 lbs. per sq. in., and $E_s/E_c = n = 15$.

Solution. From eq. (125) $k = 0.446$. Then, from eq. (d),

$$n_1 = \frac{k^2}{2(1 - k)n} = 0.012.$$

3. Determine the ratio n_1 if the maximum compressive stress in the concrete is one-twentieth of the tensile stress in the steel.

Answer. $n_1 = 0.0107$.

4. If $n = 15$ and the working compressive stress for concrete is 650 lbs. per sq. in., determine the safe load at the middle of a reinforced-concrete beam 10 feet long supported at the ends and having $b = 10$ in., $h = 12$ in., $A_s = 1.17$ sq. in.

Answer. $P = 5,570$ lbs.

5. Calculate the maximum moment which a concrete beam will safely carry if $b = 8$ in., $h = 12$ in., $A_s = 2$ sq. in., $E_s/E_c = 12$, and the working stress for steel is 15,000 lbs. per sq. in. and for concrete 800 lbs. per sq. in.

Answer. $M = 16,000$ ft. lbs.

6. Determine the value of k for which the maximum permissible stresses in the concrete and the steel are realized simultaneously.

Solution. Let σ_c and σ_s be the allowable stresses for the concrete and the steel. Then taking the ratio of these stresses, as given by formulas (b), and considering only the absolute value of this ratio, we obtain

$$\frac{\sigma_c}{\sigma_s} = \frac{kE_c}{(1 - k)E_s},$$

from which

$$k = \frac{\sigma_c}{\sigma_c + \sigma_s \frac{E_c}{E_s}}.$$

If this condition is satisfied the beam is said to have *balanced reinforcement*. Having k and using equation (126) the depth is obtained from equation (128) and the area A_s from equation (127).

7. Determine the steel ratio $n_1 = A_s/bh$ if $\sigma_s = 12,000$ lbs. per sq. in., $\sigma_c = 645$ lbs. per sq. in., and $n = E_s/E_c = 15$.

Solution. From the formula of the preceding problem we find

$$k = 0.446.$$

Then, substituting in equation (d), we obtain

$$n_1 = 0.012.$$

8. Design a beam 10 in. wide to withstand safely a moment of 22,500 ft. lbs. if $\sigma_c = 750$ lbs. per sq. in., $\sigma_s = 12,000$ lbs. per sq. in., and $E_s/E_c = 12$. Find the depth h and the steel area A_s . Assume balanced reinforcement as in problem 6.

49. Shearing Stresses in Reinforced-Concrete Beams.—

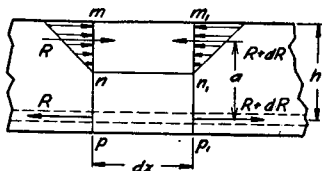


FIG. 195.

Using the same method as in article 26, by considering an element $mnmm_1n_1$ between the two adjacent cross sections mp and m_1p_1 (Fig. 195) it can be concluded that the maximum shearing stress τ_{xy} will act over the neutral surface nn_1 .

Denoting by dR the difference between the compressive forces on the concrete on cross sections mp and m_1p_1 , the shearing stress τ_{xy} over the neutral surface is found from the following:

$$(\tau_{xy})_{\max} b dx = dR,$$

from which

$$(\tau_{xy})_{\max} = \frac{1}{b} \frac{dR}{dx}. \quad (a)$$

Since the bending moment is

$$M = Ra,$$

eq. (a) becomes

$$(\tau_{xy})_{\max} = \frac{1}{ab} \frac{dM}{dx} = \frac{V}{ab}, \quad (b)$$

in which V is the shearing force at the cross section considered. Using eq. (126), the above equation for shearing stresses becomes

$$(\tau_{xy})_{\max} = \frac{3V}{bh(3-k)}. \quad (129)$$

In practical calculations not only the shearing stresses over the neutral surface but also the shearing stresses over the surface of contact between the steel and concrete are of importance. Considering again the two adjacent cross sections (Fig. 195), the difference between the tensile forces

in the steel bars at these two sections is

$$dR = \frac{V dx}{a}.$$

This difference is balanced by the shearing stresses distributed over the surface of the bars. Denoting by A the total lateral surface of all the steel bars per unit length of the beam, the shearing stress over the surface of the bars is

$$\frac{dR}{A dx} = \frac{V}{A a} = \frac{3V}{(3-k)hA}. \quad (130)$$

This stress becomes larger than the stress on the neutral surface (eq. 129) if A is less than b . To increase A and at the same time keep the cross sectional area of steel constant, it is only necessary to increase the number of bars and decrease their diameter.

CHAPTER VIII

COMBINED BENDING AND TENSION OR COMPRESSION; THEORY OF COLUMNS

50. Bending Accompanied by Compression or Tension.—

It is assumed here that a prismatical bar is loaded by forces in one of its planes of symmetry, but, whereas in the previous discussion these forces were all transverse, here they may have components along the axis of the bar. A simple case of this kind is shown in Fig. 196, which represents a column loaded by an inclined force P . This force is resolved into a transverse component N and a longitudinal T and it is assumed that the column is comparatively stiff with a deflection so small that it can be neglected in discussing the stresses produced by the force T . Then the resultant stress at any point is obtained by superposing the compressive stress due to the force T on

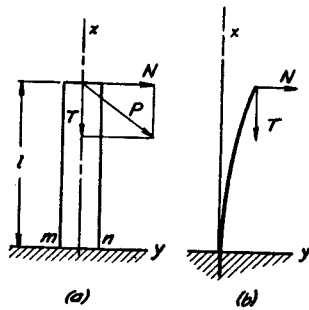


FIG. 196.

the bending stress produced by the transverse load N . The case of a flexible column, in which the thrust, due to deflection of the column (Fig. 196, b), has a considerable effect on the bending, will be discussed later (see Art. 53). The stress due to force T is constant for all cross sections of the column and equal to T/A where A is the cross-sectional area. The bending stress depends upon the moment, which increases from zero at the top to a maximum Nl at the bottom. Hence the dangerous section is at the built-in end, and the stress there, for a point at distance y from the z axis, is

$$\sigma_z = -\frac{T}{A} - \frac{Nly}{I_z}. \quad (a)$$

Assuming, for instance, that the cross section of the column is a rectangle $b \times h$ with the side h parallel to the plane of bending, we have $A = bh$ and $I_z = bh^3/12$. Maximum compressive stress will be at point n , at which

$$(\sigma_z)_{\min} = -\frac{6Nl}{bh^2} - \frac{T}{bh}. \quad (b)$$

This stress is numerically the largest.

At point m we obtain

$$(\sigma_z)_{\max} = \frac{6Nl}{bh^2} - \frac{T}{bh}.$$

When the force P is not parallel to one of the two principal planes of bending, the bending stresses, produced by its transverse component N , are found by resolving N into components parallel to those planes (see the discussion in art. 38). The resultant stress at any point is obtained by superposing these bending stresses with the compressive stress produced by the longitudinal force.

Problems

1. Determine the maximum compressive stress in the circular wooden poles 20 feet high and 8 inches in diameter shown in Fig. 197 if the load P on the wire ABC is 60 lbs. The tensile force in

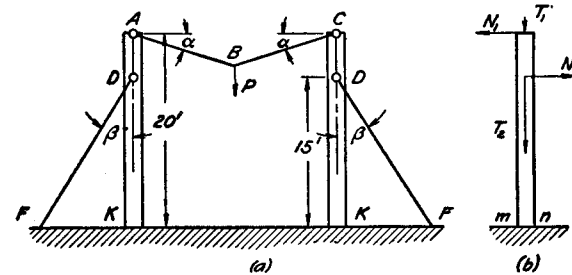


FIG. 197.

each cable DF is $S = 1,000$ lbs.; $\tan \alpha = 1/10$; $\sin \beta = 1/5$, and $Lk = 15$ feet.

Solution. The components of the force in the wire BC (Fig. 197, b) are $N_1 = 300$ lbs.; $T_1 = 30$ lbs. The components of the force in the cable DF are $N_2 = 200$ lbs.; $T_2 = 980$ lbs. The maxi-

imum bending moment is found to be at the built-in end, where $M_{\max} = 36,000$ lbs. in. The thrust at the same cross section is $T_1 + T_2 = 1,010$ lbs. The maximum compressive stress at the point m is

$$\sigma = \frac{4 \times 1,010}{\pi d^2} + \frac{32 \times 36,000}{\pi d^3} = 21 + 715 = 736 \text{ lbs. per sq. in.}$$

2. Determine the maximum tensile stress in the rectangular wooden beam shown in Fig. 198 if $S = 4,000$ lbs.; $b = 8$ in.; $h = 10$ in.

Answer.

$$(\sigma_x)_{\max} = \frac{6 \times 72 \times 1,000}{8 \times 100} + \frac{4,000}{80} = 590 \text{ lbs. per sq. in.}$$

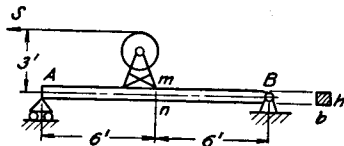


FIG. 198.

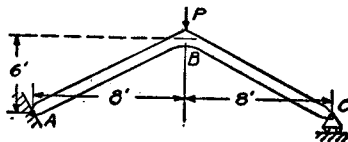


FIG. 199.

3. Determine the maximum compressive stress in the structure ABC, which supports a load $P = 2,000$ lbs. (Fig. 199), has a rigid connection between the bars at B, an immovable hinge at A, and a movable support at C. The cross section of the bars AB and BC is a square 10×10 in.

Answer.

$$\frac{6 \times 1,000 \times 8 \times 12}{10^3} + \frac{600}{10^2} = 582 \text{ lbs. per sq. in.}$$

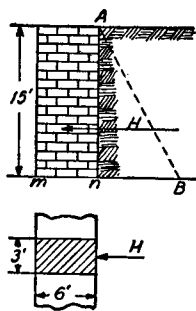


FIG. 200.

4. A brick wall 6 feet thick and 15 feet high supports sand pressure (Fig. 200). Determine the maximum tensile compressive stresses at the bottom of the wall if its weight is $\gamma = 150$ lbs. per cubic foot and the lateral pressure of the sand is 10,000 lbs. per yard of the wall. The distribution of the sand pressure along the height of the wall follows a linear law, given by the line AB.

Answer. The stress at $m = -\frac{150 \times 15}{144} - \frac{10,000 \times 60 \times 6}{36 \times 72^2}$
 $= -15.6 - 19.3 = -34.9$ lbs. per sq. in. The stress at

$$n = -\frac{150 \times 15}{144} + \frac{10,000 \times 60 \times 6}{36 \times 72^2} = 3.7 \text{ lbs. per sq. in.}$$

5. Determine the thickness of the wall in the previous problem which will give zero stress at n .

Answer. 80 in.

6. A circular column, 6 ft. high, Fig. 196, is acted upon by a force P the components N and T of which are equal to 1,000 lbs. Find the diameter of the column if the maximum compressive stress is 1,000 lbs. per sq. in.

7. Find σ_{\max} and σ_{\min} at the cross section at the middle of the bar BC, Fig. 199, if, instead of the concentrated load P , a uniform vertical load $q = 400$ lbs. per ft. is distributed along the axis ABC.

8. A circular bar AB hinged at B and supported by a smooth vertical surface (no friction) at A is submitted to the action of its own weight. Determine the position of the cross section mn (Fig. 201) at which the compressive stress is maximum.

Solution. Denote by l the length of the bar, by q its weight per unit length and by α its angle of inclination to the horizon. The horizontal reaction at A is $R = (ql/2) \cot \alpha$. The compressive force at any cross section mn , distant x from A, is $qx \sin \alpha + (ql/2) \times (\cos^2 \alpha / \sin \alpha)$; the bending moment at the same cross section is $M = (ql/2) \cos \alpha \cdot x - (q \cos \alpha / 2) x^2$. The maximum compressive stress at the cross section mn is

$$\frac{4}{\pi d^2} \left(qx \sin \alpha + \frac{ql \cos^2 \alpha}{2 \sin \alpha} \right) + \frac{32}{\pi d^3} \left(\frac{ql}{2} \cos \alpha \cdot x - \frac{q \cos \alpha}{2} x^2 \right),$$

where d is the diameter of the bar.

Equating the derivative of this stress with respect to x to zero, we obtain the required distance

$$x = \frac{l}{2} + \frac{d}{8} \tan \alpha.$$

9. The bar shown in Fig. 196 is 6' long and has a 12" diameter. Determine the magnitude of the force P if its components N and T are equal and the maximum compressive stress at n is 1,000 lbs. per sq. in.

Answer. $P = 3,260$ lbs.

10. A force P produces bending of the bar ABC built in at A (Fig. 202). Determine the angle of rotation of the end C, during

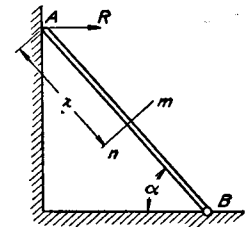


FIG. 201.

bending, if the bending moments at A and at B are numerically equal.

Solution. From the equality of the bending moments at A and B , it follows that the force P passes through the midpoint D of the bar AB . Then $P_x = P_y/2a$, and the components P_x and P_y may now be calculated. The rotation of the cross section B due to bending of the portion AB by the component P_y is $P_y l^2/2EI$ in a clockwise direction. The rotation of the same cross section due to the component P_x is $P_x a l/EI$ in a counter-clockwise direction. The rotation of the cross section C with respect to the cross section B , due to bending of the portion BC of the bar, is $P_x a^2/2EI$ in a counter-clockwise direction. The total angle of rotation of the end C in a clockwise direction is

$$\frac{P_y l^2}{2EI} - \frac{P_x a l}{EI} - \frac{P_x a^2}{2EI} = -\frac{P_x a^2}{2EI}.$$

51. Eccentric Loading of a Short Strut.—Eccentric loading is a particular case of the combination of direct and bending stresses. When the length of the bar is not very large in comparison with its lateral dimensions, its deflection is so small that it can be neglected in comparison with the initial eccentricity e ; hence the method of superposition may be used.¹ Take, for example, the case of compression by a longitudinal force P applied with an eccentricity e (Fig. 203) on one of the two principal axes of the cross section. Then, if we put two equal and opposite forces P at the centroid O of the cross section, the problem is not changed, as they are equivalent to zero, and we obtain an axial compression by the force P producing direct compressive stresses, $-(P/A)$, as shown in

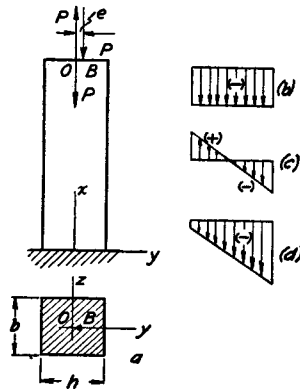


FIG. 203.

¹ For the case of eccentric loading of long bars see art. 53.

Fig. 203 (b), and bending in one of the principal planes by the couple Pe producing bending stresses, $-(Pe y/I_z)$, as shown in Fig. 203 (c). The total stress is then

$$\sigma_x = -\frac{P}{A} - \frac{Pe y}{I_z}. \quad (a)$$

The distribution diagram of this total stress is shown in Fig. 203 (d). It is assumed that the maximum bending stress is less than the direct stress; then there will be compressive stresses all over the cross section of the bar. If the maximum bending stress is larger than the direct compressive stress, there will be a line of zero stress parallel to the z axis, dividing the cross section into two zones with tensile stresses on the left and compressive stresses on the right. For a rectangular cross section with sides h and b (Fig. 203, a) eq. (a) becomes

$$\sigma_x = -\frac{P}{bh} - \frac{12Pe y}{bh^3} \quad (a')$$

and we obtain, by putting $y = -(h/2)$,

$$(\sigma_x)_{\max} = -\frac{P}{bh} + \frac{6Pe}{bh^2} = \frac{P}{bh} \left(-1 + \frac{6e}{h} \right), \quad (b)$$

and, by putting $y = h/2$,

$$(\sigma_x)_{\min} = -\frac{P}{bh} - \frac{6Pe}{bh^2} = -\frac{P}{bh} \left(1 + \frac{6e}{h} \right). \quad (c)$$

It may be seen that when $e < h/6$ there is no reversal of sign of the stresses over the cross section; when $e = h/6$, the maximum compressive stress, from eq. (c), is $2P/bh$, and the stress on the opposite side of the rectangular cross section is zero; when $e > h/6$, there is a reversal of sign of the stress and the position of the line of zero stress is obtained by equating to zero the general expression (a') for σ_x , giving

$$y = -\frac{h^2}{12e} \quad (d)$$

or, using the notation k_z for the *radius of gyration* with

respect to the z axis (see appendix),

$$y = -\frac{k_z^2}{e}. \quad (131)$$

It will be seen that the distance of the line of zero stress from the centroid O diminishes as the eccentricity e increases. The same discussion applies as well to the case of eccentric loading in tension. Equation (131) may also be used for other shapes of cross sections if the point of application of the load is on one of the principal axes of inertia.

Let us consider now the case in which B , the point of application of the eccentric compressive force P , is not on one of the two principal axes of the cross section, taken as the y and the z axes, in Fig. 204. Using m and n as the coordinates of this point, the moments of P with respect to the y and z axes are Pn and Pm respectively. By superposition, the stress at any point F of the cross section is

$$\sigma_x = -\frac{P}{A} - \frac{Pmy}{I_z} - \frac{Pnz}{I_y}, \quad (e)$$

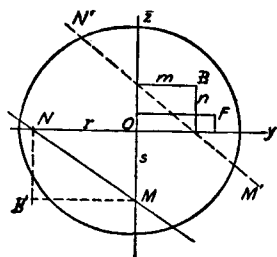


FIG. 204.

in which the first term on the right side represents the direct stress and the two other terms are the bending stresses produced by the moments Pm and Pn respectively. It may be seen that the stress distribution follows a linear law.

The equation of the line of zero stress is obtained by equating the right side of eq. (e) to zero. Using the notation $I_z/A = k_z^2$ and $I_y/A = k_y^2$, where k_z and k_y are the radii of gyration with respect to the z and y axes respectively, this gives

$$\frac{my}{k_z^2} + \frac{nz}{k_y^2} + 1 = 0.$$

By substituting in this equation first $y = 0$ and then $z = 0$ we obtain the points M and N of intersection of the line of zero stress with the axes of coordinates z and y (Fig. 204). The coordinates of these points, s and r , are

$$s = -\frac{k_y^2}{r}, \quad r = -\frac{k_z^2}{m}. \quad (g)$$

From these equations we obtain

$$n = -\frac{k_y^2}{s}; \quad m = -\frac{k_z^2}{r}.$$

These equations have the same form as eqs. (g) and it can be concluded that when the load is put at the point B' with the coordinates s and r , the corresponding line of zero stress will be the line $N'M'$, indicated in the figure by the dotted line, and cutting off from the y and z axes the lengths m and n .

There is another important relation between the point of application B of the load and the position of the corresponding line of zero stress, namely, as B moves along a line B_1B_2 (Fig. 205), the corresponding line of zero stress turns about a certain constant point B' . This is proven as follows: Resolve the load at B into two parallel components, one at B_1 and the other at B_2 .

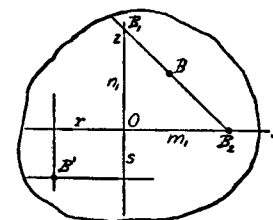


FIG. 205.

The component at B_1 acts in the principal plane xz ; hence the corresponding line of zero stress is parallel to the y axis and its intercept on OZ , as found from an equation analogous to eq. (131), is

$$s = -\frac{k_y^2}{n_1}. \quad (h)$$

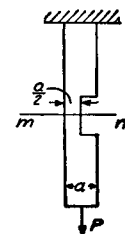


FIG. 206.

Similarly the line of zero stress for the component B_2 is parallel to the z axis and its distance from this axis is

$$r = -\frac{k_z^2}{m_1}. \quad (k)$$

For any position of the load on the line B_1B_2 there will be zero stress at B' ; hence as the point of application of the load moves along the straight line B_1B_2 , the corresponding line of zero stress turns about the point B' , the coordinates of which are determined by eqs. (h) and (k).

Problems

1. The cross-sectional area of a square bar is reduced one half at mn (Fig. 206). Determine the maximum tensile stress at this cross section produced by an axial load P .

Answer.

$$(\sigma_x)_{\max} = \frac{2P}{a^2} + \frac{Pa}{4a^3} = \frac{8P}{a^2}.$$

2. Solve the above problem, assuming the bar to have a circular cross section.

3. A bar of \perp section is eccentrically loaded by the forces P (Fig. 207). Determine the maximum tensile and compressive stresses in this bar if $d = 1''$, $h = 5''$, the width of the flange $b = 5''$, $P = 4,000$ lbs.

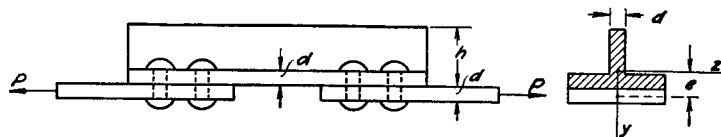


FIG. 207.

Solution. The distances of the centroid of the \perp section from the bottom and the top are respectively $h_1 = \frac{29}{18}$ in. and $h_2 = \frac{61}{18}$ in. The eccentricity of the force P is $e = \frac{1}{2} + \frac{29}{18} = 2\frac{1}{9}$ in. The moment of inertia $I_z = 19.64$ in.⁴ The bending stresses are

$$(\sigma_x)_{\max} = \frac{P \cdot e \cdot h_1}{I_z} = \frac{4,000 \times 2\frac{1}{9} \times \frac{29}{18}}{19.64 \times 18} = 693 \text{ lbs. per sq. in.,}$$

$$(\sigma_x)_{\min} = -\frac{Peh_2}{I_z} = -\frac{4,000 \times 2\frac{1}{9} \times \frac{61}{18}}{19.64 \times 18} = 1,458 \text{ lbs. per sq. in.}$$

Combining with the direct stress $P/A = 4,000/9 = 444$ lbs. per sq. in., we obtain the maximum tensile stress $693 + 444 = 1,137$ lbs. per sq. in., maximum compressive stresses $1,458 - 444 = 1,014$ lbs. per sq. in.

4. Determine the maximum tensile stress at the section mn of the clamp shown in Fig. 208 if $P = 300$ lbs., $b = 3$ in., and the cross section is a rectangle with the dimensions 1 in. \times $\frac{1}{4}$ in.

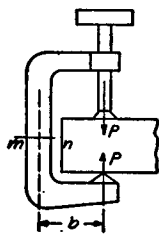


FIG. 208.

Answer. $\sigma_{\max} = 22,800$ lbs. per sq. in.

5. Determine the width of the cross section mn in the previous problem to make $\sigma_{\max} = 20,000$ lbs. per sq. in.

6. Find the maximum and the minimum stress at the built-in cross section of the rectangular column shown in Fig. 203, if $b = 10$ in., $h = 12$ in., $P = 5,000$ lbs., and the coordinates of the point B of application of the load, Fig. 204, are $m = n = 2$ in. Find the position of the neutral axis.

52. The Core of a Section.—In the previous article it was shown that for a small eccentricity e the normal stresses have the same sign over all of the cross section of an eccentrically loaded bar. For larger values of e the line of zero stress cuts the cross section and there is a reversal of sign of the stress. In the case of a material very weak in tension, such as brick work, the question arises to determine the region in which the compressive load may be applied without producing any tensile stress on the cross section. This region is called the *core of the cross section*. The method of determining the core is illustrated in the following simple examples.

In the case of a *circular* cross section of radius R we can conclude from symmetry that the core is a circle. The radius a of this circle is found from the condition that when the point of application of the load is on the boundary of the core the corresponding line of zero stress must be tangent to the boundary of the cross section. Remembering that the moment of inertia of a circle about a diameter is $\pi R^4/4$ (see appendix), and hence the radius of gyration is $k = \sqrt{I/A} = R/2$, we find from eq. (131) (p. 232), by substituting a for e and R for $-y$, that

$$a = \frac{k^2}{R} = \frac{R}{4}, \quad (132)$$

i.e., the radius of the core is one quarter of the radius of the cross section.

For the case of a *circular ring section* with outer radius R_0 and inner radius R_i we have

$$I = \frac{\pi}{4} (R_0^4 - R_i^4); \quad k^2 = \frac{I}{A} = \frac{R_0^2 + R_i^2}{4},$$

and the radius of the core, from eq. (131), becomes

$$a = \frac{k^2}{R_0} = \frac{R_0^2 + R_i^2}{4R_0}. \quad (133)$$

For $R_i = 0$, eq. (133) coincides with eq. (132). For a very narrow ring, when R_i approaches R_0 the radius a of the core approaches the value $R_0/2$.

In the case of a *rectangular cross section* (Fig. 209) the line of zero stress coincides with the side cg when the load is applied at point A , a distance $b/6$ from the centroid (see p. 231). In the same manner the line of zero stress coincides with the side gf when the

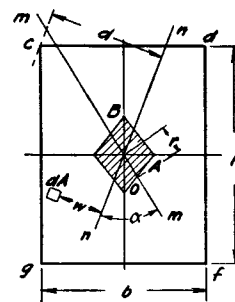


FIG. 209.

load is at the point B , a distance $h/6$ from the centroid. As the load moves along the line AB the neutral axis rotates about the point g (see p. 233) without cutting the cross section. Hence AB is one of the sides of the core. The other sides follow from symmetry. The core is therefore a rhombus with diagonals equal to $h/3$ and $b/3$. As long as the point of application of the load remains within this rhombus the line of zero stress does not cut the cross section and there will be no reversal in the sign of the stress.

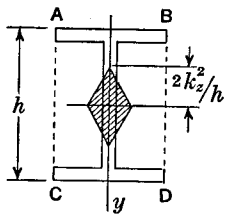


FIG. 210.

For an I section (Fig. 210) the extreme positions of the lines of zero stress, in which they do not cut the cross section, are given by the sides AB and CD and by the dotted lines AC and BD . The corresponding positions of the point of application of the load may be determined from eq. (131). From symmetry it may be concluded that these points will be the corners of a rhombus, shaded in Fig. 210.

If the point of application of the eccentric load is outside the core of a cross section, the corresponding line of zero stress crosses the section and the load produces not only compressive but also tensile stresses. If the material does not resist tensile stresses at all, part of the cross section will be inactive and the rest will carry compressive stresses only. Take, for example, a rectangular cross section (Fig. 211) with the point of application A of the load on the principal axis y and at a distance c from the edge of the section. If c is less than $h/3$, part of the cross section will not work. The working portion may be found from the condition that the distri-

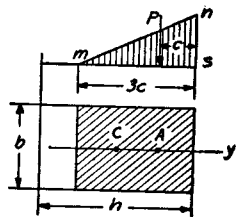


FIG. 211.

bution of the compressive forces over the cross section follows a linear law, represented in the figure by the line mn , and that the resultant of these forces is P . Since this resultant must pass through the centroid of the triangle mns , the dimension ms of the working portion of the cross section must be equal to $3c$.

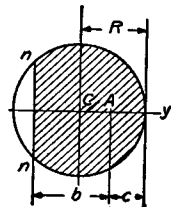


FIG. 212.

In the case of a circular cross section (Fig. 212), if the eccentricity \overline{CA} of the load is larger than $R/4$ and the material does not resist tensile stresses, only a portion of the cross section will work. Let the line mn , perpendicular to AC , be the limit of this portion. Its distance b from the point A may be found from the conditions that (1) the compressive stresses are proportional to the distance y from mn , (2) the sum of the compressive forces over the working portion of the cross section is equal to the load P , and (3) the moment of these forces with respect to mn is equal to the moment Pb of the load P with respect to the same axis. Denoting the maximum compressive stress by σ_{\max} , the compressive stress at any distance y from mn is

$$\sigma = \frac{y\sigma_{\max}}{b + c}$$

and the equations for determining b become

$$\int \frac{y\sigma_{\max}}{b + c} dA = P; \quad \int \frac{y^2\sigma_{\max}}{b + c} dA = Pb,$$

from which

$$b = \frac{I_{nn}}{Q_{nn}}, \quad (a)$$

in which $I_{nn} = \int y^2 dA$ is the moment of inertia of the working portion of the cross section with respect to the nn axis and $Q_{nn} = \int y dA$ is the moment of the working portion of the cross section with respect to the same axis. By using eq. (a) the position of A for any given position of nn may easily be found. The same equation may also be used for other shapes of cross sections, provided A is on one of the principal axes.² If the load is not on a principal axis, the problem of determining the working portion of the cross section becomes more complicated.³

By using the notion of the core, the calculation of maximum bending stresses when the bending is not in a principal plane may be greatly simplified. For example, in Fig. 209 let mm be the axial

² For the cases of circular cross sections and circular ring sections, which are of importance in calculating stresses in chimneys, tables have been published which simplify these calculations. See Keck, Z. Hannover. Arch. u. Ing. Ver., 1882, p. 627; see also V. D. I., 1902, p. 1321, and the paper by G. Dreyer in "Die Bautechnik," 1925.

³ Some calculations for a rectangular cross section will be found in the following papers: Engesser, Zentralblatt d. Bauv., 1919, p. 429; K. Pohl, Der Eisenbau, 1918, p. 211; O. Henkel, Zentralbl. d. Bauv., 1918, p. 447; F. K. Esling, Proc. of the Institute of Civ. Eng., 1905-1906, part 3.

plane of the beam in which a bending moment M acts and nn the corresponding neutral axis, which makes an angle α with the plane mm (see p. 166). Denoting by σ_{\max} the maximum stress in the most remote point c and by d its distance from the neutral axis nn , the stress at any other point, distant w from nn , is $\sigma = \sigma_{\max} w/d$, and the moment of all forces distributed over the cross section with respect to the axis nn is

$$\frac{\sigma_{\max} w^2}{d} dA = \frac{\sigma_{\max}}{d} I_{nn}, \quad (b)$$

in which I_{nn} is the moment of inertia of the cross section with respect to the $n-n$ axis. The moment of the external forces with respect to the same axis is $M \sin \alpha$. Equating this to (b), we have

$$\sigma_{\max} = \frac{Md \sin \alpha}{I_{nn}}. \quad (c)$$

This equation may be greatly simplified by using the property of the core of the cross section.⁴ Let O be the point of intersection of the plane mm with the core and r its distance from the centroid of the cross section. From the property of the core it follows that a compressive force P at O produces zero stress at the corner c ; hence the tensile stress produced at c by the bending moment Pr , acting in the plane mm , is numerically equal to the direct compressive stress P/A , or, substituting Pr for M in eq. (c), we obtain

$$\frac{P}{A} = \frac{Prd \sin \alpha}{I_{nn}},$$

from which

$$\frac{d \sin \alpha}{I_{nn}} = \frac{1}{Ar}. \quad (d)$$

Substituting this into eq. (c), we obtain

$$\sigma_{\max} = \frac{M}{Ar}. \quad (134)$$

The product Ar is called the *section modulus* of the cross section in the plane mm . This definition agrees with the definition which we had previously (see p. 92), and for bending in a principal plane Ar becomes equal to Z .

Problems

1. Determine the core of a standard I beam, 24" depth, for

⁴ See R. Land, *Zeitschr. f. Architektur und Ingenieurwesen*, 1897, p. 291.

which $A = 23.33$ sq. in., $I_x = 2,087$ in.⁴, $k_x = 9.46$ in., $I_y = 42.9$ in.⁴, $k_y = 1.36$ in. The width of the flanges $b = 7$ in.

Answer. The core is a rhombus with diagonals equal to 14.9 in. and 1.06 in.

2. Determine the radius of the core of a circular ring section if $R_0 = 10$ in. and $R_i = 8$ in.

Answer. The radius of the core $a = 4.10$ in.

3. Determine the core of a cross section in the form of an equilateral triangle.

4. Determine the core of the cross section of a square thin tube.

Solution. If h is the thickness of the tube and b the side of the square cross section, we have

$$I_x = I_y \approx \frac{2}{3} hb^3; \quad k_x^2 = k_y^2 = \frac{b^2}{6}.$$

The core is a square with diagonal

$$d = 2 \frac{k^2}{\frac{1}{2}b} = \frac{2b}{3}.$$

53. Eccentric Compression of a Slender Column.—In discussing the bending of a slender column under the action of an eccentric load, Fig. 213, the deflection δ can no longer be neglected as being small in comparison with the eccentricity e . Assuming that the eccentricity is in the direction of one of the principal axes of the cross section of the column, the deflection occurs in the same axial plane xy in which the load P acts, and the bending moment at any cross section mn is

$$M = -P(\delta + e - y). \quad (a)$$

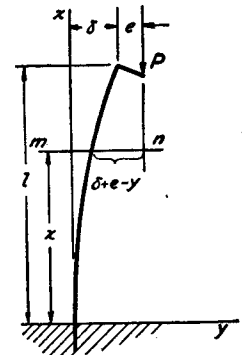


FIG. 213.

In determining the sign of the moment it should be noted that by rotating Fig. 213 in the clockwise direction by an angle $\gamma/2$ the same directions of the coordinate axes are obtained as those used in deriving equation (79). Hence, to follow the rule shown in Fig. 58 (b), the moment (a) is taken with a minus sign since the deflection curve is concave in the positive direction of the y

axis. The differential equation of the deflection curve obtained by substituting (a) in equation (79) is

$$EI_z \frac{d^2y}{dx^2} = P(\delta + e - y). \quad (b)$$

Using the notation

$$\frac{P}{EI_z} = p^2 \quad (135)$$

we obtain from equation (b)

$$\frac{d^2y}{dx^2} + p^2y = p^2(\delta + e). \quad (c)$$

By substitution it can be readily proved that

$$y = C_1 \sin px + C_2 \cos px + \delta + e \quad (d)$$

is the solution of equation (c). This solution contains two constants of integration C_1 and C_2 whose magnitudes must be adjusted so as to satisfy the conditions at the ends of the column if we are to obtain the true deflection curve of the column. At the lower end, which is built-in, the conditions are

$$(y)_{x=0} = 0, \quad \left(\frac{dy}{dx}\right)_{x=0} = 0. \quad (e)$$

Using these conditions together with expression (d) and its first derivative, we obtain

$$C_1 = 0, \quad C_2 = -(\delta + e).$$

The equation of the deflection curve (d) thus becomes

$$y = (\delta + e)(1 - \cos px). \quad (f)$$

To obtain the magnitude of the deflection δ at the upper end of the column, we substitute $x = l$ in the right side of equation (f). The deflection y on the left side must then be equal to δ and we obtain the equation

$$\delta = (\delta + e)(1 - \cos pl)$$

from which

$$\delta = \frac{e(1 - \cos pl)}{\cos pl}. \quad (136)$$

Substituting this into equation (f) we obtain the deflection curve

$$y = \frac{e(1 - \cos px)}{\cos pl}. \quad (137)$$

By using this equation the deflection at any cross section of the column can readily be calculated.

In the case of short columns, which were considered in Art. 51, the quantity pl is small in comparison with unity and it is sufficiently accurate to take

$$\cos pl \approx 1 - \frac{1}{2}p^2l^2. \quad (g)$$

Using this value of $\cos pl$ and neglecting the quantity $p^2l^2/2$ in the denominator of expression (136), as being small in comparison with unity, we obtain

$$\delta = \frac{ep^2l^2}{2} = \frac{ePl^2}{2EI_z}. \quad (h)$$

This represents the magnitude of the deflection at the end of a cantilever bent by a couple Pe applied at the end. Hence the use of the approximate expression (g) is equivalent to neglecting the effect of the deflections upon the magnitude of the bending moment and taking instead a constant moment equal to Pe .

If pl is not small, as is usually the case when the column is slender, we must use expression (136) in calculating δ . In this way we find that the deflection is no longer proportional to the load P . Instead, it increases more rapidly than P , as is seen from the values of this deflection as given in the second line of the table below.

DEFLECTIONS PRODUCED BY AN ECCENTRIC LONGITUDINAL LOAD

	0.1	0.5	1.0	1.5	$\pi/2$
pl	0.1	0.5	1.0	1.5	$\pi/2$
δ	0.005e	0.139e	0.851e	13.1e	∞
Approximate δ	0.005e	0.139e	0.840e	12.8e	∞
sec pl	1.005	1.140	1.867	13.2	∞
P/P_{cr}	0.004	0.101	0.405	0.911	1

The maximum bending moment occurs at the built-in end of the column and has a magnitude

$$M_{\max} = P(e + \delta) = Pe \sec pl. \quad (138)$$

A series of values of $\sec pl$ is given in the fourth line of the above table. These values show how rapidly the moment increases as pl approaches the value $\pi/2$. This phenomenon will be discussed in the next article.

Here, however, we should like to repeat that in the case under discussion there is no proportionality between the magnitude of the compressive force and the deflection δ which it produces. Hence the method of superposition (p. 147) cannot be used here. An axially applied force P produces only compression of the bar; but when the same force acts in conjunction with a bending couple Pe , it produces not only compression but also additional bending, so that the resulting deformation cannot be obtained by simple superposition of an axial compression due to the force P and a bending due to the couple Pe . The reason why in this case the method of superposition is not applicable can readily be seen if we compare this problem with the bending of a beam by transverse loads. In the latter case, it can be assumed that small deflections of the beam do not change the distances between the forces, and the bending moments can be calculated without considering the deflection of the beam. In the case of eccentric compression of a column the deflections produced by the couple Pe entirely change the character of the action of the axial load by causing it to have a bending action as well as a compressive action. In each case in which the deformation produced by one load changes the action of the other load it will be found that the final deformation cannot be obtained by the method of superposition.

In the previous discussion bending in one of the principal planes of the column was considered. If the eccentricity e is not in the direction of one of the principal axes of the cross section, it is necessary to resolve the bending couple Pe into

two component couples each acting in a principal plane of the column. The deflection in each of the two principal planes can then be investigated in the same manner as discussed above.

The preceding discussion of bending of a column built-in at one end can also be applied to the case of a strut eccentrically compressed by two equal and opposite forces P , Fig. 214. From symmetry it can be appreciated that the cross section A at the middle does not rotate during bending and each half of the strut in Fig. 214 is in exactly the same condition as the strut in Fig. 213. Hence the deflection and the maximum bending moment are obtained by substituting $l/2$ for l in equations (136) and (138). In this way we obtain

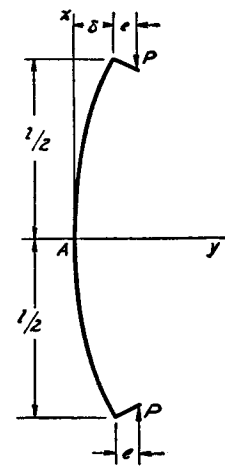


FIG. 214.

$$\delta = \frac{e \left(1 - \cos \frac{pl}{2} \right)}{\cos \frac{pl}{2}} \quad (139)$$

and

$$M_{\max} = Pe \sec \frac{pl}{2}. \quad (140)$$

Problems

1. Find the deflection at the middle and the maximum tensile and compressive stresses in an eccentrically compressed strut 10 ft. long with hinged ends if the cross section is a channel of 8 in. depth with $I_z = 1.3 \text{ in.}^4$, $I_y = 32.3 \text{ in.}^4$, and $A = 3.36 \text{ sq. in.}$ The distance between the centroid and the back of the channel is 0.58 in., and the compressive forces $P = 4,000 \text{ lbs.}$ act in the plane of the back of the channel and in the symmetry plane of the channel.

2. A square steel bar 2 by 2 in. and 6 ft. long is eccentrically compressed by forces $P = 1,000 \text{ lbs.}$ The eccentricity e is directed along a diagonal of the square and is equal to 1 in. Find the maximum compressive stress, assuming that the ends of the bar are hinged.

3. A steel bar 4 ft. long and having a rectangular cross section 1 by 2 in. is compressed by two forces $P = 1,000$ lbs. applied at the corners of the end cross sections so that the eccentricity is in the direction of a diagonal of the cross section and is equal to half the length of the diagonal. Considering the ends to be hinged, find the maximum compressive stress.

54. Critical Load.—It was indicated in the previous article that the deflection of an eccentrically compressed column increases very rapidly as the quantity pl in equation (136) approaches the value $\pi/2$. When pl becomes equal to $\pi/2$, the formula (136) for the deflections and (138) for the maximum bending moment both give infinite values. To find the corresponding value of the load we use formula (135). Substituting $p = \pi/2l$ in this expression we find that the value of the load at which the expressions (136) and (138) become infinitely large is

$$P_{cr} = \frac{\pi^2 EI_z}{4l^2}. \quad (141)$$

This value depending, as we see, only on the dimensions of the column and on the modulus of the material is called the *critical load* or Euler's load since Euler was the first to derive its value in his famous study of elastic curves.⁵ To see more clearly the physical significance of this load let us plot curves representing the relation between the load P and the deflection δ as given by equation (136). Several curves of this kind, made for various values of the eccentricity ratio e/k_z , are shown in Fig. 215. The abscissas of these curves are the values of the ratio δ/k_z while the ordinates are the ratio P/P_{cr} , that is the values of the ratio of the acting load to its critical value defined by equation (141).

It is seen from the curves that the deflections δ become smaller and smaller and the curves approach closer and closer to the vertical axis as the eccentricity e decreases. At the same time the deflections increase rapidly as the load P ap-

proaches its critical value (141), and all the curves have as their asymptote the horizontal line $P/P_{cr} = 1$.

The differential equation of the deflection curve (79), which was used in the discussion of the preceding article, was derived on the assumption that the deflections are small in comparison with the length l of the column. Hence formula (136) for the deflection δ cannot give us an accurate result when P is very close to P_{cr} . However, the curves in Fig. 215

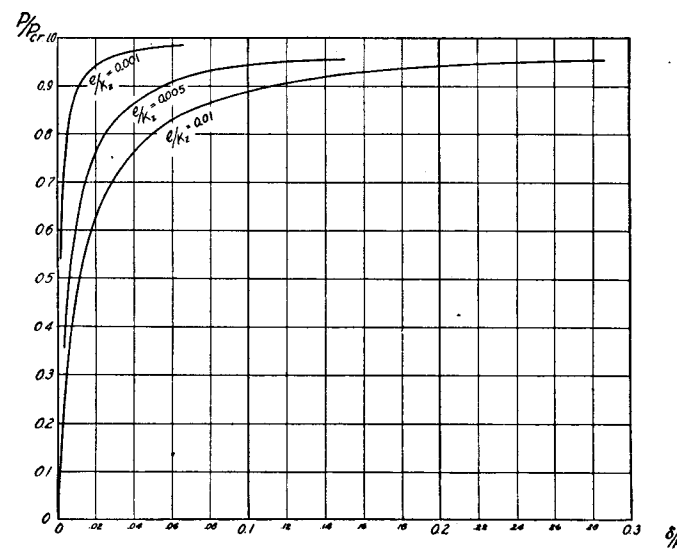


FIG. 215.

indicate that, irrespective of how small the eccentricity e may be, very large deflections are produced if the load P is sufficiently close to its critical value. If the deflection becomes large, the bending moment at the built-in end and the stresses are also large.

Experiments dealing with the compression of columns show that even when all practicable precautions are taken to apply the load centrally there always exists some unavoidable small eccentricities. Consequently in such experiments the load P produces not only compression but also bending. The

⁵ An English translation of this work is given in "Isis" No. 58 (vol. XX, 1), 1933.

curves in Fig. 216 show the results of such experiments as obtained by several experimenters. It may be seen that with increasing accuracy in the application of the load the curves become closer and closer to the vertical axis and the rapid increase in the deflection as the load approaches its critical value becomes more and more pronounced. The loads P which are close to their critical values always produce large deformations which usually go beyond the elastic limit of the material, so that after such a loading the column loses its

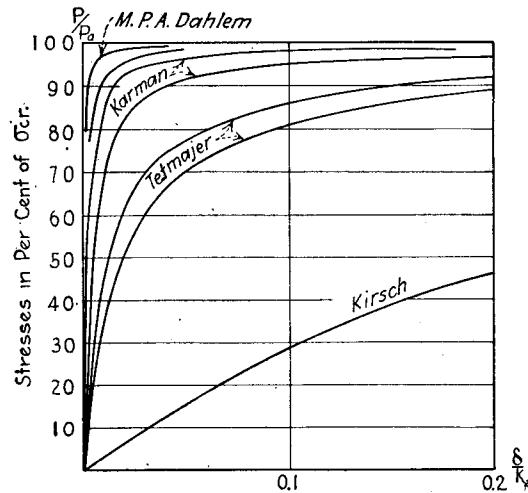


FIG. 216.

practical usefulness. This indicates that the critical value of the load, as given by equation (141), must be considered as an *ultimate load* which will produce complete failure of the column. In practical applications the allowable load should be smaller than the critical load and is obtained by dividing the critical value of the load by a certain factor of safety. Further discussion of this question is given in the next two articles.

In the preceding discussion a column with one end built-in and the other end free was considered. Similar conclusions can be made in the case of a strut with hinged ends, Fig. 214.

Equations (139) and (140) give infinite values when

$$\frac{pl}{2} = \frac{\pi}{2}.$$

Substituting for p its value from formula (135) we obtain

$$P_{cr} = \frac{\pi^2 EI_z}{l^2}. \quad (142)$$

This is the *critical value* of the compressive force for a strut with hinged ends.

In the case of compression of columns with built-in ends the deflection has the form shown in Fig. 217. The deflection curve can be considered as consisting of four portions each similar to the curve previously obtained for a column with one end built-in and the other free. The critical value of the load is found in such a case by substituting $l/4$ instead of l into equation (141), which gives

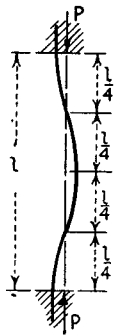


FIG. 217.

$$P_{cr} = \frac{4\pi^2 EI_z}{l^2}. \quad (143)$$

This is the *critical load* for a column with built-in ends.

It should be noted that in the derivation of equation (136) it was assumed that the eccentricity is in the direction of the y axis and that the bending occurs in the xy plane. Similar formulas will be obtained if the initial eccentricity is in the direction of the z axis. The bending then occurs in the xz plane and, to calculate the deflections, I_y must be substituted in place of I_z in equation (136). If an attempt is made to apply the load centrally and bending occurs as a result of small unavoidable eccentricities, we must consider deflections in both principal planes xy and xz ; and, in calculating the critical value of the load, we must use the smaller of the two principal moments of inertia in equations (141), (142) and (143). In the following discussion it is assumed that I_z is

the smaller principal moment of inertia and k_z is the corresponding radius of gyration.

In calculating deflections it is sometimes advantageous to use approximate formulas instead of the accurate formulas (136) and (138). It was shown in the preceding article that for small loads, that is when pl is a small fraction, say less than $1/10$, the deflection is given with sufficient accuracy by the equation

$$\delta = \frac{Pel^2}{2EI_z} \quad (a)$$

in which the influence of the longitudinal force on the bending is neglected and a constant bending moment Pe is assumed. For larger loads the equation (a) is not accurate enough, and the influence of the compressive force on bending should be considered. This influence depends principally on the ratio P/P_{cr} and the deflection can be obtained with very satisfactory accuracy from the approximate formula

$$\delta = \frac{Pel^2}{2EI_z} \cdot \frac{1}{1 - \frac{P}{P_{cr}}} \quad (b)$$

The deflections calculated from this formula are given in the third line of the table on p. 241. Comparison of these figures with those of the second line of the same table shows that the formula (b) is sufficiently accurate almost up to the critical value of the load.

A similar approximate formula for the deflection of a strut with hinged ends is ⁶

$$\delta = \frac{Pel^2}{8EI_z} \cdot \frac{1}{1 - \frac{P}{P_{cr}}} \quad (c)$$

The first factor on the right side is the deflection produced by the two couples Pe applied at the ends. The second factor

⁶ This approximate solution was given by Prof. J. Perry. See *Engineering*, December 10 and 24, 1886.

represents the effect on the deflection of the longitudinal compressive force P .

Equation (c) is very useful for determining the critical load from an experiment with a compressed strut. If the results of such experiment are represented in the form of a curve, such as the one shown in Fig. 216, the horizontal asymptote to that curve must be drawn to determine P_{cr} . This operation cannot be done with sufficient accuracy, especially if the unavoidable eccentricities are not very small and the curve does not turn very sharply in approaching the horizontal asymptote. A more satisfactory determination of P_{cr} is obtained by using equation (c). Dividing this equation by P/P_{cr} we obtain

$$\frac{\delta}{P} \cdot P_{cr} = \frac{e\pi^2}{8} \frac{1}{1 - \frac{P}{P_{cr}}}$$

and

$$\frac{\delta}{P} \cdot P_{cr} - \delta = \frac{e\pi^2}{8}.$$

This equation shows that, if we plot the ratio δ/P against the deflection δ measured during experiment, the points will fall on a straight line, Fig. 218. This line will cut the horizontal axis ($\delta/P = 0$) at the distance $e\pi^2/8$ from the origin, and the inverse slope of the line gives the critical load.⁷

55. Critical Stress; Design of Columns.—Considering the case of a strut with hinged ends, the critical stress is obtained by dividing the critical load given by equation (142) by the cross-sectional area A . In this way we find

$$\sigma_{cr} = \frac{P_{cr}}{A} = \frac{\pi^2 E}{(l/k_z)^2} \quad (144)$$

⁷ This method, suggested by R. V. Southwell, *Proc. Roy. Soc. London*, series A, vol. 135, p. 601, 1932, has proved a very useful one and is widely used in column tests.

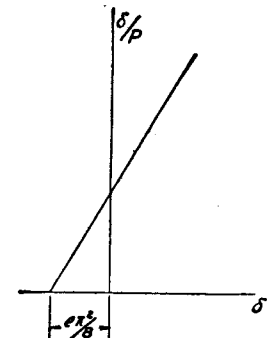


FIG. 218.

It is seen that for a given material the value of the critical stress depends on the magnitude of the ratio l/k_z , which is called the *slenderness ratio*. In Fig. 219 the curve ACB represents⁸ the relation between σ_{cr} and l/k_z for the case of steel having $E = 30 \times 10^6$ lbs. per sq. in. It will be appreciated that the curve is entirely defined by the magnitude of the modulus of the material and is independent of its ultimate strength. For large values of the slenderness ratio l/k_z the critical stress becomes small, which indicates that a very

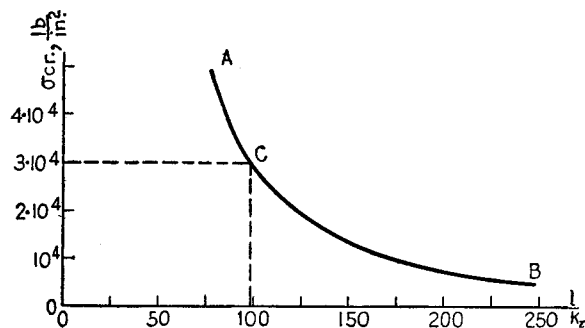


FIG. 219.

slender strut buckles sidewise and loses its strength at a very small compressive stress. This condition cannot be improved by taking a steel of higher strength, since the modulus of steel does not vary much with alloy and heat treatment and remains *practically constant*. The strut can be made stronger by increasing the moment of inertia I_z and the radius of gyration k_z , which can very often be accomplished without any increase in the cross-sectional area by placing the material of the strut as far as possible from the axis. Thus tubular sections are more economical as columns than are solid sections. As the slenderness ratio diminishes the critical stress increases and the curve ACB approaches the vertical axis asymptotically. However, there must be a certain limitation to the use of the Euler curve for shorter struts. The derivation of the ex-

⁸ This curve is sometimes called the Euler curve, since it is derived from Euler's formula for the critical load.

pression for the critical load is based on the use of the differential equation (79) for the deflection curve, which equation assumes that the material is perfectly elastic and follows Hooke's law (see art. 31). Hence the curve ACB in Fig. 219 gives satisfactory results only for comparatively slender bars for which σ_{cr} remains within the elastic region of the material. For shorter struts, for which σ_{cr} as obtained from equation (144) is higher than the proportional limit of the material, the Euler curve does not give a satisfactory result and recourse

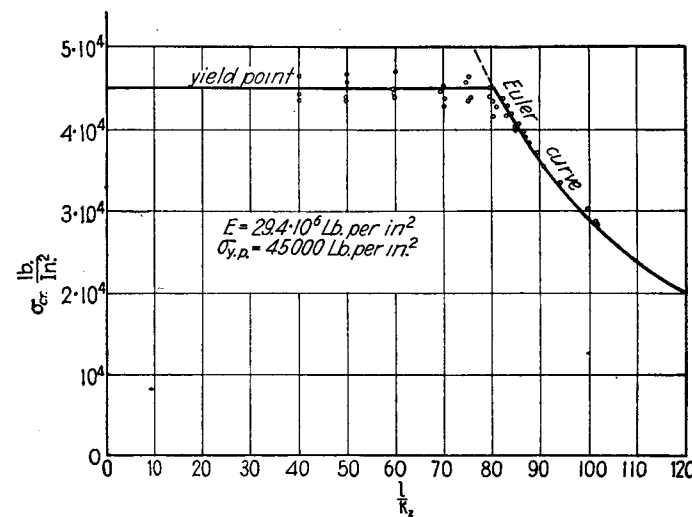


FIG. 220.

should be had to experiments with the buckling of struts compressed beyond the proportional limit. These experiments show that struts of materials such as structural steel, which have a pronounced yield point, lose all their stability and buckle sidewise as soon as the compressive stress becomes equal to the yield point stress. Some experimental results are shown in Fig. 220. The material is a structural steel having a very pronounced yield point at $\sigma_{y.p.} = 45,000$ lbs. per sq. in. It is seen that for struts of relatively large slenderness ($l/k_z > 80$) the experimental values of the critical stresses coincide satisfactorily with the Euler curve, while for shorter

struts the critical stress remains practically independent of the slenderness ratio l/k_z and is equal to the yield point stress.

In the case of an ordinary low carbon structural steel the yield point is not as pronounced as in the preceding example and occurs at a much lower stress. For such steel we may take $\sigma_{Y.P.} = 34,000$ lbs. per sq. in. The proportional limit is also much lower, so that the Euler curve is satisfactory only for slenderness ratios beginning with $l/k_z = 100$, to which value corresponds the compressive stress $\sigma_{cr} = 30,000$ lbs. per sq. in. For higher stresses, i.e., for $l/k_z < 100$, the material does not follow Hooke's law and the Euler curve cannot be used. It is usually replaced in the inelastic region by the two straight lines AB and BC as shown in Fig. 221. The

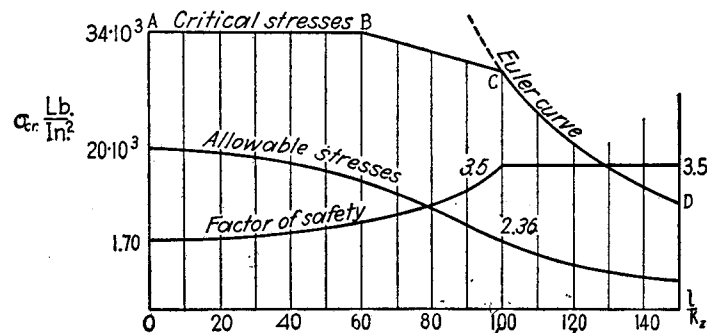


FIG. 221.

horizontal line AB corresponds to the yield point stress and the inclined line BC is taken for the stresses between the proportional limit and the yield point of the material.

Having such a diagram as the line $ABCD$ in Fig. 221, constructed for ordinary structural steel, the critical stress for a steel strut of any dimensions can readily be obtained. It is only necessary to calculate in each particular case the value of the slenderness ratio l/k_z and take the corresponding ordinate from the curve. To obtain the safe stress on the strut the critical stress must then be divided by a proper factor of safety. In selecting this factor it must be considered that as the slenderness ratio increases various imperfections,

such as an initial crookedness of the column, are likely to increase. It appears logical therefore to introduce a variable factor of safety which increases with the slenderness ratio. In some specifications the factor of safety increases from 1.7 for $l/k_z = 0$ to 3.5 for $l/k_z = 100$. It varies in such a way that the allowable stress in the inelastic range follows a parabolic law. For $l/k_z > 100$, the factor of safety is taken as constant at 3.5, and the allowable stresses are calculated from the Euler curve. In Fig. 221 curves are given which represent the allowable stress and the factor of safety as functions of the slenderness ratio for ordinary structural steel.

In the preceding discussion a strut with hinged ends was considered. This case is sometimes called the *fundamental case* of buckling of struts, since it is encountered very often in the design of compressed members of trusses with hinged joints. The allowable stresses established by the diagram in Fig. 221 for the fundamental case can also be used in other cases provided we take, instead of the actual length of the column, a *reduced length* the magnitude of which depends on the conditions at the ends of the column. Considering, for example, the case of a column with one end built-in and the other end free and also the column with both ends built-in, the corresponding formulas for the critical loads can be put respectively in the form

$$P_{cr} = \frac{\pi^2 EI_z}{(2l)^2} \quad \text{and} \quad P_{cr} = \frac{\pi^2 EI_z}{(\frac{1}{2}l)^2}.$$

Comparing these formulas with formula (142) for the fundamental case it can be concluded that in the design of a column with one end built-in and the other free we must take a length two times larger than the actual length of the column when using the diagram of Fig. 221. In the case of a column with both ends built-in the reduced length is equal to half of the actual length.

The selection of proper cross-sectional dimensions of a column is usually made by trial and error. Having the load P which acts on the column, we assume certain cross-sectional

dimensions and calculate k_z and l/k_z for these dimensions. Then the safe value of the compressive stress is obtained from the diagram of Fig. 221. Multiplying this value by the area of the assumed cross section, the safe load on the column is obtained. If this load is neither smaller nor overly larger than P , the assumed cross section is satisfactory. Otherwise the calculations must be repeated. In the case of built-up columns the gross cross section is used in calculating k_z , since the rivet holes do not appreciably affect the magnitude of the critical load. However, in calculating the safe load on the column the safe stress is multiplied by the net cross-sectional area in order to insure against excessive stresses in the column.

Problems

1. A steel bar of rectangular cross section 1 by 2 in. and having hinged ends is compressed axially. Determine the minimum length at which equation (144) for the critical stress can be applied if the limit of proportionality of the material is 30,000 lbs. per sq. in. and $E = 30 \times 10^6$ lbs. per sq. in. Determine the magnitude of the critical stress if the length of the bar is 5 ft.

Answer. Minimum length = 28.9 in. The critical stress for $l = 5$ ft. is 6,850 lbs. per sq. in.

2. Solve the preceding problem assuming a bar with a circular cross section 1 in. in diameter and built-in ends.

3. Determine the critical compressive load for a standard I section 6 ft. long and 6 in. deep assuming hinged ends. $I_z = 1.8$ in.⁴, $I_y = 21.8$ in.⁴ and $A = 3.61$ sq. in. Determine the safe load from the curve of Fig. 121.

4. Solve the preceding problem assuming that the ends of the column are built-in.

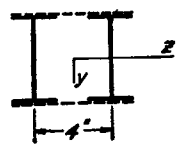


FIG. 222.

5. Calculate, by the use of Fig. 221, the safe load on a member built-up of two I beams of the same cross section as those in problem 3, Fig. 222. The length of the member is 10 ft. and the ends are hinged. Assume that the connecting details are so rigid that both I beams work together as a single bar.

6. Solve the preceding problem assuming that the ends of the member are built-in.

7. A column 10 ft. long with hinged ends is made of two channels 8 in. deep having $I_z = 1.3$ in.⁴, $I_y = 32.3$ in.⁴, $A = 3.36$ in.² and a distance of $c = 0.58$ in. between the centroid and the back of channel. Find the safe load on the column if the back to back distance between the channels is 4 in.

8. Determine the cross-sectional dimension of a square steel strut 6 ft. long if the load $P = 40,000$ lbs. and the ends are hinged. Use Fig. 121.

9. Solve the preceding problem assuming that the ends of the strut are built-in. Use Fig. 121.

56. Design of Columns on Basis of Assumed Inaccuracies.

—In the preceding article the safe load on a column was obtained by dividing the critical load for the column by a proper factor of safety. The weakness of that method lies in a certain arbitrariness in the selection of the factor of safety which, as we have seen, varies with the slenderness ratio. To make the procedure of column design more rational, another method based on assumed inaccuracies has been developed.⁹ On the basis of existing experimental data we can assume certain values for the magnitude of the unavoidable eccentricity e in the application of the compressive force P . Then, by using these values in the formulas of Article 53, we can calculate the magnitude $P_{y.p.}$ of the load at which the maximum stress in the compressed strut becomes equal to the yield point stress of the material. The safe load is then obtained by dividing the load $P_{y.p.}$ by a proper factor of safety. Thus instead of using the critical load, which is equivalent to the ultimate load, we use the load at which yielding begins as a basis for calculating the safe load.

This method of column design can be simplified by the use of diagrams the calculations of which will now be explained. Taking the case of a strut with hinged ends, Fig. 214, the maximum bending moment is obtained from equation (140) and the maximum compressive stress is

$$\sigma_{\max} = \frac{P}{A} + \frac{Pe}{Z} \sec \sqrt{\frac{P}{EI_z}} \frac{l}{2}. \quad (a)$$

⁹ See paper by D. H. Young, Proceedings Am. Soc. Civil Eng., December, 1934.

The first term on the right side is the direct stress and the second is the maximum compressive bending stress. The load at which yielding begins is obtained by substituting $\sigma_{Y.P.}$ for σ_{max} in this equation, which gives

$$\sigma_{Y.P.} = \frac{P_{Y.P.}}{A} \left(1 + \frac{e}{r} \sec \frac{l}{2k_z} \sqrt{\frac{P_{Y.P.}}{EA}} \right). \quad (b)$$

We now introduce the notations $r = Z/A$ for the radius of the core of the cross section (see p. 238) and $k_z = \sqrt{I_z/A}$ for the smaller principal radius of gyration. The quantity $P_{Y.P.}/A$ is the average compressive stress or *centroidal compressive stress* at which yielding begins. Denoting this stress by σ_c we obtain

$$\sigma_{Y.P.} = \sigma_c \left(1 + \frac{e}{r} \sec \frac{l}{2k_z} \sqrt{\frac{\sigma_c}{E}} \right). \quad (c)$$

From this equation, for a given value of the eccentricity ratio e/r , the value of σ_c can readily be obtained for any value of the slenderness ratio l/k_z . The results of such calculations for a structural steel having $\sigma_{Y.P.} = 36,000$ lbs. per sq. in. are repre-

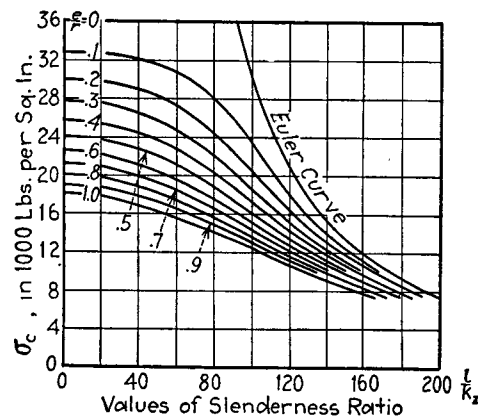


FIG. 223.

sented by curves in Fig. 223. By the use of these curves the average compressive stress σ_c and the compressive load $P_{Y.P.} = A\sigma_c$ at which yielding begins can readily be calculated

if e/r and l/k_z are given. The safe load is then obtained by dividing $P_{Y.P.}$ by the factor of safety.

We assumed in the foregoing discussion that the unavoidable inaccuracies in the column could be represented by an eccentricity of the load. In a similar manner we can also consider the inaccuracies to be equivalent to an initial crookedness of the column. Denoting the maximum initial deviation of the axis of the column from a straight line¹⁰ by a , curves similar to those shown in Fig. 223 and representing σ_c as a function of the ratio a/r and the slenderness ratio l/k_z can be obtained.

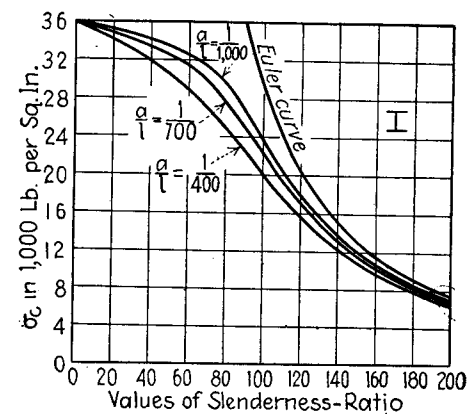


FIG. 224.

In practical design it is usually assumed that the initial deflection a is in a certain ratio to the length l of the column. Taking a certain magnitude for that ratio,¹¹ the magnitude of a is calculated and the value of σ_c is then obtained from the above-mentioned curves. The results obtained in this way for three different values of the ratio a/l and for $\sigma_{Y.P.} = 36,000$ lbs. per sq. in. are shown for an I section in Fig. 224. For very short columns all three curves give $\sigma_c = 36,000$ lbs.

¹⁰ A half wave of a sinusoidal form is usually taken as representing the initial crookedness of a column.

¹¹ It is usually taken within the limits $\frac{l}{400} \geq a \geq \frac{l}{1000}$.

per sq. in. For very slender columns the values given by the curves approach those obtained from the Euler curve. Using one of the curves and dividing the value σ_c from the curve by a proper factor of safety, say by 2, the safe value of the average compressive stress is obtained. The advantage of this method is that it employs a constant factor of safety, since the increase of inaccuracies with the length l of the column has already been taken into consideration by assuming that the eccentricity is proportional to the span. However, the magnitude of the inaccuracies which should be taken remains to a certain extent indefinite and dependent upon existing experimental data.

57. Empirical Formulas for Column Design.—In both of the methods of column design developed in the last two articles on the basis of theoretical considerations there occur some uncertainties such as a variable factor of safety in the design procedure illustrated by Fig. 221 or the assumed inaccuracies as used in making the curves in Fig. 224. These quantities can be properly selected only on the basis of experiments with actual columns. Under such circumstances it is natural that many practical engineers prefer to use directly the results of experiments as represented by empirical formulas. Such a procedure is entirely legitimate so long as the application of these formulas remains within the limits for which they were established and for which there is sufficient experimental information. However, as soon as it is necessary to go beyond those limits, the formulas must be modified to conform with the new conditions. In this work the theoretical considerations become of primary importance.

One of the oldest empirical formulas was originated by Tredgold.¹² It was adapted by Gordon to represent the results of Hodgkinson's experiments and was given in final form by Rankine. The allowable average compressive stress as

¹² Regarding the history of the formula see E. H. Salmon, "Columns," London, 1921. See also Todhunter and Pearson, "History of the Theory of Elasticity," vol. 1, p. 105, Cambridge, 1886.

given by the Rankine formula is

$$\sigma_w = \frac{a}{1 + b \left(\frac{l}{k_z} \right)^2}, \quad (a)$$

in which a is a stress and b is a numerical factor, both of which are constant for a given material. By a proper selection of these constants the formula can be made to agree satisfactorily with the results of experiments within certain limits.

The *American Institute of Steel Construction* in its specifications of 1928 takes for the safe stress on the cross section of a column

$$\sigma_w = \frac{18,000}{1 + \frac{l^2}{18,000k_z^2}} \quad (b)$$

for $l/k_z > 60$. For shorter columns σ_w is taken as 15,000 lbs. per sq. in.

The straight-line formula used by the *American Railway Engineering Association* and incorporated also in the building codes of the cities of Chicago and New York gives the working stress in the form

$$\sigma_w = 16,000 - 70l/r \quad (c)$$

to be used for $30 < l/k_z < 120$ for main members and as high as $l/k_z = 150$ for secondary members. For values of $l/k_z < 30$, $\sigma_w = 14,000$ lbs. per sq. in. is used.

The *parabolic formula* proposed by A. Ostenfeld¹³ is also sometimes used. It gives for the critical compressive stress

$$\sigma_{cr} = a - b \left(\frac{l}{k_z} \right)^2 \quad (d)$$

in which the constants a and b depend upon the mechanical properties of the material. For structural steel equation (d)

¹³ Zeitschr. Ver. Deutsch Ing. vol. 42, p. 1462, 1898. See also C. E. Fuller and W. A. Johnston, "Applied Mechanics," vol. 2, p. 359, 1919.

is sometimes taken in the form

$$\sigma_{cr} = 40,000 - 1.33 \left(\frac{l}{k_z} \right)^2. \quad (e)$$

This gives a parabola tangent to the Euler curve at $l/k_z = 122.5$ and makes $\sigma_{cr} = 40,000$ lbs. per sq. in. for short columns. A suitable factor of safety varying from 2-1/2 to 3 should be used with this formula to obtain the working stress.

Problems

1. A 6 in. \times 6 in. 22-1/2 lb. H-beam, $I_z = 12.2$ in.⁴, $A = 6.61$ sq. in., is to be used as a column with hinged ends. Three lengths are to be considered: $l = 5$ ft., 10 ft., and 13 ft.-4 in. What are the safe loads using the formulas (b), (c), and (e), the latter with a factor of safety of 2-1/2.

Answers.

Formulas	$l = 60$ in.	$l = 120$ in.	$l = 160$ in.
(b)	99,000	83,000	67,300
(c)	85,300	65,000	51,000
(e)	98,700	78,300	57,000

2. Select a Carnegie Beam section to serve as a column 25 ft. long with fixed ends to carry a load of 200,000 lbs. Use formula (b).

Solution. Taking the reduced length $l = \frac{1}{2} \cdot 25$ ft. = 150 in., equation (b) gives

$$\frac{200,000}{A} \approx \frac{18,000}{1 + \frac{1.25}{k_z^2}}. \quad (f)$$

The minimum area may be found by taking $\sigma_w = 15,000$ lbs. per sq. in. as for a short column. This gives $A = 200,000/15,000 = 13.3$ sq. in. We therefore need not try any section which has an area less than 13.3 sq. in. We try a 12 in. \times 10 in. 53 lb. section, for which $A = 15.57$ sq. in., $k_z = 2.48$, and $l/k_z = 60.5$. The safe stress as given by the right side of equation (f) is 14,970 lbs. per sq. in. The actual stress given by the left side is 12,850 lbs. per sq. in. It may be seen that a smaller section should be tried. Taking a 12 in. \times 8 in. 50 lb. section, for which $A = 14.69$ sq. in., $k_z = 1.96$ in., and $l/k_z = 76.5$, the permissible stress is found to be 13,600 lbs. per sq. in. This value is also given by the left side of equation (f). The above section is therefore satisfactory.

CHAPTER IX

TORSION AND COMBINED BENDING AND TORSION

58. Torsion of a Circular Shaft.—Let us consider a circular shaft built in at the upper end and twisted by a couple applied to the lower end (Fig. 225). It can be shown by measurements at the surface that circular sections of the shaft remain circular during twist, and that their diameters and the distances between them do not change provided the angle of twist is small.

A disc, isolated as in Fig. 225 (b), will be in the following state of strain. There will be a rotation of its bottom cross section with reference to its top through an angle $d\phi$ where ϕ measures the rotation of the section mn with reference to the built-in end. An element $abcd$ of the surface of the disc whose sides were vertical before strain takes the form shown

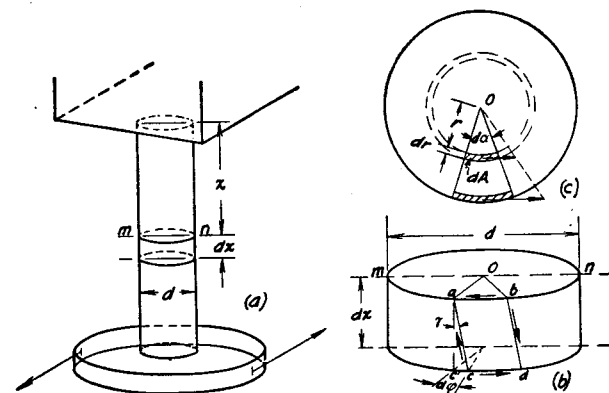


FIG. 225.

in Fig. 225 (b). The lengths of the sides remain essentially the same, and only the angles at the corners change. The element is in a state of *pure shear* (see article 16) and the magnitude of the shearing strain is found from the small

triangle cac' :

$$\gamma = \frac{c'c}{ac'}.$$

Since $c'c$ is the small arc of radius $d/2$ corresponding to the difference $d\phi$ in the angle of rotation of the two adjacent cross sections, $c'c = (d/2)d\phi$, we obtain

$$\gamma = \frac{1}{2} \frac{d\phi}{dx} d. \quad (a)$$

For a shaft twisted by a torque at the end the angle of twist is proportional to the length and the quantity $d\phi/dx$ is constant. It represents the *angle of twist per unit length of the shaft* and will be called θ . Then, from (a),

$$\gamma = \frac{1}{2} \theta d. \quad (145)$$

The shearing stresses which act on the sides of the element and produce the above shear have the directions shown. The magnitude of each, from eq. (39), is

$$\tau = \frac{1}{2} G \theta d. \quad (146)$$

So much for the state of stress of an element at the surface of the shaft. As for that within the shaft the assumption will now be made that not only the circular boundaries of the cross sections of the shaft remain undistorted but also the cross sections themselves remain plane and rotate as if absolutely rigid, that is, every diameter of the cross section remains straight and rotates through the same angle. The tests of circular shafts show that the theory developed on this assumption is in very good agreement with the experimental results. Such being the case, the discussion for the element $abcd$ at the surface of the shaft (Fig. 225, *b*) will hold also for a similar element of the surface of an inner cylinder, whose radius r replaces $d/2$ (Fig. 225, *c*). The thickness of the element in radial direction is considered as very small.

Such elements are then also in pure shear, and the shearing

stress on their sides is

$$\tau = Gr\theta. \quad (b)$$

This states that the shearing stress varies directly as the distance r from the axis of the shaft. Figure 226 pictures this stress distribution. The maximum stress occurs in the outer surface of the shaft. For a ductile material, plastic flow begins first in this surface. For a material which is weaker in shear longitudinally than transversely, e.g., a wooden shaft with the fibers parallel to the axis, the first cracks will be produced by shearing stresses acting in the axial sections and they will appear on the surface of the shaft in the longitudinal direction. In the case of a material which is weaker in tension than in shear, e.g., a circular shaft of cast iron or a cylindrical piece of chalk, a crack along a helix inclined at 45° to the axis of the shaft often occurs (Fig. 227). The explanation is simple.




FIG. 226.




FIG. 227.

We recall that the state of pure shear is equivalent to one of tension in one direction and equal compression in the perpendicular direction (see Fig. 41). A rectangular element cut from the outer layer of a twisted shaft with sides at 45° to the axis will be submitted to such stresses as shown in Fig. 227. The tensile stresses shown produce the helical crack mentioned.

We seek now the relationship between the applied twisting couple M_t and the stresses which it produces. From the equilibrium of that portion of the shaft between the bottom and the imaginary section mn , we conclude that the shearing stresses distributed over the cross section are statically equivalent to a couple equal and opposite to the torque M_t . For each element of area dA (Fig. 225, *c*), shearing force $= \tau dA$. The moment of this force about the axis of the shaft $= (\tau dA)r = G\theta r^2 dA$, from eq. (b). The total moment M_t about the axis of the shaft is the summation, taken over the entire cross-sectional area, of these moments on the individual

elements, i.e.,

$$M_t = \int_{r=0}^{r=d/2} G\theta r^2 dA = G\theta \int_{r=0}^{r=d/2} r^2 dA = G\theta I_p, \quad (c)$$

where I_p is the polar moment of inertia of the circular cross section. From the appendix, for a circle of diameter d , $I_p = \pi d^4/32$;

$$\therefore M_t = G\theta \frac{\pi d^4}{32}$$

and

$$\theta = \frac{M_t}{G} \frac{32}{\pi d^4} = \frac{M_t}{GI_p}. \quad (147)$$

We see that θ , the angle of twist per unit length of the shaft, varies directly as the applied torque and inversely as the modulus of shear G and the fourth power of the diameter. If the shaft is of length l , the total angle of twist will be

$$\phi = \theta l = \frac{M_t l}{GI_p}. \quad (148)$$

This equation is useful in the physical verification of the theory, and is checked by numerous experiments which prove the assumptions made in deriving the theory. It should be noted that experiments in twist are commonly used for determining the modulus of materials in shear. If the angle of twist produced in a given shaft by a given torque be measured, the magnitude of G can be easily calculated from eq. (148).

Substituting θ from eq. (147) in eq. (146), we obtain an equation for calculating the maximum shearing stress in twist of a circular shaft:

$$\tau_{\max} = \frac{M_t d}{2I_p} = \frac{16M_t}{\pi d^3}. \quad (149)$$

That is, this stress is proportional to the torque M_t and inversely proportional to the cube of the diameter of the shaft. In practical applications the diameter of the shaft

must usually be calculated from the horse-power H which it transmits. Given H , the torque is obtained as lbs. ins. from the well-known equation:

$$M_t \cdot \frac{2\pi n}{60} = 550 \times 12 \times H \quad (150)$$

in which n denotes the number of revolutions of the shaft per minute. The quantity $2\pi n/60$ is then the angle of rotation per second and the left side of the equation (150) represents the work done during one second by the torque M_t measured in in. lbs. The right side of the same equation represents the work done in in. lbs. per second as calculated from the horse-power H . Taking M_t from eq. (150) and substituting it into eq. (149), we obtain

$$d = 68.5 \sqrt[3]{\frac{H}{n\tau_{\max}}}. \quad (151)$$

Taking, for instance, the working stress for shear as $\tau_w = 9,000$ lbs. per sq. in., we have

$$d = 3.29 \sqrt[3]{\frac{H}{n}}.$$

Problems

1. Determine the shaft diameter d of a machine of 200 h.p. of speed $n = 120$ r.p.m., for the working stress $\tau_w = 3,000$ lbs. per sq. in.

Answer.

$$d = 5.63 \text{ in.}$$

2. Determine the horse-power transmitted by a shaft if $d = 6$ ins., $n = 120$ r.p.m., $G = 12 \times 10^6$ lbs. per sq. inch, and the angle of twist, as measured between two cross sections 25 ft. apart, is $1/15$ of a radian.

Solution. From eq. (148)

$$M_t = \frac{\pi d^4}{32} \cdot \frac{\phi \cdot G}{l} = \frac{\pi \times 6^4}{32} \cdot \frac{12 \times 10^6}{15 \times 25 \times 12}.$$

The power transmitted is, from eq. (150),

$$H = \frac{M_t \cdot 2\pi n}{60 \times 550 \times 12} = \frac{\pi \times 6^4 \times 12 \times 10^6 \times 2\pi \times 120}{32 \times 15 \times 25 \times 12 \times 60 \times 550 \times 12} = 646.$$

3. A shaft of diameter $d = 3.5$ in. makes 45 r.p.m. Determine the power transmitted if the maximum shearing stress is 4,500 lbs. per sq. in.

4. A steel shaft ($G = 12 \times 10^6$ lbs. per sq. in.) is to have such proportions that the maximum shearing stress is 13,500 lbs. per sq. in. for an angle of twist of 90° . Determine the ratio l/d .

Answer.

$$\frac{l}{d} = 698.$$

5. A steel shaft with built-in ends (Fig. 228) is submitted to the action of a torque M_t , applied at an intermediate cross section mn . Determine the angle of twist if the working stress τ_w is known.

Solution. For both parts of the shaft the angles of twist are equal; therefore, from eq. (148), the twisting moments are inversely proportional to the lengths of these parts. If $a > b$, the greater twisting moment is in the right part of the shaft and its magnitude is

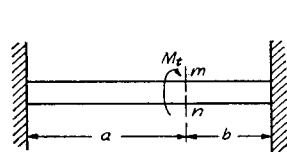


FIG. 228.

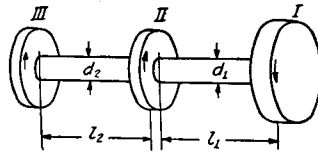


FIG. 229.

$M_t \cdot a/(a + b)$. Substituting this for the torque, and τ_w for τ_{\max} in eq. (149), the following equation for d is obtained:

$$d = \sqrt[3]{\frac{16aM_t}{(a + b)\pi\tau_w}}.$$

Now the angle of twist can be obtained by using eq. (148).

6. 500 h.p. is transmitted from pulley I, 200 h.p. to pulley II and 300 h.p. to pulley III (Fig. 229). Find the ratio of the diameters d_1 and d_2 to give the same maximum stress in both parts of the shaft. Find the ratio of the angles of twist for these two parts.

Solution. The torques in the two parts of the shaft are in the ratio 5 : 3. In order to have the same maximum stress from eq.

(149),

$$\frac{d_1}{d_2} = \sqrt[3]{\frac{5}{3}}.$$

The angles of twist, from eqs. (148) and (149), must be in the ratio

$$\varphi_1 : \varphi_2 = \frac{l_1}{l_2} \sqrt[3]{\frac{3}{5}}.$$

7. Assuming that the shaft of the preceding problem has a constant diameter and turns at 200 r.p.m., find the magnitude of the diameter if $\tau_w = 6,000$ lbs. per sq. in. Find the angle of twist for each portion of the shaft if $G = 12 \times 10^6$ lbs. per sq. in. and $l_1 = l_2 = 4$ ft.

8. Determine the length of the steel shaft of 2 in. diameter ($G = 12 \times 10^6$ lbs. per sq. in.) if the maximum stress is equal to 13,500 lbs. per sq. in. when the angle of twist is 6° .

Answer.

$$l = 93 \text{ in.}$$

9. Determine the diameter beginning from which the angle of twist of the shaft, and not the maximum stress, is the controlling factor in design, if $G = 12 \times 10^6$ lbs. per sq. in., $\tau_w = 3,000$ lbs. per sq. in. and the maximum allowable twist is $\frac{1}{4}^\circ$ per yard.

Solution. Eliminating M_t from the equations

$$\frac{16M_t}{\pi d^3} = 3,000; \quad \frac{32M_t}{G \cdot \pi d^4} = \frac{\pi}{180 \times 4 \times 36},$$

we obtain $d = 4.12$ in.; for $d < 4.12$ in., the angle of twist is the controlling factor in design.

10. Determine the torque in each portion of a shaft with built-in ends which is twisted by the moments M_t' and M_t'' applied in two intermediate sections (Fig. 230).

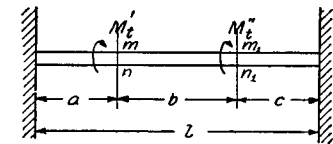


FIG. 230.

Solution. By finding the torques produced in each portion of the shaft by each of the moments M_t' and M_t'' (see problem 5 above) and adding these moments for each portion we obtain

$$\frac{M_t'(b + c) + M_t''c}{l}, \quad \frac{M_t'a - M_t''c}{l}, \quad \frac{M_t'a + M_t''(a + b)}{l}.$$

11. Determine the diameters and the angles of twist for the shaft of problem 6 if $n = 120$ r.p.m., $\tau_{\max} = 3,000$ lbs. per sq. in., $l_1 = 6$ feet, $l_2 = 4$ feet.

59. Torsion of a Hollow Shaft.—From the previous discussion of the twist of a solid shaft, it is seen (see Fig. 226) that only the material at the outer surface of the shaft can be stressed to the limit assigned as the working stress. The material within will work at a lower stress, and in the cases in which reduction in weight is of great importance, e.g., propeller shafts of aeroplanes, it is advisable to use hollow shafts. In discussing the torsion of hollow shafts the same assumptions are made as in the case of solid shafts. The general expression for shearing stresses will then be the same as is given by eq. (b) of the previous article. In calculating the moment of the shearing stresses, however, the radius r varies from the radius of the inner hole, which we will denote by $\frac{1}{2}d_1$, to the outer radius of the shaft, which, as before, will be $\frac{1}{2}d$. Then eq. (c) of the previous article must be replaced by the following equation:

$$G\theta \int_{\frac{1}{2}d_1}^{\frac{1}{2}d} r^2 dA = M_t = G\theta I_p,$$

where $I_p = (\pi/32)(d^4 - d_1^4)$ is the polar moment of inertia of the ring section. Then

$$\theta = \frac{32M_t}{\pi(d^4 - d_1^4)G} = \frac{M_t}{GI_p} \quad (152)$$

and the angle of twist will be

$$\varphi = \theta l = \frac{M_t l}{GI_p}. \quad (153)$$

Substituting eq. (152) in eq. (146), we obtain

$$\tau_{\max} = \frac{16M_t}{\pi d^3 \left(1 - \frac{d_1^4}{d^4}\right)} = \frac{M_t d}{2I_p}. \quad (154)$$

We see from eqs. (153) and (154) that by taking, for instance, $d_1 = \frac{1}{2}d$ the angle of twist and the maximum stress, as compared with the same quantities for a solid shaft of diameter d ,

will increase about 6 per cent while the reduction in the weight of the shaft will be 25 per cent.

Problems

1. A hollow cylindrical steel shaft, 10 in. outside diameter and 6 in. inside diameter, turns at 1,000 r.p.m. What horse-power is being transmitted if $\tau_{\max} = 8,000$ lbs. per sq. in.

Answer. $H = 21,700$ h.p.

2. Find the maximum torque that may be applied to a hollow circular shaft if $d = 6$ in., $d_1 = 4$ in., and $\tau_w = 8,000$ lbs. per sq. in.

3. A hollow propeller shaft of a ship transmits 8,000 h.p. at 100 r.p.m. with a working stress of 4,500 lbs. per sq. in. If $d/d_1 = 2$, find d .

Solution.

$$M_t = \frac{8,000 \times 12 \times 33,000}{2\pi \times 100}.$$

Eq. (154) becomes

$$\tau_{\max} = \frac{16}{15} \cdot \frac{16M_t}{\pi d^3},$$

from which

$$d = \sqrt[3]{\frac{16 \times 16 \times 8,000 \times 12 \times 33,000}{15 \times 2\pi \times 100 \times \pi \times 4,500}} = 18.2 \text{ in.}$$

Then $d_1 = 9.1$ in.

60. The Shaft of Rectangular Cross Section.

—The problem of the twist of a shaft of rectangular cross section is complicated, due to the warping of the cross section during twist. This warping can be shown experimentally with a rectangular bar of rubber on whose faces a system of small squares has been traced. It is seen from photograph 231 that during twist the lines originally perpendicular to the axis of the bar become curved. This indicates that the distortion of the small squares, mentioned above, varies along the sides of this cross section, reaches a maximum value at the middle and disappears at the corners. We therefore expect that the shearing stress varies as this distortion, namely, is maximum at the middle of the sides and zero at the corners of the cross section. Investigation

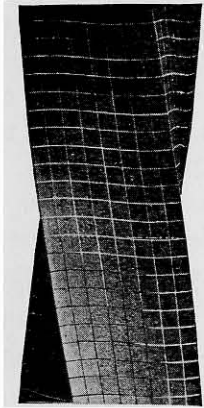


FIG. 231.

of the problem¹ indicates that the maximum shearing stress occurs at the middle of the longer sides of the rectangular cross section and is given by the equation:

$$\tau_{\max} = \frac{M_t}{\alpha b c^2}, \quad (155)$$

in which b is the longer and c the shorter side of the rectangular cross section and α is a numerical factor depending upon the ratio b/c . Several values of α are given in Table 3 below. It is interesting to note that the magnitude of the maximum stress can be calculated with satisfactory accuracy from the following approximate equation:

$$\tau_{\max} = \frac{M_t}{b c^2} \left(3 + 1.8 \frac{c}{b} \right).$$

TABLE 3

DATA FOR THE TWIST OF A SHAFT OF RECTANGULAR CROSS SECTION

$\frac{b}{c}$	1.00	1.50	1.75	2.00	2.50	3.00	4.00	6	8	10	∞
α	0.208	0.231	0.239	0.246	0.258	0.267	0.282	0.299	0.307	0.313	0.333
β	0.141	0.196	0.214	0.229	0.249	0.263	0.281	0.299	0.307	0.313	0.333

The angle of twist per unit length in the case of a rectangular cross section is given by the equation:

$$\theta = \frac{M_t}{\beta b c^3 G}. \quad (156)$$

The values of the numerical factor β are given in the third line of the above table.

In all cases considered the angle of twist per unit length is proportional to the torque and can be represented by the equation

$$\theta = \frac{M_t}{C}, \quad (a)$$

where C is a constant called the *torsional rigidity* of the shaft.

In the case of a circular shaft (eq. 147), $C = GI_p$.

For a rectangular shaft (eq. 156), $C = \beta b c^3 G$.

¹ The complete solution is due to de Saint Venant, *Mém. des Savants étrangers*, t. 14 (1855). An account of this work will be found in Todhunter and Pearson's "History of the Theory of Elasticity," Vol. II, p. 312.

61. Helical Spring, Close Coiled.—Assume that a helical spring of circular cross section is submitted to the action of axial forces P (Fig. 232), and that any one coil lies nearly in a plane perpendicular to the axis of the helix. Considering the equilibrium of the upper portion of the spring bounded by an axial section such as mn (Fig. 232, b), it can be concluded from the equations of statics that the stresses over the cross section mn of the coil reduce to a shearing force P through the center of the cross section and a couple acting in a counter clockwise direction in the plane of the cross section of mag-

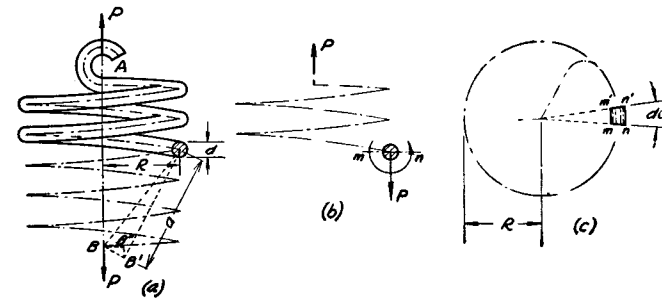


FIG. 232.

nitude PR , where R is the radius of the cylindrical surface containing the center line of the spring. The couple PR twists the coil, and causes a maximum shearing stress given by eq. (149), which becomes here

$$\tau_1 = \frac{16PR}{\pi d^3}, \quad (a)$$

where d is the diameter of the cross section mn of the coil. Upon this stress due to twist that due to the shearing force P is superposed. For a rough approximation, this shearing force is assumed to be uniformly distributed over the cross section; the corresponding shearing stress will be

$$\tau_2 = \frac{4P}{\pi d^2}. \quad (b)$$

At the point m the directions of τ_1 and τ_2 coincide so that

the maximum shearing stress occurs here and has the magnitude

$$\tau_{\max} = \tau_1 + \tau_2 = \frac{16PR}{\pi d^3} \left(1 + \frac{d}{4R} \right). \quad (157)$$

It can be seen that the second term in the parenthesis, which represents the effect of the shearing force, increases with the ratio d/R . It becomes of practical importance in heavy helical springs, such as are used on railway cars. Due to this term points such as m on the inner side of a coil are in a less favorable condition than points such as n . Experience with heavy springs shows that cracks usually start on the inner side of the coil.

There is another reason to expect higher stresses at the inner side of the coil. In calculating the stresses due to twist, we used eq. (a), which was derived for cylindrical bars.

In reality each element of the spring will be in the condition shown in Fig. 233. It is seen that if the cross section bf rotates with respect to ac , due to twist, the displacement of the point b with respect to a will be the same as that of the point f with respect to c . Due to the fact that

the distance ab is smaller than the distance cf , the *shearing strain* at the inner side ab will be larger than that at the outer side cf , and therefore the shearing stresses produced by the couple PR will be larger at b than at f . Taking this into consideration, together with the effect of the shearing force,² we replace eq. (157) by the following equation for calculating the maximum shearing stress:

$$\tau_{\max} = \frac{16PR}{\pi d^3} \left(\frac{4m-1}{4m-4} + \frac{0.615}{m} \right), \quad (158)$$

² Such investigations were made by V. Roever, V. D. I., Vol. 57, p. 1906, 1913; also A. M. Wahl, Trans. Am. Soc. Mech. Eng., 1928. The latter also determined the stresses experimentally by making measurements at the surface of the coil. Recent literature on helical springs is given in the paper by J. R. Finnicome. See Trans. Am. Soc. Mech. Eng., Vol. 6 A, p. 188, 1939.

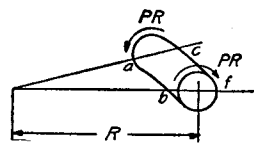


FIG. 233.

in which

$$m = \frac{2R}{d}.$$

It can be seen that the *correction factor* in the parenthesis increases with a decrease of m ; for instance, in case $m = 4$ this factor is about 1.40 and for $m = 10$ it is equal to 1.14. In calculating the deflection of the spring, usually only the effect of the twist of the coils is taken into consideration. For the angle of twist of one element between the two adjacent cross sections mn and $m'n'$ (Fig. 232, c), using eq. (148), in which $Rd\alpha$ is used instead of l , we obtain

$$d\phi = \frac{P \cdot R \cdot Rd\alpha}{I_p G}.$$

Due to this twist the lower portion of the spring rotates with respect to the center of mn (Fig. 232, a), and the point of application B of the force P describes the small arc BB' equal to $ad\phi$. The vertical component of this displacement is

$$B'B'' = BB' \frac{R}{a} = Rd\phi = \frac{PR^3 d\alpha}{I_p G}. \quad (c)$$

The complete deflection of the spring is obtained by summation of the deflections $B'B''$ due to each element mn , over the length of the spring. Then

$$\delta = \int_0^{2\pi n} \frac{PR^3}{I_p G} d\alpha = \frac{64nPR^3}{d^4 G}, \quad (159)$$

in which n denotes the number of coils.

For a spring of other than circular cross section, the method above can be used to calculate stresses and deflections if, instead of eqs. (148) and (149), we take the corresponding equations for this shape of cross section. For example, in the case of a rectangular cross section eqs. (155) and (156) should be used.

Problems

1. Determine the maximum stress and the extension of the helical spring (Fig. 232) if $P = 250$ lbs., $R = 4$ in., $d = 0.8$ in., the

number of coils is 20 and $G = 12 \times 10^6$ lbs. per sq. in.

Answer.

$$\tau_{\max} = 11,300 \text{ lbs. per sq. in.}, \quad \delta = 4.17 \text{ in.}$$

2. Solve the previous problem, assuming that the coil has a square cross section 0.8 in. on a side.

Solution. Assuming that the correction factor for the shearing force and the curvature of the coils (see eq. 158) in this case is the same as for a circular cross section, we obtain from eq. (155)

$$\tau_{\max} = \frac{PR}{0.208 \times b^3} 1.14 = \frac{250 \times 4 \times 1.14}{0.208 \times 0.8^3} = 10,700 \text{ lbs. per sq. in.}$$

In calculating extension $0.141d^4$ (see eq. 156) instead of $\pi d^4/32$ must be used in eq. (159); then

$$\delta = \frac{4.17\pi}{32 \times 0.141} = 2.90 \text{ in.}$$

3. Compare the weights of two helical springs, one of circular, the other of square cross section, designed for the conditions stated in problem 1 and having the same maximum stress. Take the correction factor in both cases as 1.14. Compare the deflections of these two springs.

Solution. The length of the side of the square cross section is found from the equation $\pi d^3/16 = 0.208b^3$, from which $b = \sqrt[3]{0.944} \cdot d = 0.981d$. The weights of the springs are in the same ratio as the cross-sectional areas, i.e., in the ratio

$$\frac{\pi d^2}{d} : 0.981^2 d^2 = 0.816.$$

The deflections of the two springs are in the ratio

$$0.141b^4 : \frac{\pi d^4}{32} = 0.141 \times 0.926 : \frac{\pi}{32} = 1.33.$$

4. How will the load P be distributed between the two ends of the helical spring shown in Fig. 234 if the number of coils above the point of application of the load is 6 and that below this point is 5?

Answer. $R_1 : R_2 = 5 : 6$.

5. Two helical springs of the same material and of equal circular cross sections and lengths, assembled as shown in Fig. 235, are

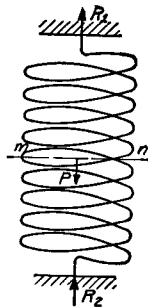


FIG. 234.

compressed between two parallel planes. Determine the maximum stress in each spring if $d = 0.5$ and $P = 100$ lbs.

Solution. From eq. (159) it follows that the load P is distributed between two springs in inverse proportion to the cubes of the radii of the coils, i.e., the forces compressing the outer and the inner springs will be in the ratio 27 : 64. The maximum stresses in these springs are then (from eq. 158) 2,860 lbs. per sq. in. and 5,380 lbs. per sq. in. respectively.

6. What will be the limiting load for the spring of problem 1 if the working stress is $\tau_w = 20,000$ lbs. per sq. in.? What will be the deflection of the spring at this limiting load?

Answer. 442 lbs. $\delta = 7.38$ in.

7. A conical spring (Fig. 236) is submitted to the action of axial forces P . Determine the safe magnitude of P for a working stress $\tau_w = 45,000$ lbs. per sq. in.; diameter of the cross section $d = 1$ in.; radius of the cone at the top of the spring $R_1 = 2$ in.; and at the bottom, $R_2 = 8$ in. Determine the extension of the spring if the number of coils is n , and the horizontal projection of the center line of the spring is a spiral given by the equation

$$R = R_1 + \frac{(R_2 - R_1)\alpha}{2\pi n}.$$

Solution. For any point A of the spring, determined by the magnitude of the angle α , the distance from the axis of the spring is

$$R = R_1 + \frac{(R_2 - R_1)\alpha}{2\pi n} \quad (a)$$

and the corresponding torque is

$$M_t = P \left(R_1 + \frac{(R_2 - R_1)\alpha}{2\pi n} \right).$$

The maximum torque, at $\alpha = 2\pi n$, is $P \cdot R_2$. The safe limit for P , from eq. (158), will be

$$P = \frac{45,000 \times \pi}{16 \times 8 \times 1.09} = 1,010 \text{ lbs.}$$




FIG. 235.

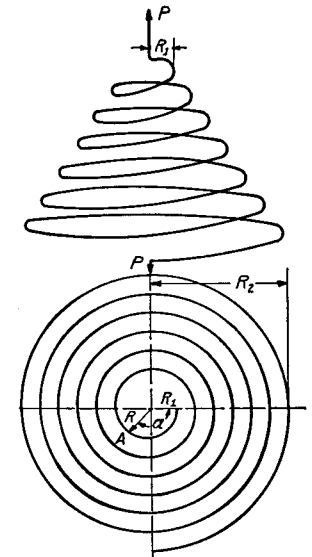


FIG. 236.

The deflection of the spring will be obtained, from eq. (c) (see p. 273), as follows:

$$\delta = \frac{32P}{\pi d^4 G} \int_0^{2\pi n} \left[R_1 + \frac{(R_2 - R_1)\alpha}{2\pi n} \right]^3 d\alpha$$

$$= \frac{16Pn}{d^4 G} (R_1^2 + R_2^2)(R_1 + R_2).$$

8. Determine the necessary cross sectional area of coils of a conical spring, designed for the same conditions as in the previous problem, but of a square cross section. Take 1.09 as the correction factor (see previous problem).

Answer. $b^2 = 0.960$ sq. in.

62. Combined Bending and Twist in Circular Shafts.—

In the previous discussion of twist (see p. 261) it was assumed that the circular shaft was in simple torsion. In practical applications we often have cases where torque and bending

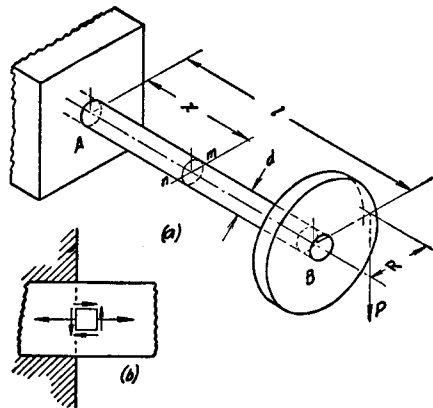


FIG. 237.

moment are acting simultaneously. The forces transmitted to a shaft by a pulley, a gear or a flywheel can usually be reduced to a torque and a bending force. A simple case of this kind is shown in Fig. 237. A circular shaft is built in at one end and loaded at the other by a vertical force P at a distance R from the axis. This case reduces to one of loading by a torque

$$M_t = PR \text{ and by a transverse force } P \text{ at the free end.}^3 \text{ The torque is constant along the axis and the bending moment due to } P, \text{ at any cross section, is}$$

$$M = -P(l - x). \quad (a)$$

In discussing the maximum stress produced in the shaft it is necessary to consider (1) shearing stresses due to the torque

³ The weight of the shaft and of the pulley is neglected in this problem.

M_t , (2) normal stresses due to the bending moment (a), and (3) shearing stresses due to the shearing force P . The maximum torsional stress occurs at the circumference of the shaft and has the value

$$\tau_{\max} = \frac{16M_t}{\pi d^3}. \quad (b)$$

The maximum normal stress σ_x due to bending occurs in the fibers most remote from the neutral axis at the built-in end; where the bending moment is numerically a maximum, it has the value

$$(\sigma_x)_{\max} = \frac{M}{Z} = \frac{32M}{\pi d^3}. \quad (c)$$

The stress due to the shearing force is usually of only secondary importance. Its maximum value occurs at the neutral axis where the normal stress due to bending is zero; hence the maximum combined stress usually occurs at the point where stresses (1) and (2) are a maximum, in this case at the top and bottom surface elements at the built-in end.

Figure 237 (b) is a top view of the portion of the shaft at the built-in end, showing an element and the stresses acting on it. The principal stresses on this element are found from eqs. (72) and (73) (p. 122):

$$\sigma_{\max} = \frac{\sigma_x}{2} + \frac{1}{2} \sqrt{\sigma_x^2 + 4\tau^2},$$

or, using eqs. (b) and (c),

$$\sigma_{\max} = \frac{1}{2Z} (M + \sqrt{M^2 + M_t^2})$$

$$= \frac{16}{\pi d^3} (M + \sqrt{M^2 + M_t^2}). \quad (160)$$

In the same manner using eq. (73)

$$\sigma_{\min} = \frac{1}{2Z} (M - \sqrt{M^2 + M_t^2})$$

$$= \frac{16}{\pi d^3} (M - \sqrt{M^2 + M_t^2}). \quad (160')$$

It will be noted that σ_{\max} would have the same value for a case of simple bending in which the *equivalent bending moment* is

$$M_{\text{equivalent}} = \frac{1}{2}(M + \sqrt{M^2 + M_t^2}).$$

The maximum shearing stress at the same element (Fig. 237, *b*), from eq. (34) (p. 49), is

$$\tau_{\max} = \frac{\sigma_{\max} - \sigma_{\min}}{2} = \frac{16}{\pi d^3} \sqrt{M^2 + M_t^2}. \quad (161)$$

For ductile metals such as are used in shafting it is now common practice to use the maximum shearing stress to determine the safe diameter of the shaft. Calling the working stress in shear τ_w , and substituting it into eq. (161) for τ_{\max} , the diameter must then be

$$d = \sqrt[3]{\frac{16}{\pi \tau_w} \sqrt{M^2 + M_t^2}}. \quad (162)$$

The above discussion can be used also in the case of a hollow shaft of outer diameter d and inner diameter d_1 . Then

$$Z = \frac{\pi(d^4 - d_1^4)}{32d} = \frac{\pi d^3}{32} \left[1 - \left(\frac{d_1}{d} \right)^4 \right],$$

and setting $d_1/d = n$, eqs. (160) and (160') for a hollow shaft become

$$\sigma_{\max} = \frac{16}{\pi d^3(1 - n^4)} (M + \sqrt{M^2 + M_t^2}), \quad (163)$$

$$\sigma_{\min} = \frac{16}{\pi d^3(1 - n^4)} (M - \sqrt{M^2 + M_t^2}). \quad (164)$$

The maximum shearing stress is

$$\tau_{\max} = \frac{16}{\pi d^3(1 - n^4)} \sqrt{M^2 + M_t^2}, \quad (165)$$

and d becomes

$$d = \sqrt[3]{\frac{16}{\pi \tau_w(1 - n^4)} \sqrt{M^2 + M_t^2}}. \quad (166)$$

If several parallel transverse forces act on the shaft, the total bending moment M and the total torque M_t at each cross section must be taken in calculating the necessary diameter at that point, from eq. (162) or (166). If the transverse forces acting on the shaft are not parallel, the bending moments due to them must be added vectorially to get the resultant bending moment M . An example of such a calculation is discussed in problem 3 below.

Problems

1. A $2\frac{1}{2}$ -in. circular shaft carries a 30-inch diameter pulley weighing 500 lbs. (Fig. 238). Determine the maximum shearing

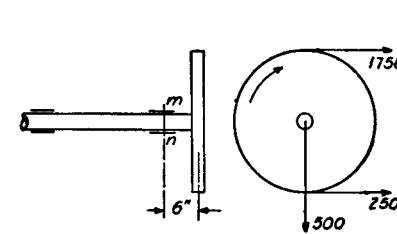


FIG. 238.

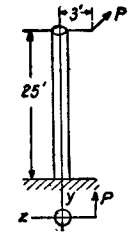


FIG. 239.

stress at cross section mn if the horizontal pulls in the upper and lower portions of the belt are 1,750 lbs. and 250 lbs. respectively.

Solution. At cross section mn ,

$$M_t = (1,750 - 250)15 = 22,500 \text{ lbs. ins.},$$

$$M = 6\sqrt{500^2 + 2,000^2} = 12,370 \text{ lbs. ins.}$$

Then, from eq. (161),

$$\tau_{\max} = 8,370 \text{ lbs. per sq. in.}$$

2. A vertical tube, shown in Fig. 239, is submitted to the action of a horizontal force $P = 250$ lbs. acting 3 feet from the axis of the tube. Determine σ_{\max} and τ_{\max} if the length of the tube is $l = 25'$ and the section modulus $Z = 10 \text{ in.}^3$

Answer.

$$\sigma_{\max} = 7,530 \text{ lbs. per sq. in.} \quad \tau_{\max} = 3,780 \text{ lbs. per sq. in.}$$

3. Determine the necessary diameter for a uniform shaft (Fig. 240) carrying two equal pulleys, 30 in. in diameter, weighing 500 lbs. each. The horizontal forces in the belt for one pulley and the vertical forces for another are shown in the figure. $\tau_w = 6,000$ lbs. per sq. in.

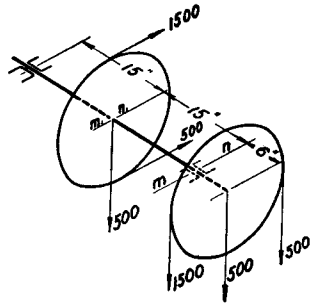


Fig. 240.

Solution. The worst sections are mn and m_1n_1 , which carry the full torque and the highest bending moments. The torque at both points is $M_t = (1,500 - 500)15 = 15,000$ lbs. ins. The bending moment at mn is $(1,500 + 500)6 = 15,000$ lbs. ins. The bending moment at m_1n_1 in the horizontal plane is

$$\frac{1}{4}(1,500 + 500) \times 30 = 15,000 \text{ lbs. ins.}$$

The bending moment at the same cross section in the vertical plane is

$$\frac{500 \times 30}{4} - \frac{2,500 \times 6 \times 15}{30} = -3,750 \text{ lbs. ins.}$$

The combined bending moment at cross section m_1n_1 is

$$M = \sqrt{15,000^2 + 3,750^2} = 15,460 \text{ lbs. ins.}$$

This is larger than the moment at cross section mn and should therefore be used together with the above calculated M_t in eq. (162), from which

$$d = 2.63 \text{ in.}$$

4. Determine the diameter of the shaft shown in Fig. 238 if the working stress in shear is $\tau_w = 6,000$ lbs. per sq. in.

5. Determine the outer diameter of a hollow shaft if $\tau_w = 6,000$ lbs. per sq. in., $d_1/d = 1/3$, and the other dimensions and forces are as in Fig. 240.

6. Solve problem 3 assuming that the same torque is produced by a horizontal force tangent to the periphery of the pulley instead of by vertical tensions of 1,500 lbs. and 500 lbs. in the belt acting on the right-hand pulley.

CHAPTER X

ENERGY OF STRAIN

63. Elastic Strain Energy in Tension.—In the discussion of a bar in simple tension (see Fig. 1), we saw that, during elongation under a gradually increasing load, work was done on the bar, and that this work was transformed, either partially or completely, into potential energy of strain. If the strain remains within the elastic limit, the work done will be completely transformed into potential energy and can be recovered during a gradual unloading of the strained bar.

If the final magnitude of the load is P and the corresponding elongation is δ , the tensile test diagram will be as shown in Fig. 241, in which the abscissas are the elongations and the ordinates are the corresponding loads. P_1 represents an intermediate value of the load, and δ_1 the elongation due to it. An increase dP_1 in the load causes an increase $d\delta_1$ in the elongation. The work done by P_1 during this elongation is $P_1 d\delta_1$, represented in the figure by the shaded area. If allowance is made for the increase of P_1 during the elongation, the work done will be represented by the area of the trapezoid $abcd$. The total work done in increasing the load from O to P is the summation of such elemental areas, and is given by the area of the triangle OAB . This represents the total energy U stored up in the bar during strain. Then

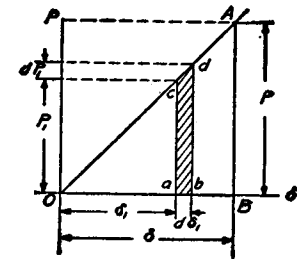


Fig. 241.

$$U = \frac{P\delta}{2}. \quad (167)$$

By use of eq. (1), we obtain the following two expressions for

the strain energy in a prismatical bar:

$$U = \frac{P^2 l}{2AE}, \quad (168)$$

$$U = \frac{AE\delta^2}{2l}. \quad (169)$$

The first of these gives the strain energy as a function of the load P and the second the same energy as a function of the elongation δ . For a bar of given dimensions and a given modulus of elasticity the strain energy is completely determined by the value of the force P or the value of the elongation δ .

In practical applications the strain energy per unit volume is often of importance; this is, from eqs. (168) and (169):

$$w = \frac{U}{Al} = \frac{\sigma^2}{2E}, \quad (170) \quad \text{or} \quad w = \frac{E\epsilon^2}{2}, \quad (171)$$

in which $\sigma = P/A$ is the tensile stress and $\epsilon = \delta/l$ is the unit elongation.

The greatest amount of strain energy per unit volume which can be stored in a bar without permanent set¹ is found by substituting the elastic limit of the material in place of σ in eq. (170). Steel, with an elastic limit of 30,000 lbs. per sq. in. and $E = 30 \times 10^6$ lbs. per sq. in., gives $w = 15$ inch lbs. per cubic inch; rubber, with a modulus of elasticity $E = 150$ lbs. per sq. in. and an elastic limit of 300 lbs. per sq. in., gives $w = 300$ inch lbs. per cubic inch. It is sometimes of interest to know the greatest amount of strain energy per unit weight of a material w_1 which can be stored without producing permanent set. This quantity is calculated from eq. (170) by substituting the elastic limit for σ and dividing w by the weight of one cubic inch of the material. Several numerical results calculated in this manner are given in the table on the following page.

¹ This quantity sometimes is called the *modulus of resilience*.

Material	Density	E lbs. per sq. inch	Elastic limit lbs. per sq. inch	w per cu. inch	w_1 per pound
Structural steel.....	7.8	30×10^6	28,000	13.1 inch lbs.	46 inch lbs.
Tool steel....	7.8	30×10^6	120,000	240 " "	850 " "
Copper.....	8.5	16×10^6	4,000	.5 " "	1.6 " "
Oak.....	1.0	1.5×10^6	4,000	5.3 " "	146 " "
Rubber....	.93	150	300	300 " "	8,900 " "

This indicates that the quantity of energy which can be stored in a given weight of rubber is about 10 times larger than for tool steel and about 200 larger than for structural steel.

Problems

1. A prismatical steel bar 10 inches long and 4 sq. ins. in cross sectional area is compressed by a force $P = 4,000$ lbs. Determine the amount of strain energy.

Answer.

$$U = \frac{2}{3} \text{ inch lb.}$$

2. Determine the amount of strain energy in the previous problem if the cross-sectional area is 2 sq. in. instead of 4 sq. in.

Answer.

$$U = 1\frac{1}{3} \text{ inch lbs.}$$

3. Determine the amount of strain energy in a vertical uniform steel bar strained by its own weight if the length of the bar is 100 feet and its cross-sectional area 1 sq. in., the weight of steel being 490 lbs. per cubic foot.

Answer.

$$U = 0.772 \text{ inch lb.}$$

4. Determine the amount of strain energy in the previous problem if in addition to its own weight the bar carries an axial load $P = 1,000$ lbs. applied at the end.

Answer.

$$U = 27.58 \text{ inch lbs.}$$

5. Check the solution of the problem shown in Fig. 15 for the case in which all bars have the same cross section and the same

modulus by equating the strain energy of the system to the work done by the load P .

Solution. If X is the force in the vertical bar, its elongation is Xl/AE and the work done by P is $\frac{1}{2}P(Xl/AE)$. Equating this to the energy of strain, we obtain

$$\frac{1}{2}P \frac{Xl}{AE} = \frac{X^2 l}{2AE} + 2 \frac{(X \cos^2 \alpha)^2 l}{2AE \cos \alpha},$$

from which

$$X = \frac{P}{1 + 2 \cos^3 \alpha},$$

which checks the previous solution.

6. Check problem 2, p. 9, by showing that the work done by the load is equal to the strain energy of the two bars.

7. A steel bar 30 inches long and of 1 sq. in. cross-sectional area is stretched 0.02 in. Find the amount of strain energy.

Answer. From eq. (169),

$$U = \frac{(0.02)^2 \times 30 \times 10^6}{2 \times 30} = 200 \text{ inch lbs.}$$

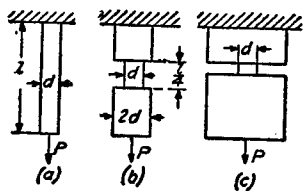


FIG. 242.

8. Compare the amounts of strain energy in the two circular bars shown in Fig. 242 (a) and (b) assuming a uniform distribution of stresses over cross sections of the bars.

Solution. The strain energy of the prismatical bar is

$$U = \frac{P^2 l}{2AE}.$$

The strain energy of the grooved bar is

$$U_1 = \frac{P^2 l}{2AE} + \frac{P^2 l}{8AE} = \frac{7}{16} \frac{P^2 l}{2AE}.$$

Hence

$$U_1 : U = \frac{7}{16}.$$

For a given maximum stress the quantity of energy stored in a grooved bar is less than that in a bar of uniform thickness. It takes only a very small amount of work to bring the tensile stress to a dangerous limit in a bar such as shown in Fig. 242 (c), having

a very narrow groove and a large outer diameter, although its diameter at the weakest place is equal to that of the cylindrical bar.

64. Tension Produced by Impact.—A simple arrangement for producing tension by impact is shown in Fig. 243. A weight W falls from a height h onto the flange mn and during the impact produces an extension of the vertical bar AB , which is fixed at the upper end. If the masses of the bar and flange are small in comparison with the mass of the falling body, a satisfactory approximate solution is obtained by neglecting the mass of the bar and assuming that there are no losses of energy during impact. After striking the flange mn the body W continues to move downward, causing an extension of the bar. Due to the resistance of the bar the velocity of the moving body diminishes until it becomes zero. At this moment the elongation of the bar and the corresponding tensile stresses are a maximum and their magnitudes are calculated on the assumption that the total work done by the weight W is transformed into strain energy of the bar.² If δ denotes the maximum elongation, the work done by W is $W(h + \delta)$. The strain energy of the bar is given by eq. (169). Then the equation for calculating δ is

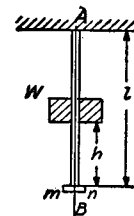


FIG. 243.

$$W(h + \delta) = \frac{AE}{2l} \delta^2, \quad (a)$$

from which

$$\delta = \delta_{st} + \sqrt{\delta_{st}^2 + \frac{1}{g} \delta_{st} v^2}, \quad (172)$$

where

$$\delta_{st} = \frac{Wl}{AE}$$

is the static elongation of the bar by the load W and $v = \sqrt{2gh}$ is the velocity of the falling body at the moment of striking the flange mn . If the height h is large in comparison with

² In actual cases part of the energy will be dissipated and the actual elongation will always be less than that calculated on the above assumption.

δ_{st} , this reduces to approximately

$$\delta = \sqrt{\frac{1}{g} \delta_{st} v^2}.$$

The corresponding tensile stress in the bar is

$$\sigma = \frac{\delta E}{l} = \frac{E}{l} \sqrt{\frac{1}{g} \delta_{st} v^2} = \sqrt{\frac{2E}{Al} \cdot \frac{Wv^2}{2g}}. \quad (173)$$

The expression under the radical is directly proportional to the kinetic energy of the falling body, to the modulus of elasticity of the material of the bar and inversely proportional to the volume Al of the bar. Hence the stress can be diminished not only by an increase in the cross-sectional area but also by an increase in the length of the bar or by a decrease in the modulus E . This is quite different from static tension of a bar where the stress is independent of the length l and the modulus E .

By substituting the working stress for σ in eq. (173) we obtain the following equation for proportioning a bar submitted to an axial impact:

$$Al = \frac{2E}{\sigma_w^2} \cdot \frac{Wv^2}{2g}, \quad (174)$$

i.e., for a given material the *volume* of the bar must be proportional to the kinetic energy of the falling body in order to keep the maximum stress constant.

Let us consider now another extreme case in which h is equal to zero, i.e., the body W is suddenly put on the support mn (Fig. 243) without an initial velocity. Although in this case we have no kinetic energy at the beginning of extension of the bar, the problem is quite different from that of a static loading of the bar. In the case of a static tension we assume a gradual application of the load and consequently there is always equilibrium between the acting load and the resisting forces of elasticity in the bar. The question of the kinetic energy of the load does not enter into the problem at all under such conditions. In the case of a sudden application of the

load, the elongation of the bar and the stress in the bar are zero at the beginning and the suddenly applied load begins to fall under the action of its own weight. During this motion the resisting force of the bar gradually increases until it just equals W when the vertical displacement of the weight is δ_{st} . But at this moment the load has a certain kinetic energy, acquired during the displacement δ_{st} ; hence it continues to move downward until its velocity is brought to zero by the resisting force in the bar. The maximum elongation for this condition is obtained from eq. (172) by setting $v = 0$. Then

$$\delta = 2\delta_{st}, \quad (175)$$

i.e., a suddenly applied load, due to dynamic conditions, produces a deflection which is twice as great as that which is obtained when the load is applied gradually.

This may also be shown graphically as in Fig. 244. The inclined line OA is the tensile test diagram for the bar shown in Fig. 243. Then for any elongation such as OC the area

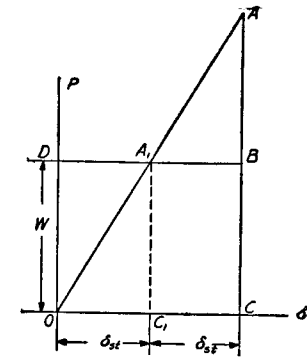


FIG. 244.

AOC gives the corresponding strain energy in the bar. The horizontal line DB is at distance W from the δ axis and the area $ODBC$ gives the work done by the load W during the displacement OC . When δ is equal to δ_{st} , the work done by W is represented in the figure by the area of the rectangle ODA_1C_1 . At the same time the energy stored in the bar is given by the area of the triangle OA_1C_1 , which is only half the area of the above rectangle. The other half of the work done is transformed into the kinetic energy of the moving body. Due to its acquired velocity the body continues to move and comes to rest only at the distance $\delta = 2\delta_{st}$ from the origin. At this moment the total work done by the load W , represented by the rectangle $ODBC$, equals the amount of energy stored in the bar and represented by the triangle OAC .

The above discussion of impact is based on the assumption that the stress in the bar remains within the elastic limit. Beyond this limit the problem becomes more involved, because the elongation of the bar is no longer proportional to the tensile force. Assuming that the tensile test diagram does not depend upon the speed of straining the bar,³ elongation beyond the elastic limit during impact can be determined from an ordinary tensile test diagram such as shown in Fig. 245. For any assumed maximum elongation δ the corresponding area $OADF$ gives the work necessary to produce such an elongation; this must equal the work $W(h + \delta)$ produced by the weight W . When $W(h + \delta)$

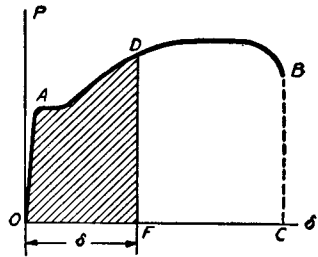


FIG. 245.

is equal or larger than the total area $OABC$ of the tensile test diagram, the falling body will fracture the bar.

From this it follows that any change in the form of the bar which results in diminishing the total area $OABC$ of the diagram diminishes also the resisting power of the bar to impact. In the grooved specimens shown in Fig. 242 (b) and (c), for instance, the plastic flow of metal will be concentrated at the groove and the total elongation and the work necessary to produce fracture will be much smaller than in the case of the cylindrical bar shown in the same figure. Such grooved specimens are very weak in impact; a slight shock may produce fracture, although the material itself is ductile. Members having rivet holes or any sharp variation in cross section are similarly weak against impact.⁴

In the previous discussion we neglected the mass of the bar

³ Experiments with ductile steel show that with a high velocity of straining the yield point is higher and the amount of work necessary to produce fracture is greater than in a static test. See N. N. Davidenkoff, Bulletin Polyt. Institute, St. Petersburg, 1913; also Welter, Ztschr. f. Metallkunde, 1924.

⁴ See Hackstroh, Baumaterialienkunde, 1905, p. 321, and H. Zimmermann, Zentralbl. d. Bauverw., 1899, p. 265.

in comparison with the mass of the falling body W . Only then may we assume that the total energy of the falling body is transformed into strain energy of the bar. The actual conditions of impact are more complicated and when the bar has an appreciable mass a part of the energy will be lost during impact. It is well known that when a mass W/g moving with a velocity v strikes centrally a stationary mass W_1/g and the deformation at the point of contact is plastic the final common velocity v_a of the two bodies, is

$$v_a = \frac{W}{W + W_1} v. \quad (b)$$

In the case of the bar shown in Fig. 243 the conditions are more complicated. During impact the upper end A is at rest while the lower end B acquires the velocity of the moving body W . Hence, to calculate the final velocity v_a from eq. (b) we use a *reduced mass* in place of the actual mass of the bar. Assuming that the velocity of the bar varies linearly along its length, it can be shown that the reduced mass in such a case is equal to one third of the mass of the bar.⁵ For a bar of weight q per unit length, eq. (b) becomes

$$v_a = \frac{W}{W + \frac{ql}{3}} v.$$

This is the common velocity of the load W and the lower end of the bar which is established at the first moment of impact. Assuming plastic deformation at the surface of contact between the falling load and the support mn (Fig. 243) so that there will be no question of rebounding, the corresponding kinetic energy is

$$\frac{v_a^2}{2g} (W + ql/3) = \frac{Wv^2}{2g} \cdot \frac{1}{1 + \frac{ql}{3W}}.$$

This quantity must be substituted for

$$\frac{Wv^2}{2g} = Wh$$

in eq. (a) in order to take into account the loss of energy at the

⁵ This solution was obtained by H. Cox, Cambridge Phil. Soc. Trans., 1849, p. 73. See also Todhunter and Pearson, History, Vol. 1, p. 895.

first moment of impact. Then, instead of eq. (172), we obtain

$$\delta = \delta_{st} + \sqrt{\delta_{st}^2 + \frac{1}{g} \delta_{st} v^2 \frac{1}{1 + \frac{ql}{3W}}} \quad (176)$$

The method described gives satisfactory results as long as the mass of the bar is small in comparison with the mass of the falling body. Otherwise a consideration of longitudinal vibrations of the bar becomes necessary.⁶ The local deformation at the point of contact during impact has been discussed by J. E. Sears⁷ and J. E. P. Wagstaff.⁸

Problems

1. A weight of 10 lbs. attached to a steel wire $\frac{1}{8}$ in. in diameter (Fig. 246) falls from A with the acceleration g . Determine the stress produced in the wire when its upper end A is suddenly stopped. Neglect the mass of the wire.




FIG. 246.

Solution. If the acceleration of the weight W is equal to g , there is no tensile stress in the wire. The stress after stopping the wire at A is obtained from eq. (173), in which δ_{st} is neglected. Substituting $v^2 = 2gh$ and $l = h$, we obtain

$$\sigma = \sqrt{\frac{2EW}{A}} = \sqrt{\frac{2 \times 30 \times 10^6 \times 10 \times 8^2}{0.785}} = 221 \times 10^3 \text{ lbs. per sq. in.}$$

It may be seen that the stress does not depend upon the height h through which the load falls, because the kinetic energy of the body increases in the same proportion as the volume of the wire.

2. A weight $W = 1,000$ lbs. falls from a height $h = 3$ ft. upon a vertical wooden pole 20 feet long and 12 in. in diameter, fixed at the lower end. Determine the maximum compressive stress in the pole, assuming that for wood $E = 1.5 \times 10^6$ lbs. per sq. in. and neglecting the mass of the pole and the quantity δ_{st} .

⁶ The longitudinal vibrations of a prismatical bar during impact were considered by Navier. A more comprehensive solution was developed by St. Venant; see his translation of Clebsch, "Theorie der Elasticität fester Körper," note on par. 61. See also I. Boussinesq, "Application des Potentiels," p. 508, and C. Ramsauer, Ann. d. Phys., Vol. 30, 1909.

⁷ J. E. Sears, Trans. Cambridge Phil. Soc., Vol. 21 (1908), p. 49.

⁸ J. E. P. Wagstaff, London Royal Soc. Proc. (Ser. A), Vol. 105, 1924, p. 544.

Answer. $\sigma = 2,000$ lbs. per sq. in.

3. A weight $W = 10,000$ lbs. attached to the end of a steel wire rope (Fig. 246) moves downwards with a constant velocity $v = 3$ feet per sec. What stresses are produced in the rope when its upper end is suddenly stopped? The free length of the rope at the moment of impact is $l = 60$ feet, its net cross-sectional area is $A = 2.5$ sq. in. and $E = 15 \times 10^6$ lbs. per sq. in.

Solution. Neglecting the mass of the rope and assuming that the kinetic energy of the moving body is completely transformed into the potential energy of strain of the rope, the equation for determining the maximum elongation δ of the rope is

$$\frac{AE\delta^2}{2l} - \frac{AE\delta_{st}^2}{2l} = \frac{W}{2g}v^2 + W(\delta - \delta_{st}), \quad (d)$$

in which δ_{st} denotes the statical elongation of the rope. Noting that $W = AE\delta_{st}/l$ we obtain, from eq. (d),

$$\frac{AE}{2l}(\delta - \delta_{st})^2 = \frac{Wv^2}{2g},$$

from which

$$\delta = \delta_{st} + \sqrt{\frac{Wv^2 l}{AEg}}.$$

Hence, upon sudden stopping of the motion, the tensile stress in the rope increases in the ratio

$$\frac{\delta}{\delta_{st}} = 1 + \frac{v}{\delta_{st}} \sqrt{\frac{Wl}{AEg}} = 1 + \frac{v}{\sqrt{g\delta_{st}}}. \quad (e)$$

For the above numerical data

$$\delta_{st} = \frac{Wl}{AE} = \frac{10,000 \times 60 \times 12}{2.5 \times 15 \times 10^6} = .192 \text{ in.,}$$

$$\frac{\delta}{\delta_{st}} = 1 + \frac{3 \times 12}{\sqrt{386 \times .192}} = 5.18.$$

Hence

$$\sigma = 5.18 \frac{W}{A} = 20,700 \text{ lbs. per sq. in.}$$

4. Solve the previous problem if a spring, which elongates .5 in. per thousand pounds load, is put between the rope and the load.

Solution. $\delta_{st} = 0.192 + 0.5 \times 10 = 5.192$ in. Substituting into eq. (e),

$$\frac{\delta}{\delta_{st}} = 1 + 0.80 = 1.80; \sigma = 1.80 \frac{W}{A} = 7,200 \text{ lbs. per sq. in.}$$

5. For the case shown in Fig. 243 determine the height h for which the maximum stress in the bar during impact is 30,000 lbs. per sq. in. Assume $W = 25$ lbs., $l = 6$ feet, $A = \frac{1}{2}$ sq. in., $E = 30 \times 10^6$ lbs. per sq. in. Neglect the mass of the bar.

Answer. $h = 21.6$ in.

65. Elastic Strain Energy in Shear and Twist.—The strain energy stored in an element submitted to pure shearing stress (Fig. 247) may be calculated by the method used in the case of simple tension. If the bottom side ad of the element is taken as fixed, only the work done during strain by the force P at the upper side bc need be considered. Assuming that the material follows Hooke's law, the shearing strain is proportional to the shearing stress and the diagram showing this relationship is analogous to that shown in Fig. 241. The work done by the force P and stored in the form of elastic strain energy is then (see eq. 167)

$$U = \frac{P\delta}{2}. \quad (167')$$

Remembering that

$$\frac{\delta}{l} = \gamma = \frac{\tau}{G} = \frac{P}{AG},$$

we obtain the following two equations from (167'):

$$U = \frac{P^2 l}{2AG}, \quad (177) \quad U = \frac{AG\delta^2}{2l}. \quad (178)$$

We obtain two expressions for the shearing strain energy per unit volume by dividing these equations by the volume Al of the block:

$$w = \frac{\tau^2}{2G}, \quad (179) \quad w = \frac{\gamma^2 G}{2}, \quad (180)$$

in which $\tau = P/A$ is the shearing stress and $\gamma = \delta/l$ is the shearing strain. The amount of shear energy per unit volume, which can be stored in the block without permanent set, is obtained by substituting the elastic limit for τ in eq. (179).

The energy stored in a twisted circular shaft is easily calculated by use of eq. (179). If τ_{\max} is the maximum shearing stress at the surface of the shaft, then $\tau_{\max}(2r/d)$ is the shearing stress at a point a distance r from the axis, where d is the diameter of the shaft. The energy per unit volume at this point is, from eq. (179),

$$w = \frac{2\tau_{\max}^2 r^2}{Gd^2}. \quad (a)$$

The energy stored in the material included between two cylindrical surfaces of radii r and $r + dr$ is

$$\frac{2\tau_{\max}^2 r^2}{Gd^2} 2\pi l r dr,$$

where l is the length of the shaft. Then the total energy stored in the shaft is

$$U = \int_0^{d/2} \frac{2\tau_{\max}^2 r^2}{Gd^2} 2\pi l r dr = \frac{1}{2} \frac{\pi d^2 l}{4} \frac{\tau_{\max}^2}{2G}. \quad (181)$$

This shows that the total energy is only half what it would be if all elements of the shaft were stressed to the maximum shearing stress τ_{\max} .

The energy of twist may be calculated from a diagram of twist (Fig. 248) in which the torque is represented by the ordinates and the angle of twist by the abscissas. Within the elastic limit, the angle of twist is proportional to the twisting moment, as represented by an inclined line OA . A small area shaded in the figure represents the work done by the torque during an increase $d\phi$ in the angle of twist ϕ . The area $OAB = M_t \phi / 2$

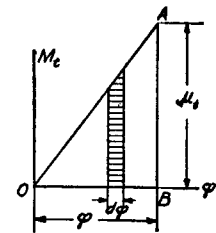


FIG. 248.

represents the total energy stored in the shaft during twist. Recalling that $\varphi = M_t l / GI_p$, we obtain

$$U = \frac{M_t^2 l}{2GI_p} \quad \text{or} \quad U = \frac{\varphi^2 GI_p}{2l}. \quad (182)$$

In the first of these two equations the energy is represented as a function of the torque, in the second as a function of the angle of twist.

In the general case of any shape of cross section and a torque varying along the length of the shaft, the angle of twist between the two adjacent cross sections is given by the equation (see p. 270)

$$\frac{d\varphi}{dx} dx = \frac{M_t}{C} dx.$$

The strain energy of one element of the shaft is

$$\frac{1}{2} M_t \frac{d\varphi}{dx} dx = \frac{C}{2} \left(\frac{d\varphi}{dx} \right)^2 dx$$

and the total energy of twist is

$$U = \frac{C}{2} \int_0^l \left(\frac{d\varphi}{dx} \right)^2 dx. \quad (183)$$

Problems

1. Determine the ratio between the elastic limit in shear and the elastic limit in tension if the amount of strain energy per cubic inch, which can be stored without permanent set, is the same in tension and in shear.

Solution. From eqs. (170) and (179),

$$\frac{\sigma^2}{2E} = \frac{\tau^2}{2G},$$

from which

$$\frac{\tau}{\sigma} = \sqrt{\frac{G}{E}}.$$

For steel

$$\tau = \sigma \sqrt{\frac{1}{2.6}} = 0.62\sigma.$$

2. Determine the deflection of a helical spring (Fig. 232) by using the expression for the strain energy of twist.

Solution. Denote by P the force acting in the direction of the axis of the helix (Fig. 232), by R the radius of the coils and by n the number of coils. The energy of twist stored in the spring, from eq. (182), is

$$U = \frac{(PR)^2 2\pi R n}{2GI_p}.$$

Equating this to the work done, $P\delta/2$, we obtain

$$\delta = \frac{2\pi n PR^3}{GI_p} = \frac{64n PR^3}{Gd^4}.$$

3. The weight of a steel helical spring is 10 lbs. Determine the amount of energy which can be stored in this spring without producing permanent set if the elastic limit in shear is 74,300 lbs. per sq. in.

Solution. The amount of energy per cubic inch, from eq. (179), is

$$w = \frac{(74,300)^2}{2 \times 11.5 \times 10^6} = 240 \text{ lbs. ins.}$$

The energy per pound of material (see p. 282) is 850 lbs. ins. Then the total energy of twist⁹ which can be stored in the spring is

$$\frac{1}{2} \times 10 \times 850 = 4,250 \text{ lbs. ins.}$$

4. A solid circular shaft and a thin tube of the same material and the same weight are submitted to twist. In what ratio are the amounts of energy in shaft and tube if the maximum stresses in both are equal?

Answer. $\frac{1}{2} : 1$.

5. A circular steel shaft with a flywheel at one end rotates at 120 r.p.m. It is suddenly stopped at the other end. Determine the maximum stress in the shaft during impact if the length of the shaft $l = 5$ feet, the diameter $d = 2$ inches, the weight of the flywheel $W = 100$ lbs., its radius of gyration $r = 10$ inches.

Solution. Maximum stress in the shaft is produced when the

⁹ The stress distribution is assumed to be the same as that in a twisted circular bar.

total kinetic energy of the flywheel is transformed into strain energy of the twisted shaft. The kinetic energy of the flywheel is

$$\frac{Wr^2\omega^2}{2g} = \frac{100 \times 10^2 \times (4\pi)^2}{2 \times 386} = 2,050 \text{ lbs. ins.}$$

Substituting this for U in eq. (181),

$$\tau_{\max} = \sqrt{\frac{16 \times 11.5 \times 10^6 \times 2,050}{\pi \times 4 \times 60}} = 22,400 \text{ lbs. per sq. in.}$$

6. Two circular bars of the same material, the same length but different cross sections A and A_1 , are twisted by the same torque. In what ratio are the amounts of energy of strain stored in these two bars?

Answer. Inversely proportional to the squares of the cross sectional areas.

66. Elastic Strain Energy in Bending.—Let us begin with pure bending. For a prismatic bar built in at one end and bent by a couple M applied at the other end (Fig. 249) the angular displacement at the free end is

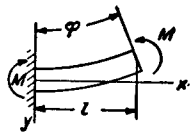


FIG. 249.

$$\phi = \frac{Ml}{EI_z}. \quad (a)$$

This displacement is proportional to the bending moment M and by using a diagram similar to that in Fig. 248 we may conclude from similar reasoning that the work done during deflection by the bending moment M , or also the energy stored in the bar, is

$$U = \frac{M\phi}{2}. \quad (b)$$

By use of eq. (a) this energy may be expressed in either of these forms:

$$U = \frac{M^2 l}{2EI_z}; \quad (184) \quad U = \frac{\phi^2 EI_z}{2l}. \quad (185)$$

It is sometimes useful to have the potential energy expressed

as a function of the maximum normal stress $\sigma_{\max} = M_{\max}/Z$; thus, for a rectangular bar $\sigma_{\max} = 6M/bh^2$ or $M = bh^2\sigma_{\max}/6$, and eq. (184) becomes

$$U = \frac{1}{3} bhl \frac{\sigma_{\max}^2}{2E}. \quad (186)$$

In this case the total energy is evidently only one third as much as it would be if all fibers carried the stress σ_{\max} .

In the discussion of bending by transverse forces, the strain energy of shear will be neglected, at first. The energy stored in an element of the beam of length dx is, from eqs. (184) and (185),

$$dU = \frac{M^2 dx}{2EI_z} \quad \text{or} \quad dU = \frac{EI_z (d\phi)^2}{2dx}.$$

Here the bending moment M is variable with respect to x , and

$$d\phi = \frac{dx}{r} = \left| \frac{d^2 y}{dx^2} \right| dx$$

(see p. 135). The total energy stored in the beam is consequently

$$U = \int_0^l \frac{M^2 dx}{2EI_z}, \quad (187) \quad \text{or} \quad U = \int_0^l \frac{EI_z}{2} \left(\frac{d^2 y}{dx^2} \right)^2 dx. \quad (188)$$

Take, for instance, the cantilever AB (Fig. 250). The bending moment at any cross section mn is $M = -Px$. Substitution into eq. (187) gives

$$U = \int_0^l \frac{P^2 x^2 dx}{2EI_z} = \frac{P^2 l^3}{6EI_z}. \quad (c)$$

For a rectangular bar, $\sigma_{\max} = 6Pl/bh^2$, and eq. (c) may be put in the form

$$U = \frac{1}{9} bhl \frac{\sigma_{\max}^2}{2E}. \quad (c')$$

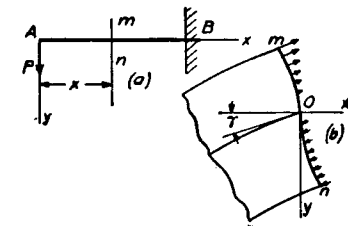


FIG. 250.

This shows that the quantity of energy which can be stored

in a rectangular cantilever beam, loaded at the end, without producing permanent set, is one third of that for pure bending of the same bar and one ninth of that for the same bar in simple tension. This consideration is of importance in designing springs, which must absorb a given amount of energy without damage and yet have as small a weight as possible. The capacity of a cantilever to absorb energy may be increased by giving it a variable cross section. For example, a cantilever of *uniform strength* with a rectangular cross section of constant depth h (Fig. 185), and with the same values for P , h , and σ_{\max} , has a deflection and hence an amount of stored energy 50 per cent greater than for the prismatical bar. At the same time the bar of uniform strength has half the weight of the prismatical bar, so it can store three times as much energy per pound of material.

Returning to eq. (c) and equating the strain energy to the work done by the load P during deflection, we obtain

$$\frac{P\delta}{2} = \frac{Pl^3}{6EI_z}, \quad (d)$$

from which the deflection at the end is

$$\delta = \frac{Pl^3}{3EI_z},$$

which coincides with eq. (95).

The additional deflection due to shear may also be determined from the potential energy of strain. For the cantilever shown in Fig. 250, with a rectangular cross section, the shearing stress at a distance y from the neutral axis is (see eq. 65)

$$\frac{P}{2I_z} \left(\frac{h^2}{4} - y^2 \right).$$

The energy of shear in an elemental volume $b dx dy$ is, therefore, from eq. (179),

$$\frac{P^2}{8GI_z^2} \left(\frac{h^2}{4} - y^2 \right)^2 b dx dy,$$

$$U = \int_0^l \int_{-h/2}^{+h/2} \frac{P^2}{8GI_z^2} \left(\frac{h^2}{4} - y^2 \right)^2 b dx dy = \frac{P^2 l h^2}{20GI_z}. \quad (e)$$

This must be added to the right side of eq. (d) above¹⁰ to obtain the equation for determining the total deflection:

$$\frac{P\delta}{2} = \frac{Pl^3}{6EI_z} + \frac{P^2 l h^2}{20GI_z}; \quad (f)$$

consequently

$$\delta = \frac{Pl^3}{3EI_z} \left(1 + \frac{3}{10} \frac{h^2}{l^2} \frac{E}{G} \right). \quad (g)$$

The second term in the parentheses represents the effect of the shearing stresses on the deflection of the beam. By use of the method developed in article 39 under the assumption that the element of the cross section at the centroid of the built-in end remains vertical (Fig. 250, *b*), the additional slope due to shear is

$$\gamma = \frac{\tau_{\max}}{G} = \frac{3}{2} \frac{P}{bhG},$$

and the additional deflection is

$$\frac{3}{2} \frac{Pl}{bhG};$$

hence

$$\delta = \frac{Pl^3}{3EI_z} + \frac{3}{2} \frac{Pl}{bhG} = \frac{Pl^3}{3EI_z} \left(1 + \frac{3}{8} \frac{h^2}{l^2} \frac{E}{G} \right). \quad (g')$$

It will be seen that eqs. (g) and (g') do not coincide. The discrepancy is explained as follows: The derivation of article 39 was based on the assumption that the cross sections of the beam can warp freely under the action of shearing stresses. In such a case the built-in cross section will be distorted to a curved surface *mon* (Fig. 250, *b*) and in calculating the total work done on the cantilever we must consider not only the work done by the force P , Fig. 250 (*a*), but also the work done by the stresses acting on the built-in cross section, Fig. 250 (*b*). If this later work is taken into account, the

¹⁰ Such an addition of the energy of shear to the energy due to normal stresses is justified, because the shearing stresses acting on an element (Fig. 247) do not change the lengths of the sides of the element and if normal forces act on these sides, they do no work during shearing strain. Hence shearing stresses do not change the amount of energy due to tension or compression and the two kinds of energy may be simply added together.

deflection calculated from the consideration of the strain energy coincides with that obtained in article 39 and given in equation (g') above.¹¹

In the case of a simply supported beam loaded at the middle, the middle cross section does not warp, as can be concluded from considerations of symmetry. In such a case equation (g), if applied to each half of the beam, will give a better approximation for the deflection than will equation (g'). This can be seen by comparing the approximate equations (g) and (g') with the more rigorous solution given in article 39.

Problems

1. A wooden cantilever beam, 6 feet long, of rectangular cross section 8" \times 5" carries a uniform load $q = 200$ lbs. per foot. Determine the amount of strain energy stored if $E = 1.5 \times 10^6$ lbs. per sq. in.

Answer.

$$U = \frac{q^2 l^5}{40EI_z} = \frac{1200^2 \times 72^3 \times 12}{40 \times 1.5 \times 10^6 \times 5 \times 8^3} = 42 \text{ lbs. ins.}$$

2. In what ratio does the amount of strain energy calculated in the previous problem increase if the depth of the beam is 5" and the width 8"?

Answer. The strain energy increases in the ratio $8^2/5^2$.

3. Two identical bars, one simply supported, the other with built-in ends, are bent by equal loads applied at the middle. In what ratio are the amounts of strain energy stored?

Answer. 4 : 1.

4. Solve the above problem for a uniformly distributed load of the same intensity q for both bars.

5. Find the ratio of the amounts of strain energy stored in beams of rectangular section equally loaded, having the same length and the same width of cross sections but whose depths are in the ratio 2/1.

Solution. For a given load the strain energy is proportional to the deflection and this is inversely proportional to the moment of inertia of the cross section. By halving the depth the deflection is therefore increased 8 times and the amount of strain energy increases in the same proportion.

67. Bending Produced by Impact.—The dynamic deflection of a beam which is struck by a falling body W may be

¹¹ See "Theory of Elasticity," p. 150, 1934.

determined by the method used in the case of impact causing tension (art. 64). Take, as an example, a simply supported beam struck at the middle (Fig. 251), and assume that the mass of the beam may be neglected in comparison with the mass of the falling body, and that the beam is not stressed beyond the yield point. Then there will be no loss of energy during impact and the work done by the weight W during its fall is completely transformed into strain energy of bending of the beam.¹² Let δ denote the maximum deflection of the beam during impact. If we assume that the deflection curve during impact has the same shape as that during static deflection, the force which would cause such a deflection is, from eq. (90),

$$P = \delta \cdot \frac{48EI_z}{l^3}. \quad (a)$$




FIG. 251.

The total energy stored in the beam is equal to the work done by the force P :

$$U = \frac{P\delta}{2} = \delta^2 \frac{24EI_z}{l^3}.$$

If h denotes, as before, the distance fallen, the equation for determining δ is

$$W(h + \delta) = \delta^2 \frac{24EI_z}{l^3}, \quad (b)$$

from which

$$\delta = \delta_{st} + \sqrt{\delta_{st}^2 + \frac{1}{g} \delta_{st} v^2}, \quad (189)$$

where

$$\delta_{st} = \frac{Wl^3}{48EI_z} \quad \text{and} \quad v = \sqrt{2gh}.$$

Equation (189) is exactly the same as that for impact causing tension (eq. 172).

It should be noted that the form of the equation remains the same for any other case of impact, provided the deflection

¹² Local deformation at the surface of contact of the load and the beam is neglected in this calculation.

at the point of impact is proportional to the force P , exerted at this point. If we represent by α the factor of proportionality which depends upon the structure, we have

$$\alpha P = \delta \quad \text{and} \quad U = \frac{P\delta}{2} = \frac{\delta^2}{2\alpha}.$$

Then

$$W(h + \delta) = \frac{\delta^2}{2\alpha},$$

and since $\delta_{st} = W\alpha$, this reduces to eq. (189) above.

It should be noted also that the deflection δ calculated from (189) represents the upper limit, which the maximum dynamic deflection approaches when there are no losses of energy during impact. Any such loss will reduce the dynamic deflection. When the dynamic deflection is found from eq. (189), the corresponding stresses can be found by multiplying by δ/δ_{st} the stresses obtained for a static application of the load W .

When h is large in comparison with δ_{st} , eq. (189) may take the simpler form

$$\delta = \sqrt{\frac{1}{g} \delta_{st} v^2}. \quad (c)$$

For the case of a beam supported at the ends and struck at the middle this equation gives

$$\delta = \sqrt{\frac{Wv^2}{2g} \frac{l^3}{24EI_z}}. \quad (d)$$

The maximum bending moment in this case is

$$M_{\max} = \frac{Pl}{4} = \frac{\delta \cdot 48EI_z l}{l^3 \cdot 4}$$

and

$$\sigma_{\max} = \frac{M_{\max}}{Z} = \frac{\delta \cdot 48EI_z l}{l^3 \cdot 4Z}.$$

For a rectangular cross section, using eq. (d),

$$\sigma_{\max} = \sqrt{\frac{Wv^2}{2g} \frac{18E}{lA}}. \quad (e)$$

This indicates that the maximum stress depends upon the kinetic energy of the falling body and the volume lA of the beam.

In determining the effect of the mass of the beam on the maximum deflection we will assume that the deflection curve during impact has the same shape as during static deflection. Then it can be shown that the reduced mass of the beam¹³ supported at the ends is $17/35 (ql/g)$ and the common velocity which will be established at the first moment of impact is

$$v_a = \frac{W}{W + (17/35) ql} v.$$

The total kinetic energy after the establishment of common velocity v_a is

$$\frac{v_a^2}{2g} (W + (17/35) ql) = \frac{Wv^2}{2g} \frac{1}{1 + \frac{17}{35} \frac{ql}{W}};$$

using this instead of

$$\frac{Wv^2}{2g} = Wh$$

in eq. (b), we obtain

$$\delta = \delta_{st} + \sqrt{\delta_{st}^2 + \frac{\delta_{st} v^2}{g} \frac{1}{1 + \frac{17}{35} \frac{ql}{W}}}, \quad (190)$$

which takes account of the effect of the mass of the beam on the deflection δ .¹⁴

¹³ See paper by Homersham Cox mentioned before (see p. 289).

¹⁴ Several examples of the application of this equation will be found in the paper by Prof. Tschetsche, *Zeitschr. d. Ver. d. Ing.*, 1894, p. 134. A more accurate theory of transverse impact on the beam is based on the investigation of its lateral vibration together with the local deformations at the point of impact. See St. Venant, loc. cit., p. 537. Note finale du par. 61; C. R., Vol. 45, 1857, p. 204. See also writer's paper in *Ztschr. f. Math. u. Phys.*, Vol. 62, 1913, p. 198. Experiments with beams subjected to impact have been made in Switzerland and are in satisfactory agreement with the above approximate theory; see "Tech. Komm. d. Verband Schweiz. Brückenbau- u. Eisenhochbaufabriken," Bericht von M. Roß, March, 1922. See also the recent articles by Tuzi, Z., and Nisida, M., *Phil. Mag.* (7), Vol. 21, p. 448; and R. N. Arnold, *Proc. of the Institution of Mechanical Engineers*, Vol. 137, 1937, p. 217.

In the case of a cantilever, if the weight W strikes the beam at the end, the magnitude of the reduced mass of the beam is $33/140 (ql/g)$. When a beam simply supported at ends is struck at a point whose distances from the supports are respectively a and b , the reduced mass is

$$\frac{1}{105} \left[1 + 2 \left(1 + \frac{l^2}{ab} \right)^2 \right] \frac{ql}{g}.$$

Problems

1. A simply supported rectangular wooden beam 9 feet long is struck at the middle by a 40 lb. weight falling from a height $h = 12$ in. Determine the necessary cross-sectional area if the working stress is $\sigma_w = 1,000$ lbs. per sq. in., $E = 1.5 \times 10^6$ lbs. per sq. in.

Solution. Using eq. (e), p. 302,¹⁵

$$A = \frac{Wv^2}{2g} \frac{18E}{l\sigma_w^2} = 40 \times 12 \frac{18 \times 1.5 \times 10^6}{9 \times 12 \times 1,000^2} = 120 \text{ sq. in.}$$

2. In what proportion does the area in the previous problem change (1) if the span of the beam increases from 9 to 12 feet; (2) if the weight W increases by 50 per cent?

Answer. (1) The area diminishes in the ratio 3 : 4. (2) The area increases by 50 per cent.

3. A weight $W = 100$ lbs. drops 12 inches upon the middle of a simply supported I beam, 10 ft. long. Find safe dimensions if $\sigma_w = 30 \times 10^3$ lbs. per sq. in.

Solution. Neglecting δ_{st} in comparison with h (see eq. c), the ratio between the dynamic and the static deflections is

$$\frac{\delta}{\delta_{st}} = \sqrt{\frac{v^2}{g\delta_{st}}} = \sqrt{\frac{2h}{\delta_{st}}}.$$

If the deflection curve during impact is of the same shape as for static deflection, the maximum bending stresses will be in the same ratio as the deflections; hence

$$\sqrt{\frac{2h}{\delta_{st}}} \frac{Wl}{4Z} = \sigma_w, \text{ from which } \frac{Z}{c} = \frac{6EW}{\sigma_w^2} \frac{h}{l},$$

in which Z is the section modulus and c is the distance from the neutral axis of the most remote fiber, which is half the depth of

¹⁵ Local deformation at the surface of contact of the load and the beam is neglected in this calculation.

the beam in our case. Substituting the numerical data,

$$\frac{Z}{c} = \frac{6 \times 30 \times 10^6 \times 100 \times 12}{30,000^2 \times 120} = 2 \text{ in.}^2$$

The necessary I beam is of 5" depth, wt. per foot 12.25 lbs.

4. What stress is produced in the beam of the previous problem by a 200 lb. weight falling onto the middle of the beam from a height of 6 in.?

Answer. $\sigma_{\max} = 28,900$ lbs. per sq. in.

5. A wooden cantilever beam 6 feet long and of square cross section 12" \times 12" is struck at the end by a weight $W = 100$ lbs. falling from a height $h = 12$ in. Determine the maximum deflection, taking into account the loss in energy due to the mass of the beam.

Solution. Neglecting δ_{st} in comparison with h , the equation analogous to eq. (190) becomes

$$\delta = \sqrt{\frac{\delta_{st} v^2}{g} \frac{1}{1 + \frac{33}{140} \frac{ql}{W}}}.$$

For $ql = 40 \times 6 = 240$ lbs.,

$$\delta = \sqrt{\frac{\delta_{st} \cdot \frac{24}{1 + \frac{33 \times 240}{140 \times 100}}}{g}} = \sqrt{\frac{15.3 \times 100 \times 72^3}{3 \times 1.5 \times 10^6 \times 12^3}} = 0.271 \text{ in.}$$

6. A beam simply supported at the ends is struck at the middle by a weight W falling down from the height h . Neglecting δ_{st} in comparison with h , find the magnitude of the ratio ql/W at which the effect of the mass of the beam reduces the dynamical deflection by 10 per cent.

Answer.

$$\frac{ql}{W} = 0.483.$$

68. The General Expression for Strain Energy.—In the discussion of problems in tension, compression, twist and bending it has been shown that the energy of strain can be represented in each case by a function of the second degree in the external forces (eqs. 168, 177 and 184) or by a function of the second degree in the displacements (eqs. 169, 178 and

185). This is also true for the most general deformation of an elastic body, with the following provisions: the material follows Hooke's law; the conditions are such that the small displacements, due to strain, do not affect the action of the external forces and are negligible in calculating the stresses.¹⁶ With these two provisions, the displacements of an elastic system are linear functions of the external loads; if these loads increase in a certain proportion, all the displacements increase in the same proportion. Consider a body submitted to the action of the external forces P_1, P_2, P_3, \dots (Fig. 252) and supported in such a manner that movement as a rigid body is impossible and displacements are due to elastic deformations only. Let $\delta_1, \delta_2, \delta_3, \dots$ denote the displacements of the points of application of the forces each measured in the direction of the corresponding force.¹⁷ If the external forces increase gradually so that they are always in equilibrium with the resisting internal elastic forces, the work which they do during deformation will be equal to the strain energy stored in the deformed body.

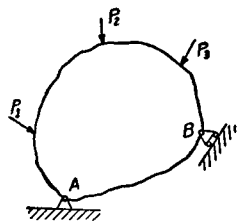


FIG. 252.

The amount of this energy does not depend upon the order in which the forces are applied and is completely determined by their final magnitudes. Let us assume that all external forces P_1, P_2, P_3, \dots increase simultaneously in the same ratio; then the relation between each force and its corresponding displacement can be represented by a diagram analogous to that shown in Fig. 24I, and the work done by all the forces P_1, P_2, P_3, \dots , equal to the strain energy stored in the body, is

$$U = \frac{P_1 \delta_1}{2} + \frac{P_2 \delta_2}{2} + \frac{P_3 \delta_3}{2} + \dots, \quad (191)$$

¹⁶ Such problems as the bending of bars by lateral forces with simultaneous axial tension or compression do not satisfy the above condition and are excluded from this discussion. Regarding these exceptional cases see article 72.

¹⁷ The displacements of the same points in the directions perpendicular to the corresponding forces are not considered in the following discussion.

i.e., the total energy of strain is equal to half the sum of the products of each external force and its corresponding displacement.¹⁸ On the assumptions made above, the displacements $\delta_1, \delta_2, \delta_3, \dots$ are linear functions of the forces P_1, P_2, P_3, \dots . The substitution of these functions into eq. (191) gives a general expression for the strain energy in the form of a homogeneous function of the second degree in the external forces. If the forces be represented as linear functions of displacements and these functions be substituted into eq. (191), an expression for the strain energy in the form of a homogeneous function of the second degree in displacements is obtained.

In the above discussion the reactions at the supports were not taken into consideration. The work done by these reactions during the deformation is equal to zero since the displacement of an immovable support, such as A (Fig. 252), is zero and the displacement of a movable support, such as B , is perpendicular to the reaction, friction at the supports being neglected. Consequently, the reactions add nothing to the expression for the potential energy (191).

As an example of the application of eq. (191) let us consider the energy stored in a cubic element submitted to uniform tension in three perpendicular directions (Fig. 50). If the edge of the cube is of unit length, the tensile forces on its faces are numerically $\sigma_x, \sigma_y, \sigma_z$ and the corresponding elongations, $\epsilon_x, \epsilon_y, \epsilon_z$. Then the strain energy stored in one cubic inch, from eq. (191), is

$$w = \frac{\sigma_x \epsilon_x}{2} + \frac{\sigma_y \epsilon_y}{2} + \frac{\sigma_z \epsilon_z}{2}.$$

Substituting, for the elongations, the values given by (43),¹⁹

$$w = \frac{1}{2E} (\sigma_x^2 + \sigma_y^2 + \sigma_z^2) - \frac{\mu}{E} (\sigma_x \sigma_y + \sigma_y \sigma_z + \sigma_z \sigma_x). \quad (192)$$

¹⁸ This conclusion was obtained first by Clapeyron; see Lamé, *Leçons sur la théorie mathématique de l'élasticité*, 2 ed., 1866, p. 79.

¹⁹ Here the changes in temperature due to strain are considered of no practical importance. For further discussion see the book by T. Weyrauch, "Theorie elastischer Körper," Leipzig, 1884, p. 163. See also Z. f. Architektur- und Ingenieurwesen, Vol. 54, 1908, p. 91 and p. 277.

This expression can also be used when some of the *normal* stresses are compressive, in which case they must be given a negative sign.

If in addition to normal stresses there are shearing stresses acting on the faces of the element, the energy of shear can be added to the energy of tension or compression (see p. 299), and using eq. (179) the total energy stored in one cubic inch is

$$w = \frac{1}{2E} (\sigma_x^2 + \sigma_y^2 + \sigma_z^2) - \frac{\mu}{E} (\sigma_x \sigma_y + \sigma_y \sigma_z + \sigma_z \sigma_x) + \frac{1}{2G} (\tau_{xy}^2 + \tau_{yz}^2 + \tau_{zx}^2). \quad (193)$$

As a second example let us consider a beam supported at the ends, loaded at the middle by a force P and bent by a couple M applied at the end A . The deflection at the middle is, from eqs. (90) and (105),

$$\delta = \frac{Pl^3}{48EI} + \frac{Ml^2}{16EI}. \quad (a)$$

The slope at the end A is, from eqs. (88) and (104),

$$\theta = \frac{Pl^2}{16EI} + \frac{Ml}{3EI}. \quad (b)$$

Then the strain energy of the beam, equal to the work done by the force P and by the couple M , is

$$U = \frac{P\delta}{2} + \frac{M\theta}{2} = \frac{1}{EI} \left(\frac{P^2 l^3}{96} + \frac{M^2 l}{6} + \frac{MPl^2}{16} \right). \quad (c)$$

This expression is a homogeneous function of the second degree in the external force and the external couple. Solving eqs. (a) and (b) for M and P and substituting in eq. (c), an expression for the strain energy in the form of a homogeneous function of the second degree in displacements may be obtained. It must be noted that when external couples are acting on the body the corresponding displacements are the angular displacements of surface elements on which these couples are acting.

69. The Theorem of Castigliano.—From the expressions for the energy of strain in various cases a very simple method for calculating the displacements of points of an elastic body during deformation may be established. For example, in

the case of simple tension (Fig. 1), the strain energy as given by eq. (168) is

$$U = \frac{P^2 l}{2AE}.$$

By taking the derivative of this expression with respect to P we obtain

$$\frac{dU}{dP} = \frac{Pl}{AE} = \delta,$$

i.e., the derivative of the strain energy with respect to the load gives the displacement *corresponding* to the load, i.e., at the point of application of the load in the direction of the load. In the case of a cantilever loaded at the end, the strain energy is (eq. c, p. 297)

$$U = \frac{P^2 l^3}{6EI}.$$

The derivative of this expression with respect to the load P gives the known deflection at the free end $Pl^3/3EI$.

In the twist of a circular shaft the strain energy is (eq. 182)

$$\frac{M_t^2 l}{2GI_p}.$$

The derivative of this expression with respect to the torque gives

$$\frac{dU}{dM_t} = \frac{M_t l}{GI_p} = \varphi,$$

which is the angle of twist of the shaft, and represents the displacement *corresponding* to the torque.

When several loads act on an elastic body, the same method of calculation of displacements may be used. For example, expression (c) of the previous article gives the strain energy of a beam bent by a load P at the middle and by a couple M at the end. The partial derivative of this expression with respect to P gives the deflection under the load and the partial derivative with respect to M gives the angle of rotation of the end of the beam on which the couple M acts.

The theorem of Castigliano is a general statement of these results.²⁰ If the material of the system follows Hooke's law and the conditions are such that the small displacements due to deformation can be neglected in discussing the action of forces, the strain energy of such a system may be given by a homogeneous function of the second degree in the acting forces (see art. 68). Then the partial derivative of strain energy with respect to any such force gives the displacement corresponding to this force (exceptional cases see art. 72). The terms "force" and "displacement" here may have their generalized meanings, that is, they include "couple" and "angular displacement" respectively.

Let us consider a general case such as shown in Fig. 252. Assume that the strain energy is represented as a function of the forces P_1, P_2, P_3, \dots , so that

$$U = f(P_1, P_2, P_3, \dots). \quad (a)$$

If a small increase dP_n is given to any external load P_n , the strain energy will increase also and its new amount will be

$$U + \frac{\partial U}{\partial P_n} dP_n. \quad (b)$$

But the magnitude of the strain energy does not depend upon the order in which the loads are applied to the body—it depends only upon their final values. It can be assumed, for instance, that the infinitesimal load dP_n was applied first, and afterwards the loads P_1, P_2, P_3, \dots . The final amount of strain energy remains the same, as given by eq. (b). The load dP_n , applied first, produces only an infinitesimal displacement, so that the corresponding work done is a small quantity of the second order and can be neglected. Applying now the loads P_1, P_2, P_3, \dots , it must be noticed that their effect will not be

²⁰ See the paper by Castigliano, "Nuova Teoria Intorno dell' Equilibrio dei Sistemi Elastici," Atti della Accademia delle scienze, Torino, 1875. See also his "Théorie de l'équilibre des systèmes élastiques," Turin, 1879. For an English translation of Castigliano's work see E. S. Andrews, London, 1919.

modified by the load dP_n previously applied²¹ and the work done by these loads will be equal to U (eq. a), as before. But during the application of these forces, however, dP_n is given some displacement δ_n in the direction of P_n , and does the work $(dP_n)\delta_n$. The two expressions for the work must be equal; therefore

$$U + \frac{\partial U}{\partial P_n} (dP_n) = U + (dP_n)\delta_n, \\ \delta_n = \frac{\partial U}{\partial P_n}. \quad (194)$$

As an application of the theorem let us consider a cantilever beam carrying a load P and a couple M_a at the end, Fig. 253. The bending moment at a cross section mn is $M = -Px - M_a$ and the strain energy, from equation (184), is

$$U = \int_0^l \frac{M^2 dx}{2EI}.$$

To obtain the deflection δ at the end of the cantilever we have only to take the partial derivative of U with respect to P , which gives

$$\delta = \frac{\partial U}{\partial P} = \frac{1}{EI} \int_0^l M \frac{\partial M}{\partial P} dx.$$

Substituting for M its equivalent expression, in terms of P and M_a , we obtain

$$\delta = \frac{1}{EI} \int_0^l (Px + M_a)x dx = \frac{Pl^3}{3EI} + \frac{M_al^2}{2EI}.$$

The same expression would have been obtained by applying one of the previously described methods, such as the area moment method.

To obtain the slope at the end we calculate the partial

²¹ This follows from the provisions made on page 306 on the basis of which the strain energy was obtained as a homogeneous function of the second degree.

derivative of the strain energy with respect to the couple M_a . Then

$$\theta = \frac{\partial U}{\partial M_a} = \frac{1}{EI} \int_0^l M \frac{\partial M}{\partial M_a} dx$$

$$= \frac{1}{EI} \int_0^l (Px + M_a) dx = \frac{Pl^2}{2EI} + \frac{M_al}{EI}$$

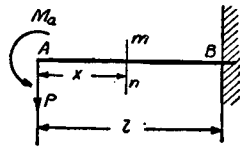


FIG. 253.

The positive signs obtained for δ and θ indicate that the deflection and rotation of the end have the same directions respectively as the force and the couple in

Fig. 253.

It should be noted that the partial derivative $\partial M / \partial P$ is the rate of increase of the moment M with respect to the increase of the load P and can be visualized by the bending moment diagram for a load equal to unity, as shown in Fig. 254 (a). The partial derivative $\partial M / \partial M_a$ can be visualized

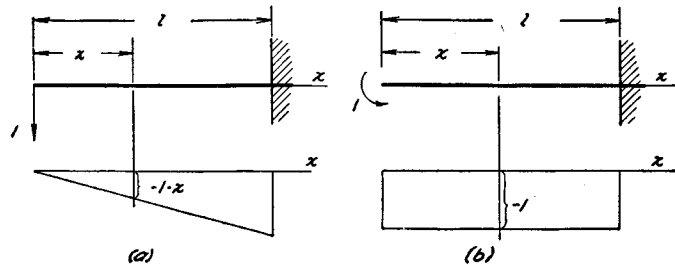


FIG. 254.

in the same manner by the bending moment diagram in Fig. 254 (b). Using the notations

$$\frac{\partial M}{\partial P} = M_p' \quad \text{and} \quad \frac{\partial M}{\partial M_a} = M_m'$$

we can represent our previous results in the following form:

$$\delta = \frac{1}{EI} \int_0^l M M_p' dx; \quad \theta = \frac{1}{EI} \int_0^l M M_m' dx. \quad (195)$$

These equations, derived for the particular case shown in Fig. 253, also hold for the general case of a beam with any kind of loading and any kind of support. They can also be used in the case of distributed loads.

Let us consider, for example, the case of a uniformly loaded and simply supported beam, Fig. 255, and calculate the deflection at the middle of this beam by using the Castigliano theorem. In the preceding cases concentrated forces and couples acted, and partial derivatives with respect to these forces and couples gave the corresponding displacements and

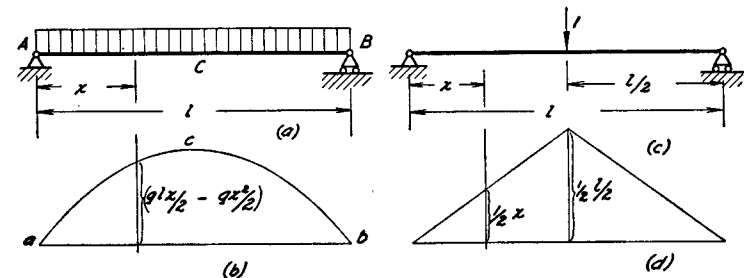


FIG. 255.

rotations. In the case of a uniform load there is no vertical force acting at the middle of the beam which would correspond to the deflection at the middle. Thus we cannot proceed as in the previous problem. This difficulty can, however, be readily removed by assuming that there is a fictitious load P of infinitely small magnitude at the middle. Such a force evidently will not affect the deflection and the bending moment diagram shown in Fig. 255 (b). At the same time, the rate of increase of the bending moment due to the increase of P , represented by the partial derivative $\partial M / \partial P$, is as represented by Fig. 255 (c) and 255 (d). With these values of M and $\partial M / \partial P$ the value of the deflection is

$$\delta = \frac{\partial U}{\partial P} = \frac{1}{EI} \int_0^l M \frac{\partial M}{\partial P} dx.$$

Observing that M and $\partial M / \partial P$ are both symmetrical with

respect to the middle of the span, we obtain

$$\delta = \frac{2}{EI_z} \int_0^{l/2} M \frac{\partial M}{\partial P} dx = \frac{2}{EI_z} \int_0^{l/2} \left(\frac{qlx}{2} - \frac{qx^2}{2} \right) \frac{x}{2} dx = \frac{5}{384} \frac{ql^4}{EI_z}.$$

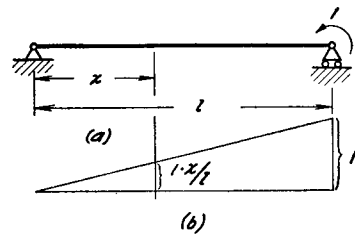


FIG. 256.

If it is required to calculate the slope at the end *B* of the beam in Fig. 255 (*a*) by using the Castigliano theorem, we have only to assume an infinitely small couple M_b applied at *B*. Such a couple does not change the bending moment diagram in Fig. 255 (*b*). The

partial derivative $\partial M / \partial M_b$ is then as represented in Fig. 256 (*a*) and 256 (*b*). The required rotation of the end *B* of the beam is then

$$\theta = \frac{\partial U}{\partial M_b} = \frac{1}{EI_z} \int_0^l M \frac{\partial M}{\partial M_b} dx = \frac{1}{EI_z} \int_0^l \left(\frac{qlx}{2} - \frac{qx^2}{2} \right) \frac{x}{l} dx = \frac{ql^3}{24EI_z}.$$

We see that the results obtained by the use of Castigliano's theorem coincide with those previously obtained (p. 138).

The Castigliano theorem is especially useful in the calculation of deflections in trusses. As an example let us consider the case shown in Fig. 257. All members of the system are numbered and their lengths and cross-sectional areas given in the table below. The force S_i produced in any bar *i* of the system by the loads P_1, P_2, P_3

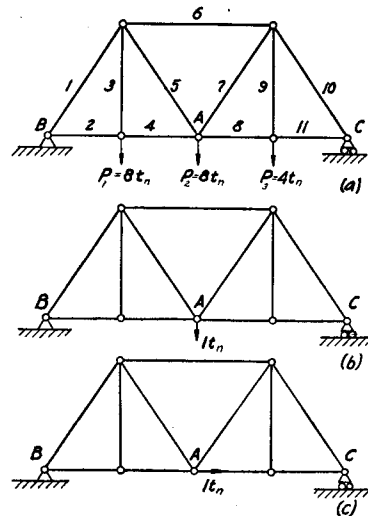


FIG. 257.

may be calculated from simple equations of statics. These forces are given in column 4 of the table. The strain energy

TABLE OF DATA FOR THE TRUSS IN FIGURE 257

1	2	3	4	5	6	7
<i>i</i>	<i>l_i</i> in.	<i>A_i</i> in. ²	<i>S_i</i> tn.	<i>S_i'</i>	$\frac{S_i S_i' l_i}{A_i}$	<i>S_i''</i>
1	250	6	-13.75	-0.625	358	0
2	150	3	8.25	0.375	155	1
3	200	2	8.00	0	0	0
4	150	3	8.25	0.375	155	1
5	250	2	3.75	0.625	293	0
6	300	4	-10.50	-0.750	59	0
7	250	2	6.25	0.625	488	0
8	150	3	6.75	0.375	127	0
9	200	2	4.00	0	0	0
10	250	6	-11.25	-0.625	293	0
11	150	3	6.75	0.375	127	0

$$\sum_{i=1}^m \frac{S_i S_i' l_i}{A_i} = 2,055 \text{ tns. per inch.}$$

of any bar *i*, from eq. (168), is $S_i^2 l_i / 2 A_i E$. The amount of strain energy in the whole system is

$$U = \sum_{i=1}^m \frac{S_i^2 l_i}{2 A_i E}, \quad (196)$$

in which the summation is extended over all the members of the system, which in our case is $m = 11$. The forces S_i are functions of the loads P , and the deflection δ_n under any load P_n is, therefore, from eq. (194),

$$\delta_n = \frac{\partial U}{\partial P_n} = \sum_{i=1}^m \frac{S_i l_i}{A_i E} \cdot \frac{\partial S_i}{\partial P_n}. \quad (197)$$

The derivative $\partial S_i / \partial P_n$ is the rate of increase of the force S_i with increase of the load P_n . Numerically it is equal to the force produced in the bar *i* by a unit load applied in the position of P_n , and we will use this fact in finding the above derivative. These derivatives will hereafter be denoted by

S_i' . The equation for calculating the deflections then becomes

$$\delta_n = \sum_{i=1}^{i=m} \frac{S_i S_i' l_i}{A_i E}. \quad (198)$$

Consider for instance the deflection δ_2 corresponding to P_2 at A in Fig. 257 (a). The magnitudes S_i' tabulated in column 5 above are obtained by the simple principles of statics from the loading conditions shown in Fig. 257 (b), in which all actual loads are removed and a vertical load of one ton is applied at the hinge A . The values tabulated in column 6 are calculated from those entered in columns 2 through 5. Summation and division by the modulus $E = (30/2,000) \times 10^6$ tns. per sq. in. gives the deflection at A , eq. (198),

$$\delta_2 = \frac{2,055 \times 2,000}{30 \times 10^6} = 0.137 \text{ in.}$$

The above discussion was concerned with the computation of displacements $\delta_1, \delta_2, \dots$ corresponding to the given external forces P_1, P_2, \dots . In investigating the deformation of an elastic system, it may be necessary to calculate the displacement of a point at which there is no load at all, or the displacement of a loaded point in a direction different from that of the load. The method of Castigliano may also be used here. We merely apply at that point an additional infinitely small *imaginary load* Q in the direction in which the displacement is wanted, and calculate the derivative $\partial U / \partial Q$. In this derivative the added load Q is put equal to zero, and the desired displacement obtained. For example, in the truss shown in Fig. 257 (a), let us calculate the horizontal displacement of the point A . A horizontal force Q is applied at this point, and the corresponding horizontal displacement is

$$\delta_h = \left(\frac{\partial U}{\partial Q} \right)_{Q=0} = \sum_{i=1}^{i=m} \frac{S_i l_i}{A_i E} \cdot \frac{\partial S_i}{\partial Q}, \quad (d)$$

in which the summation is extended over all the members of the system. The forces S_i in eq. (d) have the same meaning as before, because the added load Q is zero, and the derivatives $\partial S_i / \partial Q = S_i''$ are obtained as the forces in the bars of the

truss produced by the loading shown in Fig. 257 (c). These are tabulated in column 7. Substituting these forces into eq. (d), we find that the horizontal displacement of A is equal to the sum of the elongations of the bars 2 and 4, namely,

$$\delta_h = \frac{1}{E} \left(\frac{S_2 l_2}{A_2} + \frac{S_4 l_4}{A_4} \right) = \frac{150 \times 2,000}{3 \times 30 \times 10^6} (8.25 + 8.25) = 0.055 \text{ in.}$$

In investigating the deformation of trusses it is sometimes necessary to know the change in distance between two points of the system. This can also be done by the Castigliano method. Let us determine, for instance, what decrease δ , in the distance between the joints A and B (Fig. 258, a), is produced by the loads P_1, P_2, P_3 . At these joints, two equal and opposite imaginary forces Q are applied as indicated in the figure by the dotted lines. It follows from the Castigliano theorem that the partial derivative $(\partial U / \partial Q)_{Q=0}$ gives the sum of the displacements of A and B , in the direction AB , produced by the loads P_1, P_2, P_3 . Using eq. (194), this displacement is²²

$$\delta = \left(\frac{\partial U}{\partial Q} \right)_{Q=0} = \sum_{i=1}^{i=m} \frac{S_i l_i}{A_i E} \frac{\partial S_i}{\partial Q} = \sum_{i=1}^{i=m} \frac{S_i l_i}{A_i E} \cdot S_i', \quad (199)$$

in which S_i are the forces produced in the bars of the system by the actual loads P_1, P_2, P_3 ; S_i' are the quantities to be determined from the loading shown in Fig. 258 (b), in which all actual loads are removed and two opposite unit forces are applied at A and B ; and m is the number of members.

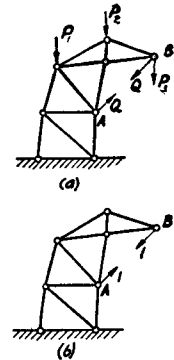


FIG. 258.

Problems




FIG. 259.

1. Determine by the use of Castigliano's theorem the deflection and the slope at the end of a uniformly loaded cantilever beam.

2. Determine the deflection at the end B of the overhang of the beam shown in Fig. 259.

²² This problem was first solved by J. C. Maxwell, "On the Calculation of the Equilibrium and Stiffness of Frames," Phil. Mag. (4), Vol. 27, 1864, p. 294. Scientific Papers, Vol. 1, Cambridge, 1890, p. 598.

3. A system consisting of two prismatical bars of equal length and equal cross section (Fig. 260) carries a vertical load P . Determine the vertical displacement of the hinge A .

Solution. The tensile force in the bar AB and compressive force in the bar AC are equal to P . Hence the strain energy of the system is

$$U = 2 \frac{P^2 l}{2AE}.$$

FIG. 260.

The vertical displacement of A is

$$\delta = \frac{dU}{dP} = \frac{2Pl}{AE}.$$

4. Determine the horizontal displacement of the hinge A in the previous problem.

Solution. Apply a horizontal imaginary load Q as shown in Fig. 260 by the dotted line. The potential energy of the system is

$$U = \frac{(P + 1/\sqrt{3}Q)^2 l}{2AE} + \frac{(P - 1/\sqrt{3}Q)^2 l}{2AE}.$$

The derivative of this expression with respect to Q for $Q = 0$ gives the horizontal displacement

$$\delta_h = \left(\frac{\partial U}{\partial Q} \right)_{Q=0} = \left(\frac{2Ql}{3AE} \right)_{Q=0} = 0.$$

5. Determine the angular displacement of the bar AB produced by the load P in Fig. 261.

Solution. An imaginary couple M is applied to the system as shown in the figure by dotted lines. The displacement corresponding to this couple is the angular displacement φ of the bar AB due to the load P . The forces S_i in this case are: $P + 1/\sqrt{3}(M/l)$ in the bar AB and $-P - 2/\sqrt{3}(M/l)$ in the bar AC . The strain energy is

$$U = \frac{l}{2AE} \left[\left(P + \frac{1}{\sqrt{3}} \frac{M}{l} \right)^2 + \left(-P - \frac{2}{\sqrt{3}} \frac{M}{l} \right)^2 \right],$$

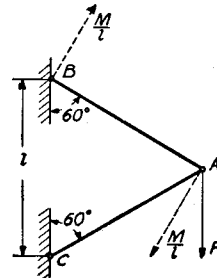


FIG. 261.

from which

$$\varphi = \left(\frac{\partial U}{\partial M} \right)_{M=0} = \left(\frac{P\sqrt{3}}{AE} + \frac{5M}{3lAE} \right)_{M=0} = \frac{P\sqrt{3}}{AE}.$$

6. What horizontal displacement of the support B of the frame shown in Fig. 262 is produced by horizontal force H ?

Answer.

$$\delta_h = \frac{2}{3} \frac{Hh^3}{EI_1} + \frac{HH^2 l}{EI}.$$

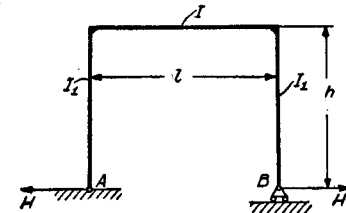


FIG. 262.

7. Determine the vertical displacement of the point A and horizontal displacement of the point C of the steel truss shown in Fig. 263 if $P = 2,000$ lbs., the cross-sectional areas of the compressed bars are 5 sq. in., and of the other bars 2 sq. in.

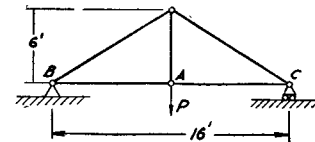


FIG. 263.




FIG. 264.

8. Determine the increase in the distance AB produced by forces H (Fig. 264) if the bars AC and BC are of the same dimensions and only the bending of the bars need be taken into account. It is assumed that α is not small, so that the effect of deflections on the magnitude of bending moment can be neglected.

Answer.

$$\delta = \frac{2}{3} \frac{H \sin^2 \alpha l^3}{EI}.$$

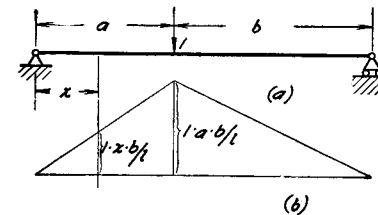


FIG. 265.

9. Determine the deflection at a distance a from the left end of the uniformly loaded beam shown in Fig. 255 (a).

Solution. Applying an infinitely small load P at a distance a from the left end, the partial derivative $\partial M / \partial P$ is as visualized in Fig. 265 (a) and 265 (b).

Using for M the parabolic diagram in Fig. 255 (b), the desired

deflection is

$$\delta = \frac{\partial U}{\partial P} = \frac{1}{EI} \int_0^l M \frac{\partial M}{\partial P} dx = \frac{1}{EI} \int_0^a \left(\frac{qlx}{2} - \frac{qx^2}{2} \right) \frac{xb}{l} dx + \frac{1}{EI} \int_b^l \left(\frac{qlx}{2} - \frac{qx^2}{2} \right) \frac{a(l-x)}{l} dx = \frac{qab}{24EI} (a^2 + b^2 + 3ab).$$

Substituting x for a and $l-x$ for b this result can be brought into agreement with the equation for the deflection curve previously obtained (p. 138).

70. Application of Castigliano Theorem in Solution of Statically Indeterminate Problems.—The Castigliano theorem is very useful also in the solution of statically indeterminate problems. Let us begin with problems in which the reactions at the supports are considered as the statically indeterminate quantities. Denoting by X, Y, Z, \dots the statically indeterminate reactive forces, the strain energy of the system is a function of these forces. For the immovable supports and for the supports whose motion is perpendicular to the direction of the reactions the partial derivatives of the strain energy with respect to the unknown reactive forces must be equal to zero by the Castigliano theorem. Hence

$$\frac{\partial U}{\partial X} = 0; \quad \frac{\partial U}{\partial Y} = 0; \quad \frac{\partial U}{\partial Z} = 0; \quad \dots \quad (200)$$

In this manner we obtain as many equations as there are statically indeterminate reactions.

It can be shown that eqs. (200) represent the conditions for a minimum of function U , from which it follows that the magnitudes of statically indeterminate reactive forces are such as to make the strain energy of the system a minimum. This is the *principle of least work* as applied to the determination of redundant reactions.²³

²³ The principle of least work was stated first by F. Menabrea in his article, "Nouveau principe sur la distribution des tensions dans les systèmes élastiques," Paris, C. R., Vol. 46 (1858), p. 1056. See also C.R., Vol. 98 (1884), p. 714. The complete proof of the principle was given by Castigliano, who made of this principle the fundamental method of solution of statically indeterminate systems. The application of

As an example of application of the above principle let us consider a uniformly loaded beam built in at one end and supported at the other (Fig. 266). This is the problem with one statically indeterminate reaction. Taking the vertical reaction X at the right support as the statically indeterminate quantity, this unknown force is found from the equation:

$$\frac{dU}{dX} = 0. \quad (a)$$

The strain energy of the beam, from eq. (187), is

$$U = \int_0^l \frac{M^2 dx}{2EI}, \quad (b)$$

in which

$$M = Xx - \frac{qx^2}{2}.$$

Substituting in (a), we obtain

$$\begin{aligned} \frac{dU}{dX} &= \frac{1}{EI} \int_0^l M \frac{dM}{dX} dx = \frac{1}{EI} \int_0^l \left(Xx - \frac{qx^2}{2} \right) x dx \\ &= \frac{1}{EI} \left(X \frac{l^3}{3} - q \frac{l^4}{8} \right) = 0, \end{aligned}$$

from which

$$X = \frac{3}{8}ql.$$

Instead of the reactive force X the reactive couple M_a at the left end of the beam could have been taken as the statically indeterminate quantity. The strain energy will now be a function of M_a . Equation (b) still holds, where now the

strain energy methods in engineering was developed by O. Mohr (see his "Abhandlungen aus dem Gebiete d. technischen Mechanik"), by H. Müller-Breslau in his book, "Die neueren Methoden der Festigkeitslehre," and F. Engesser, "Über die Berechnung statisch unbestimmter Systeme," Zentralbl. d. Bauverwalt. 1907, p. 606. A very complete bibliography of this subject is given in the art. by M. Grüning, Encyclopädie d. Math. Wiss., Vol. IV, 2, II, p. 419.




FIG. 266.

bending moment at any cross section is

$$M = \left(\frac{ql}{2} - \frac{M_a}{l} \right) x - \frac{qx^2}{2}.$$

From the condition that the left end of the actual beam does not rotate when the beam is bent the derivative of the strain energy with respect to M_a must be equal to zero. From this we obtain

$$\frac{dU}{dM_a} = \frac{1}{EI} \int_0^l M \frac{dM}{dM_a} dx = -\frac{1}{EI} \int_0^l \left[\left(\frac{ql}{2} - \frac{M_a}{l} \right) x - \frac{qx^2}{2} \right] \frac{x}{l} dx = -\frac{1}{EI} \left(\frac{ql^3}{24} - \frac{M_a l}{3} \right) = 0,$$

from which the absolute value of the moment is

$$M_a = \frac{1}{8} ql^2.$$

Problems in which we consider the forces acting in redundant members of the system as the statically indeterminate quantities can also be solved by using the Castigliano theorem. Take, as an example, the system represented in Fig. 15 which was already discussed (see p. 19). Considering the force X in the vertical bar OC as the statically indetermined quantity, the forces in the inclined bars OB and OD are $(P - X)/2 \cos \alpha$. Denoting by U_1 the strain energy of the inclined bars (Fig. 267, *a*) and by U_2 the strain energy of the vertical bar (Fig. 267, *b*), the total strain energy of the system is,²⁴

$$U = U_1 + U_2 = \left(\frac{P - X}{2 \cos \alpha} \right)^2 \frac{l}{AE \cos \alpha} + \frac{X^2 l}{2AE}. \quad (c)$$

²⁴ It is assumed that all bars have the same cross-sectional area A and the same modulus of elasticity E .

If δ is the actual displacement downwards of the joint O in Fig. 15 the derivative with respect to X of the energy U_1 of the system in Fig. 267 (*a*) should be equal to $-\delta$, since the force X of the system has the direction opposite to that of the displacement δ . In the same time the derivative $\partial U_2 / \partial X$ will be equal to δ . Hence

$$\frac{\partial U}{\partial X} = \frac{\partial U_1}{\partial X} + \frac{\partial U_2}{\partial X} = -\delta + \delta = 0. \quad (d)$$

It is seen that the true value of the force X in the redundant member is such as to make the total strain energy of the system a minimum. Substituting for U its expression (*c*) in equation (*d*) we obtain

$$-\frac{(P - X)}{2 \cos^2 \alpha} \frac{l}{AE \cos \alpha} + \frac{Xl}{AE} = 0$$

from which

$$X = \frac{P}{1 + 2 \cos^3 \alpha}.$$

A similar reasoning can be applied to any statically indetermined system with one redundant member, and we can state that the force in that member is such as to make the strain energy of the system a minimum. To illustrate the procedure of calculating stresses in such systems let us consider the frame

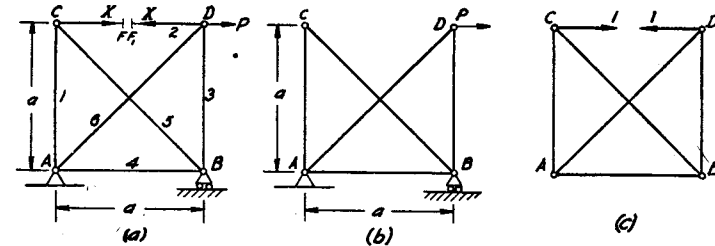


FIG. 268.

shown in Fig. 268 (*a*). The reactions here are statically determinate, but when we try to compute the forces in the bars, we find that there is one redundant member. Let us consider

the bar CD as this redundant member. Cut this bar at any point and apply to each end F and F_1 a force X , equal to that in the bar. We thus arrive at a statically determinate system acted upon by the known force P , and, in addition, unknown forces X . The forces in the bars of this system are found in two groups: first, those produced by the external loading P assuming $X = 0$, Fig. 268, b , and denoted by S_i^0 , where i indicates the number of the bar; second, those produced when the external force P is removed and unit forces replace the X forces (Fig. 268, c). The latter forces are denoted by S_i' . Then the total force in any bar, when the force P and the forces X are all acting, is

$$S_i = S_i^0 + S_i'X. \quad (e)$$

The total strain energy of the system, from eq. (196), is

$$U = \sum_{i=1}^{t-m} \frac{S_i^2 l_i}{2A_i E} = \sum_{i=1}^{t-m} \frac{(S_i^0 + S_i'X)^2 l_i}{2A_i E}, \quad (f)$$

in which the summation is extended over all the bars of the system including the bar CD , which is cut.²⁵ The Castigliano theorem is now applied and the derivative of U with respect to X gives the displacement of the ends F and F_1 towards each other. In the actual case the bar is continuous and this displacement is equal to zero. Hence

$$\frac{dU}{dX} = 0, \quad (g)$$

i.e., the force X in the redundant bar is such as to make the strain energy of the system a minimum. From eqs. (f) and (g)

$$\frac{d}{dX} \sum_{i=1}^{t-m} \frac{(S_i^0 + S_i'X)^2 l_i}{2A_i E} = \sum_{i=1}^{t-m} \frac{(S_i^0 + S_i'X) l_i S_i'}{A_i E} = 0,$$

from which

$$X = - \frac{\sum_{i=1}^{t-m} \frac{S_i^0 S_i' l_i}{A_i E}}{\sum_{i=1}^{t-m} \frac{S_i'^2 l_i}{A_i E}}. \quad (201)$$

²⁵ For this bar $S_i^0 = 0$ and $S_i' = 1$.

This process may be extended to a system in which there are several redundant bars.

The principle of least work can be applied also when the statically unknown quantities are couples. Take, as an example, a uniformly loaded beam on three supports (Fig. 269). If the bending moment at the middle support be considered the statically indeterminate quantity, the beam is cut at B and we obtain two simply supported beams (Fig.

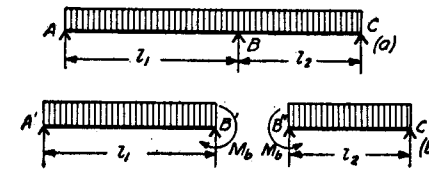


FIG. 269.

269, b) carrying the unknown couples M_b in addition to the known uniform load q . There is no rotation of the end B' with respect to the end B'' because in the actual case (Fig. 269, a) there is a continuous deflection curve. Hence

$$\frac{dU}{dM_b} = 0. \quad (202)$$

Again the magnitude of the statically indeterminate quantity is such as to make the strain energy of the system a minimum.

Problems

1. The vertical load P is supported by a vertical bar DB of length l and cross-sectional area A and by two equal inclined bars of length l and cross sectional area A_1 (Fig. 270). Determine the forces in the bars and also the ratio A_1/A which will make the forces in all bars numerically equal.

Solution. The system is statically indeterminate. Let X be the tensile force in the vertical bar. The compressive forces in the inclined bars are $1/\sqrt{2}(P - X)$ and the strain energy of the system is

$$U = \frac{X^2 l}{2AE} + \frac{(P - X)^2 l}{2A_1 E}.$$

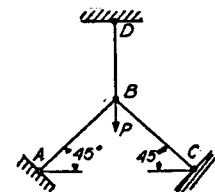


FIG. 270.

The principle of least work gives

$$\frac{dU}{dX} = \frac{Xl}{AE} - \frac{(P-X)l}{A_1E} = 0,$$

from which

$$X = \frac{P}{1 + \frac{A_1}{A}}.$$

Substituting this into equation

$$X = \frac{1}{\sqrt{2}}(P - X),$$

we obtain

$$A_1 = \sqrt{2}A.$$

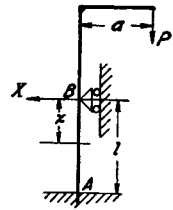


FIG. 271.

2. Determine the horizontal reaction X in the system shown in Fig. 271.

Solution. The unknown force X will enter only into the expression for the potential energy of bending of the portion AB of the bar. For this portion, $M = Pa - Xx$, and the equation of least work gives

$$\begin{aligned} \frac{dU}{dX} &= \frac{d}{dX} \int_0^l \frac{M^2 dx}{2EI} = \frac{1}{EI} \int_0^l M \frac{dM}{dX} dx = -\frac{1}{EI} \int_0^l (Pa - Xx) x dx \\ &= -\frac{1}{EI} \left(\frac{Xl^3}{3} - \frac{Pal^2}{2} \right) = 0, \end{aligned}$$

from which

$$X = \frac{3}{2} P \frac{a}{l}.$$

3. Determine the horizontal reactions X of the system shown in Fig. 272. All dimensions are given in the table below.

Solution. From the principle of least work we have

$$\begin{aligned} \frac{dU}{dX} &= \frac{d}{dX} \sum \frac{S_i^2 l_i}{2A_i E} \\ &= \sum \frac{S_i l_i}{A_i E} \frac{dS_i}{dX} = 0. \end{aligned}$$

Let S_i^0 be the force in bar i produced by the known load P assum-

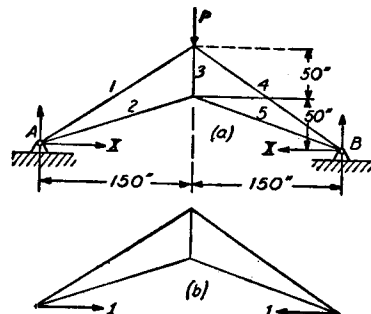


FIG. 272.

ing $X = 0$, S_i^0 the force produced in the same bar by unit forces which replace the X forces (Fig. 272, b). The values of S_i^0 and S_i' are determined from statics. They are given in columns 4 and 5 of the table below. Then the total force in any bar is

$$S_i = S_i^0 + S_i'X.$$

i	l_i in.	A_i in. ²	S_i^0	S_i'	$\frac{S_i^0 S_i' l_i}{A_i}$	$\frac{S_i'^2 l_i}{A_i}$
1	180.3	5	-1.803P	1.202	-78.1P	52.0
2	158.1	3	1.581P	-2.108	-175.7P	234
3	50.0	2	1.000P	-1.333	-33.3P	44.5
4	180.3	5	-1.803P	1.202	-78.1P	52.0
5	158.1	3	1.581P	-2.108	-175.7P	234

$$\Sigma = -540.9P; \quad \Sigma = 616.5.$$

Substituting into the equation of least work (200),

$$\sum_{i=1}^5 \frac{(S_i^0 + S_i'X)l_i}{A_i E} S_i' = 0,$$

from which

$$X = -\frac{\sum_{i=1}^5 \frac{S_i^0 S_i' l_i}{A_i}}{\sum_{i=1}^5 \frac{S_i'^2 l_i}{A_i}}. \quad (f)$$

The necessary figures for calculating X are given in columns 6 and 7. Substituting this data into eq. (f), we obtain

$$X = 0.877P.$$

4. Determine the force in the redundant horizontal bar of the system shown in Fig. 273, assuming that the length of this bar is $l_0 = 300''$ and the cross-sectional area is A_0 . The other bars have the same dimensions as in problem 3.

Solution. The force in the horizontal bar is calculated from

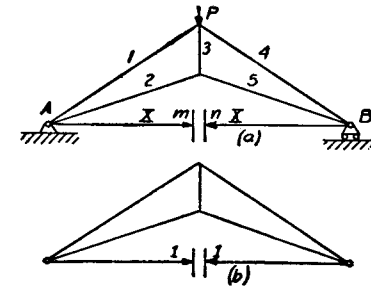


FIG. 273.

eq. (201). This equation is of the same kind as eq. (f) in problem 3 but in the system of Fig. 273 there is the additional horizontal bar. The force produced in this bar by the force P alone ($X = 0$) is zero, i.e., $S_0^0 = 0$. The force produced by two forces equal to unity (Fig. 273, b) is $S_0' = 1$. The additional term in the numerator of eq. (f) is

$$\frac{S_0^0 S_0' l_0}{A_0} = 0.$$

The additional term in the denominator is

$$\frac{S_0'^2 l_0}{A_0} = \frac{1 \cdot l_0}{A_0} = \frac{300}{A_0}.$$

Then, by using the data of problem 3,

$$X = \frac{540.9P}{\frac{300}{A_0} + 616.5}.$$

Taking, for instance, $A_0 = 10$ sq. in.,

$$X = \frac{540.9P}{30 + 616.5} = 0.836P.$$

That is only 4.7 per cent less than the value obtained in problem 3 for immovable supports.²⁶

Taking the cross-sectional area $A_0 = 1$ sq. in.,

$$X = \frac{540.9}{300 + 616.5} = 0.590P.$$

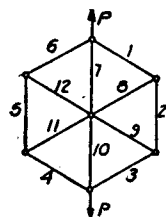


FIG. 274.

It can be seen that in statically indeterminate systems the forces in the bars depend also on their cross-sectional areas.

5. Determine the forces in the bars of the systems shown in Fig. 20 by using the principle of least work.

6. Determine the forces in the bars of the system shown in Fig. 274, assuming that all bars are of the same dimensions and material.

Solution. If one bar be removed, the forces in the remaining bars can be determined from statics; hence the system has one redundant bar. Let 1 be this bar and X the force acting in it. Then all the

²⁶ Taking $A_0 = \infty$, we obtain the same condition as for immovable supports.

bars on the sides of the hexagon will have tensile forces X , bars 8, 9, 11 and 12 have compressive forces X , and bars 7 and 10 have the force $P - X$. The strain energy of the system is

$$U = 10 \frac{X^2 l}{2AE} + 2 \frac{(P - X)^2 l}{2AE}.$$

From the equation $dU/dX = 0$ we obtain

$$X = \frac{P}{6}.$$

7. Determine the forces in the system shown in Fig. 268, assuming the cross-sectional areas of all bars equal and taking the force X in the diagonal AD as the statically indeterminate quantity.

Solution. Substituting the data, given in the table below, in eq. (201),

$$X = \frac{3 + 2\sqrt{2}}{4 + 2\sqrt{2}} P.$$

i	l_i	S_i^0	S_i'	$S_i^0 S_i' l_i$	$S_i'^2 l_i$
1	a	P	$-1/\sqrt{2}$	$-aP/\sqrt{2}$	$a/2$
2	a	P	$-1/\sqrt{2}$	$-aP/\sqrt{2}$	$a/2$
3	a	0	$-1/\sqrt{2}$	0	$a/2$
4	a	P	$-1/\sqrt{2}$	$-aP/\sqrt{2}$	$a/2$
5	$a\sqrt{2}$	$-P\sqrt{2}$	$+1$	$-2aP$	$a\sqrt{2}$
6	$a\sqrt{2}$	0	$+1$	0	$a\sqrt{2}$

$$\Sigma = \frac{-(3 + 2\sqrt{2})aP}{\sqrt{2}}; \quad \Sigma = 2a(1 + \sqrt{2}).$$

8. A rectangular frame of uniform cross section (Fig. 275) is submitted to a uniformly distributed load of intensity q as shown. Determine the bending moment M at the corner.

Answer.

$$M = \frac{(a^3 + b^3)q}{12(a + b)}.$$

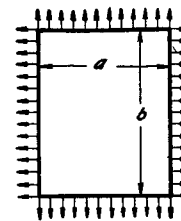


FIG. 275.

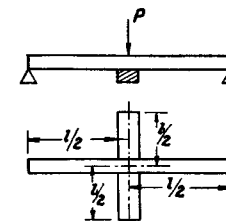


FIG. 276.

9. A load P is supported by two beams of equal cross section, crossing each other as shown in Fig. 276. Determine the pressure X between the beams.

Answer.

$$X = \frac{P^3}{l^3 + l_1^3}.$$

10. Find the statically indeterminate quantity in the frame shown in Fig. 167 by using the principle of least work.

Solution. The strain energy of bending of the frame is

$$U = 2 \int_0^h \frac{H^2 x^2 dx}{2EI_1} + \int_0^l \frac{(M_0 - Hh)^2 dx}{2EI}, \quad (g)$$

in which M_0 denotes the bending moment for the horizontal bar calculated as for a beam simply supported at the ends. Substituting in equation:

$$\frac{dU}{dH} = 0, \quad (h)$$

we find

$$\frac{2H}{EI_1} \frac{h^3}{3} + \frac{Hh^2 l}{EI} = \frac{h}{EI} \int_0^l M_0 dx. \quad (k)$$

The integral on the right side is the area of the triangular moment diagram for a beam carrying the load P . Hence

$$\int_0^l M_0 dx = \frac{1}{2} P c (l - c).$$

Substituting in (k), we obtain for H the same expression as in (114). (See p. 192.)

11. Find the statically indeterminate quantities in the frames shown in Figs. 166, 169 and 171 by using the principle of least work.

12. Find the bending moment in Fig. 269 assuming that $l_1 = 2l_2$.

71. The Reciprocal Theorem.—Let us begin with a problem of a simply supported beam shown in Fig. 277 (a) and calculate the deflection at a point D when the load P is acting at C . This deflection is obtained by substituting $x = d$ into equation (86) which gives

$$(y)_{x=d} = \frac{Pbd}{6l} (l^2 - b^2 - d^2). \quad (a)$$

It is seen that the deflection (a) does not change if we put d for b and b for d , which indicates that for the case shown in

Fig. 277 (b) the deflection at D_1 is the same as the deflection at D in Fig. 277 (a). From Fig. 277 (b) we obtain Fig. 277 (c) by simply rotating the beam through 180 degrees which brings point C_1 in coincidence with point D and point D_1 with point C . Hence the deflection at C in Fig. 277 (c) is equal to the deflection at D in

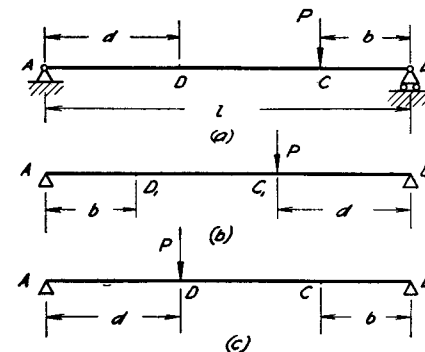


FIG. 277.

Fig. 277 (a). This means that if the load P is moved from point C to point D , the deflection which in the first case of loading was measured at D will be obtained in the second case at point C . This is a particular case of the *reciprocal theorem*.

To establish the theorem in general form ²⁷ we consider an elastic body, shown in Fig. 278, loaded in two different manners and supported in such a way that displacement as a rigid body is impossible. In the first state of stress the applied forces are P_1 and P_2 , and in the second state P_3 and P_4 . The displacements of the points of application in the directions of the forces are $\delta_1, \delta_2, \delta_3, \delta_4$ in the first state and $\delta_1', \delta_2', \delta_3', \delta_4'$ in the second state. The reciprocal theorem states: The work done by the forces of the first state on the corresponding displacements of the second state is equal to the work done by the forces of the second state on the corresponding dis-

²⁷ A particular case of this theorem was obtained by J. C. Maxwell, loc. cit., p. 317. The theorem is due to E. Betti, *Il nuovo Cimento* (Ser. 2), V. 7 and 8 (1872). In a more general form, the theorem was given by Lord Rayleigh, *London Math. Soc. Proc.*, Vol. 4 (1873), or *Scientific Papers*, Vol. 1, p. 179. Various applications of this theorem to the solution of engineering problems were made by O. Mohr, loc. cit., p. 327, and H. Müller-Breslau, loc. cit., p. 327.

placements of the first. In symbols this means

$$P_1\delta_1' + P_2\delta_2' = P_3\delta_3 + P_4\delta_4. \quad (203)$$

To prove this theorem let us consider the strain energy of the body when all forces P_1, \dots, P_4 are acting together and let us

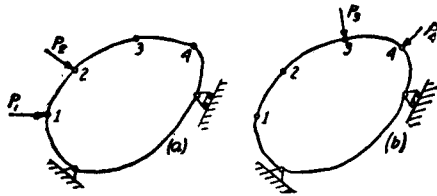


FIG. 278.

use the fact that the amount of the strain energy does not depend upon the order in which the forces are applied but only upon the final values of the forces. In the first manner of loading assume that forces P_1 and P_2 are applied first and later forces P_3 and P_4 . The strain energy stored during the application of P_1 and P_2 is

$$\frac{P_1\delta_1}{2} + \frac{P_2\delta_2}{2}. \quad (a)$$

Applying now P_3 and P_4 , the work done by these forces is

$$\frac{P_3\delta_3'}{2} + \frac{P_4\delta_4'}{2}. \quad (b)$$

It must be noted, however, that during the application of P_3 and P_4 the points of application of the previously applied forces P_1 and P_2 will be displaced by δ_1' and δ_2' . Then P_1 and P_2 do the work

$$P_1\delta_1' + P_2\delta_2'.^{28} \quad (c)$$

Hence the total strain energy stored in the body, by summing

²⁸ These expressions are not divided by 2 because forces P_1 and P_2 remain constant during the time in which their points of application undergo the displacements δ_1' and δ_2' .

(a), (b) and (c), is

$$U = \frac{P_1\delta_1}{2} + \frac{P_2\delta_2}{2} + \frac{P_3\delta_3'}{2} + \frac{P_4\delta_4'}{2} + P_1\delta_1' + P_2\delta_2'. \quad (d)$$

In the second manner of loading, let us apply the forces P_3 and P_4 first and afterwards P_1 and P_2 . Then, repeating the same reasoning as above, we obtain

$$U = \frac{P_3\delta_3'}{2} + \frac{P_4\delta_4'}{2} + \frac{P_1\delta_1}{2} + \frac{P_2\delta_2}{2} + P_3\delta_3 + P_4\delta_4. \quad (e)$$

Putting (d) and (e) equal, eq. (203) is obtained. This theorem can be proven for any number of forces, and also for couples, or for forces and couples. In the case of a couple the corresponding angle of rotation is considered as the displacement.

For the particular case in which a single force P_1 acts in the first state of stress, and a single force P_2 in the second state, eq. (203) becomes ²⁹

$$P_1\delta_1' = P_2\delta_2. \quad (204)$$

If $P_1 = P_2$, it follows that $\delta_1' = \delta_2$, i.e., the displacement of the point of application of the force P_2 in the direction of this force, produced by the force P_1 , is equal to the displacement of the point of application of the force P_1 in the direction of P_1 , produced by the force P_2 . A verification of this conclusion for a particular case was given in considering the beam shown in Fig. 277.

As another example let us again consider the bending of a simply supported beam. In the first state let it be bent by a load P at the middle, and in the second state by a bending couple M at the end. The load P produces the slope $\theta = Pl^2/16EI$ at the end. The couple M , applied at the end, produces the deflection $Ml^2/16EI$ at the middle. Equation (204) becomes

$$P \frac{Ml^2}{16EI} = M \frac{Pl^2}{16EI}.$$

²⁹ This was proved first by J. C. Maxwell, and is frequently called Maxwell's theorem.

The reciprocal theorem is very useful in the problem of finding the most unfavorable position of moving loads on a statically indeterminate system. An example is shown in Fig. 279, which represents a beam built in at one end and simply supported at the other and carrying a concentrated load P . The problem is to find the variation in the magnitude of the reaction X at the left support as the distance x of the load from this support changes.

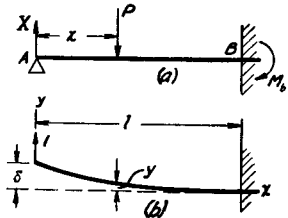


FIG. 279.

Let us consider the *actual condition* of the beam (Fig. 279, *a*) as the first state of stress. The second, or *fictitious*, state is shown in Fig. 279 (*b*). The external load and the redundant support are there removed and a unit force upward replaces the unknown reaction X . This second state of stress is statically determinate and the corresponding deflection curve is known (see eq. 97, p. 148). If the coordinate axes are taken as shown in Fig. 279 (*b*),

$$y = \frac{1}{6EI} (l - x)^2 (2l + x). \quad (f)$$

Let δ denote the deflection at the end and y the deflection at distance x from the left support. Then, applying the reciprocal theorem, the work done by the forces of the first state on the corresponding displacements of the second state is

$$X\delta - Py.$$

In calculating now the work done by the forces of the second state, there is only the unit force on the end,³⁰ and the corresponding displacement of the point A in the first state is equal to zero. Consequently this work is zero and the reciprocal theorem gives

$$X\delta - Py = 0,$$

from which

$$X = P \frac{y}{\delta}. \quad (g)$$

³⁰ The reactions at the built-in end are not considered in either case because the corresponding displacement is zero.

It is seen that, as the load P changes position, the reaction X is proportional to the corresponding values of y in Fig. 279 (*b*). Hence the deflection curve of the second state (eq. *f*) gives a complete picture of the manner in which X varies with x . Such a curve is called the *influence line* for the reaction X .³¹

If several loads act simultaneously, the use of eq. (*g*) together with the method of superposition gives

$$X = \frac{1}{\delta} \sum P_n y_n,$$

where y_n is the deflection corresponding to the load P_n and the summation is extended over all the loads.

Problems

1. Construct the influence lines for the reactions at the supports of the beam on three supports (Fig. 280).

Solution. To get the influence line for the middle support the actual state shown in Fig. 280 (*a*) is taken as the first state of stress. The second state is indicated in Fig. 280 (*b*), in which the load P is removed and the reaction X is replaced by a unit force upward. This second state of stress is statically determinate and the deflection curve is known (eqs. 86 and 87, p. 142); hence the deflections δ and y can be calculated. Then the work done by the forces of the first state on the corresponding displacements of the second state is

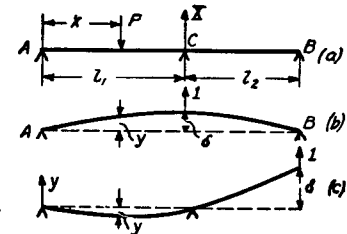


FIG. 280.

$$X\delta - Py.$$

The work of the forces of the second state (force-unity) on the corresponding displacements of the first state (zero deflection at C) is zero; hence

$$X\delta - Py = 0; \quad X = P \frac{y}{\delta}.$$

Hence the deflection curve of the second state is the influence line for the reaction X . In order to get the influence line for the reac-

³¹ The use of models in determining the influence lines was developed by G. E. Beggs, Journal of Franklin Institute 1927.

tion at B , the second state of stress should be taken as shown in Fig. 280 (c).

2. By using the influence line of the previous problem, determine the reaction at B if the load P is at the middle of the first span ($x = l_1/2$) (Fig. 280, a).

Answer. Reaction is downward and equal to

$$\frac{3P}{16} \frac{l_1^2}{l_2^2 + l_2 l_1}.$$

3. Find the influence line for the bending moment at the middle support C of the beam on three supports (Fig. 281). By using this line calculate the bending moment M_c when the load P is at the middle of the second span.

Solution. The first state of stress is the actual state (Fig. 281, a) with a bending moment M_c acting at the cross section C . For the second state of stress the load P is removed, the beam is cut at C and two equal and opposite unit couples replace M_c (Fig. 281,

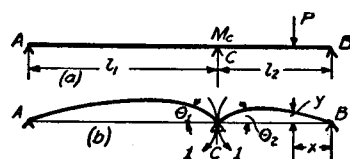


FIG. 281.

b). This case is statically determinate. The angles θ_1 and θ_2 are given by eq. (104) and the deflection y by eq. (105). The sum of the angles $\theta_1 + \theta_2$ represents the displacement in the second state corresponding to the bending moment M_c acting in the first state.

The work done by the forces of the first state on the corresponding displacement in the second state is ³²

$$M_c(\theta_1 + \theta_2) - Py.$$

The work done by the forces of the second state on the displacements of the first state is zero because there is no cut at the support C in the actual case and the displacement corresponding to the two unit couples of the second state is zero. Hence

$$M_c(\theta_1 + \theta_2) - Py = 0$$

and

$$M_c = P \frac{y}{\theta_1 + \theta_2}. \quad (h)$$

It will be seen that as the load P changes its position, the bending moment M_c changes in the same ratio as the deflection y . Hence

³² It is assumed that the bending moment M_c produces a deflection curve concave downward.

the deflection curves of the second state represent the influence line for M_c . Noting that

$$\theta_1 + \theta_2 = \frac{l_1 + l_2}{3EI}$$

and that the deflection at the middle of the second span is

$$(y)_{x=l_2/2} = \frac{1 \cdot l_2^2}{16EI},$$

the bending moment when the load P is at the middle of the second span is, from eq. (h),

$$M_c = \frac{3}{16} \cdot \frac{Pl_2^2}{l_1 + l_2}.$$

The positive sign obtained for M_c indicates that the moment has the direction indicated in Fig. 281 (b). Following our general rule for the sign of moments (Fig. 58) we then consider M_c as a negative bending moment.

4. Find the influence line for the bending moment at the built-in end B of the beam AB shown in Fig. 279, and calculate this moment when the load is at the distance $x = l/3$ from the left support.

Answer.

$$M_b = (4/27)lP.$$

5. Construct the influence line for the horizontal reactions H of the frame shown in Fig. 167 (a) as the load P moves along the bar AB .

Answer. The influence line has the same shape as the deflection curve of the bar AB for the loading condition shown in Fig. 166 (c).

6. Construct the influence line for the force X in the horizontal bar CD (Fig. 282, a) as the load P moves along the beam AB . Calculate X when the load is at the middle. The displacements due to elongation and contraction of the bars are to be neglected and only the displacement due to the bending of the beam AB is to be taken into account.

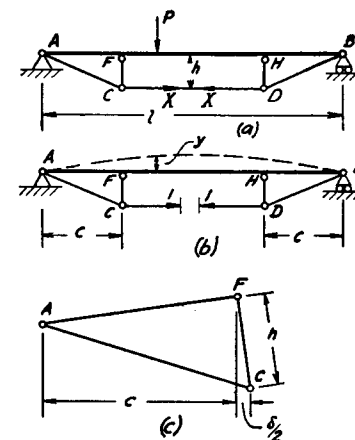


FIG. 282.

Solution. The actual condition (Fig. 282, *a*) is taken as the first state of stress. In the second state the load P is removed and the forces X are replaced by unit forces (Fig. 282, *b*). Due to these forces, upward vertical pressures equal to $(1 \cdot h)/c$ are transmitted to the beam AB at the points F and H and the beam deflects as indicated by the dotted line. If y is the deflection of the beam at the point corresponding to the load P , and δ is the displacement of the points C and D towards one another in the second state of stress, the reciprocal theorem gives

$$X\delta - Py = 0 \quad \text{and} \quad X = P \frac{y}{\delta}. \quad (i)$$

Hence the deflection curve of the beam AB in the second state is the required influence line. The bending of the beam by the two symmetrically situated loads is discussed in problem 1, p. 159. Substituting $(1 \cdot h)/c$ for P in the formulas obtained there, the deflection of the beam at F and that at the middle are

$$(y)_{x=c} = \frac{ch}{6EI} (3l - 4c) \quad \text{and} \quad (y)_{x=l/2} = \frac{h}{24EI} (3l^2 - 4c^2),$$

respectively.

Considering the rotation of the triangle AFC (Fig. 282, *c*) as a rigid body, the horizontal displacement of the point C is equal to the vertical displacement of the point F multiplied by h/c ; hence

$$\delta = 2 \frac{h}{c} (y)_{x=c} = \frac{h^2}{3EI} (3l - 4c).$$

Substituting this and the deflection at the middle into eq. (i) gives

$$X = \frac{P}{8h} \frac{3l^2 - 4c^2}{3l - 4c}.$$




FIG. 283.

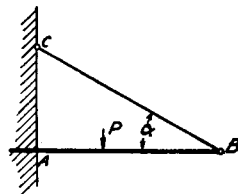


FIG. 284.

7. Find the influence line for the force in the bar CD of the system shown in Fig. 283, neglecting displacements due to con-

tractions and elongations and considering only the bending of the beam AB .

Answer. The line will be the same as that for the middle reaction of the beam on three supports (see problem 1, p. 335).

8. Construct the influence line for the bar BC which supports the beam AB . Find the force in BC when P is at the middle (Fig. 284).

Answer. Neglecting displacements due to elongation of the bar BC and contraction of the beam AB , the force in BC is $\frac{5}{16} (P/\sin \alpha)$.

72. Exceptional Cases.—In the derivation of both the Castigliano theorem and the reciprocal theorem it was assumed that the displacements due to strain are proportional to the loads acting on the elastic system. There are cases in which the displacements are not proportional to the loads, although the material of the body may follow Hooke's law. This always occurs when the displacements due to deformations must be considered in discussing the action of external loads. In such cases, the strain energy is no longer a second degree function and the theorem of Castigliano does not hold. In order to explain this limitation let us consider a simple case in which only one force P acts on the elastic system. Assume first that the displacement δ is proportional to the corresponding force P as represented by the straight line OA in Fig. 285

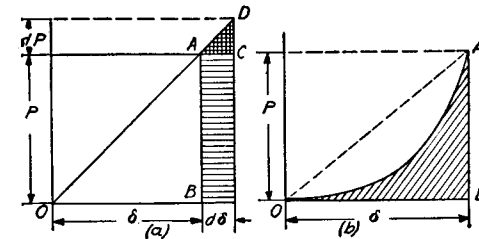


FIG. 285.

(a). Then the area of the triangle OAB represents the strain energy stored in the system during the application of the load P . For an infinitesimal increase $d\delta$ in the displacement the strain energy increases by an amount shown in the figure by the shaded area and we obtain

$$dU = Pd\delta. \quad (a)$$

With a linear relationship the infinitesimal triangle ADC is similar to the triangle OAB ; therefore

$$\frac{d\delta}{dP} = \frac{\delta}{P} \quad \text{or} \quad d\delta = \frac{dP\delta}{P}. \quad (b)$$

Substituting this into eq. (a),

$$dU = P \frac{dP\delta}{P},$$

from which the Castigliano statement is obtained:

$$\frac{dU}{dP} = \delta. \quad (c)$$

An example to which the Castigliano theorem cannot be applied is shown in Fig. 286. Two equal horizontal bars AC and BC hinged at

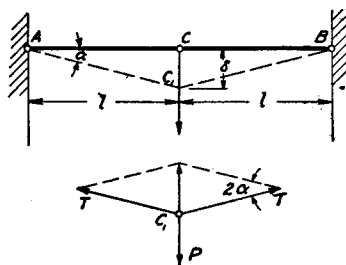


FIG. 286.

A , B and C are subjected to the action of the vertical force P at C . Let C_1 be the position of C after deformation and α the angle of inclination of either bar in its deformed condition. The unit elongation of the bars, from Fig. 286 (a), is

$$\epsilon = \left(\frac{l}{\cos \alpha} - l \right) : l. \quad (d)$$

If only small displacements are considered, α is small and $1/\cos \alpha = 1 + (\alpha^2/2)$ approximately. Then, from (d),

$$\epsilon = \frac{\alpha^2}{2}.$$

The corresponding forces in the bars are

$$T = AE\epsilon = \frac{AE\alpha^2}{2}. \quad (e)$$

From the condition of equilibrium of the point C_1 (Fig. 286, b),

$$\bar{P} = 2\alpha T, \quad (f)$$

and for T , as given in eq. (e),

$$P = AE\alpha^3,$$

from which

$$\alpha = \sqrt[3]{\frac{P}{AE}} \quad (g)$$

and

$$\delta = l\alpha = l\sqrt[3]{\frac{P}{AE}}. \quad (205)$$

In this case the displacement is not proportional to the load P , although the material of the bars follows Hooke's law. The relation between δ and P is represented in Fig. 285 (b) by the curve OA . The shaded area OAB in this figure represents the strain energy stored in the system. The amount of strain energy is

$$U = \int_0^\delta P d\delta. \quad (h)$$

Substituting, from (205),

$$P = AE \frac{\delta^3}{l^3}, \quad (i)$$

we obtain

$$U = \frac{AE}{l^3} \int_0^\delta \delta^3 d\delta = \frac{AE\delta^4}{4l^3} = \frac{P\delta}{4} = \frac{Pl}{4} \sqrt[3]{\frac{P}{AE}}. \quad (l)$$

This shows that the strain energy is no longer a function of the second degree in the force P . Also it is not one half but only one quarter of the product $P\delta$ (see art. 68). The Castigliano theorem of course does not hold here:

$$\frac{dU}{dP} = \frac{d}{dP} \left(\frac{Pl}{4} \sqrt[3]{\frac{P}{AE}} \right) = \frac{1}{3} l \sqrt[3]{\frac{P}{AE}} = \frac{1}{3} \delta.$$

- Analogous results are obtained in all cases in which the displacements are not proportional to the loads.

APPENDIX

MOMENTS OF INERTIA OF PLANE FIGURES

I. The Moment of Inertia of a Plane Area with Respect to an Axis in Its Plane

In discussing the bending of beams, we encounter integrals of this type:

$$I_z = \int_A y^2 dA, \quad (1)$$

in which each element of area dA is multiplied by the square of its distance from the z -axis and integration is extended over the cross sectional area A of the beam (Fig. 1). Such an integral is called the *moment of inertia* of the area A with

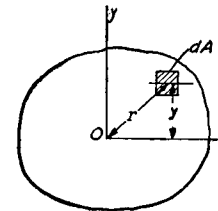


FIG. 1.

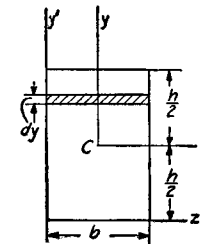


FIG. 2.

respect to the z -axis. In simple cases, moments of inertia can readily be calculated analytically. Take, for instance, a rectangle (Fig. 2). In calculating the moment of inertia of this rectangle with respect to the horizontal axis of symmetry z we can divide the rectangle into infinitesimal elements such as shown in the figure by the shaded area. Then

$$I_z = 2 \int_0^{h/2} y^2 b dy = bh^3/12. \quad (2)$$

In the same manner, the moment of inertia of the rectangle

with respect to the y -axis is

$$I_y = 2 \int_0^{b/2} z^2 h dz = hb^3/12.$$

Equation (2) can also be used for calculating I_z , for the parallelogram shown in Fig. 3, because this parallelogram can be obtained from the rectangle shown by dotted lines by a displacement parallel to the axis z of elements such as the one shown. The areas of the elements and their distances from the z -axis remain unchanged during such displacement so that I_z is the same as for the rectangle.

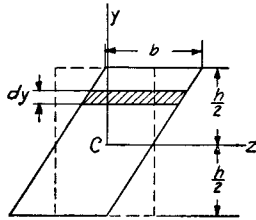


FIG. 3.

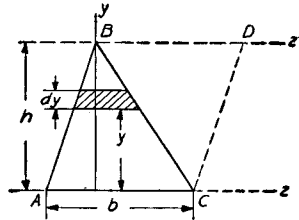


FIG. 4.

In calculating the moment of inertia of a triangle with respect to the base (Fig. 4), the area of an element such as shown in the figure is

$$dA = b \frac{h-y}{h} dy$$

and eq. (1) gives

$$I_z = \int_0^h b \frac{h-y}{h} y^2 dy = bh^3/12.$$

The method of calculation illustrated by the above examples can be used in the most general case. The moment of inertia is obtained by dividing the figure into infinitesimal strips parallel to the axis and then integrating as in eq. (1).

The calculation can often be simplified if the figure can be divided into portions whose moments of inertia about the axis are known. In such case, the total moment of inertia is the sum of the moments of inertia of all the parts.

From its definition, eq. (1), it follows that the moment of inertia of an area with respect to an axis has the dimensions of a length raised to the fourth power; hence, by dividing the moment of inertia with respect to a certain axis by the cross sectional area of the figure, the square of a certain length is obtained. This length is called the *radius of gyration* with respect to that axis. For the y and z axes, the radii of gyration are

$$k_y = \sqrt{I_y/A}; \quad k_z = \sqrt{I_z/A}. \quad (3)$$

Problems

1. Find the moment of inertia of the rectangle in Fig. 2 with respect to the base. (Ans. $I_z = bh^3/3$.)

2. Find the moment of inertia of the triangle ABC with respect to the axis z' (Fig. 4).

Solution. This moment is the difference between the moment of inertia of the parallelogram $ABDC$ and the triangle BDC . Hence,

$$I_{z'} = bh^3/3 - bh^3/12 = bh^3/4.$$

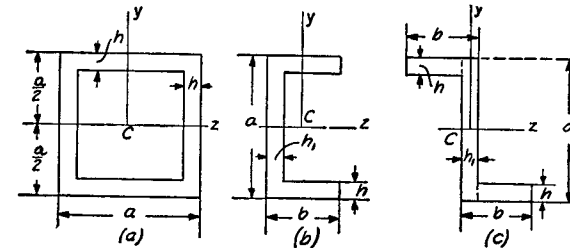


FIG. 5.

3. Find I_z for the cross sections shown in Fig. 5.

(Ans. $I_z = a^4/12 - (a-2h)^4/12$; $I_z = ba^3/12 - \frac{(b-h_1)(a-2h)^3}{12}$.)

4. Find the moment of inertia of a square with sides a with respect to a diagonal. (Ans. $I = a^4/12$.)

5. Find k_y and k_z for the rectangle shown in Fig. 2. (Ans. $k_y = b/2\sqrt{3}$; $k_z = h/2\sqrt{3}$.)

6. Find k_z for Figs. 5a and 5b.

II. Polar Moment of Inertia of a Plane Area

The moment of inertia of a plane area with respect to an axis perpendicular to the plane of the figure is called the *polar*

moment of inertia with respect to the point, where the axis intersects the plane (point O in Fig. 1). It is defined as the integral

$$I_p = \int_A r^2 dA, \quad (4)$$

in which each element of area dA is multiplied by the square of its distance to the axis and integration is extended over the entire area of the figure.

Referring back to Fig. 1, $r^2 = y^2 + z^2$, and from eq. (4)

$$I_p = \int_A (y^2 + z^2) dA = I_z + I_y. \quad (5)$$

That is, the polar moment of inertia with respect to any point O is equal to the sum of the moments of inertia with respect to two perpendicular axes y and z through the same point.

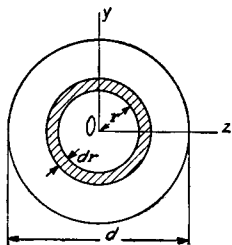


FIG. 6.

Let us consider a *circular cross section*. We encounter the polar moment of inertia of a circle with respect to its center in discussing the twist of a circular shaft (see article 58). If we divide the area of the circle into thin elemental rings, as shown

in Fig. 6, we have $dA = 2\pi r dr$, and from eq. (4),

$$I_p = 2\pi \int_0^{d/2} r^3 dr = \pi d^4/32. \quad (6)$$

We know from symmetry that in this case $I_y = I_z$; hence, from eqs. (5) and (6),

$$I_y = I_z = \frac{1}{2} I_p = \pi d^4/64. \quad (7)$$

The moment of inertia of an ellipse with respect to a principal axis z (Fig. 7) can be obtained by comparing the ellipse with the circle shown in the figure by dotted line.

The height y of any element of the ellipse such as the one shown shaded can be obtained by reducing the height y_1 of the corresponding element of the circle in the ratio b/a . From eq. (2), the moments of inertia of these two elements

with respect to the z -axis are in the ratio b^3/a^3 . The moments of inertia of the ellipse and of the circle are evidently in the same ratio; hence, the moment of inertia of the ellipse is

$$I_z = \pi(2a)^4/64 \cdot b^3/a^3 = \pi ab^3/4. \quad (8)$$

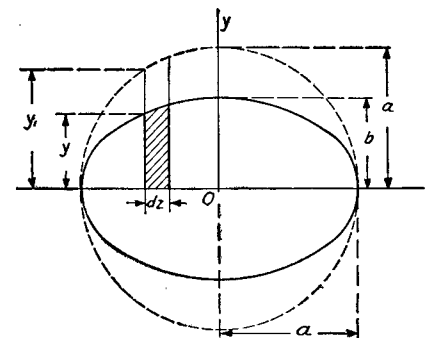


FIG. 7.

In the same manner, for the vertical axis

$$I_y = \pi ba^3/4;$$

the polar moment of inertia of an ellipse is then, from eq. (5),

$$I_p = I_y + I_z = \pi ab^3/4 + \pi ba^3/4. \quad (9)$$

Problems

1. Find the polar moment of a rectangle with respect to the centroid (Fig. 2). (Ans. $I_p = bh^3/12 + hb^3/12$.)

2. Find the polar moments of inertia with respect to their centroids of the areas shown in Fig. 5.

III. Transfer of Axis

If the moment of inertia of an area with respect to an axis z through the centroid (Fig. 8) is known, the moment of inertia with respect to any parallel axis z' can be calculated from the equation:

$$I_{z'} = I_z + Ad^2, \quad (10)$$

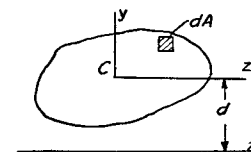


FIG. 8.

in which A is the area of the figure and d is the distance between the axes. This can be proved as follows: from eq. (1)

$$I_{z'} = \int_A (y + d)^2 dA = \int_A y^2 dA + 2 \int_A y d dA + \int_A d^2 dA.$$

The first integral on the right side is equal to I_z , the third integral is equal to Ad^2 and the second integral vanishes due to the fact that z passes through the centroid; hence, this equation reduces to (10). Equation (10) is especially useful in calculating moments of inertia of cross sections of built-up beams (Fig. 9). The positions of the centroids of standard angles and the moments of inertia of their cross sections with respect to an axis through their centroid are given in hand books. By transfer of axis, the moment of inertia of such a built-up section with respect to the z -axis can readily be calculated.

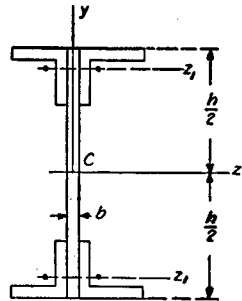


FIG. 9.

Problems

1. By transfer of axis, find the moment of inertia of a triangle (Fig. 4) with respect to the axis through the centroid and parallel to the base. (Ans. $I = bh^3/36$.)

2. Find the moment of inertia I_z of the section shown in Fig. 9 if $h = 20''$, $b = \frac{1}{2}''$, and the angles have the dimensions $4'' \times 4'' \times \frac{1}{2}''$.

Solution. $I_z = 20^3/(2 \times 12) + 4[5.56 + 3.75(10 - 1.18)^2] = 1,522 \text{ in.}^4$.

3. Find the moment of inertia with respect to the neutral axis of the cross section of the channel shown in Fig. 85.

IV. Product of Inertia, Principal Axes

The integral

$$I_{yz} = \int_A yz dA, \quad (11)$$

in which each element of area dA is multiplied by the product

of its coordinates and integration is extended over the entire area A of a plane figure, is called the *product of inertia* of the figure. If a figure has an axis of symmetry which is taken for the y or z axis (Fig. 10), the product of inertia is equal to zero. This follows from the fact that in this case for any element such as dA with a positive z there exists an equal and symmetrically situated element dA' with a negative z . The corresponding elementary products $yzdA$ cancel each other; hence integral (11) vanishes.

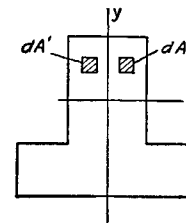


FIG. 10.

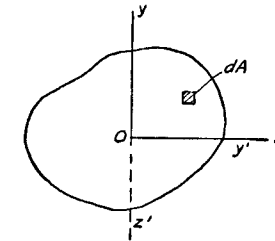


FIG. 11.

In the general case, for any point of any plane figure, we can always find two perpendicular axes such that the product of inertia for these axes vanishes. Take, for instance, the axes y and z , Fig. 11. If the axes are rotated about O 90° in the clock-wise direction, the new positions of the axes are y' and z' as shown in the figure. There is then the following relation between the old coordinates of an element dA and its new coordinates:

$$y' = z; \quad z' = -y.$$

Hence, the product of inertia for the new coordinates is

$$I_{y'z'} = \int_A y'z' dA = - \int_A yz dA = -I_{yz};$$

thus, during this rotation, the product of inertia changes its sign. As the product of inertia changes continuously with the angle of rotation, there must be certain directions for which this quantity becomes zero. The axes in these directions are called the *principal axes*. Usually the centroid is taken as the

origin of coordinates and the corresponding principal axes are then called the *centroidal principal axes*. If a figure has an axis of symmetry, this axis and an axis perpendicular to it are principal axes of the figure, because the product of inertia with respect to these axes is equal to zero, as explained above.

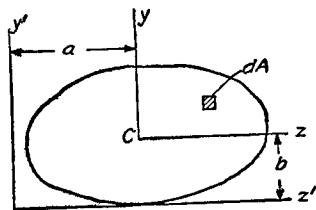


FIG. 12.

If the product of inertia of a figure is known for axes y and z (Fig. 12) through the centroid, the product of inertia for parallel axes y' and z' can be found from the equation:

$$I_{y'z'} = I_{yz} + Aab. \quad (12)$$

The coordinates of an element dA for the new axes are

$$y' = y + b; \quad z' = z + a.$$

Hence,

$$\begin{aligned} I_{y'z'} &= \int_A y'z' dA = \int_A (y + b)(z + a) dA \\ &= \int_A yz dA + \int_A abdA + \int_A yadA + \int_A bzdA. \end{aligned}$$

The last two integrals vanish because C is the centroid so that the equation reduces to (12).

Problems

1. Find $I_{y'z'}$ for the rectangle in Fig. 2. (Ans. $I_{y'z'} = (b^2h^2/4)$.)
2. Find the product of inertia of the angle section with respect to the y and z axes. Do the same for the y_1 and z_1 axes (Fig. 13).

Solution. Dividing the figure into two rectangles and using eq. (12) for each of these rectangles, we find

$$I_{yz} = a^2h^2/4 + h^2(a^2 - h^2)/4.$$

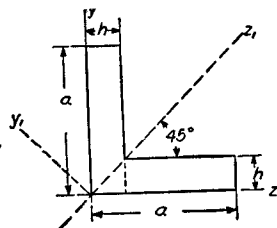


FIG. 13.

From the symmetry condition $I_{y_1z_1} = 0$.

3. Determine the products of inertia I_{yz} of the sections shown in Fig. 5 if C is the centroid.

Solution. For Figs. 5a and 5b, $I_{yz} = 0$ because of symmetry. In the case of Fig. 5c, dividing the section into three rectangles, and using eq. (12), we find

$$I_{yz} = -2(b - h_1)h \frac{a - h}{2} \frac{b}{2}.$$

V. Change of Direction of Axis. Determination of the Principal Axes

Suppose that the moments of inertia

$$I_z = \int_A y^2 dA; \quad I_y = \int_A z^2 dA \quad (a)$$

and the product of inertia

$$I_{yz} = \int_A yz dA \quad (b)$$

are known, and it is required to find the same quantities for

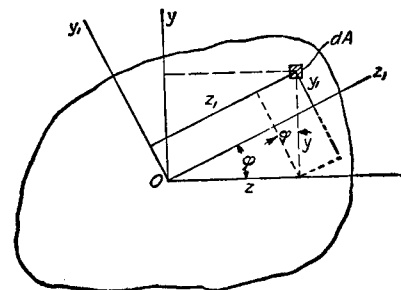


FIG. 14.

the new axes y_1 and z_1 (Fig. 14). Considering an elementary area dA , the new coordinates from the figure are

$$z_1 = z \cos \varphi + y \sin \varphi; \quad y_1 = y \cos \varphi - z \sin \varphi, \quad (c)$$

in which φ is the angle between z and z_1 . Then,

$$\begin{aligned} I_{z_1} &= \int_A y_1^2 dA = \int_A (y \cos \varphi - z \sin \varphi)^2 dA = \int_A y^2 \cos^2 \varphi dA \\ &\quad + \int_A z^2 \sin^2 \varphi dA - \int_A 2yz \sin \varphi \cos \varphi dA, \end{aligned}$$

or by using (a) and (b)

$$I_{z_1} = I_z \cos^2 \varphi + I_y \sin^2 \varphi - I_{yz} \sin 2\varphi. \quad (13)$$

In the same manner

$$I_{y_1} = I_z \sin^2 \varphi + I_y \cos^2 \varphi + I_{yz} \sin 2\varphi. \quad (13')$$

By taking the sum and the difference of eqs. (13) and (13') we find

$$I_{z_1} + I_{y_1} = I_z + I_y, \quad (14)$$

$$I_{z_1} - I_{y_1} = (I_z - I_y) \cos 2\varphi - 2I_{yz} \sin 2\varphi. \quad (15)$$

These equations are very useful for calculating I_{z_1} and I_{y_1} . For calculating $I_{y_1 z_1}$, we find

$$\begin{aligned} I_{y_1 z_1} &= \int_A y_1 z_1 dA = \int_A (y \cos \varphi - z \sin \varphi)(z \cos \varphi \\ &\quad + y \sin \varphi) dA = \int_A y^2 \sin \varphi \cos \varphi dA \\ &\quad - \int_A z^2 \sin \varphi \cos \varphi dA + \int_A yz(\cos^2 \varphi - \sin^2 \varphi) dA, \end{aligned}$$

or by using (a) and (b)

$$I_{y_1 z_1} = (I_z - I_y) \frac{1}{2} \sin 2\varphi + I_{yz} \cos 2\varphi. \quad (16)$$

The principal axes of inertia are those two perpendicular axes for which the product of inertia vanishes. The axes y_1 and z_1 in Fig. 14 are principal axes if the right side of eq. (16) vanishes.

$$(I_z - I_y) \frac{1}{2} \sin 2\varphi + I_{yz} \cos 2\varphi = 0;$$

this gives

$$\tan 2\varphi = 2I_{yz}/(I_y - I_z). \quad (17)$$

Let us determine, as an example, the directions of the principal axes of a rectangle through a corner of the rectangle (Fig. 2). In this case,

$$I_x = bh^3/3; \quad I_y = hb^3/3; \quad I_{xy} = b^2h^2/4;$$

hence,

$$\tan 2\varphi = \frac{b^2h^2}{2(hb^3/3 - bh^3/3)} = 3bh/2(b^2 - h^2). \quad (d)$$

In the derivation of eq. (17), the angle φ was taken as positive in the counter-clockwise direction (Fig. 14), so φ must be taken in this direction if it comes out positive. Equation (d) gives two different values for φ differing by 90° . These are the two perpendicular directions of the principal axes. Knowing the directions of the principal axes, the corresponding moments of inertia can be found from eqs. (14) and (15).

The radii of gyration corresponding to the principal axes are called *principal radii of gyration*.

If y_1 and z_1 are the principal axes of inertia (Fig. 15) and k_{y_1} and k_{z_1} the principal radii of gyration, the ellipse with k_{y_1} and

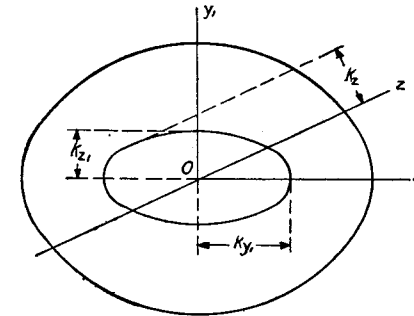


FIG. 15.

k_{z_1} as semi-axes, as shown in the figure, is called the *ellipse of inertia*. Having this ellipse, the radius of gyration k_z for any axis z can be obtained graphically by drawing a tangent to the ellipse parallel to z . The distance of the origin O from this tangent is the length of k_z . The ellipse of inertia gives a picture of how the moment of inertia changes as the axis z rotates in the plane of the figure about the point O , and shows that the maximum and minimum of the moment of inertia are the principal moments of inertia.

Problems

1. Determine the directions of the centroidal principal axes of the Z section (Fig. 5c) if $h = h_1 = 1''$; $b = 5''$; $a = 10''$.
2. Find the directions of the centroidal principal axes and the corresponding principal moments of inertia for an angle section $5'' \times 2\frac{1}{2}'' \times \frac{1}{2}''$. (Ans. $\tan 2\varphi = 0.547$; $I_{\max} = 9.36 \text{ in.}^4$; $I_{\min} = 0.99 \text{ in.}^4$.)
3. Determine the semi-axes of the ellipse of inertia for an elliptical cross section (Fig. 7). (Ans. $k_x = b/2$; $k_y = a/2$.)
4. Under what conditions does the ellipse of inertia become a circle? (Ans. When the moments of inertia with respect to the principal axes are equal.)

AUTHOR INDEX

- Andrée, W. L., 193
 Andrews, E. S., 310
 Arnold, R. N., 303
 Arnovlevic, I., 131
- Bach, C., 60
 Beggs, G. E., 335
 Bertot, 203
 Betti, E., 331
 Boussinesq, I., 290
- Castigliano, A., 211, 310, 320
 Clapeyron, 203, 307
 Cox, H., 289, 303
- Davidenkoff, N. N., 288
 Dreyer, G., 237
- Engesser, F., 237, 321
 Esling, F. K., 237
 Euler, L., 136, 244
- Filon, L. N. G., 115, 174
 Finnicome, J. R., 272
 Föppl, A., 62
 Fuller, C. E., 259
- Green, C. E., 144
 Gross, S., 211
 Grueneisen, 7
 Grüning, M., 321
- Hackstroh, 288
 Henkel, O., 237
 Hooke, R., 2
- Johnston, W. A. 259
 Jouravski, 110
- Karman, Th., 174
 Keck, Z., 237
- Kidwell, E., 127
 Kleinlogel, 193
- Lamé, 307
 Land, R., 239
 Landau, D., 211
 Lehr, E., 211
 Love, A. E. H., 117
- Marié, G., 211
 Maxwell, C., 317, 331, 333
 Menabrea, F., 320
 Michell, J. H., 115
 Mohr, O., 38, 144, 321, 331
 Moore, H. F., 130
 Müller-Breslau, H., 321, 331
- Navier, 97, 290
 Nisida, M., 303
- Ostenfeld, A., 259
- Parr, P. H., 211
 Perry, J., 248
 Phillips, E., 211
 Pohl, K., 237
 Poisson, 51
- Ramsauer, C., 290
 Rayleigh, Lord, 331
 Roeber, V., 272
 Roß, M., 303
- Saint Venant, 97, 110, 117, 270, 290, 303
 Salmon, E. H., 258
 Sears, J. E., 290
 Southwell, R. V., 249
- Todhunter and Pearson, 110, 211, 258, 270, 289
 Tschetsche, 303
 Tuzi, Z., 303

Voigt, W., 115

Wagner, I., 124

Wahl, A. M., 272

Wahstaff, J. E. P., 290

Welter, 288

Westergaard, H. M., 62

Weyrauch, T., 307

Young, D. H., 255

Zimmermann H., 288

SUBJECT INDEX

Numbers refer to pages

A

Angle of twist, 264

Assembly stresses, 25

B

Beams, Chapters III, IV, V, VI, VII

cantilever, 81, 138, 147

continuous, 200

deflection of, Chap. V

normal stresses in, 102

of built-up sections, 126

of reinforced concrete, 220

of two different materials, 216

of variable cross section, 209

on three supports, 197

principal stresses in, 121

shearing stresses in, 109

simply supported at ends, 68, 137, 140

with built-in ends, 184

with overhanging ends, 162

Bending and direct stresses, 226

and twist combined, 276

in a plane inclined to principal planes,
166

moment, 68

moment diagram, 74

moment diagram modified, 211

moment equivalent, 278

of bi-metallic strip, 217

of continuous beams, 200

of frames, 188

of \perp beam, 100

potential energy of, 296

pure, 88

theory of, Chapters III, IV, V, VI, VII

Bi-metallic strip, 217

Boiler, cylindrical, 42

Built-in ends, 176

Built-up beams, 126

C

Cantilever beam, 81, 138, 147

deflection of, 147

Castigliano, theorem, 308

deflection of trusses by, 314

solution of statically indeterminate
problems by, 320

Circular shaft in torsion, 261

ring, extension of, 29

ring, rotating, 30

Clapeyron's theorem of three moments,
203

Columns, Chapter VIII

design of, 249, 255

factor of safety in, 256

Combined bending and direct stresses,
Chapt. VIII, 226

bending and twist, 276

stresses, Chap. II, 35

stresses represented by Mohr's circle, 38

Compression, 4

eccentric, 230

Compressive strain, 4

stress, 4

Conical springs, 275

Continuous beam, 200

with the supports not on the same level,
204

Contraction, lateral, 50

Core of a section, 235

Critical load, 244

Cross sections of beams, various shapes,
97

Curvature of beams, 91, 134

Cylindrical boiler, 42

Cylindrical tubes, thermal stresses in, 31

D

Deflection curve, differential equation,
134

by using bending moment diagram, 144

Deflection of beams, Chap. V, 134

- cantilever, 147
- due to impact, 300
- due to shearing force, 170
- of variable cross section, 209
- simply supported at ends, 153
- under direct and bending load, 239
- uniformly loaded, 137, 156
- with built-in ends, 184
- with overhangs, 162

Deflection of helical springs, close coiled, 273

- conical, 276
- of leaf-type, 211

Diagrams of bending moment, 74

- shearing force, 74

Differential equation of deflection curve, 134

E

- Eccentric longitudinal loading, 230
- Elastic, perfectly, partially, 2
- Elastic strain energy, Chap. X, 281
- Elasticity, 2
 - modulus of, 3
- Elongation in simple tension, 4
 - under combined stress, 52, 62
- Energy of strain, 1, Chap. X, 281
 - in bending, 296
 - in shear, 292
 - in tension, 281
 - in torsion, 293
- Equal strength in tension, 17
 - in bending, 209

Equation of three moments, 203

- of deflection curve, 134

F

- Factor of safety, 8
- Flexural rigidity, 91
- Frames, 188

H

- Helical springs, close coiled, 271
- Hollow shaft, 268
- Hooke's law, 2

I

Imaginary loading in the theory of bending, 154

- Impact in bending, 300
 - tension, 285
 - torsion, 295

Indeterminate systems, 19, 175

Inertia, moment of, Appendix

Influence line, 335

Initial stresses in tension, 25

Isotropic material, 51

L

Lateral contraction, 50

Least work, principle of, 320

Limit of proportionality, proportional limit, 6

M

- Modulus of elasticity in shear, 56
 - in tension and compression, 3
 - of volume, 63

Modulus of resilience, 282

Modulus of section, 92, 238

Mohr circle, 38

Moment, bending, 68

of inertia, Appendix

N

Neutral axis, 89

surface, 89

Normal stress, 36

P

Permanent set, 2

Poisson's ratio, 50

Polar moment of inertia, Appendix

Potential energy of strain, Chap. X, 281

Principal axes of inertia, Appendix

planes of bending, 93, 166

stresses, 47

stresses in beams, 121

stresses in shafts, 277

Principle of superposition in bending, 144

of least work, 320

Product of inertia, Appendix

Proportional limit, limit of proportionality, 6

R

Radius of curvature, 91

Radius of gyration, Appendix

Reciprocal theorem, 330

Reduced mass, 289, 303

Redundant constraint, 176

Reinforced concrete beams, 220

Resilience, 282

Rigidity modulus, 56

Rings, circular, 23

rotating, 30

Rivet stress, 60, 130

S

Safety factor, 8

Section modulus, 92, 238

Set, permanent, 2

Shafts, of circular cross section, 261

hollow, 268

under bending and twist, 276

Shapes of cross sections of beams, 97

Shear, pure, 54

Shear in beams, 109

deflection due to, 170

in rivets, 60, 130

Shearing force in bending, 68

diagram, 74

effect on deflection, 170

Shearing stress in beams, 109

of circular section, 116

of I Section, 118

of rectangular cross section, 113

of reinforced concrete, 224

in tension, 36

Springs, helical close coiled, 271

conical, 275

leaf-type, 211

Strain, tensile, compressive, 4

energy in bending, 296

energy in shear, 292

energy in tension, 281

general expression, 305

shearing, 55

Strength, ultimate, 7

bar of equal, 17

Stress, 3

combined, 41

compressive, tensile, 4

principal, 46

principal in bending, 121

shearing in bending, 109

shearing in tension, 36

working, 7

Struts, 239

short, eccentrically loaded, 230

T

Tensile test, 1

Tensile test diagram, 6

Tension and compression, Chap. I

impact in, 285

strain energy of, 281

Thermal stresses in bending, 96, 187

in tension, compression, 25

Three moment equation, 203

Thrust on columns, 230, 239

Torque, 264

Torsion circular shafts, 261

combined with bending, 276

hollow shafts, 268

rectangular shafts, 269

strain energy of, 293

Torsional rigidity, 270

Trajectories of stresses, 123

U

Ultimate strength, 7

Uniform strength in tension, 17

in bending, 209

Unit elongation, 4

V

Variable cross section of tensile bars, 17

of beams, 209

Volume change, 63

Volume modulus of elasticity, 63

W

Working stress, 7

Y

Yielding, 6

Yielding point, 6

STRENGTH OF MATERIALS

PART II


Advanced Theory and Problems

By

S. TIMOSHENKO

*Professor of Theoretical and Engineering Mechanics
Stanford University*

SECOND EDITION—NINTH PRINTING

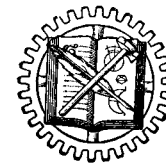

D. VAN NOSTRAND COMPANY, INC.

TORONTO

NEW YORK

LONDON

NEW YORK

D. Van Nostrand Company, Inc., 250 Fourth Avenue, New York 3

TORONTO

D. Van Nostrand Company, (Canada), Ltd., 228 Bloor Street, Toronto 8

LONDON

Macmillan & Company, Ltd., St. Martin's Street, London, W.C. 2

Copyright, 1930, 1940 by
D. VAN NOSTRAND COMPANY, Inc.

All Rights Reserved
This book, or any parts thereof, may not be
reproduced in any form without written per-
mission from the author and the publishers.

First Published, May 1930
Reprinted, March 1932, January 1936
February 1938

Second Edition, June 1940
Reprinted, October 1941, July 1942
January 1944, August 1944, May 1945
May 1946, February 1947, August 1947

PRINTED IN THE UNITED STATES OF AMERICA
BY LANCASTER PRESS, INC., LANCASTER, PA.

PREFACE TO THE SECOND EDITION

In the preparation of the new edition of this volume, the general character of the book has remained unchanged; the only effort being to make it more complete and up-to-date by including new theoretical and experimental material representing recent developments in the fields of stress analysis and experimental investigation of mechanical properties of structural materials.

The most important additions to the first edition include:

1. A more complete discussion of problems dealing with bending, compression, and torsion of slender and thin-walled structures. This kind of structure finds at present a wide application in airplane constructions, and it was considered desirable to include in the new edition more problems from that field.

2. A chapter on plastic deformations dealing with bending and torsion of beams and shafts beyond the elastic limit and also with plastic flow of material in thick-walled cylinders subjected to high internal pressures.

3. A considerable amount of new material of an experimental character pertaining to the behavior of structural materials at high temperatures and to the fatigue of metals under reversal of stresses, especially in those cases where fatigue is combined with high stress concentration.

4. Important additions to be found in the portion of the book dealing with beams on elastic foundations; in the chapters on the theory of curved bars and theory of plates and shells; and in the chapter on stress concentration, in which some recent results of photoelastic tests have been included.

Since the appearance of the first edition of this book, the author's three volumes of a more advanced character, "Theory of Elasticity," "Theory of Elastic Stability," and "Theory of Plates and Shells" have been published. Reference to these

books are made in various places in this volume, especially in those cases where only final results are given without a complete mathematical derivation.

It is hoped that with the additions mentioned above the book will give an up-to-date presentation of the subject of strength of materials which may be useful both to graduate students interested in engineering mechanics and to design engineers dealing with complicated problems of stress analysis.

STEPHEN P. TIMOSHENKO

PALO ALTO, CALIFORNIA

June 12, 1941

PREFACE TO THE FIRST EDITION

The second volume of *THE STRENGTH OF MATERIALS* is written principally for advanced students, research engineers, and designers. The writer has endeavored to prepare a book which contains the new developments that are of practical importance in the fields of strength of materials and theory of elasticity. Complete derivations of problems of practical interest are given in most cases. In only a comparatively few cases of the more complicated problems, for which solutions cannot be derived without going beyond the limit of the usual standard in engineering mathematics, the final results only are given. In such cases, the practical applications of the results are discussed, and, at the same time, references are given to the literature in which the complete derivation of the solution can be found.

In the first chapter, more complicated problems of bending of prismatical bars are considered. The important problems of bending of bars on an elastic foundation are discussed in detail and applications of the theory in investigating stresses in rails and stresses in tubes are given. The application of trigonometric series in investigating problems of bending is also discussed, and important approximate formulas for combined direct and transverse loading are derived.

In the second chapter, the theory of curved bars is developed in detail. The application of this theory to machine design is illustrated by an analysis of the stresses, for instance, in hooks, fly wheels, links of chains, piston rings, and curved pipes.

The third chapter contains the theory of bending of plates. The cases of deflection of plates to a cylindrical shape and the symmetrical bending of circular plates are discussed in detail and practical applications are given. Some data regarding the bending of rectangular plates under uniform load are also given.

In the fourth chapter are discussed problems of stress distribution in parts having the form of a generated body and symmetrically loaded. These problems are especially important for designers of vessels submitted to internal pressure and of rotating machinery. Tensile and bending stresses in thin-walled vessels, stresses in thick-walled cylinders, shrink-fit stresses, and also dynamic stresses produced in rotors and rotating discs by inertia forces and the stresses due to non-uniform heating are given attention.

The fifth chapter contains the theory of sidewise buckling of compressed members and thin plates due to elastic instability. These problems are of utmost importance in many modern structures where the cross sectional dimensions are being reduced to a minimum due to the use of stronger materials and the desire to decrease weight. In many cases, failure of an engineering structure is to be attributed to elastic instability and not to lack of strength on the part of the material.

In the sixth chapter, the irregularities in stress distribution produced by sharp variations in cross sections of bars caused by holes and grooves are considered, and the practical significance of stress concentration is discussed. The photo-elastic method, which has proved very useful in investigating stress concentration, is also described. The membrane analogy in torsional problems and its application in investigating stress concentration at reentrant corners, as in rolled sections and in tubular sections, is explained. Circular shafts of variable diameter are also discussed, and an electrical analogy is used in explaining local stresses at the fillets in such shafts.

In the last chapter, the mechanical properties of materials are discussed. Attention is directed to the general principles rather than to a description of established, standardized methods of testing materials and manipulating apparatus. The results of modern investigations of the mechanical properties of single crystals and the practical significance of this information are described. Such subjects as the fatigue of metals and the strength of metals at high temperature are

of decided practical interest in modern machine design. These problems are treated more particularly with reference to new developments in these fields.

In concluding, various strength theories are considered. The important subject of the relation of the theories to the method of establishing working stresses under various stress conditions is developed.

It was mentioned that the book was written partially for teaching purposes, and that it is intended also to be used for advanced courses. The writer has, in his experience, usually divided the content of the book into three courses as follows: (1) A course embodying chapters 1, 3, and 5 principally for advanced students interested in structural engineering. (2) A course covering chapters 2, 3, 4, and 6 for students whose chief interest is in machine design. (3) A course using chapter 7 as a basis and accompanied by demonstrations in the material testing laboratory. The author feels that such a course, which treats the fundamentals of mechanical properties of materials and which establishes the relation between these properties and the working stresses used under various conditions in design, is of practical importance, and more attention should be given this sort of study in our engineering curricula.

The author takes this opportunity of thanking his friends who have assisted him by suggestions, reading of manuscript and proofs, particularly Messrs. W. M. Coates and L. H. Donnell, teachers of mathematics and mechanics in the Engineering College of the University of Michigan, and Mr. F. L. Everett of the Department of Engineering Research of the University of Michigan. He is indebted also to Mr. F. C. Wilharm for the preparation of drawings, to Mrs. E. D. Webster for the typing of the manuscript, and to the D. Van Nostrand Company for their care in the publication of the book.

S. TIMOSHENKO

ANN ARBOR, MICHIGAN
May 1, 1930

NOTATIONS

$\sigma_x, \sigma_y, \sigma_z$	Normal stresses on planes perpendicular to x , y and z axes.
σ_n	Normal stress on plane perpendicular to direction n .
$\sigma_{Y.P.}$	Normal stress at yield point.
σ_w	Normal working stress
τ	Shearing stress
$\tau_{xy}, \tau_{yz}, \tau_{zx}$	Shearing stresses parallel to x , y and z axes on the planes perpendicular to y , z and x axes.
τ_w	Working stress in shear
δ	Total elongation, total deflection
ϵ	Unit elongation
$\epsilon_x, \epsilon_y, \epsilon_z$	Unit elongations in x , y and z directions
γ	Unit shear, weight per unit volume
E	Modulus of elasticity in tension and compression
G	Modulus of elasticity in shear
μ	Poisson's ratio
Δ	Volume expansion
K	Modulus of elasticity of volume
M_t	Torque
M	Bending moment in a beam
V	Shearing force in a beam
A	Cross sectional area
I_y, I_z	Moments of inertia of a plane figure with respect to y and z axes
k_y, k_z	Radii of gyration corresponding to I_y, I_z
I_p	Polar moment of inertia
Z	Section modulus
C	Torsional rigidity
l	Length of a bar, span of a beam
P, Q	Concentrated forces
t	Temperature, thickness

U	Strain Energy
s	Distance, arc length
q	Load per unit length

CONTENTS

CHAPTER	PAGE
I. SPECIAL PROBLEMS IN BENDING OF BEAMS	I
1. Beams on Elastic Foundation	I
2. The Semi-infinite Beam on an Elastic Foundation	12
3. Beams of Finite Length on Elastic Foundations	15
4. Combined Direct Compression and Lateral Load	25
5. Continuous Struts	35
6. Tie-Rod with Lateral Loading	39
7. Representation of the Deflection Curve by a Trigonometrical Series	44
8. Bending of Beams in a Principal Plane which is not a Plane of Symmetry. Center of Twist	50
9. Effective Width of Thin Flanges	55
10. Limitations of the Method of Superposition	59
II. CURVED BARS	65
11. Bending Stresses in Curved Bars	65
12. Particular Cases of Curved Bars	69
13. Deflection of Curved Bars	79
14. Arch Hinged at the Ends	94
15. Stresses in a Flywheel	98
16. Deflection Curve for a Bar with a Circular Center Line	101
17. Deflection of Bars with a Small Initial Curvature	104
18. The Bending of Curved Tubes	107
19. The Bending of a Curved Bar Out of Its Plane of Initial Curvature	112
III. THIN PLATES AND SHELLS	119
20. Bending of a Plate to a Cylindrical Surface	119
21. Bending of a Long Uniformly Loaded Rectangular Plate	121
22. Deflection of Long Rectangular Plates Having a Small Initial Cylindrical Curvature	126
23. Combination of Pure Bending in Two Perpendicular Directions	129
24. Thermal Stresses in Plates	133
25. Bending of Circular Plates Loaded Symmetrically with Respect to the Center	135
26. Uniformly Loaded Circular Plate	139

27. Circular Plate Loaded at the Center	146
28. Circular Plate Concentrically Loaded	149
29. Deflection of a Symmetrically Loaded Circular Plate with a Circular Hole at the Center	151
30. Bending of Rectangular Plates	155
31. Thin-walled Vessels Submitted to Internal Pressure	159
32. Local Bending Stresses in Thin Vessels	164
33. Thermal Stresses in Cylindrical Shells	174
34. Twisting of a Circular Ring by Couples Uniformly Distributed along Its Center Line	177
IV. BUCKLING OF BARS, PLATES AND SHELLS	184
35. Lateral Buckling of Bars, Compressed within the Elastic Limit	184
36. Energy Method of Calculating Critical Compressive Loads	199
37. Buckling of Prismatical Bars under the Action of Uniformly Distributed Axial Forces	205
38. Buckling of Bars of Variable Cross Section	207
39. Effect of Shearing Force on Critical Load	209
40. Buckling of Latticed Struts	211
41. Buckling of Circular Rings and Tubes under Ex- ternal Pressure	216
42. Buckling of Rectangular Plates	224
43. Buckling of Beams without Lateral Supports	229
V. DEFORMATIONS SYMMETRICAL ABOUT AXIS	236
44. Thick-walled Cylinder	236
45. Stresses Produced by Shrink Fits	241
46. Rotating Disc of Uniform Thickness	245
47. Rotating Disc of Variable Thickness	253
48. Thermal Stresses in a Long Hollow Cylinder	258
VI. TORSION	265
49. Shafts of Non-Circular Cross Section	265
50. Membrane Analogy	266
51. Torsion of Rolled Profile Sections	274
52. Torsion of Thin Tubular Members	278
53. Torsion of Thin-Walled Members in which Some Cross Sections are Prevented from Warping	282
54. Torsional Buckling of Thin-Walled Compression Members	294
55. Longitudinal Normal Stresses in Twisted Bars	298
56. Open Coiled Helical Spring	304

VII. STRESS CONCENTRATION	312
57. Stress Concentration in Tension or Compression Members	312
58. Stresses in a Plate with a Circular Hole	313
59. Other Cases of Stress Concentration in Tension Members	318
60. Stress Concentration in Torsion Members	324
61. Circular Shaft of Variable Diameter	329
62. Stress Concentration in Bending	335
63. The Investigation of Stress Concentration with Models	342
64. Photoelastic Method of Stress Measurements	346
65. Stresses at the Point of Load Application	352
66. Contact Stresses in Balls and Rollers	355
VIII. DEFORMATIONS BEYOND ELASTIC LIMIT	362
67. Pure Bending of Beams the Material of Which Does Not Follow Hooke's Law	362
68. Bending of Beams by Transverse Loads Beyond Elastic Limit	371
69. Residual Stresses Produced by Inelastic Bending	379
70. Torsion Beyond the Elastic Limit	383
71. Plastic Deformation of Thick Cylinders under the Action of Internal Pressure	389
IX. MECHANICAL PROPERTIES OF MATERIALS	396
72. Tension Test	396
73. Compression Test	403
74. Strain Hardening	406
75. Strain Hardening and Residual Stresses	412
76. Types of Failures	418
77. Time Effect and Hysteresis	423
78. The Fatigue of Metals	428
79. Various Factors Affecting Endurance Limit	436
80. Fatigue and Stress Concentration	442
81. Causes of Fatigue	459
82. Mechanical Properties of Metals at High Tempera- tures	462
83. Various Strength Theories	473
84. Working Stresses	482
AUTHOR INDEX	499
SUBJECT INDEX	505

CHAPTER I

SPECIAL PROBLEMS IN BENDING OF BEAMS

20.10.1911

1. Beams on Elastic Foundation.—Let us consider a prismatical beam supported along its entire length by a continuous elastic foundation, such that when the beam is deflected, the intensity of the continuously distributed reaction at every section is proportional to the deflection at that section.¹ Under such conditions the reaction per unit length of the bar can be represented by the expression ky , in which y is the deflection and k is a constant usually called the *modulus of the foundation*. This constant denotes the reaction per unit length, when the deflection is equal to unity. The simple assumption that the continuous reaction of the foundation is proportional to the deflection is a satisfactory approximation in many practical cases. For instance, in the case of railway tracks, the solution obtained on this assumption is in good agreement with actual measurements.² In studying the deflection curve of the beam we use the differential equation:³

$$EI \frac{d^4 y}{dx^4} = q, \quad (a)$$

in which q denotes the intensity of the load acting on the beam.

¹ The beam is inbedded in a material capable of exerting downward as well as upward forces on it.

² See S. Timoshenko and B. F. Langer, Trans. A. S. M. E., Vol. 54, p. 277, 1932. The theory of bending of a bar on elastic foundation has been developed by E. Winkler, Die Lehre v. d. Elastizität u. Festigkeit, Prag, 1867, p. 182. See also A. Zimmermann, Die Berechnung des Eisenbahn-Oberbaues, Berlin, 1888. Further development of the theory will be found in the following publications: Hayashi, Theorie des Trägers auf elastischer Unterlage, Berlin, 1921; Wieghardt, Zeitschrift für angewandte Math. u. Mech., Vol. 2 (1922); K. v. Sanden and Schleicher, Beton und Eisen, 1926, Heft 5; Pasternak, Beton u. Eisen, 1926, Heft 9 and 10; W. Prager, Zeitschrift f. angewandte Math. u. Mech., Vol. 7, 1927, p. 354; M. A. Biot, Journal Appl. Mech., Vol. 4, p. 1A, 1937.

³ See "Strength of Materials," Part I, p. 137.

For an unloaded portion the only force on the beam is the continuously distributed reaction from the side of the foundation of intensity ky . Hence $q = -ky$ and equation (a) becomes

$$EI_z \frac{d^4 y}{dx^4} = -ky. \quad (1)$$

Using the notation

$$\sqrt[4]{\frac{k}{4EI_z}} = \beta, \quad (2)$$

the general solution of eq. (1) can be represented as follows:

$$y = e^{\beta x}(A \cos \beta x + B \sin \beta x) + e^{-\beta x}(C \cos \beta x + D \sin \beta x). \quad (b)$$

This can easily be verified by substituting (b) in eq. (1). In particular cases the arbitrary constants A , B , C , and D of the solution must be determined from the known conditions at certain points.

Let us consider, as an example, the case of a single concentrated load acting on an infinitely long beam (Fig. 1), taking the origin of coordinates at the point of application of the

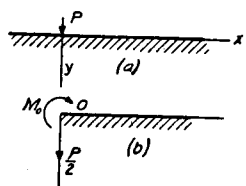


FIG. 1.

force. From the condition of symmetry, only that part of the beam to the right of the load need be considered (Fig. 1, b). In applying the general solution (b) to this case, the arbitrary constants must first be found. It is reasonable to assume that at points infinitely distant from the force P the deflection and the curvature are equal to zero. This condition can be fulfilled only if the constants A and B in eq. (b) are taken equal to zero. Hence the deflection curve for the right portion of the beam becomes

$$y = e^{-\beta x}(C \cos \beta x + D \sin \beta x). \quad (c)$$

The two remaining constants of integration C and D must be found from the conditions at the origin, $x = 0$. At this point,

the deflection curve must have a horizontal tangent; therefore

$$\left(\frac{dy}{dx}\right)_{x=0} = 0,$$

or substituting expression (c) for y

$$e^{-\beta x}(C \cos \beta x + D \sin \beta x + C \sin \beta x - D \cos \beta x)_{x=0} = 0$$

from which

$$C = D.$$

Equation (c) therefore becomes

$$y = Ce^{-\beta x}(\cos \beta x + \sin \beta x). \quad (d)$$

The consecutive derivatives of this equation are

$$\frac{dy}{dx} = -2\beta Ce^{-\beta x} \sin \beta x,$$

$$\frac{d^2 y}{dx^2} = 2\beta^2 Ce^{-\beta x}(\sin \beta x - \cos \beta x), \quad (e)$$

$$\frac{d^3 y}{dx^3} = 4\beta^3 Ce^{-\beta x} \cos \beta x. \quad (f)$$

The constant C can now be determined from the fact that at $x = 0$ the shearing force for the right part of the beam (Fig. 1, b) is equal to $-(P/2)$. The minus sign follows from our convention for signs of shearing forces (see p. 72, Part I). Then

$$(V)_{x=0} = \left(\frac{dM}{dx}\right)_{x=0} = -EI_z \left(\frac{d^3 y}{dx^3}\right)_{x=0} = -\frac{P}{2},$$

or using eq. (f)

$$EI_z \cdot 4\beta^3 C = \frac{P}{2},$$

from which

$$C = \frac{P}{8\beta^3 EI_z}.$$

Substituting this in eqs. (d) and (e), we obtain the following

equations for the deflection and bending moment curves:

$$y = \frac{P}{8\beta^3 EI_z} e^{-\beta x} (\cos \beta x + \sin \beta x) \\ = \frac{P\beta}{2k} e^{-\beta x} (\cos \beta x + \sin \beta x), \quad (3)$$

$$M = -EI_z \frac{d^2 y}{dx^2} = -\frac{P}{4\beta} e^{-\beta x} (\sin \beta x - \cos \beta x). \quad (4)$$

Both expressions (3) and (4) have, when plotted, a wave form with gradually diminishing amplitudes. The length a of these waves is given by the period of the functions $\cos \beta x$ and $\sin \beta x$, i.e.,

$$a = \frac{2\pi}{\beta} = 2\pi \sqrt{\frac{4EI_z}{k}}. \quad (5)$$

To simplify the determination of the deflection, the bending moment, and the shearing force the numerical table below is given, in which the following notations are used:

$$\left. \begin{aligned} \varphi &= e^{-\beta x} (\cos \beta x + \sin \beta x); \\ \psi &= -e^{-\beta x} (\sin \beta x - \cos \beta x); \\ \theta &= e^{-\beta x} \cos \beta x; \quad \zeta = e^{-\beta x} \sin \beta x \end{aligned} \right\} \quad (6)$$

In Fig. 2 the functions φ and ψ are shown graphically.

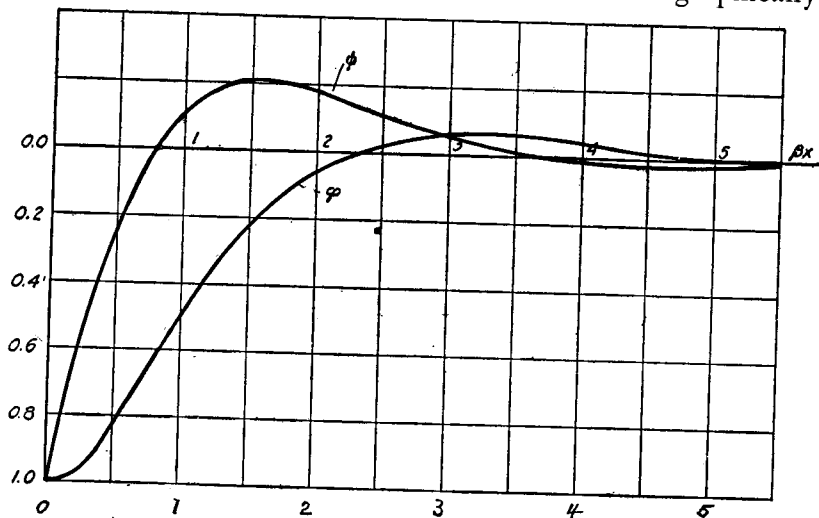


FIG. 2.

TABLE I. FUNCTIONS φ , ψ , θ AND ζ

βx	φ	ψ	θ	ζ	βx	φ	ψ	θ	ζ
0	1.0000	1.0000	1.0000	0	3.6	-0.0366	-0.0124	-0.0245	-0.0121
0.1	0.9907	0.8100	0.9003	0.0903	3.7	-0.0341	-0.0079	-0.0210	-0.0131
0.2	0.9651	0.6398	0.8024	0.1627	3.8	-0.0314	-0.0040	-0.0177	-0.0137
0.3	0.9267	0.4888	0.7077	0.2189	3.9	-0.0286	-0.0008	-0.0147	-0.0140
0.4	0.8784	0.3564	0.6174	0.2610	4.0	-0.0258	0.0019	-0.0120	-0.0139
0.5	0.8231	0.2415	0.5323	0.2908	4.1	-0.0231	0.0040	-0.0095	-0.0136
0.6	0.7628	0.1431	0.4530	0.3099	4.2	-0.0204	0.0057	-0.0074	-0.0131
0.7	0.6997	0.0599	0.3798	0.3199	4.3	-0.0179	0.0070	-0.0054	-0.0125
0.8	0.6354	-0.0093	0.3131	0.3223	4.4	-0.0155	0.0079	-0.0038	-0.0117
0.9	0.5712	-0.0657	0.2527	0.3185	4.5	-0.0132	0.0085	-0.0023	-0.0108
1.0	0.5083	-0.1108	0.1988	0.3096	4.6	-0.0111	0.0089	-0.0011	-0.0100
1.1	0.4476	-0.1457	0.1510	0.2967	4.7	-0.0092	0.0090	0.0001	-0.0091
1.2	0.3899	-0.1716	0.1091	0.2807	4.8	-0.0075	0.0089	0.0007	-0.0082
1.3	0.3355	-0.1897	0.0729	0.2626	4.9	-0.0059	0.0087	0.0014	-0.0073
1.4	0.2849	-0.2011	0.0419	0.2430	5.0	-0.0046	0.0084	0.0019	-0.0065
1.5	0.2384	-0.2068	0.0158	0.2226	5.1	-0.0033	0.0080	0.0023	-0.0057
1.6	0.1959	-0.2077	-0.0059	0.2018	5.2	-0.0023	0.0075	0.0026	-0.0049
1.7	0.1576	-0.2047	-0.0235	0.1812	5.3	-0.0014	0.0069	0.0028	-0.0042
1.8	0.1234	-0.1985	-0.0376	0.1610	5.4	-0.0006	0.0064	0.0029	-0.0035
1.9	0.0932	-0.1899	-0.0484	0.1415	5.5	0.0000	0.0058	0.0029	-0.0029
2.0	0.0667	-0.1794	-0.0563	0.1230	5.6	0.0005	0.0052	0.0029	-0.0023
2.1	0.0439	-0.1675	-0.0618	0.1057	5.7	0.0010	0.0046	0.0028	-0.0018
2.2	0.0244	-0.1548	-0.0652	0.0895	5.8	0.0013	0.0041	0.0027	-0.0014
2.3	0.0080	-0.1416	-0.0668	0.0748	5.9	0.0015	0.0036	0.0026	-0.0010
2.4	-0.0056	-0.1282	-0.0669	0.0613	6.0	0.0017	0.0031	0.0024	-0.0007
2.5	-0.0166	-0.1149	-0.0658	0.0492	6.1	0.0018	0.0026	0.0022	-0.0004
2.6	-0.0254	-0.1019	-0.0636	0.0383	6.2	0.0019	0.0022	0.0020	-0.0002
2.7	-0.0320	-0.0895	-0.0608	0.0287	6.3	0.0019	0.0018	0.0018	+0.0001
2.8	-0.0369	-0.0777	-0.0573	0.0204	6.4	0.0018	0.0015	0.0017	0.0003
2.9	-0.0403	-0.0666	-0.0534	0.0132	6.5	0.0018	0.0012	0.0015	0.0004
3.0	-0.0423	-0.0563	-0.0493	0.0070	6.6	0.0017	0.0009	0.0013	0.0005
3.1	-0.0431	-0.0469	-0.0450	0.0019	6.7	0.0016	0.0006	0.0011	0.0006
3.2	-0.0431	-0.0383	-0.0407	-0.0024	6.8	0.0015	0.0004	0.0010	0.0006
3.3	-0.0422	-0.0306	-0.0364	-0.0058	6.9	0.0014	0.0002	0.0008	0.0006
3.4	-0.0408	-0.0237	-0.0323	-0.0085	7.0	0.0013	0.0001	0.0007	0.0006
3.5	-0.0389	-0.0177	-0.0283	-0.0106					

Using the notation (6) and equations (d)–(f) we obtain

$$\left. \begin{aligned} y &= \frac{P\beta}{2k} \varphi(\beta x), & \frac{dy}{dx} &= -\frac{P\beta^2}{k} \zeta(\beta x), \\ M &= -EI_z \frac{d^2 y}{dx^2} = \frac{P}{4\beta} \psi(\beta x), \\ V &= -EI_z \frac{d^3 y}{dx^3} = -\frac{P}{2} \theta(\beta x). \end{aligned} \right\} \quad (7)$$

By using these equations together with table I, the deflection, the slope, the bending moment, and the shearing force for any cross section of the beam can be readily calculated. The maximum deflection and maximum bending moment occur at the origin and are, respectively,

$$\delta = (y)_{x=0} = \frac{P\beta}{2k}, \quad (8)$$

$$M_0 = (M)_{x=0} = \frac{P}{4\beta}. \quad (9)$$

Using the expression (3) for a single load and the principle of superposition, the deflection produced in an infinitely long beam on an elastic foundation by any other type of loading can be readily obtained.

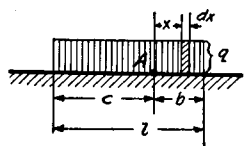


FIG. 3.

As an example let us consider the case of a uniform load distributed over a length l of an infinitely long beam (Fig. 3). Consider any point A , and let c and b represent the distances from this point to the ends of the loaded part of the beam. The deflection at A , produced by an element qdx of the load, is obtained by substituting qdx for P in eq. (3), which gives

$$\frac{qdx}{8\beta^3 EI_z} e^{-\beta x} (\cos \beta x + \sin \beta x).$$

The deflection produced at A by the loading distributed over the

length l then becomes

$$y = \int_0^b \frac{qdx}{8\beta^3 EI_z} e^{-\beta x} (\cos \beta x + \sin \beta x) + \int_0^c \frac{qdx}{8\beta^3 EI_z} e^{-\beta x} (\cos \beta x + \sin \beta x) \\ = \frac{q}{2k} (2 - e^{-\beta b} \cos \beta b - e^{-\beta c} \cos \beta c). \quad (g)$$

If c and b are large, the values $e^{-\beta b}$ and $e^{-\beta c}$ will be small and the deflection (g) will be equal approximately to q/k , i.e., at points remote from the ends of the loaded part of the bar the bending of the bar can be neglected and it can be assumed that the uniform loading q is directly transmitted to the elastic foundation. Taking the point A at the end of the loaded part of the bar, we have $c = 0$, $b = l$, $e^{-\beta c} \cos \beta c = 1$. Assuming that l is large, we have also $e^{-\beta b} \cos \beta b = 0$. Then $y = q/2k$; i.e., the deflection now has only one half of the value obtained above.

In a similar manner, by using equation (4), the expression for bending moment at A can be derived. If the point A is taken outside of the loaded portion of the beam and if the quantities b and c represent, respectively, the larger and the smaller distances from this point to the ends of the loaded part of the beam, the deflection at A is

$$y = \int_0^b \frac{qdx}{8\beta^3 EI_z} e^{-\beta x} (\cos \beta x + \sin \beta x) \\ - \int_0^c \frac{qdx}{8\beta^3 EI_z} e^{-\beta x} (\cos \beta x + \sin \beta x) \\ = \frac{q}{2k} (e^{-\beta c} \cos \beta c - e^{-\beta b} \cos \beta b). \quad (h)$$

When $c = 0$ and $b = l$ is a large quantity, we obtain for the deflection the value $q/2k$, which coincides with our previous conclusion. As the distances b and c increase, the deflection (h) decreases, approaching zero as b and c grow larger.

The case of a couple acting on an infinitely long beam, Fig.

4a, can also be analyzed by using the solution (3) for a single load. The action of the couple is equivalent to that of the two forces P shown in Fig. 4b, if Pe approaches M_0 while e approaches zero.

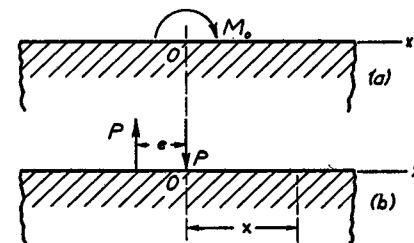


FIG. 4.

Using the first of equations (7), we find the deflection at a distance x from the origin:

$$y = \frac{P\beta}{2k} \{ \varphi(\beta x) - \varphi[\beta(x+e)] \}$$

$$= \frac{M_0\beta}{2k} \cdot \frac{\varphi(\beta x) - \varphi[\beta(x+e)]}{e} = -\frac{M_0\beta}{2k} \frac{d\varphi}{dx}.$$

Since, from equations (7),

$$\frac{d\varphi}{dx} = -2\beta\zeta,$$

we obtain for the deflection curve produced by the couple M_0 the following equation:

$$y = \frac{M_0\beta^2}{k} \zeta(\beta x). \quad (10)$$

By differentiating this equation, we obtain

$$\frac{dy}{dx} = \frac{M_0\beta^3}{k} \psi(\beta x),$$

$$M = -EI_z \frac{d^2y}{dx^2} = \frac{M_0}{2} \theta(\beta x), \quad (10')$$

$$V = -EI_z \frac{d^3y}{dx^3} = -\frac{M_0\beta}{2} \varphi(\beta x).$$

Using these equations together with Table 1, one can readily calculate the deflection, the slope, the bending moment, and the shearing force for any cross section of the beam.

We shall now consider the case of several loads acting on a beam. As an example bending of a rail produced by wheel-pressures of a locomotive will be discussed. The following method of analyzing stresses in rails is based upon the assumption that there is a continuous elastic support under the rail. This assumption is a good approximation,⁴ since the distance between the ties is small in comparison to the wave length a of the deflection curve, given by eq. (5). In order to obtain the magnitude k of the modulus of foundation, the load required to depress one tie unit distance must be divided by the tie spacing. It is assumed that the tie is symmetrically loaded by two loads corresponding to the rail pressures. Suppose, for instance, that the tie is depressed 0.3 inch under each of the two loads of 10,000 pounds and that the tie

spacing is 22 inches; then

$$k = \frac{10,000}{0.3 \times 22} = 1,500 \text{ lbs. per square inch.}$$

For the case of a single wheel load P , eqs. (8) and (9) are used for the maximum deflection and maximum bending moment. The maximum stress due to the bending of the rail will be

$$\sigma_{\max} = \frac{M_{\max}}{Z} = \frac{P}{4\beta Z} = \frac{P}{4Z} \sqrt[4]{\frac{4EI_z}{k}}, \quad (i)$$

where Z denotes the section modulus of the rail.⁵

In order to compare stresses in rails the cross sections of which are geometrically similar, eq. (i) may be put in the following form:

$$\sigma_{\max} = \frac{P}{A} \cdot \frac{A\sqrt[4]{I_z}}{4Z} \sqrt[4]{\frac{4E}{k}}, \quad (j)$$

in which A is the area of the cross section of the rail. Since the second factor on the right side of eq. (j) remains constant for geometrically similar cross sections and since the third factor does not depend on the dimensions of the rail, the maximum stress is inversely proportional to the area of the cross section, i.e., inversely proportional to the weight of the rail per unit length.

An approximate value of the maximum pressure R_{\max} on a tie is obtained by multiplying the maximum depression by the tie spacing l and by the modulus of the foundation. From eq. (8)

$$R_{\max} = \frac{P\beta}{2k} lk = \frac{P\beta l}{2} = \frac{P}{2} \sqrt[4]{\frac{k l^4}{4EI_z}}. \quad (k)$$

It may be seen from this that the pressure on the tie depends principally on the tie spacing l . It should be noted also that k occurs in both eqs. (j) and (k) as a fourth root. Hence an error in the determination of k will introduce a much smaller error in the magnitude of σ_{\max} and R_{\max} .

⁴ See author's paper on "Strength of Rails," Transactions of the Institute of Way of Communications, St. Petersburg, Russia (1915), and author's paper in Proc. of the Second International Congress for Applied Mechanics, Zürich, 1926. See also reference 2.

⁵ In writing eq. (i) it was assumed that the elementary beam formula can be used at the cross section where the load P is applied. More detailed investigations show that, due to local stresses, considerable deviation from the elementary eq. (i) should be expected.

When several loads are acting on the rail, the method of superposition must be used. To illustrate the method of calculation we shall discuss a numerical example. Consider a 100-lb. rail section with $I_x = 44 \text{ in.}^4$ and with a tie spacing such that $k = 1,500 \text{ lbs. per sq. in.}$; then from eq. (2)

$$\beta = \sqrt[4]{\frac{k}{4EI_x}} = \sqrt[4]{\frac{1,500}{4 \times 30 \times 10^6 \times 44}} = \frac{1}{43.3} \text{ in.}^{-1},$$

and from eq. (5)

$$a = \frac{2\pi}{\beta} = 272 \text{ in.}$$

We take, as an example, a system of four equal wheel loads, 66 inches apart. If we fix the origin of coordinates at the point of contact of the first wheel, the values of βx for other wheels will be those in the table 2 below. The corresponding values of functions φ and ψ taken from the numerical table on p. 5 are also given.

TABLE 2

Loads	1	2	3	4
βx	0	1.52	3.05	4.57
ψ	1	-0.207	-0.051	0.008
φ	1	0.230	-0.042	-0.012

Now, after superposing the effects of all the four loads acting on the rail, the bending moment under the first wheel is, from eq. (4),

$$M_1 = \frac{P}{4\beta} (1 - 0.207 - 0.051 + 0.008) = 0.75 \frac{P}{4\beta},$$

i.e., the bending moment is 25 per cent less than that produced by a single load P .

Proceeding in the same manner for the point of contact of the second wheel we obtain

$$M_2 = \frac{P}{4\beta} (1 - 2 \times 0.207 - 0.051) = 0.535 \frac{P}{4\beta}.$$

It may be seen that due to the action of adjacent wheels the bending moment under the second wheel is much smaller than under the first. This fact was proved by numerous experimental measurements of track stresses. Using eq. (3) and the values in the last

line of the numerical table 2, we find the following deflection under the first wheel:

$$\delta_1 = \frac{P\beta}{2k} (1 + 0.230 - 0.042 - 0.012) = 1.18 \frac{P\beta}{2k}.$$

The deflections at other points can be obtained in a similar manner.

It will be seen that the method of superposition is easily applied to determine the effect of a combination of loads having any arrangement and any spacing.

The analysis is based on the assumption that the rail support is capable of developing negative reactions. Since there is play between the rail and the spikes, there is little resistance to the upward movement of the rail and this tends to increase the bending moment in the rail under the first and the last wheels. Other elements enter into the problem and these may affect the accuracy of the analysis. Nevertheless, in general, the above theory for the bending of the rail, caused by static loading, is in satisfactory agreement with the experiments which have been made.

Problems

1. Using the information given in Table 2, construct the bending moment diagram for the rail assuming that the wheel pressures are equal to 40,000 lbs. Such a diagram should show that the moments are negative in sections midway between the wheels, which indicates that during locomotive motion the rail is submitted to the action of reversal of bending stresses which may finally result in fatigue cracks.

2. Find the bending moment at the middle of the loaded portion of the beam shown in Fig. 3 and the slope of the deflection curve at the left end of the same portion.

3. Find the deflection at any point A under the triangular load acting on an infinitely long beam on elastic foundation, Fig. 5.

Answer. Proceeding as in the derivation of equation (g), p. 7, we obtain

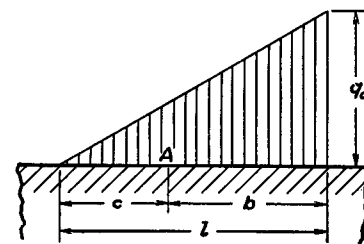


FIG. 5.

$$y = \frac{q_0}{4\beta k} \frac{1}{l} [\psi(\beta c) - \psi(\beta b) - 2\beta l \theta(\beta b) + 4\beta c].$$

2. The Semi-infinite Beam on an Elastic Foundation.—If a long beam on an elastic foundation is bent by a force P and a moment M_0 applied at the end as shown in Fig. 6, we again can use the general solution (b) of the preceding article. Since the deflection and the bending moment approach zero as the distance x from the loaded end increases, we must take $A = B = 0$ in that solution and we obtain




FIG. 6.

$$y = e^{-\beta x}(C \cos \beta x + D \sin \beta x). \quad (a)$$

For determining the constants of integration C and D we have the conditions at the origin, i.e., under the load P :

$$EI_z \left(\frac{d^2 y}{dx^2} \right)_{x=0} = -M_0,$$

$$EI_z \left(\frac{d^3 y}{dx^3} \right)_{x=0} = -V = P.$$

Substituting expression (a) in these equations, we obtain two linear equations in C and D , from which

$$C = \frac{1}{2\beta^3 EI_z} (P - \beta M_0); \quad D = \frac{M_0}{2\beta^2 EI_z}.$$

Substituting in equation (a), we obtain

$$y = \frac{e^{-\beta x}}{2\beta^3 EI_z} [P \cos \beta x - \beta M_0 (\cos \beta x - \sin \beta x)] \\ = \frac{2\beta}{k} \{ P \theta(\beta x) - \beta M_0 [\theta(\beta x) - \zeta(\beta x)] \}. \quad (11)$$

To get the deflection under the load we must substitute in (11) $x = 0$. Then

$$\delta = (y)_{x=0} = \frac{1}{2\beta^3 EI_z} (P - \beta M_0). \quad (11')$$

The expression for the slope is obtained by differentiating eq. (11). At the end ($x = 0$) this becomes

$$\left(\frac{dy}{dx} \right)_{x=0} = -\frac{1}{2\beta^2 EI_z} (P - 2\beta M_0). \quad (12)$$

Using these equations in conjunction with the principle of superposition, more complicated problems can be solved.

If a uniformly loaded long beam on an elastic foundation has a

simply supported end, Fig. 7a, the reaction R is found from the condition that the deflection at the support is zero. Observing that at a large distance from the support bending of the beam is negligible and that its depression into the foundation can be taken equal to q/k , we calculate the value of R by substituting $M_0 = 0$ and $\delta = q/k$ into equation (11'). This yields the result:

$$R = 2\beta^3 EI_z \cdot \frac{q}{k} = \frac{q}{2\beta}. \quad (13)$$

The deflection curve is now obtained by subtracting deflections given by equation (11) for $P = R$, $M_0 = 0$ from the uniform depression q/k of the beam, which gives

$$y = \frac{q}{k} - \frac{e^{-\beta x}}{2\beta^3 EI_z} R \cos \beta x = \frac{q}{k} (1 - e^{-\beta x} \cos \beta x). \quad (14)$$

In the case of a built-in end, Fig. 7b, the magnitudes of the reaction R and of the moment M_0 are obtained from the conditions that at the support the deflection and the slope are zero. Observing that at a large distance from the support the deflection is equal to q/k and using equations (11') and (12), we obtain the following equations for calculating R and M_0 :

$$-\frac{q}{k} = -\frac{1}{2\beta^3 EI_z} (R + \beta M_0)$$

and

$$0 = \frac{1}{2\beta^2 EI_z} (R + 2\beta M_0),$$

from which

$$M_0 = -2\beta^2 EI_z \frac{q}{k}, \quad R = 4\beta^3 EI_z \frac{q}{k} = \frac{q}{\beta}. \quad (15)$$

The minus sign of M_0 indicates that the moment has the direction shown by the arrow in Fig. 7b.

⁶ In equations (11') and (12), $P = -R$ is substituted, since the positive direction for the reaction is taken upwards.

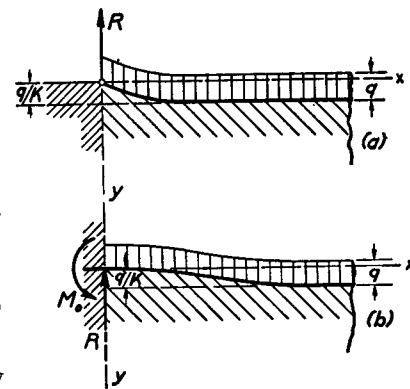


FIG. 7.

Problems

1. Find the deflection curve for a semi-infinite beam on an elastic foundation hinged at the end and acted upon by a couple M_0 , Fig. 8.




FIG. 8.

Solution. The reaction at the hinge is obtained from equation (11') substituting $\delta = 0$, which gives

$$P = \beta M_0.$$

Substituting this value of P in equation (11) we obtain

$$y = \frac{M_0}{2\beta^2 EI_z} e^{-\beta x} \sin \beta x = \frac{M_0}{2\beta^2 EI_z} \zeta(\beta x). \quad (16)$$

By subsequent differentiation, we find

$$\left. \begin{aligned} \frac{dy}{dx} &= \frac{2\beta^3 M_0}{k} \cdot \psi(\beta x), \\ M &= -EI_z \frac{d^2 y}{dx^2} = M_0 \cdot \theta(\beta x), \\ V &= -EI_z \frac{d^3 y}{dx^3} = -\beta M_0 \cdot \varphi(\beta x). \end{aligned} \right\} \quad (b)$$

2. Find the bending moment M_0 and the force P acting on the end of a semi-infinite beam on an elastic foundation, Fig. 9, if the deflection δ and the slope i at the end are given.


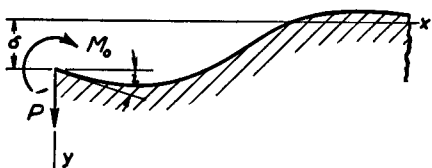


FIG. 9.

Solution. The values M_0 and P are obtained from equations (11') and (12) by substituting the given quantities for δ and $(dy/dx)_{x=0} = i$.

3. Find the deflection curve for a semi-infinite beam on an elastic foundation produced by a load P applied at a distance c from the free end A of the beam, Fig. 10.

Solution. Assume that the beam is extended to the left of the end A as shown by the dotted line. In such a case equation (3) gives the deflection curve for $x > 0$ and at the cross section A of the fictitious infinite beam we have, from equations (7), using the condition of symmetry:

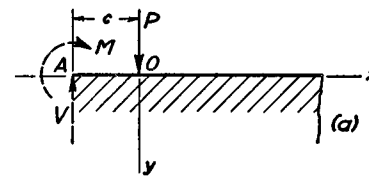

$$M = \frac{P}{4\beta} \psi(\beta c), \quad V = \frac{P}{2} \theta(\beta c). \quad (c)$$

To obtain the required deflection curve for the semi-infinite beam, free at the end A , we evidently must superpose the deflection of the semi-infinite beam produced by forces shown in Fig. 10b on the deflection of the fictitious infinite beam. By using equations (3), (11) and (c) in this way we obtain for $x > 0$:

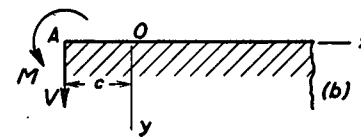


FIG. 10.

$$\begin{aligned} y &= \frac{P\beta}{2k} \varphi(\beta x) + \frac{2\beta}{k} \{ V\theta[\beta(x+c)] \\ &\quad + \beta M\theta[\beta(x+c)] - \beta M\zeta[\beta(x+c)] \} \quad (d) \\ &= \frac{P\beta}{2k} \varphi(\beta x) + \frac{\beta P}{k} \{ \theta(\beta c)\theta[\beta(x+c)] \\ &\quad + \frac{1}{2}\psi(\beta c)\theta[\beta(x+c)] - \frac{1}{2}\psi(\beta c)\zeta[\beta(x+c)] \}. \end{aligned}$$

This expression can also be used for $-c < x < 0$; in this case we have only to substitute the absolute value of x , instead of x , in $\varphi(\beta x)$.

3. Beams of Finite Length on Elastic Foundations.—Bending of a beam of finite length on an elastic foundation can also be investigated by using solution (3) for an infinitely long beam together with the method of superposition.⁷ To illustrate the method let us consider the case of a beam of finite length with free ends which is loaded by two symmetrically applied forces P , Fig. 11a. A similar condition exists in the case of a tie under the action of rail pressures. To each of the three portions of the beam the general

⁷ This method of analysis was developed by M. Hetényi, Final Report of the Second Congress of the International Assoc. f. Bridge and Structural Engineering, Berlin, 1938.

solution (b) of article 1 can be applied, and the constants of integration can be calculated from the conditions at the ends and at the points of application of the loads. The required solution can, however, be obtained much more easily by superposing the solutions for the two kinds of loading of an infinitely long beam shown in Figs. 11b and 11c. In Fig. 11b the two forces P are acting on

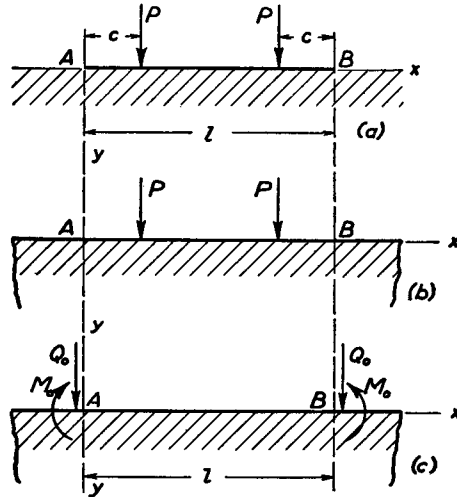


FIG. 11.

the infinitely long beam. In Fig. 11c the infinitely long beam is loaded by forces Q_0 and moments M_0 , both applied outside of the portion AB of the beam and infinitely close to points A and B corresponding to the free ends of the given beam, Fig. 11a. It is easy to see that by a proper selection of the forces Q_0 and the moments M_0 , the bending moment and the shearing force produced by the forces P at the cross sections A and B of the infinite beam (shown in Fig. 11b) can be made to equal zero. Then the middle portion of the infinite beam will be evidently in the same condition as the finite beam represented in Fig. 11a, and all necessary information regarding bending of the latter beam will be obtained by superposing the cases shown in Figs. 11b and 11c. To establish the equations for determining the proper values of M_0 and Q_0 , let us consider the cross section A of the infinitely long beam. Taking the origin of the coordinates at this point and using equations (7), the bending moment M' and the shearing force V' produced at this

point by the two forces P , Fig. 11b, are

$$\left. \begin{aligned} M' &= \frac{P}{4\beta} \{ \psi[\beta(l-c)] + \psi[\beta c] \}, \\ V' &= \frac{P}{2} \{ \theta[\beta(l-c)] + \theta[\beta c] \}. \end{aligned} \right\} \quad (a)$$

The moment M'' and the shearing force V'' produced at the same point by the forces shown in Fig. 11c are obtained by using equations (7) together with equations (10'), which give

$$\left. \begin{aligned} M'' &= \frac{Q_0}{4\beta} [1 + \psi(\beta l)] + \frac{M_0}{2} [1 + \theta(\beta l)], \\ V'' &= -\frac{Q_0}{2} [1 - \theta(\beta l)] - \frac{M_0\beta}{2} [1 - \varphi(\beta l)]. \end{aligned} \right\} \quad (b)$$

The proper values of M_0 and Q_0 are now obtained from the equations

$$\left. \begin{aligned} M' + M'' &= 0, \\ V' + V'' &= 0, \end{aligned} \right\} \quad (c)$$

which can be readily solved in each particular case by using Table 1.

Once M_0 and Q_0 are known, the deflection and the bending moment at any cross section of the actual beam, Fig. 11a, can be obtained by using equations (7), (10) and (10') together with the method of superposition. The particular case shown in Fig. 12 is obtained from our previous discussion by taking $c = 0$.

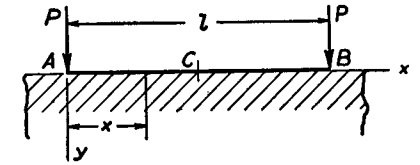


FIG. 12.

Proceeding as previously explained we obtain for the deflections at the ends and at the middle the following expressions:

$$y_a = y_b = \frac{2P\beta \cosh \beta l + \cos \beta l}{k \sinh \beta l + \sin \beta l}, \quad (d)$$

$$y_c = \frac{4P\beta \cosh \frac{\beta l}{2} \cos \frac{\beta l}{2}}{k \sinh \beta l + \sin \beta l}. \quad (e)$$

The bending moment at the middle is

$$M_c = -\frac{2P}{\beta} \frac{\sinh \frac{\beta l}{2} \sin \frac{\beta l}{2}}{\sinh \beta l + \sin \beta l}. \quad (f)$$

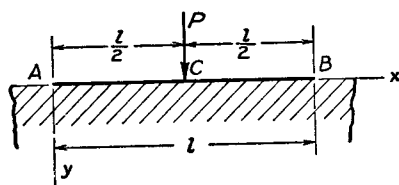


FIG. 13.

The case of a single load at the middle, Fig. 13, can also be obtained from our previous case, shown in Fig. 11a. It is only necessary to take $c = l/2$ and to substitute P for $2P$. In this way we obtain for the deflections at

the middle and at the ends the following expressions:

$$y_a = y_b = \frac{2P\beta}{k} \frac{\cosh \frac{\beta l}{2} \cos \frac{\beta l}{2}}{\sinh \beta l + \sin \beta l}, \quad (g)$$

$$y_c = \frac{P\beta}{2k} \frac{\cosh \beta l + \cos \beta l + 2}{\sinh \beta l + \sin \beta l}. \quad (h)$$

For the bending moment under the load we find

$$M_c = \frac{P}{4\beta} \frac{\cosh \beta l - \cos \beta l}{\sinh \beta l + \sin \beta l}. \quad (i)$$

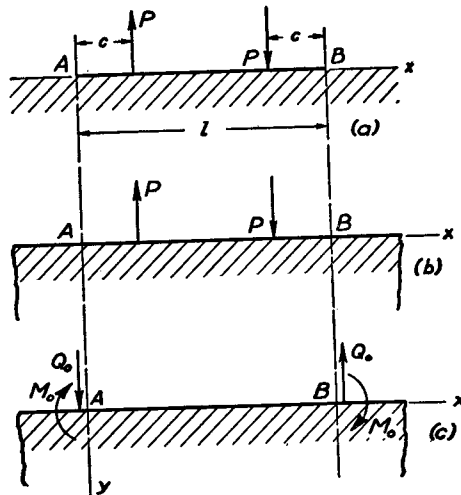


FIG. 14.

The method used for the symmetrical case shown in Fig. 11a can be applied also in the anti-symmetrical case shown in Fig. 14a. Q_0 and M_0 in this case will also represent an anti-symmetrical system as shown in Fig. 14c. For the determination of the proper

values of Q_0 and M_0 , the system of equations similar to equations (a), (b) and (c) can be readily written. As soon as Q_0 and M_0 are calculated, all necessary information regarding the bending of the beam shown in Fig. 14a can be obtained by superposing the cases shown in Figures 14b and 14c.

Having the solutions for the symmetrical and for the anti-symmetrical loading of a beam, we can readily obtain the solution for any kind of loading by using the principle of superposition. For example, the solution of the unsymmetrical case shown in Fig. 15a is obtained by superposing the solutions of the symmetrical and the anti-symmetrical cases shown in Figs. 15b and 15c. The

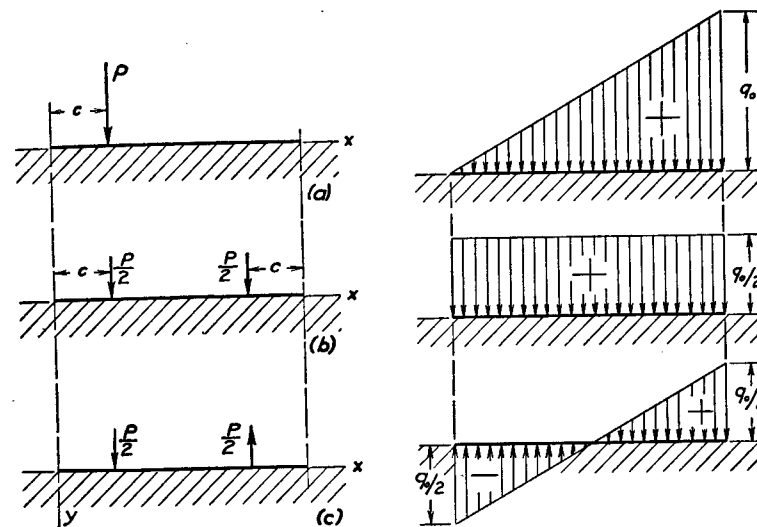


FIG. 15.

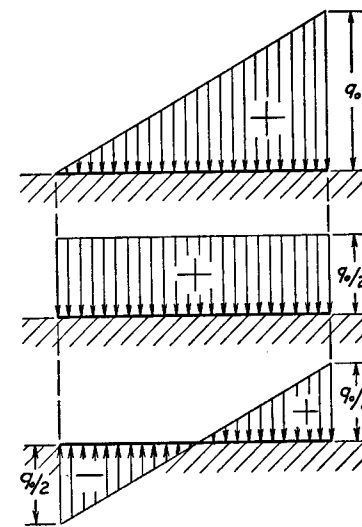


FIG. 16.

problem shown in Fig. 16 can be treated in the same manner. In each case the problem is reduced to the determination of the proper values of the forces Q_0 and moments M_0 from the two equations (c).

In discussing the bending of beams of finite length we note that the action of forces applied at one end of the beam on the deflection at the other end depends on the magnitude of the quantity βl . This quantity increases with the increase of the length of the beam. At the same time, as may be seen from Table 1, the functions φ , ψ and θ are rapidly decreasing, and beyond a certain value of βl we can assume that the force acting at one end of the beam has only a negligible effect at the other end. This justifies our considering the beam as an infinitely long one. In such a case the quantities

$\varphi(\beta l)$, $\psi(\beta l)$ and $\theta(\beta l)$ can be neglected in comparison with unity in equations (b); by so doing equations (c) are considerably simplified.

In general, a discussion of the bending of beams of a finite length falls naturally into the three groups:

- I. Short beams, $\beta l < 0.60$.
- II. Beams of medium length, $0.60 < \beta l < 5$.
- III. Long beams, $\beta l > 5$.

In discussing beams of the first group we can entirely neglect bending and consider these beams as absolutely rigid, since the deflection due to bending is usually negligibly small in comparison with the deflection of the foundation. Taking, for example, the case of a load at the middle, Fig. 13, and assuming $\beta l = 0.60$, we find from the formulas given above for y_a and y_c that the difference between the deflection at the middle and the deflection at the end is only about one-half of one per cent of the total deflection. This indicates that the deflection of the foundation is obtained with a very good accuracy by treating the beam as infinitely rigid and by using for the deflection the formula

$$y = \frac{P}{kl}.$$

The characteristic of beams of the second group is that a force acting on one end of the beam produces a considerable effect at the other end. Thus such beams must be treated as beams of finite length.

In the case of beams of the third group we can assume, in investigating one end of the beam, that the other end is infinitely far away. Hence the beam can be considered as infinitely long.

In our previous discussion it was always assumed that the beam was supported by a continuous elastic foundation but the results obtained can also be applied when the beam is supported by a large number of equidistant elastic supports. As an example of this kind, let us consider a horizontal beam AB , Fig. 17, supporting a system of equidistant vertical beams which are carrying a uniformly distributed load q .⁸ All beams are simply supported at the ends. Denoting by EI_1 and l_1 the flexural rigidity and the length of vertical beams, we find the deflection at their middle to be

$$y = \frac{5}{384} \frac{ql_1^4}{EI_1} - \frac{Rl_1^3}{48EI_1}, \quad (j)$$

⁸ Various problems of this kind are encountered in ship structures. A very complete discussion of such problems is given by I. G. Boobnov in his "Theory of Structure of Ships," vol. 2, 1914, S. Petersburg.

where R is the pressure on the horizontal beam AB of the vertical beam under consideration. Solving equation (j) for R we find that the horizontal beam AB is under the action of a concentrated force, Fig. 17c, the magnitude of which is

$$R = \frac{5}{8} ql_1 - \frac{48EI_1}{l_1^3} y. \quad (k)$$

Assuming that the distance a between the vertical beams is small in comparison with the length l of the horizontal beam and replacing the concentrated forces by the equivalent uniform load, as shown in Fig. 17c, we also replace the stepwise load distribution, indicated

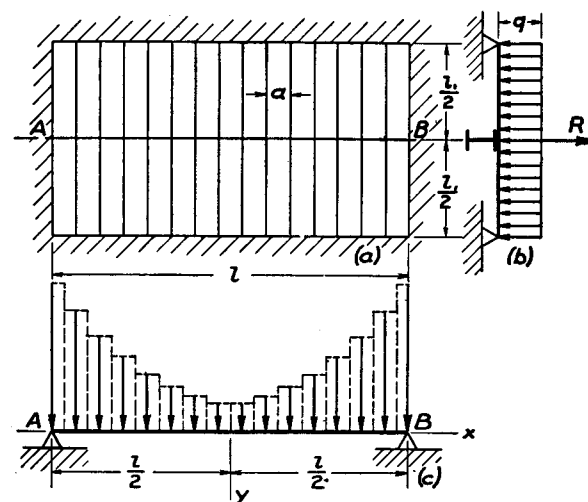


FIG. 17.

in the figure by the dotted lines, by a continuous load distribution of the intensity

$$q_1 = ky$$

where

$$q_1 = \frac{5}{8} \frac{ql_1}{a}; \quad k = \frac{48EI_1}{al_1^3}. \quad (l)$$

The differential equation of the deflection curve for the beam AB then is

$$EI \frac{d^4 y}{dx^4} = q_1 - ky. \quad (m)$$

It is seen that the horizontal beam is in the condition of a uniformly

loaded beam on an elastic foundation. The intensity of the load and the modulus of foundation are given by the expressions (l). In discussing the deflection of the beam we can use the method of superposition previously explained or we can directly integrate equation (m). Using the latter method, we may write the general integral of the equation (m) in the following form:

$$y = \frac{q_1}{k} + C_1 \sin \beta x \sinh \beta x + C_2 \sin \beta x \cosh \beta x + C_3 \cos \beta x \sinh \beta x + C_4 \cos \beta x \cosh \beta x. \quad (n)$$

Taking the origin of the coordinates at the middle, Fig. 17c, we conclude from the condition of symmetry that

$$C_2 = C_3 = 0.$$

Substituting this in the solution (n) and using the conditions at the simply supported ends:

$$(y)_{x=l/2} = 0, \quad \left(\frac{d^2 y}{dx^2} \right)_{x=l/2} = 0,$$

we find

$$C_1 = -\frac{q_1}{k} \frac{2 \sin \frac{\beta l}{2} \sinh \frac{\beta l}{2}}{\cos \beta l + \cosh \beta l},$$

$$C_4 = -\frac{q_1}{k} \frac{2 \cos \frac{\beta l}{2} \cosh \frac{\beta l}{2}}{\cos \beta l + \cosh \beta l}.$$

The deflection curve then is

$$y = \frac{q_1}{k} \left[1 - \frac{2 \sin \frac{\beta l}{2} \sinh \frac{\beta l}{2}}{\cos \beta l + \cosh \beta l} \sin \beta x \sinh \beta x - \frac{2 \cos \frac{\beta l}{2} \cosh \frac{\beta l}{2}}{\cos \beta l + \cosh \beta l} \cos \beta x \cosh \beta x \right]. \quad (o)$$

The deflection at the middle is obtained by taking $x = 0$ which gives

$$(y)_{x=0} = \frac{q_1}{k} \left(1 - \frac{2 \cos \frac{\beta l}{2} \cosh \frac{\beta l}{2}}{\cos \beta l + \cosh \beta l} \right). \quad (p)$$

Substituting this value in equation (k), we find the reaction at the middle support of the vertical beam, which intersects the beam AB at its mid-point. It is interesting to note that this reaction may become negative, which indicates that the horizontal beam actually supports the vertical beams only if it is sufficiently rigid; otherwise it may actually increase the bending of some of the vertical beams.

Problems

1. Find a general expression for the deflection curve for the case illustrated in Fig. 12.

Answer.

$$y = \frac{2P\beta \cosh \beta x \cos \beta(l-x) + \cosh \beta(l-x) \cos \beta x}{k \sinh \beta l + \sin \beta l}.$$

2. Find the deflections at the ends and the bending moment at the middle of the beam bent by two equal and opposite couples M_0 , Fig. 18.

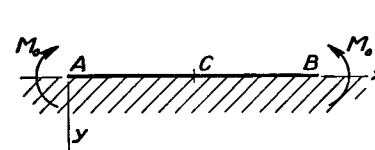


FIG. 18.

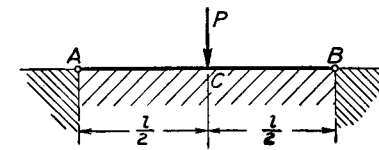


FIG. 19.

Answer.

$$y_a = y_b = -\frac{2M_0\beta^2 \sinh \beta l - \sin \beta l}{k \sinh \beta l + \sin \beta l},$$

$$M_c = 2M_0 \frac{\sinh \frac{\beta l}{2} \cos \frac{\beta l}{2} + \cosh \frac{\beta l}{2} \sin \frac{\beta l}{2}}{\sinh \beta l + \sin \beta l}.$$

3. Find the deflection and the bending moment at the middle of the beam with hinged ends and on an elastic foundation, the load being applied at the middle of the beam, Fig. 19.

Answer.

$$y_c = \frac{P\beta \sinh \beta l - \sin \beta l}{2k \cosh \beta l + \cos \beta l},$$

$$M_c = \frac{P}{4\beta} \frac{\sinh \beta l + \sin \beta l}{\cosh \beta l + \cos \beta l}.$$

4. Find the deflection and the bending moment at the middle of the uniformly loaded beam with hinged ends on an elastic foundation, Fig. 20.

Answer.

$$y_c = \frac{q}{k} \left\{ 1 - \frac{2 \cosh \frac{\beta l}{2} \cos \frac{\beta l}{2}}{\cosh \beta l + \cos \beta l} \right\},$$

$$M_c = \frac{q}{2\beta^2} \frac{\sinh \frac{\beta l}{2} \sin \frac{\beta l}{2}}{\cosh \beta l + \cos \beta l}.$$

5. Find the bending moments at the ends of the beam with built-in ends and on an elastic foundation. The beam is carrying a uniform load and a load at the middle, Fig. 21.

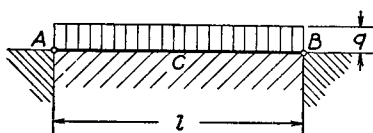


FIG. 20.

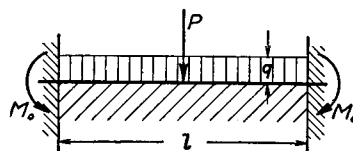


FIG. 21.

Answer.

$$M_0 = -\frac{P}{\beta \sinh \beta l + \sin \beta l} \frac{\sinh \frac{\beta l}{2} \sin \frac{\beta l}{2}}{2} - \frac{q}{2\beta^2} \frac{\sinh \beta l - \sin \beta l}{\sinh \beta l + \sin \beta l}.$$

6. Find the deflection curve for the beam on an elastic foundation with the load applied at one end, Fig. 22.

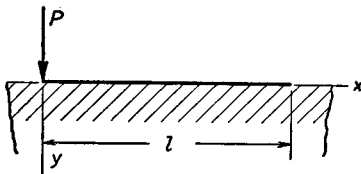


FIG. 22.

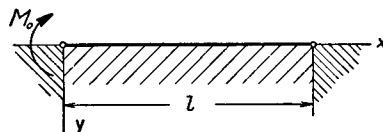


FIG. 23.

Answer.

$$y = \frac{2P\beta}{k(\sinh^2 \beta l - \sin^2 \beta l)} [\sinh \beta l \cos \beta x \cosh \beta(l-x) - \sin \beta l \cosh \beta x \cos \beta(l-x)].$$

7. A beam on an elastic foundation and with hinged ends is bent by a couple M_0 applied at the end, Fig. 23. Find the deflection curve of the beam.

Answer.

$$y = \frac{2M_0\beta^2}{k(\cosh^2 \beta l - \cos^2 \beta l)} [\cosh \beta l \sin \beta x \sinh \beta(l-x) - \cos \beta l \sinh \beta x \sin \beta(l-x)].$$

4. Combined Direct Compression and Lateral Load.—

Let us begin with the simple problem of a strut with hinged ends, loaded by a single force P , and centrally compressed by two equal and opposite forces S , Fig. 24. Assuming that the

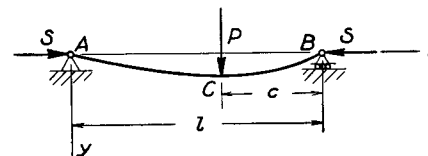


FIG. 24.

force P acts in one of the principal planes of the strut, we see that the bending proceeds in the same plane. The differential equations of the deflection curve for the two portions of the strut are:

$$EI \frac{d^2 y}{dx^2} = -Sy - \frac{Pc}{l} x, \quad (a)$$

$$EI \frac{d^2 y}{dx^2} = -Sy - \frac{P(l-c)}{l} (l-x). \quad (b)$$

Using the notation

$$\frac{S}{EI} = p^2, \quad (17)$$

we represent the solutions of the equations (a) and (b) in the following form:

$$y = C_1 \cos px + C_2 \sin px - \frac{Pc}{Sl} x, \quad (c)$$

$$y = C_3 \cos px + C_4 \sin px - \frac{P(l-c)}{Sl} (l-x). \quad (d)$$

Since the deflections vanish at the ends of the strut, we conclude that

$$\begin{aligned} C_1 &= 0, \\ C_3 &= -C_4 \tan pl. \end{aligned}$$

The remaining two constants of integration we find from the conditions of continuity at the point of application of the load P , which require that equations (c) and (d) give the same deflection and the same slope for $x = l - c$; we obtain:

$$\begin{aligned} C_2 \sin p(l - c) &= C_4 [\sin p(l - c) - \tan pl \cos p(l - c)], \\ C_2 p \cos p(l - c) &= C_4 p [\cos p(l - c) + \tan pl \sin p(l - c)] + \frac{P}{S}, \end{aligned}$$

from which

$$C_2 = \frac{P \sin pc}{Sp \sin pl}, \quad C_4 = -\frac{P \sin p(l - c)}{Sp \tan pl}.$$

Substituting in equation (c) we obtain for the left portion of the strut:

$$y = \frac{P \sin pc}{Sp \sin pl} \sin px - \frac{Pc}{Sl} x. \quad (18)$$

From this, by differentiation, we find:

$$\left. \begin{aligned} \frac{dy}{dx} &= \frac{P \sin pc}{S \sin pl} \cos px - \frac{Pc}{Sl}, \\ \frac{d^2y}{dx^2} &= -\frac{Pp \sin pc}{S \sin pl} \sin px. \end{aligned} \right\} \quad (19)$$

The corresponding expressions for the right portion of the strut are obtained by substituting $(l - x)$ instead of x , and $(l - c)$ instead of c , and by changing the sign of dy/dx in equations (18) and (19). These substitutions give:

$$y = \frac{P \sin p(l - c)}{Sp \sin pl} \sin p(l - x) - \frac{P(l - c)}{Sl} (l - x), \quad (20)$$

$$\frac{dy}{dx} = -\frac{P \sin p(l - c)}{S \sin pl} \cos p(l - x) + \frac{P(l - c)}{Sl}, \quad (21)$$

$$\frac{d^2y}{dx^2} = -\frac{Pp \sin p(l - c)}{S \sin pl} \sin p(l - x). \quad (22)$$

In a particular case, when the load P is applied at the middle, we have $c = l/2$, and, by introducing the notation

$$\frac{Sl^2}{4EI} = \frac{p^2 l^2}{4} = u^2, \quad (23)$$

we obtain from equation (18)

$$\begin{aligned} (y)_{\max} = (y)_{x=l/2} &= \frac{P}{2Sp} \left(\tan \frac{pl}{2} - \frac{pl}{2} \right) \\ &= \frac{Pl^3}{48EI} \cdot \frac{\tan u - u}{\frac{1}{3}u^3}. \end{aligned} \quad (24)$$

The first factor in expression (24) represents the deflection produced by the lateral load P acting alone. The second factor indicates in what proportion the deflection produced by P is magnified by the axial compressive force S . When S is small in comparison with Euler load ($S_e = EI\pi^2/l^2$), the quantity u is small and the second factor in equation (24) approaches unity, which indicates that under this condition the effect on the deflection of the axial compressive force is negligible. When S approaches the Euler value, the quantity u approaches the value $\pi/2$ (see eq. 23) and the second factor in expression (24) increases indefinitely, as should be expected from our previous discussion of critical load (see p. 244, Part I).

The maximum value of the bending moment is under the load and its value is obtained from the second of equations (19), and

$$M_{\max} = -EI \left(\frac{d^2y}{dx^2} \right)_{x=l/2} = EI \frac{Pp}{2S} \tan \frac{pl}{2} = \frac{Pl}{4} \cdot \frac{\tan u}{u}. \quad (25)$$

Again we see that the first factor in expression (25) represents

the bending moment produced by the load P acting alone, while the second factor is the *magnification factor* representing the action of the axial force S on the maximum bending moment.

Having solved the problem for one lateral load P , Fig. 24, we can readily obtain the solution for the case of a strut bent by a couple applied at the end, Fig. 25. It is only necessary



FIG. 25.

to assume that in our previous discussion the distance c is indefinitely diminishing approaching zero, while Pc remains a constant equal to M_0 . Substituting $Pc = M_0$ and $\sin kc = kc$ in equation (18), we obtain the deflection curve:

$$y = \frac{M_0}{S} \left(\frac{\sin px}{\sin pl} - \frac{x}{l} \right), \quad (26)$$

from which

$$\frac{dy}{dx} = \frac{M_0}{S} \left(\frac{p \cos px}{\sin pl} - \frac{1}{l} \right).$$

The slopes of the beam at the ends are

$$\begin{aligned} \left(\frac{dy}{dx} \right)_{x=0} &= \frac{M_0}{S} \left(\frac{p}{\sin pl} - \frac{1}{l} \right) \\ &= \frac{M_0 l}{6EI} \cdot 6 \left(\frac{1}{2u \sin 2u} - \frac{1}{(2u)^2} \right), \end{aligned} \quad (27)$$

$$\begin{aligned} \left(\frac{dy}{dx} \right)_{x=l} &= \frac{M_0}{S} \left(\frac{p}{\tan pl} - \frac{1}{l} \right) \\ &= \frac{M_0 l}{3EI} \cdot 3 \left(\frac{1}{2u \tan 2u} - \frac{1}{(2u)^2} \right). \end{aligned} \quad (28)$$

Again the first factors in expressions (27) and (28) taken with proper signs represent the slopes produced by the couple

M_0 acting alone (see p. 158, Part I), and the second factors represent the effect of the axial force S .

Considering equations (18) and (26), we see that the lateral force P and the couple M_0 occur in these expressions linearly, while the axial force S occurs in the same expressions in a more complicated manner, since p also contains S (see eq. 17). From this we conclude that if at point C , Fig. 24, two forces P and Q are applied, the deflection at any point may be obtained by superposing the deflections produced by the load Q and the axial forces S on the deflection produced by the load P and the same axial forces. A similar conclusion can be reached regarding couples applied to one end of the beam.

The conclusion regarding superposition can be readily generalized and extended to cover the case of several loads, Fig. 26. For each portion of the strut an equation similar to

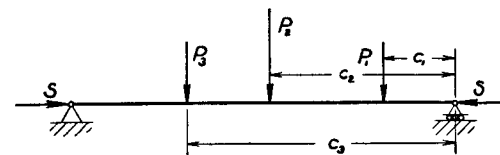


FIG. 26.

equations (a) and (b) can be written, and a solution similar to those in (c) and (d) can be obtained. The constants of integration can be found from the conditions of continuity at the points of load application and from the conditions at the ends of the strut. In this way it can be shown that the deflection at any point of the strut is a linear function of the loads P_1, P_2, \dots and that the deflection at any point can be obtained by superposing the deflections produced at that point by each of the lateral loads acting together with the axial force S . Let us consider a general case when n forces are acting and m of these forces are applied to the right of the cross section for which we are calculating the deflection. The expression for this deflection is obtained by using equation (18) for the forces P_1, P_2, \dots, P_m and equation (20) for the

forces $P_{m+1}, P_{m+2}, \dots, P_n$. In this way we obtain the required deflection:

$$y = \frac{\sin px}{Sp \sin pl} \sum_{i=1}^{i=m} P_i \sin pc_i - \frac{x}{Sl} \sum_{i=1}^{i=m} P_i c_i \\ + \frac{\sin p(l-x)}{Sp \sin pl} \sum_{i=m+1}^{i=n} P_i \sin p(l-c_i) \\ - \frac{l-x}{Sl} \sum_{i=m+1}^{i=n} P_i (l-c_i). \quad (29)$$

If, instead of concentrated forces, there is a uniform load of intensity q acting on the strut, each element qdc of this load, taken at a distance c from the right end, can be considered as a concentrated force. Substituting it, instead of P_i , in equation (29) and replacing summation signs by integration, we obtain the following expression for the deflection curve:

$$y = \frac{\sin px}{Sp \sin pl} \int_0^{l-x} q \sin pc \, dc - \frac{x}{Sl} \int_0^{l-x} q \, dc \\ + \frac{\sin p(l-x)}{Sp \sin pl} \int_{l-x}^l q \sin p(l-c) \, dc - \frac{l-x}{Sl} \int_{l-x}^l q(l-c) \, dc.$$

Integrating the above gives

$$y = \frac{q}{Sp^2} \left[\frac{\cos\left(\frac{pl}{2} - px\right)}{\cos \frac{pl}{2}} - 1 \right] - \frac{q}{2S} x(l-x) \quad (30)$$

and

$$y_{\max} = (y)_{x=l/2} = \frac{q}{Sp^2} \left(\frac{1}{\cos u} - 1 - \frac{u^2}{2} \right) \\ = \frac{5}{384} \frac{ql^2}{EI} \cdot \frac{1}{\cos u - 1 - \frac{u^2}{2}}. \quad (31)$$

By differentiating equation (30), we readily obtain the expressions for the slope and for the bending moment. The slope at the left end of the strut is

$$\left(\frac{dy}{dx} \right)_{x=0} = \frac{ql}{2S} \left[\frac{\tan \frac{pl}{2}}{\frac{pl}{2}} - 1 \right] = \frac{ql^3}{24EI} \frac{\tan u - u}{\frac{1}{3}u^3}. \quad (32)$$

The maximum bending moment is at the middle where

$$M_{\max} = -EI \left(\frac{d^2y}{dx^2} \right)_{x=l/2} \\ = EI \frac{q \left(1 - \cos \frac{pl}{2} \right)}{S \cos \frac{pl}{2}} = \frac{ql^2}{8} \cdot \frac{2(1 - \cos u)}{u^2 \cos u}. \quad (33)$$

By using solution (26) for the case of a couple together with solution (29) for lateral loads, and applying the method of superposition, various statically indeterminate cases of bending of struts can be readily solved. Taking as an example the case of a uniformly loaded strut built in at one end, Fig. 27,




FIG. 27.

we find the bending moment M_0 at the built-in end from the condition that this end does not rotate during bending. By using equations (28) and (32) this condition is found to be

$$-\frac{ql^3}{24EI} \frac{\tan u - u}{\frac{1}{3}u^3} + \frac{M_0 l}{3EI} \cdot \left(\frac{3}{2u \tan 2u} - \frac{3}{(2u)^2} \right) = 0$$

from which

$$M_0 = -\frac{ql^2}{8} \cdot \frac{4 \tan 2u (\tan u - u)}{u (\tan 2u - 2u)}. \quad (34)$$

In the case of a uniformly loaded strut with both ends built-in the moments M_0 at the ends are obtained from the

equation:

$$-\frac{ql^3}{24EI} \frac{\tan u - u}{\frac{1}{3}u^3} + \frac{M_0 l}{3EI} \left[\frac{3}{2u \tan 2u} - \frac{3}{(2u)^2} \right] - \frac{M_0 l}{6EI} \left(\frac{6}{2u \sin 2u} - \frac{6}{(2u)^2} \right) = 0,$$

from which

$$M_0 = -\frac{ql^2}{12} \cdot \frac{\tan u - u}{\frac{1}{3}u^2 \tan u}. \quad (35)$$

It is seen from expressions (34) and (35) that the values of the statically indeterminate moments in the case of struts are obtained by multiplying the corresponding moments calculated from the beam formulas by certain magnification factors. All necessary calculations can be greatly simplified by using the prepared numerical tables for determining magnification factors.⁹

When the maximum bending moment for a strut is found, the numerical stress maximum is obtained by combining the direct stress with the maximum bending stress, which gives

$$|\sigma|_{\max} = \frac{S}{A} + \frac{M_{\max}}{Z} \quad (e)$$

where A and Z are, respectively, the cross-sectional area and the section modulus for the strut. Taking, as an example, the case of a uniformly loaded strut with hinged ends, we obtain from equation (33):

$$|\sigma|_{\max} = \frac{S}{A} + \frac{ql^2}{8Z} \cdot \frac{2(1 - \cos u)}{u^2 \cos u}. \quad (f)$$

In selecting the proper cross-sectional dimensions of the strut it is necessary to consider that the right side of the equation (f) is not linear in S since the quantity u also depends on S , as may be seen from expression (23). Owing to this fact the maximum stress increases at a greater rate than

⁹ Various particular cases of laterally loaded struts have been discussed by A. P. Van der Fleet, Bull. Soc. of Engineers of Ways of Communication, 1900-1903, St. Petersburg. Numerous tables of magnification factors are given in that work.

the force S . Thus the usual method for determining the proper dimensions by taking¹⁰

$$|\sigma_{\max}| = \frac{\sigma_{yp}}{n}, \quad (g)$$

where n is the factor of safety, fails in this case.

If the strut must be designed so that it will begin to yield when the forces S and q increase n times, the cross section must be selected so that $|\sigma|_{\max}$ will be somewhat smaller than σ_{yp}/n in order to satisfy the equation:

$$\frac{\sigma_{yp}}{n} = \frac{S}{A} + \frac{ql^2}{8Z} \cdot \frac{2(1 - \cos u_1)}{u_1^2 \cos u_1}, \quad (h)$$

in which $u_1 = nu$.

It is apparent that if we proceed in this manner we satisfy the requirement regarding the beginning of yielding; by multiplying both sides of the equation (h) by n we find

$$\sigma_{yp} = \frac{nS}{A} + \frac{nql^2}{8Z} \cdot \frac{2(1 - \cos u_1)}{u_1^2 \cos u_1}, \quad (i)$$

which indicates that the maximum stress reaches the yield point stress when S and q have been increased n times. Similar procedure in the design of struts can be applied in other cases of loading. We can conclude from the above discussion that to ascertain a factor of safety n in the design of struts,¹¹ we must use instead of equation (g) a modified equation similar to equation (h), in which the parameter u is replaced by $u_1 = nu$.

Problems

1. Find the slope at the left end of a strut with hinged ends which is loaded at the middle by the load P .

¹⁰ It is assumed that material of the strut has a pronounced yield point.

¹¹ This method of design of struts was developed by K. S. Zavriev, see Memoirs of the Institute of Engineers of Ways of Communication, 1913, S. Petersburg.

Answer.

$$\left(\frac{dy}{dx}\right)_{x=0} = \frac{P}{2S} \frac{1 - \cos u}{\cos u} = \frac{Pl^2}{16EI} \frac{1 - \cos u}{\frac{1}{2}u^2 \cos u}.$$

2. Find the slopes at the ends of a strut carrying a triangular load, Fig. 28.

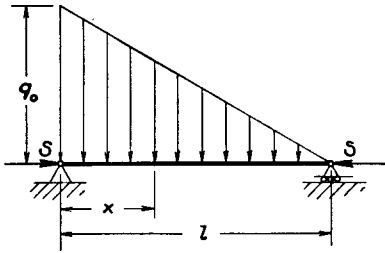


FIG. 28.

Solution. Substituting in equation (29) $q_0 c dc/l$, instead of P , and replacing summation by integration we find:

$$y = \frac{\sin px}{Sp \sin pl} \int_0^{l-x} \frac{q_0 c}{l} \sin p c dc - \frac{x}{Sl} \int_0^{l-x} \frac{q_0 c^2}{l} dc + \frac{\sin p(l-x)}{Sp \sin pl} \int_{l-x}^l \frac{q_0 c}{l} \sin p(l-c) dc - \frac{l-x}{Sl} \int_{l-x}^l \frac{q_0 c}{l} (l-c) dc.$$

Differentiating this with respect to x , we find that

$$\left(\frac{dy}{dx}\right)_{x=0} = \frac{2q_0 l}{6p^2 EI} (\beta - 1)$$

and

$$\left(\frac{dy}{dx}\right)_{x=l} = -\frac{q_0 l}{6p^2 EI} (\alpha - 1),$$

where α and β are functions given by expressions (36) (see p. 36).

3. Find the slopes at the ends of a strut symmetrically loaded by two loads P , as shown in Fig. 29.

Answer.

$$\left(\frac{dy}{dx}\right)_{x=0} = -\left(\frac{dy}{dx}\right)_{x=l} = \frac{P}{S} \left(\frac{\cos pb}{\cos \frac{pl}{2}} - 1 \right).$$

4. A strut with built-in ends is loaded as shown in Fig. 29. Find the bending moments, M_0 , at the ends.

Solution. The moments M_0 are found from the conditions that the ends of the strut do not rotate. By using the answer of the

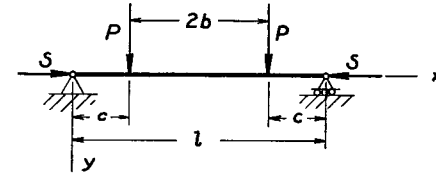


FIG. 29.

preceding problem and also equations (27) and (28), the following equation for calculating M_0 is obtained:

$$\frac{M_0 l}{6EI} \alpha + \frac{M_0 l}{3EI} \beta + \frac{P}{S} \left(\frac{\cos pb}{\cos \frac{pl}{2}} - 1 \right) = 0,$$

from which

$$M_0 = -\frac{2PEI}{Sl} \frac{u}{\tan u} \left(\frac{\cos pb}{\cos u} - 1 \right).$$

If $b = 0$, we obtain the case of a load $2P$ concentrated at the middle.

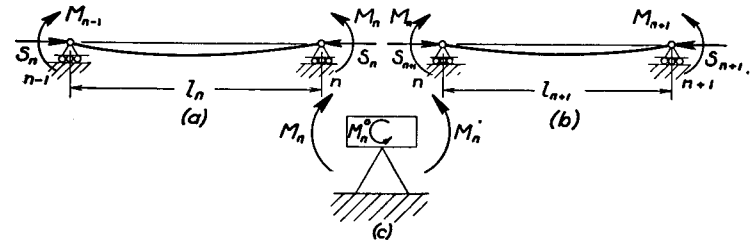


FIG. 30.

5. Continuous Struts.—In the case of a continuous strut we proceed as in the case of continuous beams (see p. 201, Part I) and consider two adjacent spans, Fig. 30.¹² Using equations (23), (27), and (28) and introducing notations for the n th span:

$$u_n = \frac{S_n l_n^2}{4EI_n},$$

¹² The theory is due to H. Zimmermann, Sitzungsber., Akad. Wiss., Berlin, 1907 and 1909.

$$\alpha_n = 6 \left[\frac{1}{2u_n \sin 2u_n} - \frac{1}{(2u_n)^2} \right], \quad (36)$$

$$\beta_n = 3 \left[\frac{1}{(2u_n)^2} - \frac{1}{2u_n \tan 2u_n} \right],$$

$$\gamma_n = \frac{\tan u_n - u_n}{\frac{1}{3}u_n^3}. \quad (37)$$

We conclude that the slope at the right end of the n th span, Fig. 30a, produced by the end moments M_{n-1} and M_n , is

$$-\beta_n \frac{M_n l_n}{3EI_n} - \alpha_n \frac{M_{n-1} l_n}{6EI_n}. \quad (a)$$

The slope produced at the left end of the $n+1$ span by the moments M_n and M_{n+1} is

$$\alpha_{n+1} \frac{M_{n+1} l_{n+1}}{6EI_{n+1}} + \beta_{n+1} \frac{M_n l_{n+1}}{3EI_{n+1}}. \quad (b)$$

If there is no lateral load acting on the two spans under consideration, the expressions (a) and (b) must be equal, and we obtain:

$$\frac{\alpha_n l_n}{I_n} M_{n-1} + 2 \left(\beta_n \frac{l_n}{I_n} + \beta_{n+1} \frac{l_{n+1}}{I_{n+1}} \right) M_n + \alpha_{n+1} \frac{l_{n+1}}{I_{n+1}} M_{n+1} = 0. \quad (38)$$

This is the three moment equation for a continuous strut if there is no lateral load on the two spans under consideration.

If there is lateral load acting, the corresponding slopes produced by this load must be added to expressions (a) and (b). Taking, for example, the case of uniform load q_n and q_{n+1} acting on the spans n and $n+1$ in a downward direction, we obtain the corresponding slopes from equation (32) and, instead of expressions (a) and (b), we obtain:

$$-\beta_n \frac{M_n l_n}{3EI_n} - \alpha_n \frac{M_{n-1} l_n}{6EI_n} - \gamma_n \frac{q_n l_n^3}{24EI_n}, \quad (c)$$

$$\alpha_{n+1} \frac{M_{n+1} l_{n+1}}{6EI_{n+1}} + \beta_{n+1} \frac{M_n l_{n+1}}{3EI_{n+1}} + \gamma_{n+1} \frac{q_{n+1} l_{n+1}^3}{24EI_{n+1}}. \quad (d)$$

Equating these two expressions we obtain:

$$\begin{aligned} \frac{\alpha_n l_n}{I_n} M_{n-1} + 2 \left(\beta_n \frac{l_n}{I_n} + \beta_{n+1} \frac{l_{n+1}}{I_{n+1}} \right) M_n + \alpha_{n+1} \frac{l_{n+1}}{I_{n+1}} M_{n+1} \\ = -\gamma_n \frac{q_n l_n^3}{4I_n} - \gamma_{n+1} \frac{q_{n+1} l_{n+1}^3}{4I_{n+1}}. \end{aligned} \quad (39)$$

This is the three moment equation for a strut with a uniform load in each span. It is similar to the three moment equation for a continuous beam and coincides with it when $S = 0$ and all functions α, β, γ become equal to unity.

For any other kind of lateral load we have to change only the right side of the equation (39), which depends on the rotation of the adjacent ends of the two spans produced by lateral loading.

Taking, for example, the case of a trapezoidal load shown in Fig. 31 and dividing the load into two parts, uniform loads and triangular loads, we use for the uniform loads the terms which we already have on the right side of equation (39).

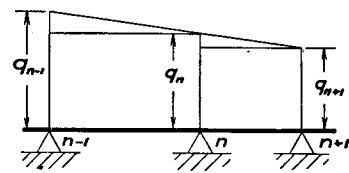


FIG. 31.

To these terms we must add the terms corresponding to the triangular loads. Using the expressions for the slopes in problem 2 of the preceding article, we find that the two terms which we have to add to the right side of equation (39) in the case of the load shown in Fig. 31 are:

$$-\frac{(q_{n-1} - q_n) l_n}{p^2 I_n} (\alpha_n - 1) - \frac{2(q_n - q_{n+1}) l_{n+1}}{p^2 I_{n+1}} (\beta_{n+1} - 1), \quad (e)$$

in which α_n and β_{n+1} are defined by expressions (36). If concentrated forces are acting on the spans under consideration the required expressions for the rotations are readily obtainable from the general expression for the deflection curve (29).

The calculation of moments from the three moment equations (39) can be considerably simplified by using numerical tables of functions α, β and γ .¹³

In the derivation of equation (39) it was assumed that the moment M_n at the n th support had the same value for both adjacent spans. There are cases, however, in which an external moment M_n^0 is applied at the support as shown in Fig. 30c; in such cases we must distinguish between the value of the bending moment to the left and to the right of the support. The relation between these two moments is given by the equation of statics:¹⁴

$$M_n - M_n^0 - M_n' = 0,$$

¹³ Such tables can be found in the book by A. S. Niles and J. S. Newell, "Airplane Structures," Vol. 2, 1938, see also writer's book, "Theory of Elastic Stability," 1936.

¹⁴ The direction of M_n^0 indicated in the Fig. 30c is taken as positive direction for an external moment.

from which

$$M_n' = M_n - M_n^0. \quad (f)$$

Equation (39) in such a case is replaced by the following equation:

$$\begin{aligned} \frac{\alpha_n l_n}{I_n} M_{n-1} + 2\beta_n \frac{l_n}{I_n} M_n + 2\beta_{n+1} \frac{l_{n+1}}{I_{n+1}} M_n' + \alpha_{n+1} \frac{l_{n+1}}{I_{n+1}} M_{n+1} \\ = -\gamma_n \frac{q_n l_n^3}{4I_n} - \gamma_{n+1} \frac{q_{n+1} l_{n+1}^3}{4I_{n+1}}. \quad (40) \end{aligned}$$

If the supports of a continuous strut are not on a straight line, the additional terms, depending on the differences in the levels of the three consecutive supports, must be put on the right side of equation (39) or (40). These terms are not affected by the presence of the axial forces, and are the same as in the case of a beam (see p. 204, Part I).

Problems

1. Write the right side of the three moment equation if there is a concentrated force P in the span $n + 1$ at a distance c_{n+1} from the support $n + 1$.

Answer.

$$-\frac{6PE}{S_{n+1}} \left(\frac{\sin p_{n+1} c_{n+1}}{\sin p_{n+1} l_{n+1}} - \frac{c_{n+1}}{l_{n+1}} \right) = -\frac{6P}{p^2 l_{n+1} I_{n+1}} \left(\frac{\sin p_{n+1} c_{n+1}}{\sin p_{n+1} l_{n+1}} - \frac{c_{n+1}}{l_{n+1}} \right).$$

2. Write the right side of the three moment equation if the n th span is loaded as shown in Fig. 29, p. 35, and if there is no load on span $n + 1$.

Answer. Using the solution of problem 3, p. 34, we obtain the following expression:

$$-\frac{6PE}{S_n} \left(\frac{\cos p_n b_n}{\cos \frac{p_n l_n}{2}} - 1 \right) = -\frac{6P}{p_n^2 I_n} \left(\frac{\cos p_n b_n}{\cos \frac{p_n l_n}{2}} - 1 \right).$$

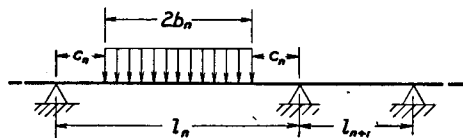


FIG. 32.

3. Find the right side of the three moment equation if the load is as shown in Fig. 32.

Answer.

$$-\frac{6q_n}{p_n^2 I_n} \left(\frac{\cos p_n b_n}{p_n \cos \frac{p_n l_n}{2}} - b_n \right).$$

6. Tie-Rod with Lateral Loading.—If a tie-rod is submitted to the action of tensile forces S and a lateral load P , Fig. 33, we can write the differential equation of the deflection

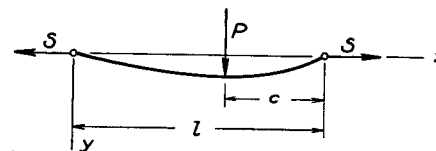


FIG. 33.

curve for each portion of the rod in exactly the same manner as we did for a strut, Art. 4. It is only necessary to change the sign of S . In such a case instead of quantities p^2 and u^2 defined by expressions (17) and (23), respectively, we shall have $-p^2$ and $-u^2$, and instead of p and u we shall have $p\sqrt{-1} = pi$ and $u\sqrt{-1} = ui$. Substituting $-S$, pi , and ui in the place of S , p and u in the formulas obtained for the strut in Fig. 24, we obtain necessary formulas for the tie-rod in Fig. 33. In making this substitution we use the known relations:

$$\sin ui = i \sinh u, \quad \cos ui = \cosh u, \quad \tan ui = i \tanh u.$$

In this way we obtain for the left portion of the tie-rod in Fig. 33, from equations (18) and (19):

$$y = -\frac{P \sinh pc}{S p \sinh pl} \sinh px + \frac{Pc}{Sl} x, \quad (41)$$

$$\left. \begin{aligned} \frac{dy}{dx} &= -\frac{P \sinh pc}{S \sinh pl} \cosh px + \frac{Pc}{Sl}, \\ \frac{d^2 y}{dx^2} &= -\frac{P p \sinh pc}{S \sinh pl} \sinh px. \end{aligned} \right\} \quad (42)$$

Similar formulas can also be obtained for the right-hand portion of the tie-rod by using equations (20)–(22). Having the deflection curve for the case of one load P acting on the tie-rod, we can readily obtain the deflection curve for any other kind of loading by using the method of superposition.

Considering, for example, a uniformly loaded tie-rod and using equations (30) and (31) for a strut, we obtain:

$$y = \frac{q}{Sp^2} \left[\frac{\cosh \left(\frac{pl}{2} - px \right)}{\cosh \frac{pl}{2}} - 1 \right] + \frac{q}{2S} x(l - x),$$

and the maximum deflection is

$$y_{\max} = (y)_{x=l/2} = \frac{5}{384} \frac{ql^4}{EI} \cdot \frac{\frac{1}{\cosh u} - 1 + \frac{u^2}{2}}{(5/24)u^4} = \frac{5}{384} \frac{ql^4}{EI} \cdot \varphi_1(u), \quad (43)$$

where

$$\varphi_1(u) = \frac{\frac{1}{\cosh u} - 1 + \frac{u^2}{2}}{(5/24)u^4}.$$

The slope of the deflection curve at the left-hand end, from equation (32), is

$$\left(\frac{dy}{dx} \right)_{x=0} = \frac{ql^3}{24EI} \frac{u - \tanh u}{\frac{1}{3}u^3}. \quad (44)$$

The maximum bending moment, which in this case is at the middle of the span, is obtained from expression (33):

$$M_{\max} = \frac{ql^2}{8} \cdot \frac{2(\cosh u - 1)}{u^2 \cosh u} = \frac{ql^2}{8} \psi_1(u) \quad (45)$$

where

$$\psi_1(u) = \frac{2(\cosh u - 1)}{u^2 \cosh u}.$$

The deflection and the maximum bending moment are obtained by multiplying the corresponding expressions for a

simple beam by factors $\varphi_1(u)$ and $\psi_1(u)$, depending on the magnitude of the axial tensile force S . The numerical values of these factors are given in Table 3.¹⁵

In the case of bending of a tie-rod by a couple applied at the right-hand end, the deflection curve is obtained from equation (26), from which

$$y = \frac{M_0}{S} \left(\frac{x}{l} - \frac{\sinh px}{\sinh pl} \right). \quad (46)$$

If there are two equal and opposite couples applied at the ends of a tie-rod, the deflection curve is obtained by the method of superposition:

$$y = \frac{M_0}{S} \left(\frac{x}{l} - \frac{\sinh px}{\sinh pl} \right) + \frac{M_0}{S} \left[\frac{l-x}{l} - \frac{\sinh p(l-x)}{\sinh pl} \right] = \frac{M_0}{S} \left[1 - \frac{\cosh p \left(\frac{l}{2} - x \right)}{\cosh \frac{pl}{2}} \right]. \quad (47)$$

From this equation we find the deflection at the middle and the slope at the left-hand end of the tie-rod:

$$\left. \begin{aligned} (y)_{x=l/2} &= \frac{M_0}{S} \cdot \frac{\cosh u - 1}{\cosh u} = \frac{M_0 l^2}{8EI} \cdot \frac{\cosh u - 1}{\frac{1}{2}u^2 \cosh u}, \\ \left(\frac{dy}{dx} \right)_{x=0} &= \frac{M_0}{S} p \tanh u = \frac{M_0 l}{2EI} \cdot \frac{\tanh u}{u}. \end{aligned} \right\} \quad (48)$$

The bending moment at the middle is

$$(M)_{x=l/2} = -EI \left(\frac{d^2 y}{dx^2} \right)_{x=l/2} = M_0 \cdot \frac{1}{\cosh u}. \quad (49)$$

Having the deflection curves for a tie-rod with hinged ends bent by transverse loading and by couples at the ends, we can readily obtain various statically indeterminate cases of

¹⁵ Various cases of bending of tie-rods are investigated in the papers by A. P. Van der Fleet previously mentioned (see p. 32) and also in the book by I. G. Boobnov, "Theory of Structure of Ships," vol. 2, 1914, S. Petersburg. From the later book the Table 3 is taken.

bending of tie-rods by the method of superposition. Taking, for example, the case of a uniformly loaded tie-rod with built-in ends and using expressions (44) and (48), we obtain the bending moments M_0 at the ends from the equation:

$$\frac{ql^3}{24EI} \cdot \frac{u - \tanh u}{\frac{1}{3}u^3} + \frac{M_0 l}{2EI} \cdot \frac{\tanh u}{u} = 0,$$

from which

$$M_0 = -\frac{ql^2}{12} \cdot \frac{u - \tanh u}{\frac{1}{3}u^2 \tanh u} = -\frac{ql^2}{12} \psi_2(u), \quad (50)$$

where

$$\psi_2(u) = \frac{u - \tanh u}{\frac{1}{3}u^2 \tanh u}.$$

The numerical values of the function $\psi_2(u)$ are given in Table 3. By using expressions (45) and (49) the bending moment at the middle, M_1 , is obtained:

$$\begin{aligned} M_1 &= \frac{ql^2}{8} \cdot \frac{2(\cosh u - 1)}{u^2 \cosh u} - \frac{ql^2}{12} \cdot \frac{u - \tanh u}{\frac{1}{3}u^2 \sinh u} \\ &= \frac{ql^2}{24} \cdot \frac{6(\sinh u - u)}{u^2 \sinh u} = \frac{ql^2}{24} \psi_3(u). \quad (51) \end{aligned}$$

The deflection at the middle is obtained by using equations (43) and (48) which give

$$\begin{aligned} y_{\max} = (y)_{x=l/2} &= \frac{5}{384} \frac{ql^4}{EI} \cdot \frac{1}{\frac{(5/24)u^4}{\cosh u - 1 + \frac{u^2}{2}}} \\ &- \frac{ql^4}{16EI} \frac{(u - \tanh u)(\cosh u - 1)}{u^4 \sinh u} = \frac{ql^4}{384EI} \cdot \varphi_2(u) \quad (52) \end{aligned}$$

where

$$\varphi_2(u) = \frac{24}{u^4} \left(\frac{u^2}{2} - \frac{u \cosh u - u}{\sinh u} \right).$$

TABLE 3. DEFLECTIONS AND MAXIMUM BENDING MOMENT CONSTANTS IN LATERALLY LOADED TIE-RODS

u	φ_1	φ_2	ψ_1	ψ_2	ψ_3	u	φ_1	φ_2	ψ_1	ψ_2	ψ_3
0	1.000	1.000	1.000	1.000	1.000	6.5	0.054	0.197	0.047	0.391	0.139
0.5	0.908	0.976	0.905	0.984	0.972	7.0	0.047	0.175	0.041	0.367	0.121
1.0	0.711	0.909	0.704	0.939	0.894	7.5	0.041	0.156	0.036	0.347	0.106
1.5	0.523	0.817	0.511	0.876	0.788	8.0	0.036	0.141	0.031	0.328	0.093
2.0	0.380	0.715	0.367	0.806	0.673	8.5	0.032	0.127	0.028	0.311	0.083
2.5	0.281	0.617	0.268	0.736	0.563	9.0	0.029	0.115	0.025	0.296	0.074
3.0	0.213	0.529	0.200	0.672	0.467	9.5	0.026	0.105	0.022	0.283	0.066
3.5	0.166	0.453	0.153	0.614	0.386	10.0	0.024	0.096	0.020	0.270	0.060
4.0	0.132	0.388	0.120	0.563	0.320	10.5	0.021	0.088	0.018	0.259	0.054
4.5	0.107	0.335	0.097	0.519	0.267	11.0	0.020	0.081	0.017	0.248	0.050
5.0	0.088	0.291	0.079	0.480	0.224	11.5	0.018	0.075	0.015	0.238	0.045
5.5	0.074	0.254	0.066	0.446	0.189	12.0	0.016	0.069	0.014	0.229	0.042
6.0	0.063	0.223	0.055	0.417	0.162						

All these functions are equal to unity at $u = 0$, i.e., when only a transverse load is acting. As the longitudinal tensile force increases, each function decreases, i.e., the longitudinal tensile forces diminish the deflections and the bending moments in laterally loaded tie-rods. Some applications of the above table will be given later in discussing the bending of thin plates (see p. 122).

Problems

1. Find the maximum deflection and the maximum bending moment for a tie-rod loaded at the middle.

Answer.

$$(y)_{\max} = \frac{Pl^3}{48EI} \cdot \frac{u - \tanh u}{\frac{1}{3}u^3},$$

$$M_{\max} = \frac{Pl}{4} \cdot \frac{\tanh u}{u}.$$

2. Find the bending moments M_0 at the ends of a tie-rod with built-in ends symmetrically loaded by two forces P as shown in Fig. 29.

Solution. The bending moments at the ends are obtained from the equation:

$$\frac{P}{S} \left(1 - \frac{\cosh \frac{pb}{2}}{\cosh \frac{pl}{2}} \right) + \frac{M_0 l}{2EI} \cdot \frac{\tanh u}{u} = 0.$$

3. Find the bending moments at the ends of a tie-rod with built-in ends loaded by a triangular load as shown in Fig. 28.

Hint. Use solution of problem 2 on p. 34 together with equation (46).

7. Representation of the Deflection Curve by a Trigonometrical Series.—In discussing the deflection of beams, it is sometimes very useful to represent the deflection curve in the form of a trigonometrical series.¹⁶ This has the advantage that a single mathematical expression for the curve holds for the entire length of the span. Taking the case of the beam with supported ends¹⁷ shown

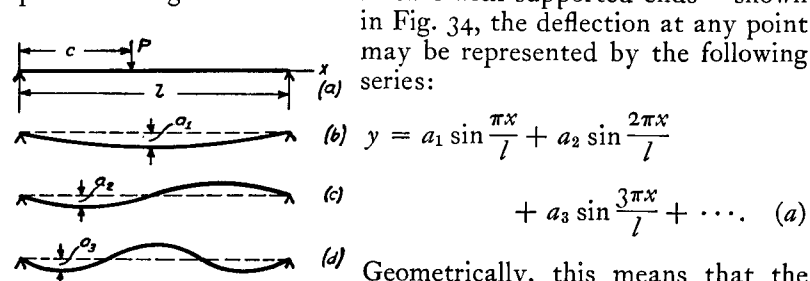


FIG. 34.

in Fig. 34, the deflection at any point may be represented by the following series:

(a) $y = a_1 \sin \frac{\pi x}{l} + a_2 \sin \frac{2\pi x}{l} + a_3 \sin \frac{3\pi x}{l} + \dots$ (a)

Geometrically, this means that the deflection curve may be obtained by superposing simple sinusoidal curves such as shown in Fig. 34 (b), (c), (d), etc. The first term in series (a) represents the first curve, the second term, the second curve, etc. The coefficients a_1, a_2, a_3 of the series give the maximum ordinates of these sine curves and the numbers 1, 2, 3, ... the number of waves. By properly determining the coefficients a_1, a_2, \dots , the series (a) can be made to represent any deflection curve¹⁸ with a degree of accuracy which depends upon the number of terms taken. We will make this determination of the coefficients by a consideration of the strain energy of the beam (eq. 188, p. 297, Part I) as given by the equation

$$U = \frac{EI}{2} \int_0^l \left(\frac{d^2 y}{dx^2} \right)^2 dx. \quad (b)$$

The second derivative of y , from (a), is

$$\frac{d^2 y}{dx^2} = -a_1 \frac{\pi^2}{l^2} \sin \frac{\pi x}{l} - a_2 2^2 \frac{\pi^2}{l^2} \sin \frac{2\pi x}{l} - a_3 3^2 \frac{\pi^2}{l^2} \sin \frac{3\pi x}{l} \dots$$

Equation (b) involves the square of this derivative, which contains

¹⁶ See the author's paper, "Application of General Coordinates in Solution of Problems on Bending of Bars and Plates," Bulletin of the Polytechnical Institute in Kiev, 1909 (Russian); see also H. M. Westergaard, Proc. Amer. Soc. Civ. Eng., Vol. 47, pp. 455-533.

¹⁷ For other cases analysis becomes too complicated for most practical purposes.

¹⁸ See Byerly, "Fourier Series and Spherical Harmonics," §§ 19-24. See also Osgood, "Advanced Calculus," 1928, p. 391.

terms of two kinds:

$$a_n^2 \frac{n^4 \pi^4}{l^4} \sin^2 \frac{n\pi x}{l} \quad \text{and} \quad 2a_n a_m \frac{n^2 m^2 \pi^4}{l^4} \sin \frac{n\pi x}{l} \sin \frac{m\pi x}{l}.$$

By direct integration it may be shown that

$$\int_0^l \sin^2 \frac{n\pi x}{l} dx = \frac{l}{2} \quad \text{and} \quad \int_0^l \sin \frac{n\pi x}{l} \sin \frac{m\pi x}{l} dx = 0,$$

where

$$n \neq m.$$

Hence, in integral (b), all terms containing products of coefficients such as $a_n a_m$ disappear and only the terms with squares of those coefficients remain. Then

$$U = \frac{EI\pi^4}{4l^3} (1 \cdot a_1^2 + 2^4 \cdot a_2^2 + 3^4 \cdot a_3^2 + \dots) = \frac{EI\pi^4}{4l^3} \sum_{n=1}^{\infty} n^4 a_n^2. \quad (53)$$

In a previous discussion (see eq. a, p. 339, Part I) it was shown that if an elastic system undergoes a small displacement from its position of equilibrium, the corresponding increase in the potential energy of the system is equal to the work done by the external forces during such a displacement. When the deflection curve is given by series (a), small displacements can be obtained by small variations of the coefficients a_1, a_2, a_3, \dots . If any coefficient a_n is given an increase da_n , we have the term $(a_n + da_n) \sin(n\pi x/l)$ in series (a) instead of the term $a_n \sin(n\pi x/l)$, the other members remaining unchanged. This increase da_n in the coefficient a_n represents an additional small deflection given by the sine curve $da_n \sin(n\pi x/l)$, superposed upon the original deflection curve. During this additional deflection the external loads do work. In the case of a single load P , applied at a distance c from the left support, the point of application of the load undergoes a vertical displacement $da_n \sin(n\pi c/l)$ and the load does the work:

$$da_n \left(\sin \frac{n\pi c}{l} \right) P. \quad (c)$$

Let us consider now the increase in the strain energy, given by eq. (53), due to the increase da_n in a_n ,

$$dU = \frac{\partial U}{\partial a_n} da_n = \frac{EI\pi^4}{2l^3} n^4 a_n da_n. \quad (d)$$

Equating this to the work done (c),

$$\frac{EI\pi^4}{2l^3} n^4 a_n = P \sin \frac{n\pi c}{l},$$

from which

$$a_n = \frac{2Pl^3}{EI\pi^4} \cdot \frac{1}{n^4} \sin \frac{n\pi c}{l}.$$

From this we can determine each of the coefficients in the series (a) and the deflection curve becomes

$$\begin{aligned} y &= \frac{2Pl^3}{EI\pi^4} \left(\sin \frac{\pi c}{l} \sin \frac{\pi x}{l} + \frac{1}{2^4} \sin \frac{2\pi c}{l} \sin \frac{2\pi x}{l} + \dots \right) \\ &= \frac{2Pl^3}{EI\pi^4} \sum_{n=1}^{\infty} \frac{1}{n^4} \sin \frac{n\pi c}{l} \sin \frac{n\pi x}{l}. \end{aligned} \quad (54)$$

From this the deflection may be calculated for any value of x . For example, the deflection at the middle when the load is at the middle, $c = x = l/2$, will be

$$\delta = (y)_{x=l/2} = \frac{2Pl^3}{EI\pi^4} \left(1 + \frac{1}{3^4} + \frac{1}{5^4} + \dots \right).$$

By taking only the first term of this series, we obtain

$$\delta = \frac{2Pl^3}{EI\pi^4} = \frac{Pl^3}{48.7EI}.$$

Comparison with eq. (90), p. 143, Part I, shows that we obtained 48.7 where the exact value was 48, so that the error made in using only the first term instead of the whole series is about $1\frac{1}{2}$ per cent. Such accuracy is sufficient in many practical cases and we shall have other examples where a satisfactory accuracy is obtained by using only one term in the series (a).

From the solution for a single load (eq. 54), more complicated problems can be studied by using the method of superposition. For example, take a beam carrying a uniformly distributed load, of intensity q . Each elemental load qdc at distance c from the left support produces a deflection obtained from eq. (54), with $P = qdc$,

$$dy = \frac{2qdc l^3}{EI\pi^4} \sum_{n=1}^{\infty} \frac{\sin \frac{n\pi c}{l} \sin \frac{n\pi x}{l}}{n^4}.$$

Integrating this with respect to c between the limits $c = 0$ and

$c = l$ gives the deflection produced by the entire load

$$y = \frac{4ql^4}{EI\pi^5} \sum_{n=1,3,5,\dots}^{\infty} \frac{1}{n^5} \sin \frac{n\pi x}{l}. \quad (55)$$

Taking the first term only, the deflection at the middle of a uniformly loaded beam is

$$\delta = \frac{4ql^4}{EI\pi^5} = \frac{ql^4}{76.5EI}.$$

Comparing this with the exact solution

$$\delta = \frac{5}{384} \frac{ql^4}{EI} = \frac{ql^4}{76.8EI},$$

we find that the error in taking only the first term was less than $\frac{1}{2}$ per cent in this case.

The trigonometric series (a) is especially useful when the beam is submitted to the action of a longitudinal compressive or tensile force in addition to lateral loading. In the problem shown in Fig. 35, the hinge B approaches the fixed hinge A during deflection

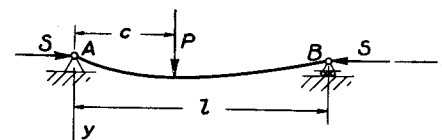


FIG. 35.

by an amount equal to the difference between the length of the deflection curve and the length of the cord AB .¹⁹ For a flat curve this difference is (see p. 177, Part I)

$$\lambda = \frac{1}{2} \int_0^l \left(\frac{dy}{dx} \right)^2 dx. \quad (56)$$

With y as given by series (a), the square of its derivative contains terms of the two forms:

$$a_n^2 \frac{n^2 \pi^2}{l^2} \cos^2 \frac{n\pi x}{l} \quad \text{and} \quad 2a_n a_m \frac{n m \pi^2}{l^2} \cos \frac{n\pi x}{l} \cos \frac{m\pi x}{l}.$$

By integration it can be shown that

$$\int_0^l \cos^2 \frac{n\pi x}{l} dx = \frac{l}{2}; \quad \int_0^l \cos \frac{n\pi x}{l} \cos \frac{m\pi x}{l} dx = 0, \quad n \neq m.$$

¹⁹ Longitudinal contraction due to the axial force can be considered as constant for small deflections.

The equation for λ then becomes

$$\lambda = \frac{\pi^2}{4l} \sum_{n=1}^{\infty} n^2 a_n^2. \quad (57)$$

To calculate the coefficients a_1, a_2, a_3, \dots in the series (a) we consider the work done by the external forces during a small displacement $da_n \sin(n\pi x/l)$ from the position of equilibrium. In the case represented in Fig. 35 both the force P and the longitudinal force S do work during such a displacement. The displacement λ , due to the increase da_n in the coefficient a_n , increases by an amount

$$d\lambda = \frac{\partial \lambda}{\partial a_n} da_n = \frac{\pi^2}{2l} n^2 a_n da_n.$$

Then the work done by the force S is

$$S \frac{\pi^2}{2l} n^2 a_n da_n.$$

This is added to the work (c) done by the lateral force and the sum is equated to the increase in the potential energy (eq. d). This gives us the following equation for determining any coefficient a_n :

$$P \sin \frac{n\pi c}{l} da_n + S \frac{\pi^2}{2l} n^2 a_n da_n = \frac{EI\pi^4}{2l^3} n^4 a_n da_n,$$

from which

$$a_n = \frac{2Pl^3}{EI\pi^4} \frac{1}{n^2 \left(n^2 - \frac{Sl^2}{EI\pi^2} \right)} \sin \frac{n\pi c}{l}.$$

If the ratio of the longitudinal force to the critical value of this load (see p. 27) be denoted by $\alpha = Sl^2/EI\pi^2$, we obtain

$$a_n = \frac{2Pl^3}{EI\pi^4} \frac{1}{n^2(n^2 - \alpha)} \sin \frac{n\pi c}{l}.$$

Substituting in the series (a), the deflection curve is

$$\begin{aligned} y &= \frac{2Pl^3}{EI\pi^4} \left(\frac{1}{1-\alpha} \sin \frac{\pi c}{l} \sin \frac{\pi x}{l} + \frac{1}{2^2(2^2-\alpha)} \sin \frac{2\pi c}{l} \sin \frac{2\pi x}{l} + \dots \right) \\ &= \frac{2Pl^3}{EI\pi^4} \sum_{n=1}^{\infty} \frac{1}{n^2(n^2-\alpha)} \sin \frac{n\pi c}{l} \sin \frac{n\pi x}{l}. \end{aligned} \quad (58)$$

Comparing this with eq. (54) for the case of a lateral force P only, we see that the deflection of the bar increases due to the action of the longitudinal compressive force S . We have seen that the first

term in series (a) represents a good approximation for the deflection; hence the increase of the deflection produced by the longitudinal force will be approximately in the ratio $1 : (1 - \alpha)$.

This conclusion holds also if there are several transverse loads of the same direction or if there is a continuous load acting on the beam. Denoting by δ_0 the maximum deflection produced by lateral load acting alone we can assume with satisfactory accuracy that under the combined action of compressive forces S and lateral load the maximum deflection is

$$\delta = \frac{\delta_0}{1 - \alpha}. \quad (59)$$

This expression for the maximum deflection can be used also for an approximate calculation of bending moments in a strut. For example, in the case of a uniformly loaded strut with hinged ends the maximum bending moment can be calculated from the following approximate formula:

$$M_{\max} = \frac{ql^2}{8} + \frac{S\delta_0}{1 - \alpha}. \quad (60)$$

If the longitudinal force is tensile instead of compressive, the method discussed above still holds, with $-\alpha$ instead of α in the expressions for the deflection curve (58). Taking only the first term in this expression, the approximate formula for the deflection at the middle becomes

$$\delta = \frac{\delta_0}{1 + \alpha}, \quad (61)$$

where δ_0 denotes the deflection produced by lateral loads only. It must be noted that in the case of longitudinal tensile forces α can be larger than unity, and the accuracy of the approximate equation (61) decreases with increase of α . Taking, for instance, a uniformly distributed lateral load, the error in eq. (61) at $\alpha = 1$ is about 0.3 per cent. At $\alpha = 2$ the error is 0.7 per cent and at $\alpha = 10$ the error is 1.7 per cent.

In the case of a bar with built-in ends an approximate equation, analogous to eq. (61), may be derived for calculating the deflection at the middle, which gives

$$\delta = \frac{\delta_0}{1 + \frac{\alpha}{4}}, \quad (62)$$

in which δ_0 is the deflection at the middle produced by lateral loads acting alone and α has the same meaning as before.

The applications of these approximate equations will be shown later in considering the deflection of thin rectangular plates. The method of trigonometric series can be extended also in analyzing beams of variable cross section.²⁰

8. Bending of Beams in a Principal Plane which is not a Plane of Symmetry. Center of Twist.—In the discussion of pure bending (see p. 93, Part I) it was shown that the plane of the deflection curve coincides with the plane of the bending couples provided these couples act in one of the two *principal planes of bending*. This does not hold however in the case of bending of a beam by a coplanar system of transverse forces. If the plane in which the forces are acting is not a plane of symmetry of the beam, such bending is usually

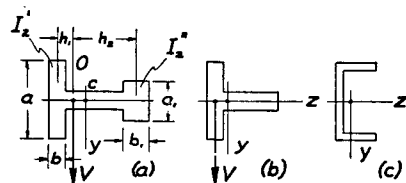


FIG. 36.

accompanied by torsion of the beam. The following discussion will show how this torsion can be eliminated and a *simple bending* established by a proper displacement of the plane of the acting forces parallel to itself.

We begin with simple examples in which the cross section of the beam has one axis of symmetry (z axis), and the forces are acting in a plane perpendicular to this axis, Fig. 36. Let us consider the case shown in Fig. 36a and determine the position of the vertical plane in which the transverse loads should act to produce *simple bending* of the beam in a vertical plane. From our previous discussion of distribution of vertical shearing stresses τ_{yx} , see p. 109, Part I, we may conclude that practically the whole of the shearing force V will be taken by the flanges alone. If we consider the flanges as two separate beams whose cross sections have moments of inertia I_z' and I_z'' respectively, then their curvatures and their deflections in bending will be equal if the loads are distributed

²⁰ See paper by M. Hetényi, *Journal of Applied Mechanics*, 1937, vol. 42 A-49.

between them in the ratio $I_z' : I_z''$.²¹ The shearing forces in these flanges also will be in the same ratio. This condition will be satisfied if the transverse loads act in the vertical plane through the point O (Fig. 36, a), such that

$$\frac{h_1}{h_2} = \frac{I_z''}{I_z'}$$

where h_1 and h_2 are the distances of O from the centroids of the cross sections of the flanges. In this manner we find that for the case of flanges of small thickness the point O is displaced from the centroid C of the cross section towards the flange whose cross section has the larger moment of inertia. In the limiting case, shown in Fig. 36, b, in which one of the flanges disappears, it can be assumed with sufficient accuracy that the point O coincides with the centroid of the flange and that the transverse loads should act in the vertical plane through this point in order to have simple bending. The point O , through which the plane of loading must pass to eliminate torsion, is called *center of twist*.

Let us now consider the channel section (Fig. 36, c) and determine the position of the plane in which vertical loads must act to produce simple bending with the z axis as the neutral axis. For this purpose it is necessary to consider the distribution of the shearing stresses over the cross section in simple bending. To calculate the vertical shearing stresses τ_{yz} for the cross section of the web, the same method is used as in the case of an I beam (page 109, Part I) and it can be assumed with sufficient accuracy that the vertical shearing force V is taken by the web only. In the flanges there will be horizontal shearing stresses which we shall denote by τ_{zx} . To find the magnitude of these stresses let us consider an element cut from the flange by two adjacent cross sections dx apart and by a vertical plane mnm_1n_1 parallel to the web (Fig. 37). If the beam is bent convex downward, the upper flange will be

²¹ The effect of shearing force on deflection of flanges is neglected in this consideration.

in compression and the compressive forces N and $N + dN$ acting on the above element will be numerically equal to

$$N = -\frac{M}{I_z} \int y dA$$

$$\text{and } N + dN = -\frac{\left(M + \frac{dM}{dx} dx\right)}{I_z} \int y dA,$$

where the integration must be extended over the shaded portion of the cross section of the flange. The integral represents the moment of the shaded area with respect to the z axis.

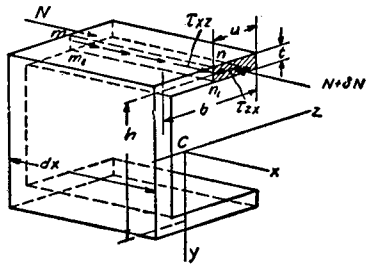


FIG. 37.

The difference of the compressive forces N and $N + dN$ must be equal to the sum of the shearing stresses τ_{xz} acting over the side mnm_1n_1 of the element. Assuming that these stresses are uniformly distributed over this side and denoting by t the

thickness of the flange, we obtain the following equation for calculating τ_{xz} :

$$\tau_{xz} t dx = dN = -\frac{dM}{dx} \cdot \frac{dx}{I_z} \int y dA,$$

from which

$$\tau_{xz} = -\frac{V}{t I_z} \int y dA. \quad (a)$$

The moment of the shaded area is proportional to the distance u from the edge of the flange; hence τ_{xz} is proportional to u . As we have shown before (see p. III, Part I), shearing stresses τ_{xz} , equal to τ_{zx} , must act horizontally at points along the line nn_1 in the cross section of the flange. Hence the stresses τ_{xz} are distributed non-uniformly over the cross section of the flange but are proportional to the distance u . At the junction of flange and web the distribution of shearing stresses is complicated. In our approximate calculation we shall assume that eq. (a) holds from $u = 0$ to $u = b$. Then denoting

by h the distance between the centroids of the flanges and observing that the moment of the cross section bt of the flange with respect to the axis z numerically is $bt(h/2)$, we obtain, from eq. (a),

$$(\tau_{xz})_{\max} = (\tau_{zx})_{\max} = \frac{Vbh}{2I_z}. \quad (b)$$

The resultant R of the shearing stresses τ_{xz} distributed over the cross sectional area bt of the flange is

$$R = \frac{Vbh}{2I_z} \cdot \frac{bt}{2} = \frac{Vb^2ht}{4I_z}. \quad (c)$$

The sum of the shearing stresses τ_{xz} over the cross section of the lower flange will evidently be an equal and opposite force. Thus the shearing stresses over a channel section reduce to the forces shown in Fig. 38. This system of forces is statically equivalent to a force V applied at a point O at a distance from the center of the web:

$$e = \frac{Rh}{V} = \frac{b^2h^2t}{4I_z}.$$

From this it is seen that, in order to obtain simple bending with z the neutral axis, the vertical plane in which the transverse loads act should pass through the point O , which is called the *center of twist*. At any other position of this plane, bending of the beam will be accompanied by twist, and the stresses will no longer follow the simple law in which σ_x is proportional to y and hence does not depend entirely upon the coordinate z .

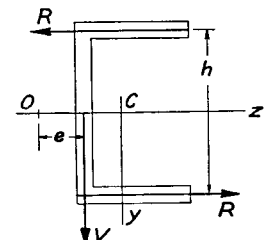


FIG. 38.

In the case of an angle section (Fig. 39) the shearing stress τ at points along mn will be in the direction shown, and will be equal to ²²

²² The same method of calculating these stresses as in the case of channel sections is used.

$$\tau = -\frac{V}{tI_z} \int y dA,$$

in which the integral represents the moment of the shaded area with respect to the z axis. These shearing stresses yield a resultant force in the direction shown in Fig. 39, b equal to

$$R = \frac{Vb^3t}{3I_z\sqrt{2}}.$$

A force of the same magnitude will also be obtained for the lower flange. The resultant of these two forces is equal to V and passes through the point of intersection of the middle lines of the flanges O , which is therefore the *center of twist* in this case.

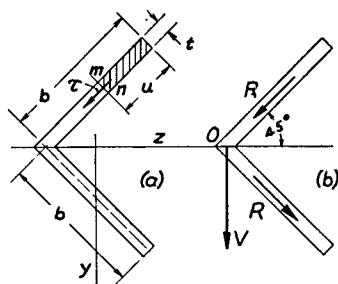


FIG. 39.

In the case of a Γ section, Fig. 40, assuming *simple bending* in a vertical plane and proceeding as in the case of an \sqcap section, we find that the shearing forces R in both flanges have the same direction. Their resultant goes through the centroid C : By geometrically adding this resultant to the vertical shearing force V , we obtained the direction of the inclined plane in which the transverse forces must be applied to produce simple bending of the beam in the vertical plane. Point C is the center of twist in this case.

Assuming that the cross sections which were discussed above belong to cantilever beams fixed at one end and loaded by a concentrated force P at the other end, we may conclude that if the load P is applied at the center of twist, it produces

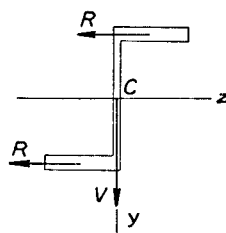


FIG. 40.

only bending of the cantilever without any twist. By using the *reciprocal theorem* (see p. 330, Part I) it can at once be concluded that a torque applied at the same end in the plane perpendicular to the axis of the cantilever and producing torsion of the cantilever will not produce any deflection of the center of twist. Hence during such torsion each cross section of the cantilever is rotating with respect to the axis passing through the center of twist and parallel to the axis of the beam.

The method of determining the position of the center of twist shown above on several simple examples can be generalized and extended to embrace cases of non-symmetrical cross sections of thin-walled members, provided the thickness of the material is so small that the distribution of shearing stresses over the thickness can be taken with sufficient accuracy to be uniform.²³ A further discussion of this problem is given in Art. 53 (p. 292).

When all the dimensions of a cross section are of the same order, the problem of determining the center of twist becomes more complicated; exact solutions of this problem exist in only a few cases.²⁴

9. Effective Width of Thin Flanges.—The simple bending formula (see Eq. 55, p. 90, Part I) shows that bending stresses in a beam are proportional to the distance from the neutral axis. This conclusion is correct so long as we are dealing with beams, the cross-sectional dimensions of which

²³ The problem of determining the center of twist has been discussed by several authors. See, for example, A. A. Griffith and G. I. Taylor, Technical Reports of the Advisory Committee for Aeronautics, England, Volume 3, p. 950, 1917, R. Maillart, Schweiz. Bauz., vol. 77, p. 197; vol. 79, p. 254 and vol. 83, p. 111 and p. 176. C. Weber, Zeitschr. f. angew. Math. u. Mech., vol. 4, 1924, p. 334. A. Eggenschwyler, Proc. of the Second Internat. Congress for Appl. Mech. Zürich, 1926, p. 434. In recent time the problem became of importance in airplane design. The review of the corresponding literature is given in a paper by P. Kuhn, Techn. Notes, Nat. Adv. Comm., no. 691.

²⁴ See paper by M. Seegar and K. Pearson, London, Roy. Soc. Proc. (ser. A), vol. 96, 1920, p. 211, and the writer's paper, London Math. Soc. Proc. (ser. 2), vol. 20, 1922, p. 398. See also "Theory of Elasticity," 1934, p. 301.

are small in comparison with their length and so long as we are considering points at a considerable distance from the ends. In practical applications we sometimes use beams with

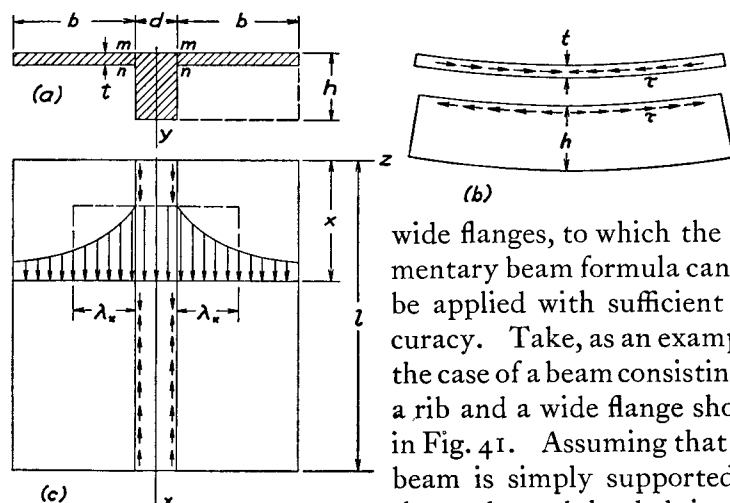


FIG. 41.

that there are shearing stresses acting between the flanges and the rib at the surfaces of contingency mn , Fig. 41a, and directed as shown in Fig. 41b. It is seen that these stresses tend to reduce the deflection of the rib, to make it stiffer. At the same time they produce compression of the flanges. Considering a flange at one side of the rib as a rectangular plate submitted to the action of shearing forces along one edge, Fig. 41c, we see that the compressive stresses will not be uniformly distributed along the width of the flange, and a rigorous analysis shows²⁵ that the distribution will be such as is indicated by the shaded area, the maximum stress in the flange being the same as in the utmost fibers of the rib. From

²⁵ The discussion of the rigorous solution, obtained by Th. von Karman, is given in the "Theory of Elasticity," p. 156, 1934. See also W. Metzger, Luftfahrtforschung, vol. 4, p. 1, 1929. K. Girkmann, der Stahlbau, vol. 6, 1933, p. 98; H. Reissner, Z. angew. Math. Mech., vol. 14, 1934, p. 312; E. Reissner, Der Stahlbau, vol. 7, 1934, p. 206; E. Chwalla, Der Stahlbau, vol. 9, 1936, p. 73.

this non-uniformity of stress distribution it can be concluded that in applying to the beam in Fig. 41a the simple beam formula for maximum bending stress we must use a somewhat *reduced width* $2\lambda_x$ instead of the actual width $2b$ of the two flanges, in order to obtain the correct value of the maximum stress. This reduced width, usually called the *effective width*, can be calculated if the compressive stress distribution, shown by the shaded area in Fig. 41c, is known. It is only necessary to make the area of the rectangle, indicated in the figure by the dotted lines, equal to the shaded area. Its magnitude, $2\lambda_x$, usually varies along the span of the beam, for it depends on the proportions of the beam and also on the shape of the bending moment diagram.

In the particular case when the width of the flange is very large, say $2b \cong l$, and the bending moment diagram is given by the sine curve:

$$M = M_1 \sin \frac{\pi x}{l}, \quad (a)$$

the reduced width becomes constant and equal to

$$2\lambda_x = \frac{4l}{\pi(1 + \mu)(3 - \mu)},$$

where μ is Poisson ratio. For $\mu = 0.3$ we obtain

$$2\lambda_x = 0.363l. \quad (63)$$

Hence, in this particular case the actual beam can be replaced by an *equivalent T beam* of a constant cross section and with the width of the two flanges equal to $0.363l$. Applying to this beam the simple beam formulas, we obtain the same maximum stress and the same flexural rigidity as the actual beam has.

In a general case of transverse loading, the bending moment diagram can be represented by a sine series:

$$M_x = \sum M_n \sin \frac{n\pi x}{l}, \quad (b)$$

in which the coefficients M_n can be calculated, in each particular case, from the known formula:²⁶

²⁶ See Article 7.

$$M_n = \frac{2}{l} \int_0^l M_x \sin \frac{n\pi x}{l} dx. \quad (c)$$

In the case of a uniform load, for example, we have

$$M_x = \frac{qx(l-x)}{2}$$

and formula (c) gives

$$M_n = \frac{4ql^2}{n^3\pi^3}, \quad (d)$$

where $n = 1, 3, 5, \dots$

Having the coefficients M_n in the series (b), we obtain the effective width from the rigorous solution, which, in the case of a large width of the flanges, gives

$$\frac{l}{2\lambda_x} = \beta \left[\frac{M_x}{\sum_{n=1,3,5,\dots} \frac{M_n \sin \frac{n\pi x}{l}}{4 + \frac{k}{\beta} n\pi}} - 4 \right], \quad (64)$$

in which $\beta = tl/dh$ is the ratio of the area tl to the cross-sectional area of the rib, and

$$k = \frac{(1+\mu)(3-\mu)}{4} = 0.878 \text{ for } \mu = 0.3.$$

Taking, for example, the case of a uniformly distributed load and substituting the expression (d) for M_n in formula (64), we find that for various values of the ratio β the variation of the effective width

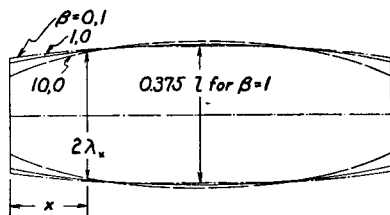


FIG. 42.

along the length of the beam is as shown in Fig. 42. It is seen that in the middle portion of the span the effective width varies very little and is approximately the same as for a sinusoidal bending moment diagram (see eq. 63). When the effective width is found from formula (64), the maximum stress and maximum

deflection are found by applying simple beam formulas to the equivalent beam.

We discussed the case in which the flanges of the beam have a very large width. There are also rigorous solutions for the case in which the flanges are not so very wide and for the case of a long

rectangular slab, reinforced by a system of identical and equidistant ribs. In all these cases the problem is reduced to that of calculating stresses and deflections in an equivalent beam.²⁷

10. Limitations of the Method of Superposition.—In discussing the bending of beams (see p. 146, Part I) it was shown that the calculation of the deflections can be greatly simplified by using the method of superposition. This method can always be used if the bending of the beam does not introduce changes in the action of the external forces. For instance, small deflections of beams by lateral loads do not change the bending moment diagrams for these loads, and superposition can be successfully used. But if we have bending combined with axial tension or compression, the deflection produced by the lateral loads changes the action of the axial forces, and the latter produce not only axial tension or compression but also some additional bending. In such cases, as we have seen (see Art. 4), there are some limitations of the method of superposition; we can use this method only with regard to the lateral loads, assuming that the axial force always remains constant. There are other cases in which small deflections of beams may introduce considerable changes in the action of forces. In such cases the method of superposition fails. Some examples of this kind will now be discussed.

As a first example let us consider the bending of the cantilever AB , Fig. 43, if during bending it comes gradually into contact with a rigid cylindrical supporting surface AC having a constant curvature $1/R$ and a horizontal tangent at A . It is seen that as long as the curvature of the beam at the end A , as given by the formula

$$\frac{1}{r} = \frac{M}{EI_z} = \frac{Pl}{EI_z}, \quad (a)$$

²⁷ These rigorous solutions found some application in specifications for concrete slabs reinforced by ribs. In airplane design the fact of non-uniform stress distribution in wide flanges is taken care of by using an approximate theory, the discussion of which can be found in papers by P. Kuhn, National Adv. Committee for Aeronautics, Reports No. 608, 1937, No. 636, 1938. See also H. Ebner, Luftfahrt-Forschung, vol. 14, 1937, p. 93 and vol. 15, 1938, p. 527.

is less than the curvature of the support $1/R$, the cantilever will touch the surface AC only at the point A , and the deflection δ at the end B will be given by the known formula:

$$\delta = \frac{Pl^3}{3EI_z} \quad (b)$$

From the equation

$$\frac{1}{r} = \frac{Pl}{EI_z} = \frac{1}{R} \quad (c)$$

we can obtain the limiting value of the load P , for which the beam begins to come into contact with the cylindrical supporting surface beyond the point A . Let $P_1 = EI_z/lR$ be this limiting value of the load; then for $P > P_1$ a part AD of the

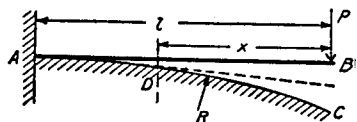


FIG. 43.

beam will be supported as indicated in Fig. 43 by the dotted line. The length x of the unsupported portion of the cantilever is obtained from the condition that at D the curvature,

$1/r$, of the beam is equal to the curvature of the supporting surface; hence

$$\frac{Px}{EI_z} = \frac{1}{R},$$

and we obtain

$$x = \frac{EI_z}{PR} \quad (d)$$

The total deflection at the end B of the cantilever consists of three parts: (1) deflection of the portion DB of the beam as a simple cantilever, which is

$$\delta_1 = \frac{Px^3}{3EI_z} = \frac{(EI_z)^2}{3P^2R^3}, \quad (e)$$

(2) deflection owing to the slope at D ,

$$\delta_2 = \frac{x(l-x)}{R} = \frac{EI_z}{PR^2} \left(l - \frac{EI_z}{PR} \right), \quad (f)$$

and (3) deflection representing the distance of the point D from the horizontal tangent at A , which is

$$\delta_3 \approx \frac{(l-x)^2}{2R} = \left(l - \frac{EI_z}{PR} \right)^2 \frac{1}{2R}. \quad (g)$$

Summing up these three parts, we obtain the total deflection:

$$\delta = \delta_1 + \delta_2 + \delta_3 = \frac{l^2}{2R} - \frac{1}{6} \frac{(EI_z)^2}{P^2R^3}. \quad (h)$$

This expression for the deflection must be used instead of equation (b), if P is larger than the limiting value $P_1 = EI_z/lR$. Note that the deflection is no longer proportional to P . If, in addition to P , there is a load Q applied at the end B of the cantilever, the total deflection will not be equal to the sum of the deflections produced by P and produced by Q if both are considered to be acting alone. Hence the method of superposition does not hold in this case.




FIG. 44.

As a second example let us consider the case of a uniformly loaded beam with built-in ends, as shown in Fig. 44. It is assumed that during bending the middle portion of the beam is supported by a rigid horizontal foundation so that along this portion the deflection is constant and equal to δ . It is seen that if the deflection at the middle is less than δ , we have an ordinary case of bending of a beam with built-in ends. The limiting value q_1 of the load is obtained from the known equation:

$$\frac{1}{384} \frac{q_1 l^4}{EI_z} = \delta. \quad (i)$$

For an intensity of the load larger than q_1 , a portion of the

beam will be supported by the foundation as shown in the figure. This part remains straight; there is no bending moment acting in the portion \overline{CD} of the beam, and the load is balanced by the uniformly distributed reaction. At the ends C and D , however, concentrated reactions X may act on the unsupported portions of the beam. The length a of the unsupported portions of the beam and the magnitude X of the concentrated reactions can be obtained by considering the portion AC of the beam as a cantilever with a uniform load q and with a concentrated load X at the end. Observing that the cross section at C does not rotate during bending and using equations (94) and (100) from Part I (see p. 147 and p. 149), we obtain

$$\frac{qa^3}{6EI_z} = \frac{Xa^2}{2EI_z},$$

from which

$$X = \frac{qa}{3}. \quad (j)$$

Another equation is obtained from the condition that the deflection at C is equal to δ . Using the known formulas for the deflection of the cantilever, we obtain

$$\frac{qa^4}{8EI_z} - \frac{Xa^3}{3EI_z} = \delta. \quad (k)$$

Solving equations (j) and (k) we find

$$a = \sqrt[4]{\frac{72\delta EI_z}{q}}, \quad X = \sqrt[4]{8/9\delta EI_z q^3}. \quad (l)$$

It is immediately apparent that the reaction X is not proportional to the load. The numerical maximum of the bending moment, which is at the built-in ends, is obtained from the equation:

$$|M_a| = |M_b| = \frac{qa^2}{2} - Xa,$$

which gives

$$M_a = \frac{qa^2}{6} = \sqrt{2\delta EI_z} q. \quad (m)$$

Again we see that the bending moment does not increase in the same proportion as the load. Hence the method of superposition cannot be used.

Problems

1. Find the deflection of the cantilever shown in Fig. 43 if, instead of force P , there is a uniformly distributed load q .
2. Find an expression for the deflection at the middle of a beam, supported by two identical cylindrical surfaces of the radius R and loaded at the middle, Fig. 45.

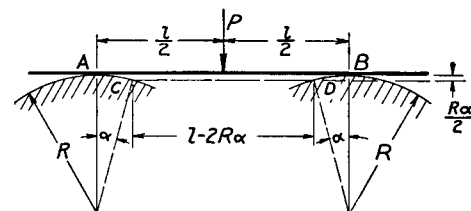


FIG. 45.

Solution. As the load P increases, the points of contact of the beam with the supporting surfaces move inwards and the span diminishes; hence the deflection increases in a smaller proportion than does the load P . The angle α , defining the positions of the points of contact, is found from the condition that at these points the deflection curve is tangent to the supporting surfaces; hence, for small values of α ,

$$\alpha = \frac{P(l - 2R\alpha)^2}{16EI_z}.$$

Having α , we obtain the deflection at the middle from equation:

$$\delta = \frac{P(l - 2R\alpha)^3}{48EI_z} + \frac{R\alpha^2}{2}.$$

3. Solve the preceding problem assuming that the beam is built-in at the points A and B .

4. Solve problem 2 if the load is not at the middle of the span AB .




FIG. 46.

5. A long, uniformly loaded beam is supported by a horizontal, rigid foundation, Fig. 46. Find the angle α of rotation of the end A and the length x which will be bent by the moment M_0 applied at the end.

Solution. The length x is found from the equation:

$$\frac{qx^3}{24EI} = \frac{M_0x}{6EI}.$$

The angle of rotation at the end A is

$$\alpha = \frac{M_0x}{3EI} - \frac{qx^3}{24EI}$$

CHAPTER II

CURVED BARS

11. Bending Stresses in Curved Bars.—In the following discussion it is assumed that the *center line*¹ of the bar is a plane curve and that the cross sections have an axis of symmetry in this plane. The bar is submitted to the action of forces lying in this plane of symmetry. Let us consider first the case of a bar of constant cross section in pure bending, produced by couples applied at the ends (Fig. 47). The stress distribution

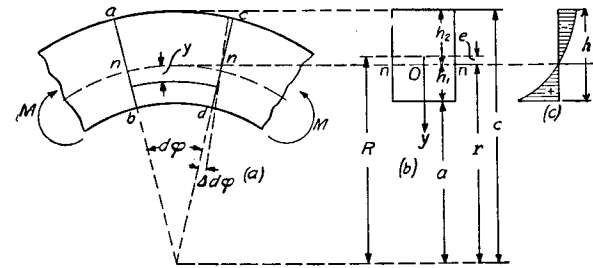


FIG. 47.

for this case is obtained by using the same assumption as in the case of straight bars, namely, that transverse cross sections of the bar originally plane and normal to the center line of the bar remain so after bending.² Let ab and cd

¹ The center line is the line joining the centroids of the cross sections of the bar.

² This approximate theory was developed by H. Résal, *Annales des Mines*, 1862, p. 617, and by E. Winkler, *Der Civilingenieur*, Vol. 4, 1858, p. 232; see also his book, "Die Lehre von der Elastizität und Festigkeit," Prag, 1867, Chapter 15. Further development of the theory was made by F. Grashof, "Elastizität und Festigkeit," 1878, p. 251, and by K. Pearson, "History of the Theory of Elasticity," Vol. 2, part I, 1893, p. 422. The exact solution of the same problem was given by H. Golovin, *Bulletin of the Institute of Technology at St. Petersburg*, 1881. See also C. Ribière, *C. R.*, Vol. 108, 1889, and Vol. 132, 1901, and L. Prandtl in the paper by A. Timpe, *Zeitschr. f. Math. u. Phys.*, Vol. 52, 1905, p. 348. The above approximate theory is in good agreement with the exact solution. See "Theory of Elasticity," p. 58, 1934.

denote two neighboring cross sections of the bar and let $d\phi$ denote the small angle between them before bending. As a result of bending, the cross section cd rotates with respect to ab . Let $\Delta d\phi$ denote the small angle of rotation. Due to this rotation the longitudinal fibers on the convex side of the bar are compressed and the fibers on the concave side are extended. If $n-n$ denotes the neutral surface, the extension of any fiber a distance ³ y from this surface is $y\Delta d\phi$ and the corresponding unit elongation is

$$\epsilon = \frac{y\Delta d\phi}{(r-y)d\phi}, \quad (a)$$

where r denotes the radius of the neutral surface and the denominator in eq. (a) is the length of the fiber between the adjacent cross sections before bending. Assuming that there is no lateral pressure between the longitudinal fibers,⁴ the bending stress at a distance y from the neutral axis is

$$\sigma_x = \frac{Ey\Delta d\phi}{(r-y)d\phi}. \quad (b)$$

It will be seen that the stress distribution is no longer linear as in the case of straight bars, but that it follows a hyperbolic law as shown in Fig. 47 (c). From the condition that the sum of the normal forces distributed over the cross section is zero, it can be concluded that the neutral axis is displaced from the centroid of the cross section towards the center of curvature of the bar. In the case of a rectangular cross section, the shaded area (Fig. 47, c) in tension must equal that in compression; hence the greatest bending stress acts on the concave side. In order to make the stresses in the most remote fibers in tension and in compression equal, it is necessary to use sectional shapes which have the centroid nearer the concave side of the bar.

³ y is taken positive in the direction towards the center of curvature of the bar.

⁴ The exact theory shows that there is a certain radial pressure but that it has no substantial effect on the stress σ_x and can be neglected. The lateral pressures in direction perpendicular to the plane of curvature may be of importance in the case of bending of thin shells (see art. 20).

Equation (b) contains two unknowns, the radius r of the neutral surface and the angle $\Delta d\phi$ which represents the angular displacement due to bending. To determine them we must use the two equations of statics. The first equation is based on the condition that the sum of the normal forces distributed over a cross section is equal to zero. The second equation is based on the condition that the moment of these normal forces is equal to the bending moment M . These equations are:

$$\int \sigma_x dA = \frac{E\Delta d\phi}{d\phi} \int \frac{y dA}{r-y} = 0, \quad (c)$$

$$\int \sigma_x y dA = \frac{E\Delta d\phi}{d\phi} \int \frac{y^2 dA}{r-y} = M. \quad (d)$$

The integration in both equations is extended over the total area of the cross section. The integral in eq. (d) may be simplified as follows:

$$\begin{aligned} \int \frac{y^2 dA}{r-y} &= - \int \left(y - \frac{ry}{r-y} \right) dA \\ &= - \int y dA + r \int \frac{y dA}{r-y}. \end{aligned} \quad (e)$$

The first integral on the right side of eq. (e) represents the moment of the cross sectional area with respect to the neutral axis and the second, as is seen from eq. (c), is equal to zero. Hence

$$\int \frac{y^2 dA}{r-y} = Ae, \quad (f)$$

in which e denotes the distance of the neutral axis from the centroid of the cross section. Equation (d) then becomes

$$\frac{E\Delta d\phi}{d\phi} = \frac{M}{Ae} \quad (65)$$

and eq. (b) gives

$$\sigma_x = \frac{My}{Ae(r-y)}. \quad (g)$$

The stresses in the most remote fibers, which are the largest

stresses in the bar are

$$(\sigma_x)_{\max} = \frac{Mh_1}{Aea} \quad \text{and} \quad (\sigma_x)_{\min} = -\frac{Mh_2}{Aec}, \quad (66)$$

in which h_1 and h_2 are the distances from the neutral axis to the most remote fibers and a and c are the inner and outer radii of the bar. The radius r is determined from eq. (c). Several examples of such calculations are shown in the next article.

If the depth of the cross section is small in comparison with the radius R of the center line of the bar, y may be neglected in comparison with r in eqs. (c) and (d). Then, from (c), we obtain

$$\int y dA = 0,$$

i.e., the neutral axis passes through the centroid of the cross section. From eq. (d)

$$\frac{E\Delta d\varphi}{d\varphi} \frac{I_z}{R} = M. \quad (h)$$

Substituting this into eq. (b),

$$\sigma_x = \frac{My}{I_z}.$$

Hence, in the case of a relatively small depth h , the distribution of the bending stresses σ_x approaches a linear one, and the same equation as used for straight bars can be used to calculate them.

From eq. (h) we obtain for a thin bar

$$\Delta d\varphi = \frac{MRd\varphi}{EI_z} = \frac{Mds}{EI_z}, \quad (67)$$

in which ds denotes the element of the center line between two adjacent cross sections. This equation is analogous to eq. (a), p. 145, Part I, for the straight bars, and is often used in calculating the deflections of thin curved bars.

In a more general case when a curved bar is submitted to the action of any coplanar system of forces in the plane of

symmetry of the curved bar, the forces acting upon the portion of the bar to one side of any cross section may be reduced to a couple and a force applied at the centroid of the cross section. The stresses produced by the couple are obtained as explained above. The force is resolved into two components, a longitudinal force N in the direction of the tangent to the center line of the bar and a shearing force V in the plane of the cross section. The longitudinal force produces tensile or compressive stresses uniformly distributed over the cross section and equal to N/A . Due to these stresses the center line of the bar undergoes extension or contraction and the angle $d\varphi$ between the two adjacent cross sections changes by the amount

$$\Delta_1 d\varphi = \frac{Nds}{AE} \cdot \frac{1}{R}. \quad (68)$$

The transverse force V produces shearing stresses and the distribution of these stresses over the cross section can be taken the same as for a straight bar.⁵

12. Particular Cases of Curved Bars.—It was shown in the previous article (eq. 66) that bending stresses in curved bars are readily calculated provided the position of the neutral axis is known. In the following examples the calculation of the distance e of the neutral axis from the centroid of the cross section is given for several particular cases.

Rectangular Cross Section.—The magnitude of the radius r of the neutral surface is determined from eq. (c) of the previous article, from which

$$\int \frac{y dA}{r - y} = 0. \quad (a)$$

If we denote by v (Fig. 48) the radius of a shaded element dA , then

$$v = r - y \quad \text{or} \quad y = r - v.$$

⁵ This assumption is in a good agreement with the exact solution for a narrow rectangular cross section; see "Theory of Elasticity," p. 73, 1934.

Substituting into eq. (a),

$$\int \frac{(r-v)dA}{v} = 0,$$

from which

$$r = \frac{A}{\int \frac{dA}{v}} \quad (69)$$

In the case represented in Fig. 48, $A = bh$, $dA = b dv$ and integration is extended from $v = a$ to $v = c$, where a and c are the inner and the outer radii of the curved bar. Substituting in equation (69), we obtain

$$r = \frac{bh}{\int_a^c \frac{b dv}{v}} = \frac{h}{\log_n \frac{c}{a}} \quad (70)$$

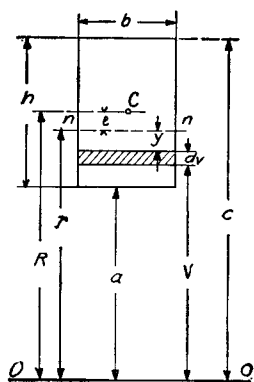


Fig. 48.

Using the known series

$$\begin{aligned} \log_n \frac{c}{a} &= \log_n \frac{R + \frac{1}{2}h}{R - \frac{1}{2}h} = \log_n \frac{1 + \frac{1}{2}h/R}{1 - \frac{1}{2}h/R} \\ &= \frac{h}{R} \left[1 + \frac{1}{3} \left(\frac{h}{2R} \right)^2 + \frac{1}{5} \left(\frac{h}{2R} \right)^4 + \dots \right], \quad (b) \end{aligned}$$

we obtain

$$e = R - r = R - \frac{R}{1 + \frac{1}{3} \left(\frac{h}{2R} \right)^2 + \frac{1}{5} \left(\frac{h}{2R} \right)^4 + \dots}$$

A first approximation for e is obtained by taking only the two first terms in the denominator on the right side. Then

$$e = R \left[1 - \frac{1}{1 + \frac{1}{3} \left(\frac{h}{2R} \right)^2} \right] \approx \frac{h^2}{12R} \quad (71)$$

By using three terms of the series (b), a second approximation is obtained:

$$e = \frac{h^2}{12R} \left[1 + \frac{4}{15} \left(\frac{h}{2R} \right)^2 \right] \quad (72)$$

It can be seen that the distance e of the neutral axis from the centroid decreases as the ratio h/R decreases. For small values of this ratio the distance e is small and a linear stress distribution, instead of a hyperbolic one, may be assumed with good accuracy. In the table below, the values of the maximum stress obtained by assuming a linear stress distribution are compared with those obtained on the basis of a hyperbolic distribution (eq. 66).

TABLE 4. COMPARISON OF HYPERBOLIC AND LINEAR STRESS DISTRIBUTIONS

Hyperbolic stress distribution			Linear stress distribution		Error in σ_{\max} due to assuming linear law
R/h	$\frac{\sigma_{\max}}{M/AR}$	$\frac{\sigma_{\min}}{M/AR}$	$\frac{\sigma_{\max}}{M/AR}$	$\frac{\sigma_{\min}}{M/AR}$	%
1	9.2	-4.4	6	-6	35
2	14.4	-10.3	12	-12	17
3	20.2	-16.1	18	-18	10.9
4	26.2	-22.2	24	-24	9.2
10	62.0	-58.0	60	-60	3.2

This indicates that for $R/h > 10$ a linear stress distribution can be assumed and the straight beam formula for maximum bending stress may be used with sufficient accuracy.

Trapezoidal Cross Section. The length of an elemental strip at distance v from the axis $O-O$ (Fig. 49) is

$$b = b_2 + (b_1 - b_2) \frac{c-v}{c-a}$$

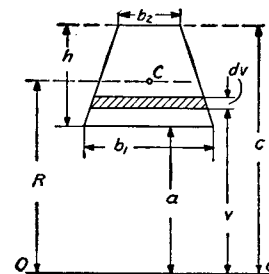


Fig. 49.

Substituting into eq. (69), we obtain

$$r = \frac{A}{\int \frac{b dv}{v}} = \frac{A}{\frac{b_1 c - b_2 a}{h} \log_n \frac{c}{a} - (b_1 - b_2)} \quad (73)$$

When $b_1 = b_2 = b$, the above equation coincides with eq. (70) for a rectangle. When $b_2 = 0$, the case of a triangular cross section is obtained.

⊥ Cross Section. In this case eq. (69) gives (Fig. 50)

$$r = \frac{b_1 f_1 + b_2 f_2}{b_1 \int_a^d \frac{dv}{v} + b_2 \int_a^c \frac{dv}{v}} = \frac{b_1 f_1 + b_2 f_2}{b_1 \log_n \frac{d}{a} + b_2 \log_n \frac{c}{a}} \quad (74)$$

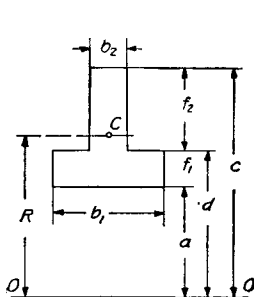


FIG. 50.

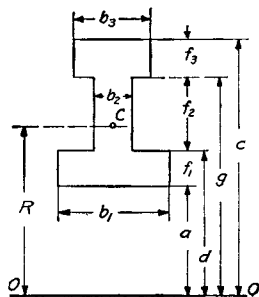


FIG. 51.

I Cross Section. From eq. (69) (Fig. 51)

$$r = \frac{b_1 f_1 + b_2 f_2 + b_3 f_3}{b_1 \log_n \frac{d}{a} + b_2 \log_n \frac{g}{a} + b_3 \log_n \frac{c}{g}} \quad (75)$$

It may be seen that a suitable choice of proportions in the cases of ⊥ and I sections will so locate the centroid that eqs. (66) will give the same numerical values for σ_{\max} and σ_{\min} . Such proportions are desirable if the material is equally strong in tension and compression, as, for instance, structural steel.

In the previous discussion the distance e from the neutral axis to the centroid of the cross section was determined as the difference $R - r$. As h/R decreases, this difference becomes small. To determine it with sufficient accuracy, r must be calculated very accurately. In order to avoid this difficulty and to obtain e directly, the following method may be used. If we let y_1 denote the distance of any point in the cross section from the axis through the centroid parallel to the neutral axis, then $y_1 = y + e$ and eq. (a) for determining the position of the neutral axes becomes

$$\int \frac{(y_1 - e)dA}{R - y_1} = \int \frac{y_1 dA}{R - y_1} - e \int \frac{dA}{R - y_1} = 0. \quad (c)$$

The first integral on the right side represents a *modified area* of the cross section and can be represented as follows:

$$\int \frac{y_1 dA}{R - y_1} = mA, \quad (d)$$

where m denotes a number to be determined in each particular case. The second integral on the right side of eq. (c) can be transformed as follows:

$$\int \frac{dA}{R - y_1} = \frac{1}{R} \int \left(1 + \frac{y_1}{R - y_1} \right) dA = \frac{A}{R} (1 + m). \quad (e)$$

Substituting (d) and (e) in eq. (c), we obtain

$$mA - \frac{e(1 + m)A}{R} = 0,$$

from which

$$e = R \frac{m}{1 + m}. \quad (76)$$

In calculating m from eq. (d) the factor $1/(R - y_1)$ can be expanded in the series

$$\frac{1}{R - y_1} = \frac{1}{R} \left(1 + \frac{y_1}{R} + \frac{y_1^2}{R^2} + \dots \right).$$

Then

$$\int \frac{y_1 dA}{R - y_1} = \frac{1}{R} \int \left(1 + \frac{y_1}{R} + \frac{y_1^2}{R^2} + \dots \right) y_1 dA$$

and

$$m = \frac{1}{AR} \int \left(1 + \frac{y_1}{R} + \frac{y_1^2}{R^2} + \dots \right) y_1 dA. \quad (77)$$

As an example, for a rectangular cross section $A = bh$, $dA = bdy_1$, and substituting in (77),

$$\begin{aligned} m &= \frac{1}{hR} \int_{-h/2}^{+h/2} \left(1 + \frac{y_1}{R} + \frac{y_1^2}{R^2} + \dots \right) y_1 dy_1 \\ &= \frac{1}{3} \left(\frac{h}{2R} \right)^2 + \frac{1}{5} \left(\frac{h}{2R} \right)^4 + \frac{1}{7} \left(\frac{h}{2R} \right)^6 + \dots \end{aligned}$$

This series converges very quickly and m can be calculated very accurately. Substituting m in eq. (76), the distance e is obtained.

For a *circular cross section* (Fig. 52),

$$dA = 2\sqrt{\frac{1}{4}h^2 - y_1^2} dy_1. \quad (f)$$

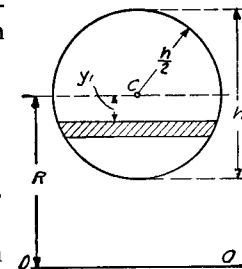


FIG. 52.

Substituting into eq. (e),

$$\frac{A}{R} (1 + m) = 2 \int_{-h/2}^{+h/2} \frac{\sqrt{\frac{1}{4}h^2 - y_1^2} dy_1}{R - y_1} = 2\pi \left(R - \sqrt{R^2 - \frac{h^2}{4}} \right), \quad (g)$$

from which, using the series

$$\sqrt{R^2 - \frac{h^2}{4}} = R \left[1 - \frac{1}{2} \frac{h^2}{4R^2} - \frac{1}{8} \left(\frac{h^2}{4R^2} \right)^2 - \frac{1}{16} \left(\frac{h^2}{4R^2} \right)^3 - \frac{5}{128} \left(\frac{h^2}{4R^2} \right)^4 - \dots \right],$$

we obtain

$$m = \frac{1}{4} \left(\frac{h}{2R} \right)^2 + \frac{1}{8} \left(\frac{h}{2R} \right)^4 + \frac{5}{64} \left(\frac{h}{2R} \right)^6 + \dots \quad (78)$$

This is a rapidly converging series, from which m may easily be calculated. Substitution of m into eq. (76) gives the position of the neutral axis.

It can be seen that in calculating m from equation (e) the magnitude of m does not change if all elements dA are multiplied by some constant, since in this way the integral on the left side of equation (e) and the area A on the right side of the same equation will be increased in the same proportion. From this it follows that the value (78) of m obtained for a circular cross section can be used also for an ellipse with the axes h and h_1 , since in this case each elemental area (f) obtained for a circle is to be multiplied by the constant ratio h_1/h .

The calculation of the integral on the left side of equation (e) can sometimes be simplified by dividing the cross section into several parts, integrating for each part, and adding the results of these integrations. Taking, for example, a circular ring cross section with outer diameter h and inner diameter h_1 , and using equation (g) for the outer and inner circles, we find for the ring cross section:

$$m = \frac{1}{h^2 - h_1^2} \left\{ h^2 \left[\frac{1}{4} \left(\frac{h}{2R} \right)^2 + \frac{1}{8} \left(\frac{h}{2R} \right)^4 + \dots \right] - h_1^2 \left[\frac{1}{4} \left(\frac{h_1}{2R} \right)^2 + \frac{1}{8} \left(\frac{h_1}{2R} \right)^4 + \dots \right] \right\}. \quad (79)$$

In a similar manner we can develop formulas for the cross sections shown in Figs. 50 and 51.

When m is calculated, we find e from equation (76) and the

maximum stress from equation (66). But we can also proceed in a somewhat different way and continue to use distance y_1 from the centroidal axis instead of distance y from the neutral axis. Substituting $y_1 - e$ instead of y into equation (g) (p. 67), we obtain

$$\sigma_x = \frac{M(y_1 - e)}{Ae(R - y_1)} = \frac{M}{AR} \left(\frac{y_1}{mv} - 1 \right), \quad (80)$$

where v is the distance of the point from the axis through the center of curvature of the axis of the bar, Fig. 48.

Equation (d) is the basis of a graphical determination of the quantity m for cases in which the shape of the cross section cannot be simply expressed analytically. It is seen that in calculating the modified area from eq. (d) every elemental area must be diminished in the ratio $y_1/(R - y_1)$. This can be done by retaining the width of the elemental strips but diminishing their lengths in the above ratio (Fig. 53). In this manner the shaded area in the figure is obtained.

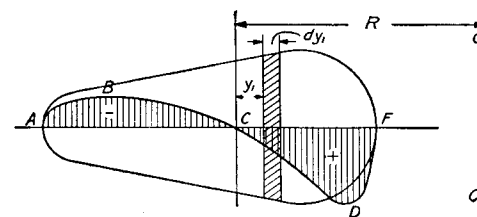


FIG. 53.

The difference between the areas CDF and ABC gives the modified area mA . Knowing this, the quantities m and e can readily be calculated.

The theory of curved bars developed above is applied in designing crane hooks.⁶ In Fig. 54 is represented the working portion of a hook of a constant circular cross section. It is

⁶ A theoretical and experimental investigation of crane hooks was recently made by the National Physical Laboratory in England. See the paper by H. J. Gough, H. L. Cox and D. G. Sopwith, Proc. Inst. Mech. Engrs., December 1934. The comparison of the theoretical stresses in hooks of a rectangular cross section with experimental results is given in the paper by K. Böttcher, Forschungsarbeiten, Heft 337, Berlin, 1931.

assumed that the vertical force P is passing through the center of curvature O of the axis of the hook. The maximum bending stress occurs in the cross section perpendicular to the load P . Then, proceeding as explained in the preceding article, we find that on the horizontal cross section of the hook the tensile force P , applied at the center C of the cross section, and the bending moment $M = PR$ are acting. Combining direct and bending stresses and using equation (80) for the latter, we obtain

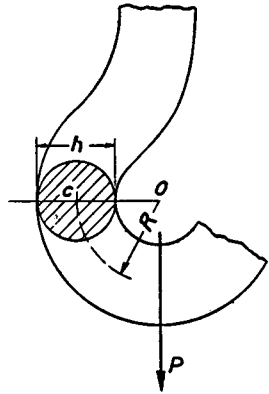


FIG. 54.

$$\sigma_x = \frac{P}{A} + \frac{M}{AR} \left(\frac{y_1}{mv} - 1 \right) = \frac{Py_1}{Amv}.$$

Applying this formula to the most remote points, for which $y_1 = \pm \frac{h}{2}$, we find that

$$(\sigma_x)_{\max} = \frac{P}{A} \cdot \frac{h}{2m(R - h/2)};$$

$$(\sigma_x)_{\min} = -\frac{P}{A} \cdot \frac{h}{2m(R + h/2)}. \quad (81)$$

It is seen that the numerically largest stress is the tensile stress at the intrados, which is obtained by multiplying the stress P/A by the *stress factor*:

$$k = \frac{h}{2m(R - h/2)} \quad (82)$$

the magnitude of which depends on the ratio $h/2R$. Using expression (78) for m , we find that k varies from 13.5 to 15.4 as the ratio $h/2R$ changes from 0.6 to 0.4.⁷

⁷ At $h/2R = 0.6$ the factor k has its minimum value.

Problems

1. Determine the ratio of the numerical values of σ_{\max} and σ_{\min} for a curved bar of rectangular cross section in pure bending if $R = 5$ in. and $h = 4$ in.

Solution. From eq. (66) the ratio is h_1c/h_2a . The distance of the neutral axis from the centroid, from eq. (72), is

$$e = 4 \frac{4}{12 \times 5} \left[1 + \frac{4}{15} \left(\frac{4}{10} \right)^2 \right] = 0.278 \text{ in.}$$

Then $h_1 = 2 - 0.278 = 1.722$ in.; $h_2 = 2 + 0.278 = 2.278$. The above ratio is

$$\frac{1.722 \times 7}{2.278 \times 3} = 1.75.$$

2. Solve the previous problem, assuming a circular cross section. *Answer.*

$$e = 0.208 \text{ in.}; \quad \frac{\sigma_{\max}}{\sigma_{\min}} = \frac{1.792}{2.208} \cdot \frac{7}{3} = 1.89.$$

3. Determine the dimensions b_1 and b_3 of an I cross section (Fig. 51) to make σ_{\max} and σ_{\min} numerically equal, in pure bending. Given $f_1 = 1$ in., $f_2 = 2$ in., $f_3 = 1$ in., $a = 3$ in., $b_2 = 1$ in., $b_1 + b_3 = 5$ in.

Solution. From eqs. (66),

$$\frac{h_1}{a} = \frac{h_2}{c} \quad \text{or} \quad \frac{r - a}{a} = \frac{c - r}{c},$$

from which

$$r = \frac{2ac}{a + c} = \frac{2 \times 3 \times 7}{3 + 7} = 4.20 \text{ in.}$$

Substituting into eq. (75),

$$4.20 = \frac{7}{b_1 \log_n 4/3 + 1 \cdot \log_n 6/4 + (5 - b_1) \log_n 7/6},$$

from which

$$b_1 \log_n 4/3 + (5 - b_1) \log_n 7/6 = \frac{7}{4.20} - 1 \cdot \log_n 6/4,$$

$$0.288b_1 + 0.154(5 - b_1) = 1.667 - 0.406 = 1.261 \text{ in.},$$

$$b_1 = 3.67 \text{ in.}; \quad b_3 = 5 - 3.67 = 1.33 \text{ in.}$$

4. Determine the dimension b_1 of the \perp section (Fig. 50) to make σ_{\max} and σ_{\min} numerically equal in pure bending. Given $f_1 = 1$ in., $f_2 = 3$ in., $b_2 = 1$ in., $a = 3$ in.

Answer. $b_1 = 3.09$ in.

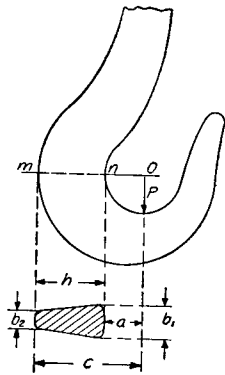


FIG. 55.

5. Determine σ_{\max} and σ_{\min} for the trapezoidal cross section mn of the hook represented in Fig. 55 if $P = 4,500$ lbs., $b_1 = 1\frac{5}{8}$ in., $b_2 = \frac{3}{8}$ in., $a = 1\frac{1}{4}$ in., $c = 5$ in.

Solution. From eq. (73),

$$r = \frac{3.750}{\frac{1\frac{5}{8} \times 5 - \frac{3}{8} \times 1\frac{1}{4}}{3\frac{3}{4}} \log_n 5/1\frac{1}{4} - (1\frac{5}{8} - \frac{3}{8})} = \frac{3.750}{1.580} = 2.373 \text{ in.}$$

The radius of the center line

$$R = a + \frac{b_1 + 2b_2}{b_1 + b_2} \cdot \frac{h}{3} = 2.734 \text{ in.}$$

Therefore, $e = R - r = 0.361$ in.; $h_1 = r - a = 2.373 - 1.250 = 1.123$ in.; $h_2 = c - r = 5 - 2.373 = 2.627$ in.; $Ae = 3.75 \times 0.361 = 1.35$; $M = PR = 12,300$ lbs. ins. The bending stresses, from eqs. (66), are

$$(\sigma_x)_{\max} = \frac{12,300 \times 1.123}{1.35 \times 1.25} = 8,200 \text{ lbs. per sq. in.}$$

$$(\sigma_x)_{\min} = -\frac{12,300 \times 2.627}{1.35 \times 5} = -4,800 \text{ lbs. per sq. in.}$$

On these bending stresses, a uniformly distributed tensile stress $P/A = 4,500/3.75 = 1,200$ lbs. per sq. in. must be superposed. The total stresses are

$$\sigma_{\max} = 8,200 + 1,200 = 9,400 \text{ lbs. per sq. in.,}$$

$$\sigma_{\min} = -4,800 + 1,200 = -3,600 \text{ lbs. per sq. in.}$$

6. Find the maximum stress in a hook of circular cross section if the diameter of the cross section is $h = 1$ in., radius of the central axis $R = 1$ in., and $P = 1,000$ lbs.

Answer. $k = 13.9$, $\sigma_{\max} = 13.9 \frac{1000}{0.785} = 17,700$ lbs. per sq. in.

7. Find σ_{\max} and σ_{\min} for the curved bar of a circular cross section, loaded as shown in Fig. 56, if $h = 4$ in., $R = 4$ in., $e = 4$ in., and $P = 5,000$ lbs.

Answer. $\sigma_{\max} = 10,650$ lbs. per sq. in.,
 $\sigma_{\min} = -4,080$ lbs. per sq. in.

8. Solve the preceding problem assuming that the cross section mn has the form shown in Fig. 50 with the following dimensions $a = 2$ in., $d = 3$ in., $c = 9$ in., $b_1 = 4$ in., $b_2 = 1$ in., $e = 4$ in., and $P = 4,000$ lbs.

Answer. $\sigma_{\max} = 3,510$ lbs. per sq. in.;
 $\sigma_{\min} = -1,800$ lbs. per sq. in.

9. Solve problem 7 assuming that the cross section mn is trapezoidal, as in Fig. 49, with the dimensions $a = 2$ in., $c = 4\frac{1}{4}$ in., $b_1 = 2$ in., $b_2 = 1$ in., $e = 0$, and $P = 1.25$ tons.

Answer. $\sigma_{\max} = 3.97$ tons per sq. in.; $\sigma_{\min} = -2.33$ tons per sq. in.

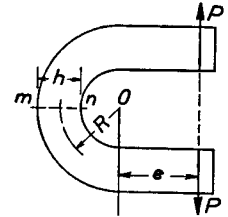


FIG. 56.

13. Deflection of Curved Bars.—The deflections of curved bars are usually calculated by the Castigliano theorem.⁸ The simplest case is when the cross-sectional dimensions of the bar are small in comparison with the radius of curvature of its center line.⁹ Then the change in the angle between two adjacent cross sections is given by eq. (67), analogous to

eq. (a), p. 150, Part I, for straight bars, and the strain energy of bending is given by the equation

$$U = \int_0^s \frac{M^2 ds}{2EI_z}, \quad (83)$$

in which the integration is extended along the total length s of the bar. Equation (83) is analogous to that (187)

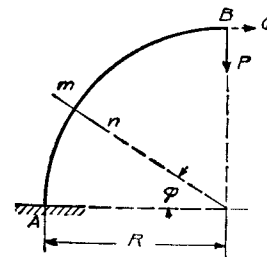


FIG. 57.

⁸ See p. 308, Part I.

⁹ The case in which the cross-sectional dimensions are not small is discussed in problem 6, p. 87.

(see Part I) for straight beams,¹⁰ and the deflection of the point of application of any load P acting on the bar in the direction of the load is

$$\delta = \frac{\partial U}{\partial P}.$$

As an example, take a curved bar of uniform cross section whose center line is a quarter of a circle (Fig. 57), built in at the lower end A with a vertical tangent and loaded at the other end by a vertical load P . The bending moment at any cross section mn is $M = PR \cos \varphi$. Substituting in eq. (83), the vertical deflection of the end B is

$$\begin{aligned} \delta &= \frac{d}{dP} \int_0^{\pi/2} \frac{M^2 R d\varphi}{2EI_z} = \frac{1}{EI_z} \int_0^{\pi/2} M \frac{dM}{dP} R d\varphi \\ &= \frac{1}{EI_z} \int_0^{\pi/2} PR^3 \cos^2 \varphi d\varphi = \frac{\pi}{4} \frac{PR^3}{EI_z}. \end{aligned}$$

If the horizontal displacement of the end B is needed, a horizontal imaginary load Q must be added as shown in the figure by the dotted line. Then

$$M = PR \cos \varphi + QR(1 - \sin \varphi)$$

and

$$\frac{\partial M}{\partial Q} = R(1 - \sin \varphi).$$

The horizontal deflection is

$$\delta_1 = \left(\frac{\partial U}{\partial Q} \right)_{Q=0} = \frac{\partial}{\partial Q} \int_0^{\pi/2} \frac{M^2 R d\varphi}{2EI_z} = \frac{1}{EI_z} \int_0^{\pi/2} M \frac{\partial M}{\partial Q} R d\varphi.$$

$Q = 0$ must be substituted in the expression for M , giving

$$\delta_1 = \frac{1}{EI_z} \int_0^{\pi/2} PR^3 \cos \varphi (1 - \sin \varphi) d\varphi = \frac{PR^3}{2EI_z}.$$

Thin Ring.—As a second example consider the case of a thin circular ring submitted to the action of two equal and

¹⁰ The strain energy due to longitudinal and shearing forces can be neglected in the case of thin curved bars. See p. 84.

opposite forces P acting along the vertical diameter (Fig. 58). Due to symmetry only one quadrant of the ring (Fig. 58, *b*) need be considered, and we can also conclude that there are no shearing stresses over the cross section mn , and that the tensile force on this cross section is equal to $P/2$. The magnitude of the bending moment M_0 acting on this cross section is statically indeterminate, and we shall use the Castigliano theorem to find it. It may be seen from the condition of symmetry that the cross section mn does not rotate during the bending of the ring. Hence the displacement corresponding to M_0 is zero and

$$\frac{dU}{dM_0} = 0, \quad (a)$$

in which U is the strain energy of the quadrant of the ring which we are considering. For any cross section m_1n_1 at an angle φ with the horizontal the bending moment is¹¹

$$M = M_0 - \frac{P}{2} R(1 - \cos \varphi) \quad (b)$$

and

$$\frac{dM}{dM_0} = 1.$$

Substituting this into expression (83) for the potential energy and using eq. (a), we find

$$\begin{aligned} 0 &= \frac{d}{dM_0} \int_0^{\pi/2} \frac{M^2 R d\varphi}{2EI_z} = \frac{1}{EI_z} \int_0^{\pi/2} M \frac{dM}{dM_0} R d\varphi \\ &= \frac{1}{EI_z} \int_0^{\pi/2} \left[M_0 - \frac{P}{2} R(1 - \cos \varphi) \right] R d\varphi, \end{aligned}$$

¹¹ Moments which tend to decrease the initial curvature of the bar are taken as positive.

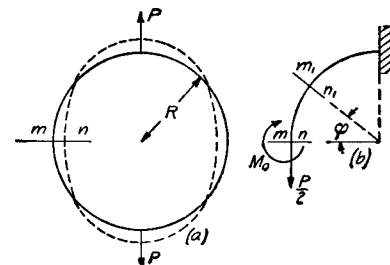


FIG. 58.

from which

$$M_0 = \frac{PR}{2} \left(1 - \frac{2}{\pi} \right) = 0.182PR. \quad (84)$$

Substituting into eq. (l),

$$M = \frac{PR}{2} \left(\cos \varphi - \frac{2}{\pi} \right). \quad (c)$$

The bending moment at any cross section of the ring may be calculated from this expression. The greatest bending moment is at the points of application of the forces P . Substituting $\varphi = \pi/2$ in eq. (c), we find

$$M = -\frac{PR}{\pi} = -0.318PR. \quad (85)$$

The minus sign indicates that the bending moments at the points of application of the forces P tend to increase the curvature while the moment M_0 at the cross section mn tends to decrease the curvature of the ring, and the shape of the ring after bending is that indicated in the figure by the dotted line.

The increase in the vertical diameter of the ring may be calculated by the Castigliano theorem. The total strain energy stored in the ring is

$$U = 4 \int_0^{\pi/2} \frac{M^2 R d\varphi}{2EI_z},$$

in which M is given by eq. (c). Then the increase in the vertical diameter is

$$\begin{aligned} \delta &= \frac{dU}{dP} = \frac{4}{EI_z} \int_0^{\pi/2} M \frac{dM}{dP} R d\varphi \\ &= \frac{PR^3}{EI_z} \int_0^{\pi/2} \left(\cos \varphi - \frac{2}{\pi} \right)^2 d\varphi \\ &= \left(\frac{\pi}{4} - \frac{2}{\pi} \right) \frac{PR^3}{EI_z} = 0.149 \frac{PR^3}{EI_z}. \end{aligned} \quad (86)$$

For calculating the decrease of the horizontal diameter of the ring in Fig. 58, two oppositely directed imaginary forces Q are applied at the ends of the horizontal diameter. Then by calculating $(\partial U / \partial Q)_{Q=0}$ we find that the decrease in the horizontal diameter is

$$\delta_1 = \left(\frac{2}{\pi} - \frac{1}{2} \right) \frac{PR^3}{EI_z} = 0.137 \frac{PR^3}{EI_z}. \quad (87)$$

Thick Ring.—When the cross sectional dimensions of a curved bar are not small in comparison with the radius of the center line, not only the strain energy due to bending moment but also that due to longitudinal and shearing forces must be taken into account. The change in the angle between two adjacent cross sections (Fig. 59) in this case, from eq. (65), is

$$\Delta d\varphi = \frac{Md\varphi}{AEe} = \frac{Mds}{AEeR}$$

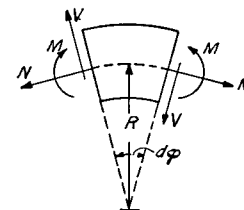


FIG. 59.

and the energy due to bending for the element between the two adjacent cross sections is

$$dU_1 = \frac{1}{2} M \Delta d\varphi = \frac{M^2 ds}{2AEeR}. \quad (d)$$

The longitudinal force N produces an elongation of the element between the two adjacent cross sections in the direction of the center line of the bar equal to Nds/AE and increases the angle $d\varphi$ by Nds/AER (eq. 68). The work done by the forces N during their application is $N^2 ds / 2AE$. During the application of the forces N the couples M do the negative work $-MNds/AER$. Hence the total energy stored in an element of the bar during the application of the forces N is

$$dU_2 = \frac{N^2 ds}{2AE} - \frac{MNds}{AER}. \quad (e)$$

The shearing force V produces sliding of one cross section with respect to another, of the amount $\alpha Vds/AG$, where α is a numerical factor depending upon the shape of the cross section (see p. 170, Part I). The corresponding amount of strain energy is

$$dU_3 = \frac{\alpha V^2 ds}{2AG}. \quad (f)$$

Adding (d), (e) and (f) and integrating along the length of the bar, the total energy of strain of a curved bar becomes

$$U = \int_0^s \left(\frac{M^2}{2AEeR} + \frac{N^2}{2AE} - \frac{MN}{AER} + \frac{\alpha V^2}{2AG} \right) ds. \quad (88)$$

Let us use this equation to solve the problem represented in Fig. 57. Taking as positive the directions shown in Fig. 59, we have

$$M = -PR \cos \varphi; \quad N = -P \cos \varphi; \quad V = P \sin \varphi,$$

where R is the radius of the center line. Substituting in equation (88) and using the Castigliano theorem, we find the vertical deflection of the point B to be

$$\begin{aligned} \delta = \frac{dU}{dP} &= \frac{PR}{AE} \int_0^{\pi/2} \left(\frac{R \cos^2 \varphi}{e} - \cos^2 \varphi + \frac{\alpha E}{G} \sin^2 \varphi \right) d\varphi \\ &= \frac{\pi PR}{4AE} \left(\frac{R}{e} + \frac{\alpha E}{G} - 1 \right). \end{aligned}$$

If the cross section of the bar is a rectangle of the width b and depth h , using for e the approximate value (71) and taking $\alpha = 1.2$, $E/G = 2.6$,

$$\delta = \frac{\pi PR}{4AE} \left(\frac{12R^2}{h^2} + 2.12 \right).$$

When h is small in comparison with R , the second term in the parenthesis representing the influence on the deflection of N and V can be neglected and we arrive at the equation obtained before (see p. 80).

The above theory of curved bars is often applied in calculating stresses in such machine elements as links and eye-shaped ends of bars (Fig. 60). In such cases a difficulty arises in determining the load distribution over the surface of the curved bar. This distribution depends on the amount of clearance between the bolt and the curved bar. A satisfactory solution of the problem may be expected only by

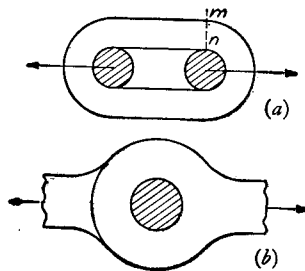


FIG. 60.

combining analytical and experimental methods of investigation.¹²

In a recent paper¹³ the particular case of an eye-shaped end of rectangular cross section, Fig. 60b, was investigated. In this discussion it was assumed that there are no clearances and that the bolt is absolutely rigid. The maximum tensile stress occurs at the intrados in the cross sections perpendicular to the axis of the bar, and its magnitude can be represented by the formula:

$$\sigma_{\max} = \alpha \cdot \frac{8P}{\pi^2 r_a t}, \quad (g)$$

in which P is the total tensile force transmitted by the bar, α is the numerical factor depending on the ratio r_a/r_i between the outer and the inner radii of the eye, and t is the thickness of the eye perpendicular to the plane of the figure. For r_a/r_i equal to 2 and 4 the values of α are respectively 4.30 and 4.39. The values obtained from formula (g) are in satisfactory agreement with experiments.¹⁴

Problems

1. Determine the vertical deflection of the end B of the thin curved bar of uniform cross section and semicircular center line (Fig. 61).

¹² For a theoretical investigation of the problem, see H. Reissner, *Jahrbuch der wissenschaftlichen Gesellschaft für Luftfahrt*, 1928; also J. Beke, *Der Eisenbau*, 1921, p. 233; Fr. Bleich, *Theorie und Berechnung der eis. Brücken*, 1924, p. 256; Blumenfeld, V. D. I., 1907, and Baumann, V. D. I., 1908, p. 397. Experiments have been made by Dr. Mathar, *Forschungsarbeiten* nr. 306, 1928; see also D. Rühl, *Dissertation*, Danzig, 1920; Preuss, V. D. I., Vol. 55, 1911, p. 2173; M. Voropaëff, *Bulletin of Polytechnical Institute*, Kiew, 1910; E. G. Coker, "Photoelasticity," *Journal of the Franklin Inst.*, 1925.

¹³ H. Reissner und Fr. Strauch, *Ingenieur Archiv*, vol. 4, 1933, p. 481.

¹⁴ See G. Bierett, *Mitt. d. deutsch. Mat.-Prüf.-Amtes*, 1931, sonderheft 15. The photo-elastic investigation of the eye-shaped end was made by K. Takemura and Y. Hosokawa, *Rep. Aero. Inst.*, Tokyo, vol. 18, 1926, p. 128. See also M. M. Frocht and H. N. Hill, *Journal of Applied Mechanics*, vol. 7, p. 5. In the latter paper the effect of clearance between the bolt and the hole is investigated.

Solution. The strain energy of bending is

$$U = \int_0^\pi \frac{M^2 R d\varphi}{2EI_z} = \int_0^\pi \frac{P^2 R^2 (1 - \cos \varphi)^2 R d\varphi}{2EI_z}.$$

The deflection at the end is

$$\delta = \frac{dU}{dP} = \frac{PR^3}{EI_z} \int_0^\pi (1 - \cos \varphi)^2 d\varphi = \frac{3\pi PR^3}{2EI_z}.$$

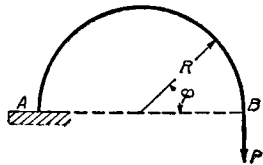


FIG. 61.

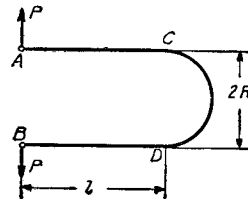


FIG. 62.

2. Determine the horizontal displacement of the end B in the previous problem.

Answer.

$$\delta = \frac{2PR^3}{EI_z}.$$

3. Determine the increase in the distance between the ends A and B of a thin bar of uniform cross section consisting of a semi-circular portion CD and two straight portions AC and BD (Fig 62).

Answer.

$$\delta = \frac{2P}{EI_z} \left[\frac{l^3}{3} + R \left(\frac{\pi}{2} l^2 + \frac{\pi}{4} R^2 + 2lR \right) \right].$$

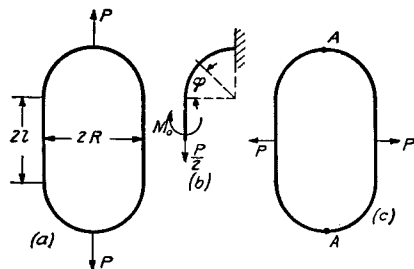


FIG. 63.

4. A link consisting of two semicircles and of two straight portions is submitted to the action of two equal and opposite forces acting along the vertical axis of symmetry (Fig. 63). Determine the maximum bending moment, assuming that the cross sectional dimensions of the link are small in comparison with the radius R.

Solution. Considering only one quarter of the link (Fig. 63, b), we find the statically indeterminate moment M_0 from the condition that the cross section, on which this moment acts, does not rotate. Then

$$\frac{dU}{dM_0} = 0.$$

Noting that for the straight portion $M = M_0$ and that for a curved portion $M = M_0 - (P/2)R(1 - \cos \varphi)$ and taking into consideration the strain energy of bending only, we find

$$\frac{dU}{dM_0} = \frac{d}{dM_0} \left\{ \frac{1}{2EI_z} \int_0^l M_0^2 dx + \frac{1}{2EI_z} \int_0^{\pi/2} \left[M_0 - \frac{PR}{2}(1 - \cos \varphi) \right]^2 R d\varphi \right\} = 0,$$

from which

$$M_0 = \frac{PR^2}{2} \frac{\pi - 2}{2l + \pi R}.$$

For $l = 0$, this coincides with eq. (84) obtained before for a circular ring. The largest moment is at the points of application of forces P and is equal to

$$M_1 = M_0 - \frac{PR}{2}.$$

5. Solve the previous problem, assuming that forces P are applied as shown in Fig. 63 (c).

Answer. The bending moment at points A is

$$M_1 = \frac{PR^2(\pi - 2) + 2Rl + l^2}{2\pi R + 2l}.$$

For $l = 0$, the equation coincides with that for a circular ring. For $R = 0$, $M_1 = Pl/4$ as for a bar with built-in ends.

6. Determine the bending moment M_0 and the increase in the vertical diameter of the circular ring shown in Fig. 58, assuming that the cross section of the ring is a rectangle of width b and

depth h , which dimensions are not small in comparison with the radius R of the center line.

Solution. If we use eq. (88) for the potential energy and eq. (b) for the bending moment, the equation for determining M_0 is

$$\frac{dU}{dM_0} = \int_0^{\pi/2} \left(\frac{M}{AEe} - \frac{N}{AE} \right) d\varphi = 0,$$

from which

$$M_0 = \frac{PR}{2} \left(1 - \frac{2}{\pi} + \frac{2e}{\pi R} \right).$$

Comparing this with eq. (84) we see that the third term in the parenthesis represents the effect of the longitudinal force and of the non-linear stress distribution. The magnitudes of the errors in using the approximate eq. (84) instead of the above accurate equation are given in the table below.

$R/h = 1$	1.5	2	3
$e/R = 0.090$	0.038	0.021	0.009
Error in % = 15.8	6.7	3.7	1.6

It can be seen that in the majority of cases the approximate eq. (84) can be used for calculating M_0 and that the error is substantial only when h approaches R or becomes larger than R .

The increase in the vertical diameter of the ring is obtained from equation

$$\delta = \frac{dU}{dP}.$$

Using eq. (88) for U and substituting in this equation

$$M = M_0 - \frac{PR}{2} (1 - \cos \varphi); \quad N = \frac{P}{2} \cos \varphi; \quad V = -\frac{P}{2} \sin \varphi,$$

we find

$$\delta = \frac{PR^2}{AEe} \left\{ \frac{\pi}{4} - \frac{2}{\pi} \left(1 - \frac{e^2}{R^2} \right) + \frac{2e}{R} \left[\frac{2}{\pi} \left(1 - \frac{e}{R} \right) - \frac{\pi}{8} \right] + \frac{\pi\alpha}{4} \frac{Ee}{GR} \right\}.$$

Comparison with eq. (86) shows that the effect of the longitudinal and of the shearing forces on the magnitude of δ is usually very small.¹⁵

¹⁵ A more accurate solution of the problem shown in Fig. 58 is given by the author; see Bulletin of the Polytechnical Institute in Kiew, 1910; see also Phil. Mag., Vol. 44, 1922, p. 1014, and "Theory of Elasticity," p. 119, 1934. This solution shows that the above theory, based on the assumption that cross sections remain plane during bending, gives very satisfactory results.

7. Determine the bending moments in a thin ring with two axes of symmetry submitted to the action of a uniform internal pressure p .

Solution. Consider one quadrant of the ring (Fig. 64), with semi-axes a and b . If M_0 represents the statically indeterminate moment at A , the bending moment at any cross section C with coordinates x and y is

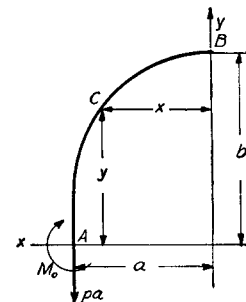


FIG. 64.

$$M = M_0 - pa(a-x) + \frac{p(a-x)^2}{2} + \frac{py^2}{2}$$

$$= M_0 - \frac{pa^2}{2} + \frac{px^2}{2} + \frac{py^2}{2}. \quad (g)$$

Substituting into equation $dU/dM_0 = 0$, we find

$$\left(M_0 - \frac{pa^2}{2} \right) s + \frac{p}{2} (I_x + I_y) = 0,$$

in which s denotes the length of the quadrant of the ring,

$$I_x = \int_0^s y^2 ds \quad \text{and} \quad I_y = \int_0^s x^2 ds.$$

Then

$$M_0 = \frac{pa^2}{2} - \frac{p}{2s} (I_x + I_y). \quad (h)$$

If the ring has the shape of the link shown in Fig. 63, with $a = R$ and $b = l + R$, we obtain

$$s = b - a + \frac{\pi a}{2};$$

$$I_x = \frac{1}{3} (b-a)^3 + \frac{\pi a}{2} (b-a)^2 + \frac{\pi}{4} a^3 + 2a^2(b-a);$$

$$I_y = (b-a)a^2 + \frac{\pi a^3}{4}.$$

Substituting into eq. (h),

$$M_0 = \frac{pa^2}{2} - \frac{p}{2b + (\pi - 2)a} \left[\frac{1}{3} (b-a)^3 + \frac{\pi}{2} a^3 + 3a^2(b-a) + \frac{\pi}{2} a(b-a)^2 \right].$$

The bending moment at any other cross section may now be obtained from eq. (g).

For an elliptical ring the calculations are more complicated.¹⁶ Using the notations $I_x + I_y = \alpha a^2 b$, $M_0 = -\beta p a^2$, the moment at B (Fig. 64) $= M_1 = \gamma p a^2$, and the values of the numerical factors α , β and γ , for different values of the ratio a/b , are as given in the table 5 below:

TABLE 5. CONSTANTS FOR CALCULATING ELLIPTICAL RINGS

$a/b =$	1	0.9	0.8	0.7	0.6	0.5	0.4	0.3
α	1.571	1.663	1.795	1.982	2.273	2.736	3.559	5.327
β	0	0.057	0.133	0.237	0.391	0.629	1.049	1.927
γ	0	0.060	0.148	0.283	0.498	0.870	1.576	3.128

8. A flat *spiral spring* (Fig. 65) is attached at the center to a spindle C . A couple M_0 is applied to this spindle to wind up the spring. It is balanced by a horizontal force P at the outer end of the spring A and by the reaction at the axis of the spindle. Establish the relation between M_0 and the angle of rotation of the spindle if all the dimensions of the spring are given. It is assumed that the angle of twist is not large enough to cause adjacent coils to touch each other.

Solution. Taking the origin of coordinates at A , the bending moment at any point of the spring at distance y from the force P is $M = Py$. The change in the angle between two adjacent cross sections at the point taken, from eq. (67), is

$$\Delta d\varphi = \frac{Mds}{EI_z} = \frac{Pyds}{EI_z}.$$

The total angle of rotation of one end of the spring with respect to the other during winding is

$$\varphi = \int_0^s \frac{Pyds}{EI_z} = \frac{P}{EI_z} \int_0^s yds. \quad (k)$$

¹⁶ See J. A. C. H. Bresse, *Cours de Mécanique appliquée*, 3d ed., Paris, 1880, p. 493. See, also, H. Résal, *Journal de Math. (Liouville)* (3), Vol. 3, 1877; M. Marbec, *Bulletin de l'Association Technique Maritime*, Vol. 19, 1908; M. Goupil, *Annales des Ponts et Chaussées*, Vol. 2, 1912, p. 386, and Mayer Mita, *V. D. I.*, Vol. 58, 1914, p. 649. W. F. Burke, *Nat. Adv. Com. Aeron., Techn. Notes*, 444, 1933.

The integral on the right side of this equation represents the moment of the center line of the spring with respect to the x axis. This moment is obtained by multiplying the total length s of the spiral by the distance of its center of gravity from the x axis. In the usual case, it is sufficiently accurate to take this distance equal to r , the distance from the center of the spindle to the force P . Then, from eq. (k),

$$\varphi = \frac{Prs}{EI_z} = \frac{M_0 s}{EI_z}. \quad (l)$$

If the end A is pin-connected, the turning moment M_0 applied at c produces a reactive force P at fixed end A of the spring. As long as the thickness of the spring is very small and the number of windings of the spiral is large and the coils do not touch, the above assumption that the force P remains horizontal can be considered as sufficiently accurate; hence eq. (l) holds.¹⁷

9. Assuming that the spring represented in Fig. 65 is in an unstressed condition and pin-connected at A , determine the maximum stress produced and the amount of energy stored in the spring by three complete turns of the spindle. Take the spring to be of steel, $\frac{1}{2}$ inch wide, $\frac{1}{40}$ inch thick and 120 inches long.

Solution. Substituting the above figures into eq. (l),

$$6\pi = M_0 \frac{120 \times 40^3 \times 12}{30 \times 10^6 \times \frac{1}{2}},$$

from which $M_0 = 3.07$ lbs. ins.

The amount of energy stored is

$$U = \int_0^s \frac{M^2 ds}{2EI} = \frac{P^2}{2EI} \int_0^s y^2 ds = \frac{P^2}{2EI} \left(sr^2 + \frac{sr^2}{4} \right) = \frac{5}{8} \frac{M_0^2 s}{EI} = 36.1 \text{ lbs. in.}$$

The maximum bending stress is at point B , where the bending moment can be taken equal to $2Pr = 2M_0$, then

$$\sigma_{\max} = 3.07 \times 2 \times 40^2 \times 6 \times 2 = 118,000 \text{ lbs. per sq. in.}$$

¹⁷ A more complete discussion of the problem is given in the book by A. Castigliano, "Theorie d. Biegungs- u. Torsions Federn," Wien, 1888. See also E. C. Wadlow, "Engineer," Vol. 150, p. 474, 1930, and J. A. Van den Broek, *Trans. A. S. M. E.*, Vol. 53, p. 247, 1931.

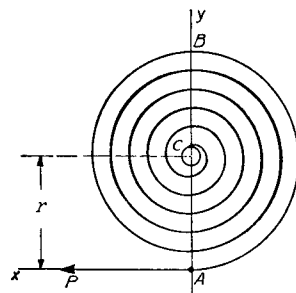


FIG. 65.

10. A piston ring of a circular outer boundary has a rectangular cross section of constant width b and of a variable depth h (Fig. 66). Determine the law of variation of the depth h to obtain a ring which, when assembled with the piston in the cylinder, produces a uniformly distributed pressure on the cylinder wall.

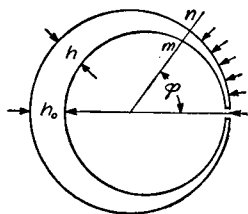


FIG. 66.

Solution. Let r denote the radius of the cylinder, and $r + \delta$ the outer radius of the ring in the unstrained state. An approximate solution of the problem is obtained by using the outer radius of the ring instead of the variable radius of curvature of its center line. Then, by using eq. (67), the change in curvature due to bending is

$$\frac{\Delta d\varphi}{ds} = \frac{1}{r} - \frac{1}{r + \delta} = -\frac{M}{EI}. \quad (a)$$

The bending moment M produced at any cross section mn of the ring by the pressure p uniformly distributed over the outer surface of the ring is

$$M = -2pbr^2 \sin^2 \frac{\varphi}{2}. \quad (b)$$

If we substitute this into (a) and take $bh^3/12$ for I and use δ/r^2 instead of $(1/r) - 1/(r + \delta)$ (for a small δ), then the following equation for calculating h is obtained:

$$\frac{\delta}{r^2} = \frac{p}{E} \frac{24r^2}{h^3} \sin^2 \frac{\varphi}{2}, \quad (c)$$

from which

$$h^3 = \frac{p}{E} \frac{24r^4}{\delta} \sin^2 \frac{\varphi}{2}. \quad (d)$$

Letting $\varphi = \pi$, the maximum value of h^3 , denoted by h_0^3 , is

$$h_0^3 = \frac{p}{E} \frac{24r^4}{\delta}. \quad (e)$$

The maximum bending stress at any cross section mn is

$$\sigma = \frac{M}{Z} = \frac{12pr^2 \sin^2 (\varphi/2)}{h^2}. \quad (f)$$

From (f) and (d) it may be seen that the maximum bending stress occurs at $\varphi = \pi$, i.e., at the cross section opposite to the slot of the

ring. Substituting $h = h_0$ and $\varphi = \pi$ in eq. (f),

$$\sigma_{\max} = \frac{12pr^2}{h_0^2}, \quad (g)$$

from which h_0 can be calculated if the working stress for the ring and the pressure p are given. The value of δ is found by substituting h_0 into eq. (e).

It may be noted that if two equal and opposite tensile forces P be applied tangentially to the ends of the ring at the slot they produce at any cross section mn , the bending moment

$$-Pr(1 - \cos \varphi) = -2Pr \sin^2 \varphi/2,$$

i.e., the bending moment varies with φ exactly in the same manner as that given by eq. (b). Therefore, if the ends of the open ring be pulled together, and in this condition it be machined to the outer radius r , such a ring will, when assembled, produce a uniform pressure against the wall of the cylinder.¹⁸

Determine, for example, δ and h_0 for a cast iron piston ring if $r = 10$ in., $\sigma_w = 4,200$ lbs. per sq. in., $p = 1.4$ lbs. per sq. in., and $E = 12 \times 10^6$ lbs. per sq. in. Substituting in eq. (g), we find $h_0 = 0.632$ in. From eq. (e), $\delta = 0.111$ in.

11. Derive formula (87), given on p. 83.

12. Experience shows that the insertion of a stud in a chain link considerably increases its strength. Find the bending moment M_1 at the points of application of the loads P and the axial compressive force $2H$ in the stud for the link shown in Fig. 63.

Solution. Since in the case of a stud the horizontal cross section, Fig. 63b, does not move horizontally and does not rotate, the statically indeterminate quantities M_0 and H are found from the equations:

$$\frac{\partial U}{\partial M_0} = 0 \quad \text{and} \quad \frac{\partial U}{\partial H} = 0,$$

from which

$$M_0 = \frac{PR}{2} (1 - \alpha) \quad \text{and} \quad H = \frac{P}{2} \beta,$$

¹⁸ This theory was developed by H. Résal, Annales des mines, Vol. 5, p. 38, 1874; Comptes Rendus, Vol. 73, p. 542, 1871. See also E. Reinhardt, V. D. I., Vol. 45, p. 232, 1901; H. Friedmann, Zeitschr. d. Österreich. Ing. u. Arch. Verein, Vol. 60, p. 632, 1908, and V. D. I., Vol. 68, p. 254, 1924.

where ¹⁹

$$\alpha = \frac{(m+2)[m^3 + 6m^2 + 12(4-\pi)m + 48(\pi-3)]}{m^4 + 4\pi m^3 + 48m^2 + 24\pi m + 24(\pi^2 - 8)},$$

$$\beta = \frac{12(m+2)[(\pi-2)m + 2(4-\pi)]}{m^4 + 4\pi m^3 + 48m^2 + 24\pi m + 24(\pi^2 - 8)},$$

$$m = \frac{l}{R}.$$

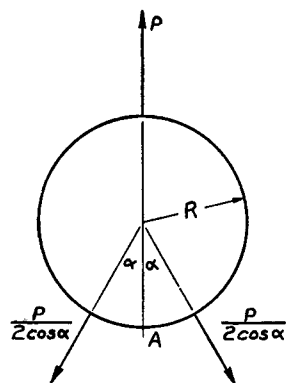


FIG. 67.

13. Find bending moment M_0 and tensile force H in the cross section A of the symmetrically loaded circular ring shown in Fig. 67.

Answer.

$$H = P \cdot \frac{\pi - \alpha}{2\pi} \tan \alpha,$$

$$M_0 = -\frac{PR}{2\pi} [1 + \sec \alpha - (\pi - \alpha) \tan \alpha].$$

14. **Arch Hinged at the Ends.**—Figure 68 shows an arch with hinged ends at the same level carrying a vertical load. The vertical components of the reactions at A and B may be determined from equations of equilibrium in the same manner as for a simply supported beam, and the horizontal com-

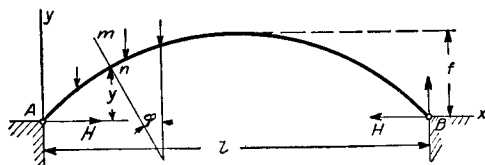


FIG. 68.

ponents must be equal and opposite in direction. The magnitude H of these components is called the *thrust of the arch*. It cannot be obtained statically, but may be de-

¹⁹ See paper by H. J. Gough, H. L. Cox and D. G. Sopwith, loc. cit. p. 75.

termined by use of the theorem of Castigliano. In the case of a flat arch, the two last terms in the general expression (88) for the strain energy can be neglected and for usual proportions of arches the product AeR can be replaced by the moment of inertia I_z of the cross section. The equation for calculating H is then

$$\frac{dU}{dH} = \frac{d}{dH} \int_0^s \left(\frac{M^2}{2EI_z} + \frac{N^2}{2AE} \right) ds = 0. \quad (a)$$

The bending moment at any cross section mn of the arch can be represented by

$$M = M_0 - Hy, \quad (b)$$

in which M_0 is the bending moment calculated for the corresponding section of a simply supported beam having the same load and the same span as the arch. The second term under the integral sign of eq. (a) represents the strain energy due to compression in the tangential direction and is of secondary importance. A satisfactory approximation for flat arches is obtained by assuming this compression equal to the thrust H . Substituting expression (b) and $N = H$ in eq. (a) we obtain

$$-\int_0^s \frac{(M_0 - Hy)y ds}{EI_z} + \int_0^s \frac{H ds}{AE} = 0,$$

from which

$$H = \frac{\int_0^s \frac{M_0 y ds}{EI_z}}{\int_0^s \frac{y^2 ds}{EI_z} + \int_0^s \frac{ds}{AE}}. \quad (89)$$

For an arch of constant cross section, using the notation $k^2 = I_z/A$, eq. (89) becomes

$$H = \frac{\int_0^s M_0 y ds}{\int_0^s y^2 ds + k^2 \int_0^s ds}. \quad (90)$$

The second term in the denominator represents the effect of

the shortening of the center line of the arch due to the longitudinal compression. In many cases it is small and can be neglected. Then

$$H = \frac{\int_0^s M_0 y ds}{\int_0^s y^2 ds} \quad (9I)$$

Take, for example, the case of a parabolic arch carrying a continuous load uniformly distributed along the length of the span with a center line given by the equation:

$$y = \frac{4fx(l-x)}{l^2} \quad (c)$$

Then

$$M_0 = \frac{q}{2}x(l-x) \quad (d)$$

Substituting (c) and (d) into eq. (9I), we obtain

$$H = \frac{ql^2}{8f} \quad (e)$$

The actual thrust, H , will be less than that obtained from eq. (e). To give some idea of the possible error ΔH , the ratios $(\Delta H)/H$ for various proportions of arches are given in the Table 6 below.²⁰ In calculating this table the whole expres-

TABLE 6

$\frac{f}{l} =$	$\frac{1}{12}$			$\frac{1}{8}$			$\frac{1}{4}$		
$\frac{h}{l} =$	$\frac{1}{10}$	$\frac{1}{20}$	$\frac{1}{30}$	$\frac{1}{10}$	$\frac{1}{20}$	$\frac{1}{30}$	$\frac{1}{10}$	$\frac{1}{20}$	$\frac{1}{30}$
$\frac{\Delta H}{H} =$	0.1771	0.0513	0.0235	0.0837	0.0224	0.0101	0.0175	0.00444	0.00198

²⁰ See author's paper, "Calcul des Arcs Élastiques," Paris, 1922. Béranger, Ed.

sion (88) for strain energy was used and it was assumed that for any cross section of the arch

$$A = \frac{A_0}{\cos \varphi}; \quad EI_z = \frac{EI_0}{\cos \varphi},$$

where A_0 and EI_0 are respectively the cross sectional area and the flexural rigidity of the arch at the top, φ is the angle between the cross section and the y axis and h is the depth of the cross section at the top. Equation (e) was used in calculating the value of H in the ratio $\Delta H/H$.

This shows that the error of equation (e) has perceptible magnitude only for flat arches of considerable thickness.

As the supports of the arch are a fixed distance apart, a change in the temperature may produce appreciable stresses in the structure. To calculate the thrust due to an increase in temperature of t degrees, we assume that one of the supports is movable. Then, thermal expansion would increase the span of the arch by αlt , where α is the coefficient of thermal expansion of the material of the arch. The thrust is then found from the condition that it prevents such an expansion by producing a decrease in the span equal to αlt . Using the Castigliano theorem, we obtain

$$\frac{dU}{dH} = \frac{d}{dH} \int_0^s \left(\frac{M^2}{2EI_z} + \frac{N^2}{2AE} \right) ds = \alpha lt. \quad (f)$$

Taking only the thermal effect and putting $M_0 = 0$ and $N = H$, we obtain from (f)

$$H = \frac{\alpha lt}{\int_0^s \frac{y^2 ds}{EI_z} + \int_0^s \frac{ds}{AE}} \quad (92)$$

A more detailed study of stresses in arches may be found in books on the theory of structure.²¹

²¹ Johnson, Bryan and Turneare, "Modern Framed Structures," Part II. See also Weyrauch, "Theorie d. Elastischen Bogenträger"; E. Mörsch, "Schweizerische Bauzeitung," Vol. 47.

15. Stresses in a Flywheel.—Due to the effect of the spokes, the rim of a rotating flywheel undergoes not only extension but also bending. We take as the free body a portion of the rim (Fig.

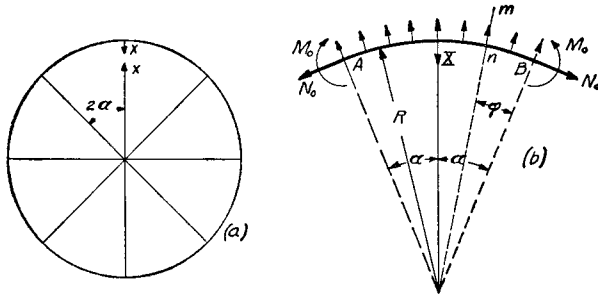


FIG. 69.

69, *b*) between two cross sections which bisect the angles between the spokes. Let

- R = the radius of the center line of the rim
- A = the cross sectional area of the rim
- A_1 = the cross sectional area of a spoke
- I = moment of inertia of the cross section of the rim
- 2α = the angle between two consecutive spokes
- q = the weight of the rim per unit length of the center line
- q_1 = the weight of a spoke per unit length
- ω = the angular velocity of the wheel.

From the condition of symmetry there can be no shearing stresses over the cross sections A and B and the forces acting on these cross sections are reducible to the longitudinal force N_0 and the bending moment M_0 . If X denotes the force exerted by the spoke on the rim, the equation of equilibrium of the portion AB of the rim is

$$2N_0 \sin \alpha + X - 2R^2 \sin \alpha \frac{q}{g} \omega^2 = 0,$$

from which

$$N_0 = \frac{q}{g} \omega^2 R^2 - \frac{X}{2 \sin \alpha}. \quad (a)$$

The longitudinal force N at any cross section mn is

$$N = N_0 \cos \varphi + \frac{q\omega^2 R}{g} 2R \sin^2 \frac{\varphi}{2} = \frac{q\omega^2 R^2}{g} - \frac{X \cos \varphi}{2 \sin \alpha}. \quad (b)$$

The bending moment for the same cross section is

$$M = M_0 - N_0 R (1 - \cos \varphi) + \frac{q\omega^2 R^3}{g} 2 \sin^2 \frac{\varphi}{2} = M_0 + \frac{XR}{\sin \alpha} \sin^2 \frac{\varphi}{2}. \quad (c)$$

The force X and the moment M_0 cannot be determined from the equations of statics but are calculated by use of the theorem of least work. The strain energy of the portion AB of the rim is²²

$$U_1 = 2 \int_0^\alpha \frac{M^2 R d\varphi}{2EI} + 2 \int_0^\alpha \frac{N^2 R d\varphi}{2EA}. \quad (d)$$

The tensile force N_1 at any cross section of the spoke at distance r from the center of the wheel is²³

$$N_1 = X + \frac{q_1 \omega^2}{2g} (R^2 - r^2);$$

hence the strain energy of the spoke is

$$U_2 = \int_0^R \frac{N_1^2 dr}{2A_1 E}. \quad (e)$$

The equations for calculating M_0 and X are

$$\frac{\partial}{\partial M_0} (U_1 + U_2) = 0, \quad (f)$$

$$\frac{\partial}{\partial X} (U_1 + U_2) = 0. \quad (g)$$

Substituting (d) and (e), we obtain, from eqs. (f) and (g),

$$M_0 = -\frac{XR}{2} \left(\frac{1}{\sin \alpha} - \frac{1}{\alpha} \right), \quad (93)$$

$$X = \frac{2}{3} \frac{q\omega^2 R^2}{g} \cdot \frac{I}{\frac{AR^2}{I} f_2(\alpha) + f_1(\alpha) + \frac{A}{A_1}}, \quad (94)$$

in which

$$f_1(\alpha) = \frac{1}{2 \sin^2 \alpha} \left(\frac{\sin 2\alpha}{4} + \frac{\alpha}{2} \right),$$

$$f_2(\alpha) = \frac{1}{2 \sin^2 \alpha} \left(\frac{\sin 2\alpha}{4} + \frac{\alpha}{2} \right) - \frac{1}{2\alpha};$$

²² It is assumed that the thickness of the rim is small in comparison with R and only the energy of the bending and tension is taken into account.

²³ The length of the spoke is taken equal to R . In practice it will be somewhat less than R .

several values of the functions f_1 and f_2 , for various numbers of spokes, are given in the table 7 below.

TABLE 7

$n =$	4	6	8
$f_1(\alpha)$	0.643	0.957	1.274
$f_2(\alpha)$	0.00608	0.00169	0.00076

From this table the force X in the spoke is determined from eq. (94) and the bending moment M_0 from eq. (93). Then the longitudinal force and bending moment for any cross section mn of the rim may be found from eqs. (a), (b) and (c).²⁴

Take, as an example, a steel flywheel making 600 r.p.m., with radius $R = 60$ in., cross section of the rim a square 12×12 sq. in., and with six spokes of cross sectional area $A_1 = 24$ sq. in. The rim is considered as a rotating ring which can expand freely; then the tensile stress due to centrifugal force is, from eq. (15), Part I,

$$\sigma_0 = 0.106 \times \omega^2 \times R^2 = 0.106 \times 62.8^2 \times 5^2 = 10,450 \text{ lbs. per sq. in.}$$

In the case of six spokes, $\alpha = 30^\circ$, $f_1(\alpha) = 0.957$, $f_2(\alpha) = 0.00169$. Then the force in each spoke is, from eq. (94),

$$X = \frac{2}{3} \frac{q\omega^2 R^2}{g} \cdot \frac{1}{300 \times 0.00169 + 0.957 + 6} = 0.0893 \frac{q\omega^2 R^2}{g}.$$

The longitudinal force for the cross section bisecting the angle between the spokes is, from eq. (a),

$$N_0 = \frac{q\omega^2 R^2}{g} - 0.0893 \frac{q\omega^2 R^2}{g} = 0.911 \frac{q\omega^2 R^2}{g}.$$

The bending moment for the same cross section, from eq. (93), is

$$M_0 = -0.242 \frac{q\omega^2 R^2}{g}.$$

²⁴ The above theory was developed by R. Bredt, V. D. I., Vol. 45 (1901), p. 267, and H. Brauer, Dingers Polytechn. Journ., 1908, p. 353, see also J. G. Longbottom, Inst. Mech. Eng. Proc., London, 1924, p. 43; and K. Reinhardt, Forschungsarbeiten, nr. 226, 1920. A similar problem arises when calculating stresses in retaining rings of large turbo-generators, see E. Schwerin, Electrotechn. Ztschr. 1931, p. 40.

The maximum stress at this cross section is

$$\sigma_{\max} = \frac{N_0}{A} - \frac{M_0}{Z} = 10,780 \text{ lbs. per sq. in.}$$

For the cross section of the rim at the axis of the spoke, eqs. (b) and (c) give

$$(N)_{\varphi=\alpha} = 0.923 \frac{q\omega^2 R^2}{g}; \quad (M)_{\varphi=\alpha} = 0.476 \frac{q\omega^2 R^2}{g}.$$

The maximum stress at this cross section is

$$\sigma_{\max} = 12,100 \text{ lbs. per sq. in.}$$

In this case the effect of the bending of the rim on the maximum stress is small and the calculation of the stresses in the rim, as in a free rotating ring, gives a satisfactory result.

16. Deflection Curve for a Bar with a Circular Center Line.—In the case of a thin curved bar with a circular center line the differential equation for the deflection curve is analogous to that for a straight bar (eq. 141, p. 182, Part I). Let $ABCD$ (Fig. 70) represent the center line of a circular ring after deformation and let u denote the small radial displacements during this deformation. The variation in the curvature of the center line during bending can be studied by considering one element mn of the ring and the corresponding element m_1n_1 of the deformed ring included between the same radii (Fig. 70, b). The initial length of the element mn and its initial curvature are

$$ds = R d\varphi; \quad \frac{d\varphi}{ds} = \frac{d\varphi}{R d\varphi} = \frac{1}{R}. \quad (a)$$

For small deflections the curvature of the same element after deformation can be taken equal to the curvature of the element m_1n_1 . This latter is given by equation:

$$\frac{1}{R_1} = \frac{d\varphi + \Delta d\varphi}{ds + \Delta ds}, \quad (b)$$

in which $d\varphi + \Delta d\varphi$ denotes the angle between the normal cross sections m_1 and n_1 of the deformed bar and $ds + \Delta ds$ the

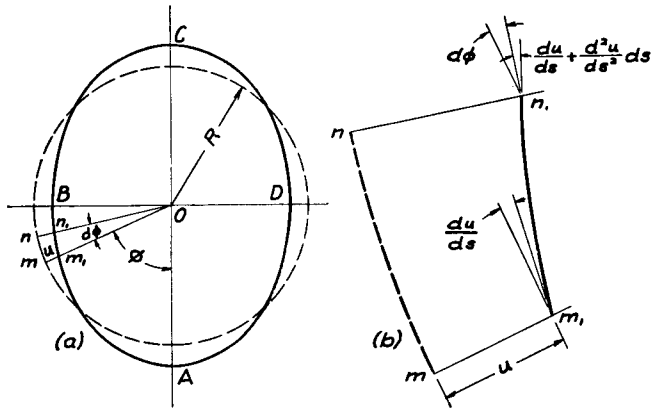


FIG. 70.

length of the element m_1n_1 . The displacement u is considered positive if towards the center of the ring and is assumed to be very small in comparison with the radius of the ring. Then the angle between the tangent at m_1 to the center line and the normal to the radius m_1O is du/ds . The corresponding angle at the cross section n_1 is

$$\frac{du}{ds} + \frac{d^2u}{ds^2} ds.$$

Then

$$\Delta d\varphi = \frac{d^2u}{ds^2} ds. \quad (c)$$

In comparing the length of the element m_1n_1 with that of the element mn , the small angle du/ds is neglected and the length m_1n_1 is taken equal to $(R - u)d\varphi$. Then

$$\Delta ds = -ud\varphi = -\frac{uds}{R}. \quad (d)$$

Substituting (c) and (d) into eq. (b), we obtain

$$\frac{1}{R_1} = \frac{d\varphi + \frac{d^2u}{ds^2} ds}{ds \left(1 - \frac{u}{R}\right)},$$

or neglecting the small quantities of higher order,

$$\frac{1}{R_1} = \frac{d\varphi}{ds} \left(1 + \frac{u}{R}\right) + \frac{d^2u}{ds^2} = \frac{1}{R} \left(1 + \frac{u}{R}\right) + \frac{d^2u}{ds^2},$$

from which

$$\frac{1}{R_1} - \frac{1}{R} = \frac{u}{R^2} + \frac{d^2u}{ds^2}. \quad (e)$$

The relationship between the change in curvature and the magnitude of bending moment, from eq. (67), for thin bars is

$$\frac{1}{R_1} - \frac{1}{R} = -\frac{M}{EI}. \quad (f)$$

The minus sign on the right side of the equation follows from the sign of the bending moment which is taken to be positive when it produces a decrease in the initial curvature of the bar (Fig. 47). From (e) and (f) it follows that

$$\frac{d^2u}{ds^2} + \frac{u}{R^2} = -\frac{M}{EI}. \quad (95)$$

This is the differential equation for the deflection curve of a thin bar with circular center line. For an infinitely large R this equation coincides with eq. (79), Part I, for straight bars.

As an example of the application of eq. (95) let us consider the problem represented in Fig. 58. The bending moment at any cross section m_1n_1 is, from eq. (c), p. 82,

$$M = \frac{PR}{2} \left(\cos \varphi - \frac{2}{\pi} \right),$$

and eq. (95) becomes

$$\frac{d^2u}{ds^2} + \frac{u}{R^2} = \frac{PR}{2EI} \left(\frac{2}{\pi} - \cos \varphi \right)$$

or

$$\frac{d^2u}{d\varphi^2} + u = \frac{PR^3}{2EI} \left(\frac{2}{\pi} - \cos \varphi \right).$$

The general solution of this equation is

$$u = A \cos \varphi + B \sin \varphi + \frac{PR^3}{EI\pi} - \frac{PR^3}{4EI} \varphi \sin \varphi.$$

The constants of integration A and B here are determined from the condition of symmetry

$$\frac{du}{d\varphi} = 0, \quad \text{for} \quad \varphi = 0 \quad \text{and for} \quad \varphi = \frac{\pi}{2};$$

which are satisfied by taking

$$B = 0; \quad A = -\frac{PR^3}{4EI}.$$

Then

$$u = \frac{PR^3}{EI\pi} - \frac{PR^3}{4EI} \varphi \sin \varphi - \frac{PR^3}{4EI} \cos \varphi.$$

For $\varphi = 0$ and $\varphi = \pi/2$, we obtain

$$(u)_{\varphi=0} = \frac{PR^3}{EI} \left(\frac{1}{\pi} - \frac{1}{4} \right); \quad (u)_{\varphi=\pi/2} = \frac{PR^3}{EI} \left(\frac{1}{\pi} - \frac{\pi}{8} \right).$$

These results are in complete agreement with eqs. (86) and (87) obtained before by using the Castigliano theorem.²⁵

17. Deflection of Bars with a Small Initial Curvature.—If a bar with a small initial curvature is bent by transverse forces only, the deflections may be calculated by the method used for a straight bar. The conditions are quite different, however, if there are longitudinal forces in addition to the transverse forces. A small initial curvature makes a great change in the effect of these longitudinal forces on the deflection. The solution of this involved problem may be greatly simplified by using trigonometric series for representing the initial shape of the curve and the deflection due to

²⁵ Differential eq. (95) for the deflection of a circular ring was established by J. Boussinesq; see *Comptes Rendus*, Vol. 97, p. 843, 1883. See also H. Lamb, *London Math. Soc. Proc.*, Vol. 19, p. 365, 1888. Various examples of applications of this equation are given in a paper by R. Mayer in *Zeitschr. f. Math. u. Phys.*, Vol. 61, p. 246, 1913.

bending.²⁶ It is assumed, as before, that the curved bar has a plane of symmetry in which the external forces act and the bar is taken as simply supported at the ends. Let y_0 denote the initial ordinates of the center line of the bar, measured from the chord joining the centroids of the ends, and y_1 the deflections produced by the external forces, so that the total ordinates after bending are

$$y = y_0 + y_1. \quad (a)$$

Let the initial deflection curve be represented by the series

$$y_0 = b_1 \sin \frac{\pi x}{l} + b_2 \sin \frac{2\pi x}{l} + \dots \quad (b)$$

and the deflection produced by the load be

$$y_1 = a_1 \sin \frac{\pi x}{l} + a_2 \sin \frac{2\pi x}{l} + \dots \quad (c)$$

In this case the same expression (53) for strain energy can be used as for straight bars. Taking the loading shown in Fig. 35, it is necessary in calculating the work done by the longitudinal forces S to replace the quantity λ (see eq. 56) by

$$\begin{aligned} \lambda_1 - \lambda_0 &= \frac{1}{2} \int_0^l \left[\frac{d(y_1 + y_0)}{dx} \right]^2 dx - \frac{1}{2} \int_0^l \left(\frac{dy_0}{dx} \right)^2 dx \\ &= \frac{\pi^2}{4l} \left(2 \sum_{n=1}^{\infty} n^2 a_n b_n + \sum_{n=1}^{\infty} n^2 a_n^2 \right). \end{aligned} \quad (96)$$

This represents the longitudinal displacement of one end of the curved bar with respect to the other during deflection.

We proceed as in the case of straight bars (p. 48) and give to the bar an infinitely small additional deflection $da_n \sin (n\pi x/l)$. The work done by the longitudinal forces S during this deflection is

$$S \frac{\partial(\lambda_1 - \lambda_0)}{\partial a_n} da_n = S \frac{n^2 \pi^2}{2l} (a_n + b_n) da_n.$$

The work done by the load P is

$$P \sin \frac{n\pi c}{l} da_n$$

and the increase in strain energy, from eq. (53), is

$$\frac{EI\pi^4}{2l^3} n^4 a_n da_n.$$

²⁶ See author's paper, *Festschrift zum siebzigsten Geburtstage A. Föppl*, p. 74.

The equation for calculating a_n is

$$\frac{EI\pi^4}{2l^3} n^4 a_n da_n = P \sin \frac{n\pi c}{l} da_n + S \frac{n^2\pi^2}{2l} (a_n + b_n) da_n,$$

from which

$$a_n = \frac{2Pl^3 \sin \frac{n\pi c}{l} + Sn^2\pi^2 l^2 b_n}{EI\pi^4 n^4 - Sn^2\pi^2 l^2}.$$

Substituting into expression (c) and using the notation,

$$y_1 = \frac{2Pl^3}{EI\pi^4} \left(\frac{\sin \frac{\pi c}{l} \sin \frac{\pi x}{l}}{1 - \alpha} + \frac{\sin \frac{2\pi c}{l} \sin \frac{2\pi x}{l}}{2^4 - 2^2\alpha} + \dots \right) + \alpha \left(\frac{b_1 \sin \frac{\pi x}{l}}{1 - \alpha} + \frac{b_2 \sin \frac{2\pi x}{l}}{2^2 - \alpha} + \dots \right). \quad (97)$$

The first member of the right side of eq. (97) represents the deflection of a straight bar (see eq. 58), while the second gives the additional deflection due to the initial curvature.

Take, for example, a bar which has an initial deflection $y_0 = b \sin (\pi x/l)$. The maximum deflection is at the middle of the span and is equal to b . If only the longitudinal forces S act on the bar ($P = 0$), the deflection at the middle produced by these forces is obtained from eq. (97) by substituting $P = 0$; $b_1 = b$; $b_2 = b_3 = \dots = 0$. Then

$$y_1 = \frac{\alpha b \sin \frac{\pi x}{l}}{1 - \alpha}. \quad (d)$$

The total ordinates of the center line after bending are

$$y = y_1 + y_0 = \frac{\alpha b \sin \frac{\pi x}{l}}{1 - \alpha} + b \sin \frac{\pi x}{l} = \frac{b}{1 - \alpha} \sin \frac{\pi x}{l} \dots \quad (98)$$

Due to longitudinal compressive forces S the ordinates of the center line increase in the ratio $1/(1 - \alpha)$, i.e., the increase of ordinates depends upon the quantity α , which is the ratio of the longitudinal force to the critical force. If, instead of compressive forces, longi-

tudinal tensile forces act on the bar, it is only necessary to substitute $-\alpha$ instead of α in the previous equations. In the particular case in which $y_0 = b \sin (\pi x/l)$ the ordinates of the center line after deformation become

$$y = \frac{b}{1 + \alpha} \sin \frac{\pi x}{l}. \quad (99)$$

It is seen that the longitudinal tensile force diminishes the initial ordinates. Taking, for instance, $\alpha = 1$, i.e., taking the longitudinal force equal to its critical value, we find

$$y = \frac{1}{2} b \sin \frac{\pi x}{l},$$

i.e., such a longitudinal force reduces the initial ordinates of the bar by half.

18. Bending of Curved Tubes.—In discussing the distribution of bending stresses in curved bars (art. 11) it was assumed that the shape of the cross section remains unchanged. Such an assumption is justifiable as long as we have a solid bar, because the very small displacements in the plane of the cross section due to lateral contraction and expansion have no substantial effect on the stress distribution. The condition is very different, however, in the case of a thin curved tube in bending. It is well known that curved tubes with comparatively thin walls prove to be more flexible during bending than would be expected from the usual theory of curved bars.²⁷ A consideration of the distortion of the cross section during bending is necessary in such cases.²⁸

Consider an element between two adjacent cross sections of a curved round pipe (Fig. 71) which is bent by couples in the direction indicated. Since both the tensile forces at the

²⁷ Extensive experimental work on the flexibility of pipe bends was done by A. Bantlin, V. D. I., Vol. 54, 1910, p. 45, and Forschungsarbeiten, nr. 96. See also W. Hovgaard, Journal of Math. and Phys., Mass. Institute of Technology, Vol. 7, 1928, and A. M. Wahl, Trans. Amer. Soc. Mech. Eng., Vol. 49, 1927.

²⁸ This problem for the pipe of circular section was discussed by Th. v. Kármán, V. D. I., Vol. 55, p. 1889, 1911. The case of curved pipes of rectangular cross section was considered by the author; see Amer. Soc. Mech. Eng., Vol. 45, p. 135, 1923.

convex side of the tube and the compressive forces at the concave side have resultants towards the neutral axis, the previously circular cross sections are flattened and become elliptical. This flattening of the cross section affects the strain of longitudinal fibers of the tube. The outer fiber ab takes some position a_1b_1 after bending; denote its displacement towards the neutral axis by δ . The total elongation of the fiber is

$$a_1b_1 - ab = a_1b_1 - a_1e_1 - (ab - a_1e_1). \quad (a)$$

The angle between the adjacent cross sections ac and bd is denoted by $d\varphi$, its variation during bending by $\Delta d\varphi$, the radius of the center line by R , and the radius of the middle surface of the tube by a . It is assumed that the ratio a/R is small enough that the neutral axis can be taken through the centroid of the cross section. Then, from the figure we obtain

$$a_1b_1 - a_1e_1 = (a - \delta)\Delta d\varphi \approx a\Delta d\varphi.^{29}$$

The total elongation of the fiber ab as given by eq. (a) is

$$a\Delta d\varphi - \delta d\varphi$$

and the unit elongation is

$$\epsilon = \frac{a\Delta d\varphi - \delta d\varphi}{(R + a)d\varphi} = \frac{a}{R + a} \frac{\Delta d\varphi}{d\varphi} - \frac{\delta}{R + a}. \quad (b)$$

The first term on the right side of this equation represents the strain in the fiber due to the rotation of the cross section bd with respect to the cross section ac . This is the elongation which is considered in the bending of solid bars. The second term on the right side of eq. (b) represents the effect of the flattening of the cross section. It is evident that this effect may be of considerable importance. Take, for instance, $R + a = 60$ in. and $\delta = 0.02$ in. Then $\delta/(R + a) = 1/3,000$ and the corresponding stress for a steel tube is 10,000 lbs. per sq. in.

²⁹ The displacement δ is considered as very small in comparison with the radius a .

Hence a very small flattening of the cross section produces a substantial decrease in the stress at the outermost fiber ab . A similar conclusion may be drawn for the fiber cd on the concave side of the bend. A change in the direction of the bending

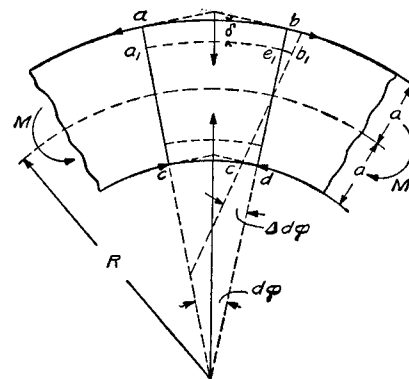


FIG. 71.

moment causes a change of sign of the normal stresses and as a result, instead of a flattening of the tube in the radial direction, there is a flattening in the direction perpendicular to the plane of Fig. 71 and the fiber ab , due to this flattening, is displaced outward. From the same reasoning as above it may be shown that here again the flattening of the cross section produces a decrease in the stress at the most remote fibers. It may therefore be concluded that the fibers of the tube farthest from the neutral axis do not take the share in the stresses which the ordinary theory of bending indicates. This affects the bending of the tube in the same way as a decrease in its moment of inertia. Instead of eq. (67) which was derived for solid curved bars, the following equation must be used in calculating the deflections of thin tubes:

$$\Delta d\varphi = \frac{MRd\varphi}{kEI_z}, \quad (100)$$

in which k is a numerical factor, less than unity, which takes care of the flattening. This factor depends upon the proportions of the bend and can be calculated from the following

approximate formula.³⁰

$$k = 1 - \frac{9}{10 + 12 \left(\frac{tR}{a^2} \right)^2}, \quad (101)$$

in which t is the thickness of the tube. This indicates that the effect of the flattening depends only upon the magnitude of the ratio tR/a^2 .

As for the effect of the flattening on the stress distribution, Kármán showed that, instead of the simple equation for normal bending stresses³¹ $\sigma = My/I_z$ in which y denotes the distance from the neutral axis, the following more complicated equation must be used:

$$\sigma = \frac{My}{kI_z} \left(1 - \beta \frac{y^2}{a^2} \right), \quad (c)$$

in which

$$\beta = \frac{6}{5 + 6 \left(\frac{tR}{a^2} \right)^2}.$$

The maximum stress, obtained from (c), is

$$\sigma_{\max} = k_1 \frac{Md}{2I_z}, \quad (102)$$

in which d is the outer diameter of the tube and

$$k_1 = \frac{2}{3k\sqrt{3\beta}}$$

is a numerical factor which depends upon the proportions of the bend. Several values of k_1 are given below:

TABLE 8

$\frac{tR}{a^2} = 0.3$	0.5	1.0
$k_1 = 1.98$	1.30	0.88

³⁰ See paper by Th. Kármán, loc. cit., p. 107.

³¹ It is assumed that R is large in comparison with a and that a linear stress distribution is a sufficiently accurate assumption.

It is seen that when tR/a^2 is small, the actual maximum stress is considerably greater than that given by the usual theory which neglects the flattening of the cross section.

A theory analogous to the above may also be developed in the case of a tube of rectangular cross section.³² For example, in the case of a thin tube of square cross section, the coefficient k in eq. (100) is found to depend upon the magnitude of the ratio

$$n = \frac{b^4}{R^2 t^2},$$

in which t is the thickness of the wall, R the radius of the center line of the bend and b the length of the side of the cross section. Then

$$k = \frac{1 + 0.0270n}{1 + 0.0656n}. \quad (103)$$

For instance, if $b/R = 0.1$ and $b/t = 50$, we obtain $n = 25$ and, from (103), $k = 0.63$. The maximum stress in tubes of rectangular section increases in the same proportion as the flexibility, i.e., in the above example the distortion of the cross section increases the maximum stress approximately, by 60 per cent.

If a cross section of a curved bar has flanges of a considerable width, again the question of distortion of the cross section becomes of practical importance. Such a problem we have, for example, when investigating bending stresses at a corner of a rigid frame of an I section, Fig. 72a. Considering an element of the frame between the two consecutive cross sections mn and m_1n_1 , we see that the longitudinal bending stresses σ in the flanges give the components in a radial direction which tend to produce bending of the flanges, Fig. 72b. This bending results in some diminishing of longitudinal

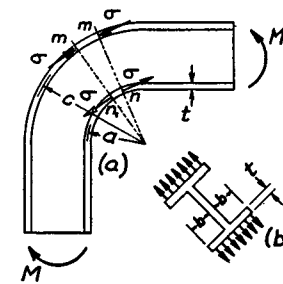


FIG. 72.

³² Such a problem occurs, for instance, in the design of a Fairbairn crane. See reference 28.

bending stress σ in portions of the flanges at a considerable distance from the web. To take into account this fact, an *effective width* αb of a flange must be used in using formula (75) for an I section. Naturally the magnitude of the factor α , defining the effective width of the flange, depends on the flexibility of the flanges, which is expressed by the quantity:

$$\beta = 1.32 \frac{b}{\sqrt{tr}}, \quad (d)$$

in which t is the thickness of the flange and r its radius of curvature. For the flange at the intrados $r = a$, and for the outer flange $r = c$. The calculations show that if $\beta < 0.65$, the bending of the flanges can be neglected and we can directly apply the theory developed in Art. 11. For larger values of β the formula

$$\alpha b = \left(\frac{1}{\beta} - \frac{1}{2\pi\beta^3} \right) b \quad (e)$$

can be used³³ for calculating the *effective width* of a flange. Assume, for example, that we have the width of the flange $b = 6$ in., the corresponding radius $r = 8$ in., and the thickness $t = 1$ in. Then, from formula (d), we obtain $\beta = 2.80$ and the effective width of the flange is $0.35 \times 6 = 2.1$ in.

19. Bending of a Curved Bar out of its Plane of Initial Curvature.—In our previous discussion we have dealt with the bending of curved bars in the plane of their initial curvature. There are cases, however, in which the forces acting on a curved bar do not lie in the plane of the center line of the bar.³⁴

³³ For derivation of this formula see Dr. Dissertation by Otto Steinhardt, Darmstadt, 1938. The experiments made by Steinhardt are in satisfactory agreement with the formula.

³⁴ Several problems of this kind have been discussed by I. Stutz, *Zeitschr. d. Österr. Arch.- u. Ing.-Ver.*, 1904, p. 682; H. Müller-Breslau, *Die neueren Methoden der Festigkeitslehre*, 2 ed., 1913, p. 258, and 4th ed., p. 265; and B. G. Kannenberg, *Der Eisenbau*, 1913, p. 329. The case of a circular ring supported at several points and loaded by forces perpendicular to the plane of the ring was discussed by F. Düsterbehn, *Der Eisenbau*, 1920, p. 73, and by G. Unold, *Forschungsarbeiten*, nr. 255, Berlin, 1922. The same problem was discussed by C. B. Biezeno

Then it is necessary to consider the deflection of the bar in two perpendicular planes and the twist of the bar. A simple problem of this kind is shown in Fig. 73a in which a portion of a horizontal circular ring, built in at A , is loaded by a vertical load P applied at the end B .³⁵ Considering a cross section D of the bar and taking the coordinate axes as shown in Figures 73b and 73c³⁶ we find that the moments of the external load P with respect to these axes are

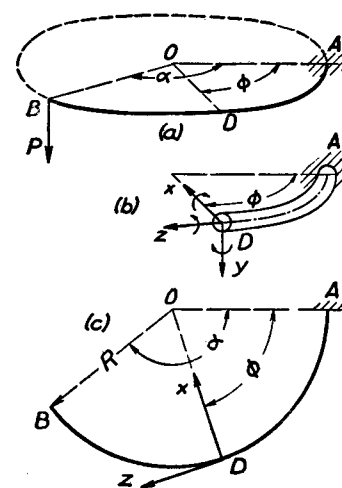


FIG. 73.

$$M_x = -PR \sin(\alpha - \phi), \quad M_y = 0, \\ M_z = PR[1 - \cos(\alpha - \phi)]. \quad (a)$$

By using these expressions the bending and torsion stresses can be calculated in any cross section of the bar. In calculating deflection at the end B the Castigliano theorem will be used, for which purpose we need the expression for the strain energy of the bar. Assuming that the cross sectional dimensions of the bar are small in comparison with radius R ,

by using the principle of least work, "De Ingenieur," 1927, and *Zeitschr. f. angew. Math. u. Mech.*, Vol. 8, 1928, p. 237. The application of trigonometric series in the same problem is shown by C. B. Biezeno and J. J. Koch, *Zeitschr. f. angew. Math. Mech.*, vol. 16, 1936, p. 321. The problem is of a practical importance in design of steam piping. The corresponding bibliography is given in the paper by H. E. Mayrose, *Journal of Applied Mechanics*, Trans. A. S. M. E., vol. 4, 1937, p. 89. See also the book by A. H. Gibson and E. G. Ritchie, "A Study of the Circular-Arc Bow-Girder," London, 1914.

³⁵ This problem has been discussed by Saint Venant; see his papers in *Comptes Rendus*, vol. 17, 1843, Paris.

³⁶ It is assumed that the horizontal axis x and the vertical axis y are the axes of symmetry of the cross section and that the z axis is tangent to the center line of the ring at D .

we apply the same formulas as we already had for a straight bar (see pp. 294 and 297, part I). Thus the expression for the strain energy of our bar is

$$U = \int_0^\alpha \left(\frac{M_x^2}{2EI_x} + \frac{M_z^2}{2C} \right) R d\varphi, \quad (b)$$

where C denotes the torsional rigidity of the bar.³⁷ The required deflection δ is then obtained from the equation:

$$\delta = \frac{\partial U}{\partial P}.$$

Substituting for U expression (b), and observing that

$$\frac{\partial M_x}{\partial P} = -R \sin(\alpha - \varphi) \quad \text{and} \quad \frac{\partial M_z}{\partial P} = R[1 - \cos(\alpha - \varphi)],$$

we obtain

$$\delta = \frac{PR^3}{EI_x} \int_0^\alpha \left\{ \sin^2(\alpha - \varphi) + \frac{EI_x}{C} [1 - \cos(\alpha - \varphi)]^2 \right\} d\varphi. \quad (104)$$

In the particular case, when $\alpha = \pi/2$,

$$\delta = \frac{PR^3}{EI_x} \left[\frac{\pi}{4} + \frac{EI_x}{C} \left(\frac{3\pi}{4} - 2 \right) \right]. \quad (c)$$

If the cross section of the ring is circular, $C = G I_p = 2 G I_x$; taking $E = 2.6G$, we obtain

$$\delta = \frac{PR^3}{EI_x} \left[\frac{\pi}{4} + 1.3 \left(\frac{3\pi}{4} - 2 \right) \right] = 1.248 \frac{PR^3}{EI_x}. \quad (105)$$

As an example of statically indeterminate problems, let us consider a horizontal semi-circular bar with built-in ends, loaded at the middle, Fig. 74a. Considering only small vertical deflections of the bar, we can entirely neglect any displacements in the horizontal plane as small quantities of a

³⁷ The calculation of C for various shapes of the cross section is discussed in Chapter VI.

higher order. Hence there will be no bending of the ring in its plane and no forces or moments in that plane at the ends A and B . Considering the built-in end B , we conclude from the equilibrium conditions that there will act a vertical reaction $P/2$ and the moment $M_{x_0} = PR/2$. The moment M_{z_0} will also act, preventing the end section B from rotation with respect to z_0 axis. The magnitude of this moment cannot be determined from statics; we shall find it by using the principle of least work, which requires that

$$\frac{\partial U}{\partial M_{z_0}} = 0. \quad (d)$$

In deriving the strain energy of the bar we represent the moments applied at the end B by the vectors $PR/2$ and M_{z_0} , as shown in Fig. 74b. Then the moments M_x and M_z at any cross section D are

$$M_x = \frac{PR}{2} \cos \varphi - M_{z_0} \sin \varphi - \frac{PR}{2} \sin \varphi, \quad (e)$$

$$M_z = \frac{PR}{2} \sin \varphi + M_{z_0} \cos \varphi - \frac{PR}{2} (1 - \cos \varphi), \quad (f)$$

and the expression for strain energy is

$$U = 2 \int_0^{\pi/2} \left(\frac{M_x^2}{2EI_x} + \frac{M_z^2}{2C} \right) R d\varphi. \quad (g)$$

Substituting this in equation (d) and observing that

$$\frac{\partial M_x}{\partial M_{z_0}} = -\sin \varphi, \quad \frac{\partial M_z}{\partial M_{z_0}} = \cos \varphi,$$

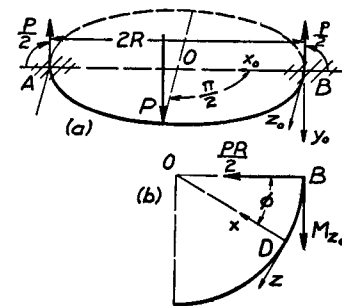


FIG. 74.

we obtain

$$\begin{aligned} \frac{1}{EI_x} \int_0^{\pi/2} \left(\frac{PR}{2} \sin^2 \varphi + M_{z_0} \sin^2 \varphi \right. \\ \left. - \frac{PR}{2} \sin \varphi \cos \varphi \right) d\varphi + \frac{1}{C} \int_0^{\pi/2} \left[\frac{PR}{2} \sin \varphi \cos \varphi \right. \\ \left. + M_{z_0} \cos^2 \varphi - \frac{PR}{2} (1 - \cos \varphi) \cos \varphi \right] d\varphi = 0, \end{aligned}$$

from which

$$M_{z_0} = \frac{PR}{2} \left(\frac{2}{\pi} - 1 \right) = -0.182PR. \quad (106)$$

The minus sign indicates that the direction of M_{z_0} is opposite to that shown in Fig. 74a. Knowing M_{z_0} we obtain the bending and the twisting moments at any cross section from the expressions (e) and (f).

The maximum deflection is evidently under the load and we readily obtain it from Castigliano's equation:

$$\delta = \frac{\partial U}{\partial P}. \quad (h)$$

Substituting expression (g) for U and observing that

$$\begin{aligned} \frac{\partial M_x}{\partial P} &= \frac{R}{2} (\cos \varphi - \sin \varphi), \\ \frac{\partial M_z}{\partial P} &= \frac{R}{2} (\sin \varphi + \cos \varphi - 1), \end{aligned} \quad (i)$$

we obtain

$$\begin{aligned} \delta &= \frac{PR^3}{2EI_x} \left\{ (2 - 0.363) \left(\frac{\pi}{4} - \frac{1}{2} \right) \right. \\ &\quad \left. + \frac{EI_x}{C} \left[(2 - 0.363) \left(\frac{\pi}{4} + \frac{1}{2} \right) + \frac{\pi}{2} - 4 + 0.363 \right] \right\} \\ &= 0.514 \frac{PR^3}{2EI_x}. \quad (107) \end{aligned}$$

In the calculation of the partial derivatives (i) we disregarded the fact that the twisting moment M_{z_0} is not an independent quantity but the function of P as defined by expression (106).

If we should take this into consideration, the right-hand side of the equation (h) should be written in the following form:

$$\frac{\partial U}{\partial P} + \frac{\partial U}{\partial M_{z_0}} \cdot \frac{dM_{z_0}}{dP}. \quad (j)$$

But the second term in this expression vanishes, by virtue of equation (d). Hence our previous procedure of calculating deflection δ is justified.

Problems

1. A curved bar with circular axis and with $\alpha = \pi/2$ (Fig. 73) is loaded at end B by a twisting couple $M_z = T$. Find the deflection of the end B in a vertical direction.

Answer. Assuming $EI_x : C = 1.3$,


$$\delta = 0.506 \frac{TR^2}{EI_x}.$$

2. Solve the preceding problem assuming that at end B a bending couple, $M_x = M_0$, is applied in the vertical plane tangent to the center line at B .

Answer.

$$\delta = 1.150 \frac{M_0 R^2}{EI_x}.$$

3. A semicircular bar with the center line in a horizontal plane is built in at A and B and loaded symmetrically by two vertical loads P at C and D , Fig. 75. Find the twisting moments M_{z_0} at the built-in ends.

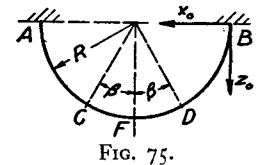

Answer.

$$M_{z_0} = -\frac{2}{\pi} PR \left(\frac{\pi}{2} - \cos \beta - \beta \sin \beta \right).$$

4. Solve the preceding problem for the case of a uniform vertical load of intensity q distributed along the entire length of the bar.

Answer.

$$M_{z_0} = -qR^2 \left(\frac{\pi}{2} - \frac{4}{\pi} \right) = -0.32 qR^2.$$

5. The horizontal semicircular bar, shown in Fig. 75 and uniformly loaded as in the preceding problem, is supported at the middle cross section F . Find the vertical reaction N at the support F .

Answer. $N = 2qR$.

CHAPTER III

THIN PLATES AND SHELLS

20. Bending of a Plate to a Cylindrical Surface.—Assume that a rectangular plate of uniform thickness h is bent to a cylindrical surface¹ (Fig. 76). In such a case it is sufficient to consider only one strip of unit width, such as AB , as a beam of rectangular cross section and of the length l . From the condition of continuity it may be concluded that there will be no distortion in the cross section of the strip during bending, such as shown in Fig. 77*b*, p. 89, Part I. Hence a fiber lengthwise of the strip such as ss (Fig. 77)

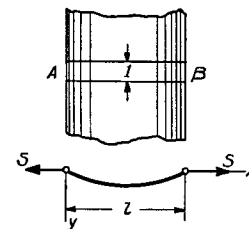


FIG. 76.

suffers not only the longitudinal tensile stress σ_x but also tensile stress σ_z in the lateral direction, which must be such as to prevent lateral contraction of the fiber. We assume, as before (see p. 88, Part I), that cross sections of the strip remain plane during bending. Hence the unit elongations in the x and z directions are

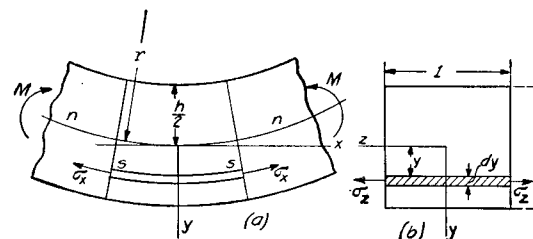


FIG. 77.

$$\epsilon_x = \frac{y}{r}; \quad \epsilon_z = 0.$$

¹ We have such bending in the case of long rectangular plates if the acting forces do not vary along the length of the plate and if only the portion at a sufficient distance from the ends is considered.

The corresponding stresses in x and z directions are then obtained as in the case of tension in two perpendicular directions. By use of eqs. (38) (p. 52, Part I),

$$\sigma_x = \frac{\epsilon_x E}{1 - \mu^2} = \frac{Ey}{(1 - \mu^2)r}; \quad \sigma_z = \frac{\mu \epsilon_x E}{1 - \mu^2} = \frac{\mu Ey}{(1 - \mu^2)r}.$$

We proceed as in the case of bending of a bar and calculate the bending moment at any cross section of the strip. Then

$$M = \int_{-h/2}^{+h/2} \sigma_x y dy = \frac{E}{(1 - \mu^2)r} \int_{-h/2}^{+h/2} y^2 dy = \frac{Eh^3}{12(1 - \mu^2)r},$$

from which

$$\frac{1}{r} = \frac{M}{D}, \quad (108)$$

where

$$D = \frac{Eh^3}{12(1 - \mu^2)}. \quad (109)$$

This quantity is called the *flexural rigidity* of a plate and takes the place of EI_z in discussing bending of beams. Comparison of eq. (108) for the strip




FIG. 78.

with eq. (56), Part I, for a bar shows that the rigidity of the strip in the plate is larger than that of an isolated bar of the same cross section in the ratio $1 : (1 - \mu^2)$.

The experiments show that, in the case of bending of an isolated thin strip of considerable width b , distortion of the cross section takes place only near the edges (Fig. 78, b) and the middle portion aa of the strip is bent into a cylindrical form;² hence eq. (108) is applicable in calculating deflections and the strip will prove more rigid than will be expected from the simple beam formula.

For small deflections of the strip AB (Fig. 77) the curva-

² Explanation of this phenomenon is given by G. F. C. Searle, *Experimental Elasticity*, Cambridge, 1908. See also H. Lamb, *London Math. Soc. Proc.*, Vol. 21, 1891, p. 70, and author's paper in *Mechanical Engineering*, 1923, p. 259.

ture $1/r$ can be replaced by its approximate value d^2y/dx^2 and the differential equation for the deflection curve of the strip is

$$D \frac{d^2y}{dx^2} = -M. \quad (110)$$

The discussion of bending of a plate to a cylindrical surface involves the integration of this equation. A particular case in which the bending to a cylindrical surface is done by a uniformly distributed load is discussed in the next article.

21. Bending of a Long Uniformly Loaded Rectangular Plate.—

If a rectangular plate whose length is large in comparison with the width is uniformly loaded, then it may be assumed that near the center, where the maximum deflection and stresses occur, the deflection surface is nearly a cylindrical one and eq. (110) may be used to calculate these.³ Let us consider this important problem⁴ for two extreme conditions: (1) the edges of the plate are simply supported and can rotate freely during bending and (2) the edges are built-in. In both cases it is assumed that there are no displacements at the edges in the plane of the plate. Then an elemental strip such as AB in Fig. 76 is in the same condition as a tie-rod with uniform lateral loading (see article 6) and the tensile forces S . The magnitude of the forces S is found from the condition that the extension of the strip is equal to the difference between the length of the deflection curve and the length l of the chord AB (Fig. 76).

Simply Supported Edges. In the case of simply supported edges, a good approximation for S is obtained by assuming that the deflection curve is a sine curve

$$y = \delta \sin \frac{\pi x}{l}, \quad (a)$$

where δ denotes the deflection at the middle. Then by using eq. (56), p. 47, the extension of the center line of the strip is

$$\lambda = \frac{1}{2} \int_0^l \left(\frac{dy}{dx} \right)^2 dx = \frac{\pi^2 \delta^2}{4l}. \quad (b)$$

³ If the length is three times the width for a supported plate and twice the width for a clamped plate, the solution derived on this assumption is sufficiently accurate.

⁴ A solution of the problem was given by J. Boobnov. See his "Theory of Structure of Ships," Vol. 2, p. 545, St. Petersburg, 1914. The discussion of this problem, together with calculation of stresses in the hull of a ship, is given in "Theory of Plates and Shells," 1940.

Taking for the deflection at the middle the approximate equation (59), we have

$$\delta = \frac{\delta_0}{1 + \alpha}, \quad (c)$$

in which

$$\delta_0 = \frac{5}{384} \frac{q l^4}{D} \quad \text{and} \quad \alpha = S : S_{cr} = \frac{S l^2}{D \pi^2}. \quad (111)$$

Substituting in equation (b), we obtain

$$\lambda = \frac{\pi^2}{4l} \cdot \frac{\delta_0^2}{(1 + \alpha)^2}. \quad (d)$$

The lateral contraction of the strip in the plane of the plate during bending is assumed to be zero; hence from eqs. (109) and (111) the elongation of the center line of the strip produced by forces S is

$$\lambda = \frac{S l (1 - \mu^2)}{E h} = \frac{\pi^2 \alpha h^2}{12 l}. \quad (e)$$

Equating (d) and (e), the equation for determining α , i.e., for determining the longitudinal force S , is obtained in the form:

$$\alpha(1 + \alpha)^2 = \frac{3\delta_0^2}{h^2}. \quad (112)$$

If the load q and the dimensions of the plate are given, the right side of eq. (112) can easily be calculated. The solution of eq. (112) can be simplified by letting

$$1 + \alpha = x. \quad (f)$$

Then this equation becomes

$$x^3 - x^2 = \frac{3\delta_0^2}{h^2},$$

i.e., the quantity x is such that the difference between its cube and its square has a known value. It can be determined from a slide rule or a suitable table and α found from eq. (f). The deflection and stresses in the strip AB are then calculated by using the table given for tie-rods (see p. 43). In using this table it is necessary to remember that, from eqs. (23) and (111),

$$u = \frac{p l}{2} = \frac{\pi}{2} \sqrt{\alpha}. \quad (113)$$

Take, for example, a steel plate of dimensions $l = 45$ in. and $h = 3/8$ in. loaded by a uniformly distributed load $q = 10$ lbs. per sq. in.

Then eq. (112) becomes

$$\alpha(1 + \alpha)^2 = 290, \quad (g)$$

from which

$$\alpha = 5.97 \quad \text{and} \quad u = \frac{\pi}{2} \sqrt{\alpha} = 3.83.$$

The tensile stress produced by the longitudinal force S is

$$\sigma_x' = \frac{S}{h} = \frac{\alpha S_{cr}}{h} = \frac{\alpha \pi^2 D}{h l^2} = 11,300 \text{ lbs. per sq. in.}$$

and the maximum bending moment at the middle of the strip, from eq. (45), is

$$M_{\max} = \frac{q l^2}{8} \psi_1(u). \quad (h)$$

By using the table 3, mentioned above, we find by interpolation, for $u = 3.83$, $\psi_1(u) = 0.131$. This shows that, due to the action of the longitudinal force S , the bending moment is greatly diminished and is only about 13 per cent of that which is produced by the action of transverse loading alone. Using eq. (h),

$$M_{\max} = \frac{10 \times 45^2}{8} \times 0.131 = 332 \text{ lbs. ins.}$$

The corresponding maximum bending stress is

$$\sigma_x'' = \frac{6 M_{\max}}{h^2} = \frac{6 \times 332 \times 8^2}{3^2} = 14,200 \text{ lbs. per sq. in.}$$

and, superposing the tensile and bending stresses, the maximum stress is

$$\sigma_{\max} = \sigma_x' + \sigma_x'' = 11,300 + 14,200 = 25,500 \text{ lbs. per sq. in.}$$

It may be seen that, due to the action of the longitudinal force, the maximum stress does not increase in the same proportion as the intensity of the load. For instance, in the above numerical example with $q = 20$ lbs. per sq. in., from (g)

$$\alpha(1 + \alpha)^2 = 290 \times 4 = 1,160,$$

from which

$$\alpha = 9.85; \quad u = 4.93.$$

The tensile stress produced by the longitudinal force S is

$$\sigma_x' = \frac{S}{h} = 18,600 \text{ lbs. per sq. in.}$$

$\psi_1(u)$, for $u = 4.93$, is equal to 0.082; then

$$\sigma_x'' = \frac{6M_{\max}}{h^2} = \frac{6 \times 20 \times 45^2 \times 8^2}{8 \times 3^2} \times 0.082 = 17,900 \text{ lbs. per sq. in.}$$

The maximum total stress is

$$\sigma_{\max} = \sigma_x' + \sigma_x'' = 18,600 + 17,900 = 36,500 \text{ lbs. per sq. in.}$$

In other words, due to the action of the longitudinal forces S , the stresses increase less rapidly than the load. When the load is doubled, the maximum stress is in our case increased only 43 per cent.

Clamped Edges. In the case of clamped edges eq. (a) is replaced by ⁵ equation

$$y = \frac{\delta}{2} \left(1 - \cos \frac{2\pi x}{l} \right), \quad (k)$$

which satisfies conditions at the clamped edges because the deflection y and the slope dy/dx both become zero at $x = 0$ and at $x = l$. Substituting (k) into eq. (b), the extension of the center line of the strip is

$$\lambda = \frac{1}{2} \int_0^l \left(\frac{dy}{dx} \right)^2 dx = \frac{\pi^2 \delta^2}{4l}. \quad (l)$$

For the deflection at the middle we use the approximate equation (62)

$$\delta = \frac{\delta_0}{1 + \frac{1}{4} \alpha}$$

and find, from (l) and (e), the following equation for α :

$$\alpha \left(1 + \frac{\alpha}{4} \right)^2 = \frac{3\delta_0^2}{h^2} \quad (114)$$

or, by letting $1 + (\alpha/4) = x$,

$$x^3 - x^2 = \frac{3}{4} \frac{\delta_0^2}{h^2}. \quad (m)$$

In the previous numerical example with $q = 10$ lbs. per sq. in., eq. (m) becomes

$$x^3 - x^2 = 2.90,$$

from which $x = 1.849$ and $\alpha = 3.40$. Hence the tensile force is less than in the case of supported edges considered above in the ratio

⁵ See the author's paper mentioned above, loc. cit., p. 44.

3.40/5.97 and we obtain

$$\sigma_x' = \frac{3.40}{5.97} \times 11,300 = 6,430 \text{ lbs. per sq. in.}$$

In calculating the bending stresses the table 3 of page 43 is used. Noting that in our case $u = (\pi/2)\sqrt{\alpha} = 2.89$, we find from the table, by interpolation, $\psi_2 = 0.686$, $\psi_3 = 0.488$. The bending moment at each clamped edge is

$$M = -0.686 \frac{ql^2}{12} = -1.150 \text{ lbs. ins.}$$

The corresponding maximum bending stress is

$$\sigma_x'' = 49,300 \text{ lbs. per sq. in.}$$

The maximum total stress is ⁶

$$\sigma_{\max} = \sigma_x' + \sigma_x'' = 6,430 + 49,300 = 55,700 \text{ lbs. per sq. in.}$$

Comparison of this stress with that obtained above for the same plate with simply supported edges shows that clamping the edges increases the maximum stress. This result can be explained as follows: Due to clamping the edges, the deflection of the plate is diminished, and as a result the longitudinal force S and its effect on the bending moment are also diminished. In the case of simply supported edges, the maximum bending moment was only 0.131 of that produced by the transverse load alone. But in the case of clamped edges the bending moment at these edges is 0.686 of that produced by the transverse load alone, i.e., the effect of the longitudinal force is more pronounced in the case of simply supported edges.

This approximate method can be used in the calculation of stresses in the plates of a ship's hull submitted to hydrostatic pressure.

The maximum stress evidently depends on the intensity of the load q and on the ratio l/h . The magnitudes of this stress for the case of simply supported edges and for various values of the ratio l/h are represented by curves ⁷ in Fig. 79. It is seen that because of the presence of tensile forces S , which increase with the load,

⁶ It is assumed that the steel has a proportional limit above the stress calculated.

⁷ These curves are taken from the paper by S. Way presented at the meeting of Applied Mechanics, A. S. M. E., New Haven, June, 1932.

the maximum stress is not proportional to the load q ; for large values of q this stress does not vary much with the thickness of the plate.

In Fig. 80 the curves for maximum stress in the case of plates with built-in edges are given. It is seen that for small values of the intensity of the load q , when the effect of the axial force on the deflections of the strip is small, the maximum stress increases approximately in the same ratio as q increases. But for larger values of q the relation between the load and the maximum stress becomes non-linear.

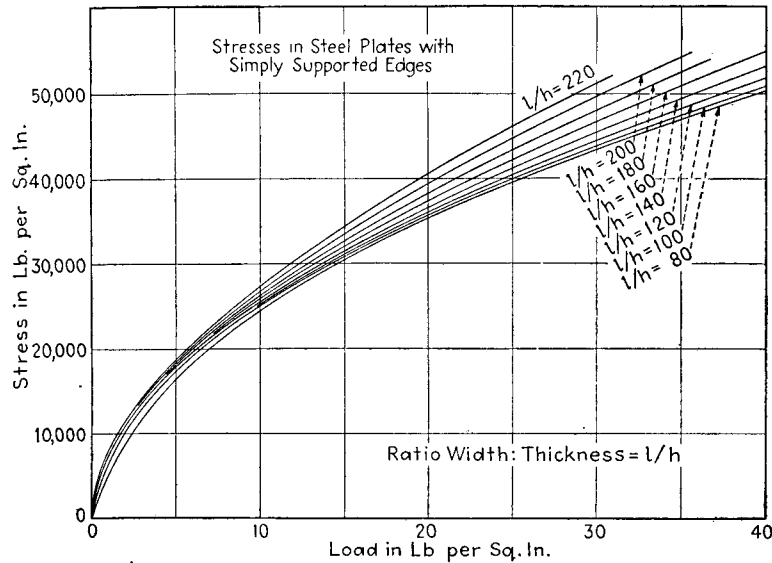


FIG. 79.

22. Deflection of Long Rectangular Plates Having a Small Initial Cylindrical Curvature.⁸—In this problem, we may use the results already obtained for the bending of bars with small initial curvature (p. 104). The edges of the plate are assumed to be simply supported and the coordinate axes and an elemental strip are taken as in Fig. 76. Let

$$y_0 = b \sin \frac{\pi x}{l} \quad (a)$$

represent the small initial deflection of the plate, with the maximum deflection at the middle equal to b . If a uniform load q is applied,

an additional deflection is produced, accompanied by an extension of the *middle surface*⁹ of the plate. As before, let S denote the tensile force on the strip AB of unit width and α the ratio of this force to the critical force $S_{cr} = \pi^2 D/l^2$. Then the additional deflection produced by the load q is

$$y_1 = \frac{\delta_0}{1 + \alpha} \sin \frac{\pi x}{l} - \frac{\alpha b}{1 + \alpha} \sin \frac{\pi x}{l}. \quad (b)$$

The first term on the right side represents the approximate expression for the deflection of a straight line strip, which was used

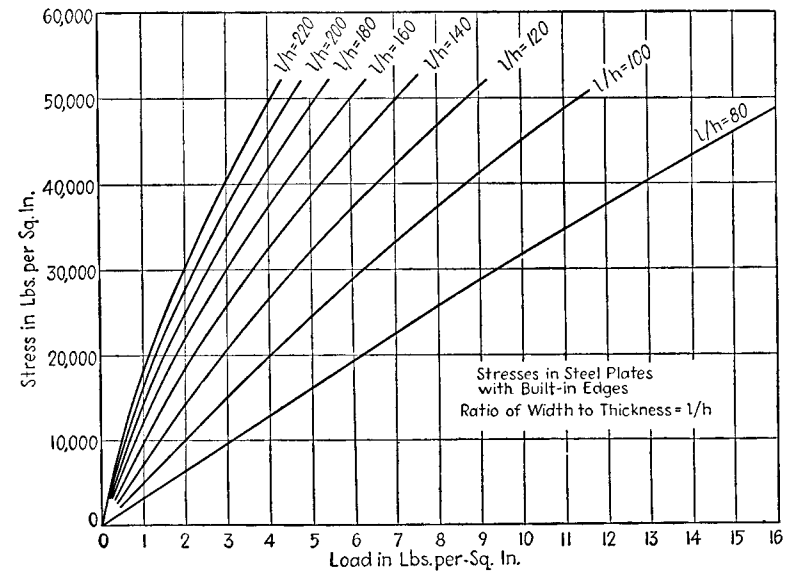


FIG. 80.

before for flat plates; the second member represents the effect of the initial curvature (see eq. (d), p. 106). By adding (a) and (b) we obtain the total deflection

$$y = y_0 + y_1 = b \sin \frac{\pi x}{l} + \frac{\delta_0}{1 + \alpha} \sin \frac{\pi x}{l} - \frac{\alpha b}{1 + \alpha} \sin \frac{\pi x}{l} = \frac{b + \delta_0}{1 + \alpha} \sin \frac{\pi x}{l} \dots \quad (c)$$

The magnitude of α is determined from the consideration of extension of the strip AB . Using the same reasoning as in the

preceding article we obtain the following expression for this extension

$$\lambda = \frac{1}{2} \int_0^l \left(\frac{dy}{dx} \right)^2 dx - \frac{1}{2} \int_0^l \left(\frac{dy_0}{dx} \right)^2 dx.$$

Substituting (a) and (c) for y_0 and y and integrating, we have

$$\lambda = \frac{\pi^2}{4l} \left[\left(\frac{b + \delta_0}{1 + \alpha} \right)^2 - b^2 \right].$$

Setting this equal to the extension produced by the longitudinal force S (eq. e, p. 122), we obtain

$$\frac{\pi^2}{4l} \left[\left(\frac{b + \delta_0}{1 + \alpha} \right)^2 - b^2 \right] = \frac{\pi^2 \alpha h^2}{12l}$$

or

$$\alpha(1 + \alpha)^2 = 3 \left(\frac{b + \delta_0}{h} \right)^2 - 3 \frac{b^2}{h^2} (1 + \alpha)^2. \quad (115)$$

If $b = 0$, this reduces to eq. (112) for a flat plate.

Take as an example a steel plate of the same dimensions as in the previous article:

$$l = 45 \text{ in.}, \quad h = 3/8 \text{ in.}, \quad q = 10 \text{ lbs. per sq. in.},$$

and assume $b = 3/8$ in. Then

$$\delta_0 = \frac{5}{384} \frac{ql^4}{D} = 3.686 \text{ in.},$$

and eq. (115) becomes

$$\alpha(1 + \alpha)^2 = 351.6 - 3(1 + \alpha)^2. \quad (d)$$

As before, let

$$1 + \alpha = x;$$

then

$$x^3 + 2x^2 = 351.6,$$

from which

$$x = 6.45, \quad \alpha = 5.45.$$

The tensile stress produced by the longitudinal force S is

$$\sigma_x' = \frac{S}{h} = \frac{\alpha \pi^2 D}{hl^2} = 10,200 \text{ lbs. per sq. in.}$$

⁸ See author's article in the book, Festschrift zum Siebzigsten Geburtstage August Föppl, p. 74, 1923, Berlin.

⁹ The middle surface is the surface midway between the faces of the plate.

This stress is somewhat less than the corresponding stress for the flat plate (see p. 123). In calculating bending stresses it should be noted that the deflection given by eq. (b) consists of two parts. The first is the same as that for a flat plate and the second,

$$- \frac{\alpha b}{1 + \alpha} \sin \frac{\pi x}{l},$$

represents the effect of the initial curvature. The maximum bending stress corresponding to the first part of the deflection for

$\alpha = 5.45$; $u = \frac{\pi}{2} \sqrt{\alpha} = 3.67$ and $\psi_1 = 0.142$, from table 3 on p. 43, is 15,300 lbs. per sq. in. The bending moment corresponding to the second part of the deflection is

$$- D \frac{d^2}{dx^2} \left(- \frac{\alpha b}{1 + \alpha} \sin \frac{\pi x}{l} \right) = - \frac{\alpha \pi^2 b D}{(1 + \alpha) l^2} \sin \frac{\pi x}{l}. \quad (e)$$

This moment has a negative sign and the corresponding maximum compressive stress, which is to be subtracted from the stress calculated as for a flat plate, is

$$- \frac{6}{h^2} \cdot \frac{\alpha \pi^2 b D}{(1 + \alpha) l^2} = - 9,500 \text{ lbs. per sq. in.}$$

The combination of this with the stress σ_x' calculated above and the bending stress 15,300 lbs. per sq. in. obtained as for a flat plate gives the complete stress

$$\sigma_x = 10,200 + 15,300 - 9,500 = 16,000 \text{ lbs. per sq. in.}$$

A comparison of these results with those for flat plates shows that here the tensile forces S are somewhat reduced and that the bending stress at the middle is much less, due to the negative sign of the bending moment (e). The effect of the initial curvature is to reduce the resultant stress from 25,500 lbs. per sq. in. to 16,000 lbs. per sq. in. This result is obtained with the initial deflection equal to the thickness of the plate. By increasing the initial deflection, the maximum stress can be reduced still further.

23. Combination of Pure Bending in Two Perpendicular Directions.—Let us consider first a rectangular plate bent by moments uniformly distributed along the edges (Fig. 81). M_1 denotes the bending moment per unit length of the edges parallel to the y axis and M_2 the moment per unit length

of the edges parallel to the x axis. The plane midway between the faces of the plate, the so-called *middle plane* of the plate, is taken as the xy plane and the z axis is perpendicular to this plane and downward. An element is cut out of the

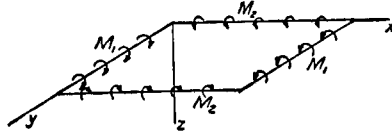


FIG. 81.

plate by two pairs of planes parallel to the xz and yz planes (Fig. 82). The theory of pure bending of the plate is based on the assumption that during bending the lateral sides of this element remain plane and rotate about the neutral axes $n-n$. For moments as indicated in Fig. 81 the upper part of the element is under compression and the lower part under tension. The middle plane mn does not undergo any deformation during this bending of the plate and is therefore a *neutral surface*.

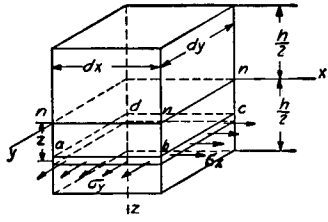


FIG. 82.

Let $1/r_1$ and $1/r_2$ denote the curvatures of this neutral surface in sections parallel to the xz and the zy planes respectively; then the unit elongations in the x and y directions of an elemental sheet $abcd$, a distance z from the neutral

surface, are found as in the case of a beam (p. 90, Part I) and are equal to

$$\epsilon_x = \frac{z}{r_1}; \quad \epsilon_y = \frac{z}{r_2}. \quad (a)$$

Using eqs. (38) (p. 52, Part I), the corresponding stresses are

$$\sigma_x = \frac{Ez}{1 - \mu^2} \left(\frac{1}{r_1} + \mu \frac{1}{r_2} \right), \quad (b)$$

$$\sigma_y = \frac{Ez}{1 - \mu^2} \left(\frac{1}{r_2} + \mu \frac{1}{r_1} \right). \quad (c)$$

These stresses are proportional to the distance z from neutral surface. The moments of the internal forces acting on the sides of the element are equaled to the moments of external couples, giving the following equations:

$$\int_{-h/2}^{+h/2} \sigma_x z dy dz = M_1 dy, \quad (d)$$

$$\int_{-h/2}^{+h/2} \sigma_y z dx dz = M_2 dx. \quad (e)$$

Substituting (b) and (c) for σ_x and σ_y and noting that

$$\frac{E}{1 - \mu^2} \int_{-h/2}^{+h/2} z^2 dz = \frac{Eh^3}{12(1 - \mu^2)} = D,$$

where D denotes the *flexural rigidity of the plate* (eq. 109), we find

$$D \left(\frac{1}{r_1} + \mu \frac{1}{r_2} \right) = M_1, \quad (116)$$

$$D \left(\frac{1}{r_2} + \mu \frac{1}{r_1} \right) = M_2, \quad (117)$$

which correspond to eq. (56), p. 91, Part I, for the pure bending of a straight bar. Denoting by w small deflections of the plate, the approximate formulas for curvatures are

$$\frac{1}{r_1} = -\frac{\partial^2 w}{\partial x^2} \quad \text{and} \quad \frac{1}{r_2} = -\frac{\partial^2 w}{\partial y^2}.$$

In terms of w , eqs. (116) and (117) become

$$-D \left(\frac{\partial^2 w}{\partial x^2} + \mu \frac{\partial^2 w}{\partial y^2} \right) = M_1, \quad (118)$$

$$-D \left(\frac{\partial^2 w}{\partial y^2} + \mu \frac{\partial^2 w}{\partial x^2} \right) = M_2. \quad (119)$$

These correspond to eq. (79) (p. 135, Part I) for the deflection curve of a straight bar. In the particular case in which $M_1 = M_2 = M$, the curvatures of the deflection surface in two perpendicular directions are equal and the surface is

spherical. The curvature of the sphere, from eq. (116), is

$$\frac{1}{r} = \frac{M}{D(1 + \mu)}. \quad (120)$$

Such a spherical deflection surface is obtained for a plate of any shape if the bending moments M are uniformly distributed along its edge.

In the above, it was assumed that there is no change in the length of the fibers of the middle surface, i.e., that this surface is the neutral surface in the bent plate. This condition can be rigorously satisfied only if the surface of the bent plate is a *developable* surface, such for instance as a cylindrical surface discussed in the previous article. For non-developable surfaces the above assumption is sufficiently accurate only if the deflection w of the plate is small in comparison to its thickness h . To show this, consider the bending of a circular plate produced by couples M uniformly distributed along the edge. It follows from the previous theory that the deflection surface is a sphere with the radius given by eq.

(120). Let AOB (Fig. 83) represent the diametral section of the bent circular plate, a its outer radius, and δ the deflection at the middle. We assume first that there is no stretching of the middle plane of the plate in its meridional direction; then arc $OB = a$, $\varphi = a/r$, and $\overline{CB} = a_1 = r \sin \varphi$. In such a case the deflection

of the plate is obviously accompanied by a compressive strain in the circumferential direction. The magnitude of this strain for the edge of the plate is

$$\epsilon = \frac{a - a_1}{a} = \frac{r\varphi - r \sin \varphi}{r\varphi}.$$

For a small deflection δ , the angle φ is small and $\sin \varphi = \varphi - \varphi^3/6$ approximately, giving

$$\epsilon = \frac{\varphi^2}{6}, \quad (f)$$

or, noting that

$$\delta = r(1 - \cos \varphi) = \frac{r\varphi^2}{2} \text{ approximately,}$$

we obtain

$$\epsilon = \frac{\delta}{3r}. \quad (k)$$

This represents the upper limit of circumferential strain at the edge. It was obtained by assuming that the meridional strain is zero. Under actual conditions there will be a certain amount of strain in the meridional direction and the true circumferential compression will be smaller than that given by eq. (k).¹⁰

The approximate theory of the bending of plates neglects entirely the strain in the middle plane and considers only strains such as given by eqs. (a), the maximum value of which in the above example is $h/2r$. Hence a strain such as that given by (k) can be neglected and the middle surface can be considered as unstrained if $\delta/3r$ is small in comparison with $h/2r$, i.e., if the deflection δ is small in comparison with the thickness of the plate h . Only in this assumption can the results given later for some special cases of bending of plates be used with sufficient accuracy.

24. Thermal Stresses in Plates.—Equation (120) of the previous article, for deflection to a spherical shape, is very useful in calculating thermal stresses produced in a plate by non-uniform heating. Let t denote the difference in temperature of the upper and lower faces of the plate and α the coefficient of linear expansion of the material. Assuming that the variation of the temperature through the thickness of the

¹⁰ If the deflections are not small and the strain in the middle surface is taken into consideration, it has been shown that in the case of pure bending of a circular plate, of radius $a = 23h$, the circumferential compressive stress in the middle surface at the edge is about 18 per cent of the maximum bending stress when the deflection at the middle is equal to six tenths the thickness of the plate. See author's paper in *Memoirs of the Institute of Ways of Communication*, St. Petersburg, 1915. See also "Theory of Plates and Shells," 1940.

plate follows a linear law, the corresponding expansions follow the same law, and if the edge of the plate is free, the deflection produced by these expansions will be a spherical one.¹¹ The difference between the maximum expansion and the expansion at the middle surface is $\alpha t/2$, and the curvature resulting from this non-uniform expansion is given by the equation

$$\frac{\alpha t}{2} = \frac{h}{2r},$$

from which

$$\frac{1}{r} = \frac{\alpha t}{h}. \quad (121)$$

This bending of the plate does not produce any stresses, provided the edges are free and the deflection is small as compared with the thickness.

If, however, the edge of the plate be clamped, heating will produce bending moments along the edge. The magnitude of these moments is such as to eliminate the curvature produced by the non-uniform heating and given by eq. (121), as only in this manner can the condition at the clamped edge be satisfied. From eqs. (121) and (120) we obtain the following equation for the bending moment per unit length of the clamped edge:

$$M = \frac{\alpha t(1 + \mu)D}{h}.$$

Noting that M is acting on a rectangular area of unit width and of depth h the corresponding maximum bending stress is

$$\sigma_{\max} = \frac{6M}{h^2} = \frac{6\alpha t(1 + \mu)D}{h^3} = \frac{\alpha t}{2} \frac{E}{1 - \mu}. \quad (122)$$

This stress is proportional to the coefficient of thermal expansion α , to the difference in temperature t ¹² at the two faces

¹¹ It is assumed that deflections are small in comparison with the thickness h of the plate.

¹² It must be noted that t denotes the difference in temperature between the two faces of the plate and not that between liquids or gases in contact with the plate. The latter, due to abrupt change in temperature at the plate surface, may be much greater than t .

of the plate, and to the modulus of elasticity. The difference in temperature t is likely to increase with the thickness of the plate; therefore greater thermal stress can be expected in thick plates than in thin ones. It is interesting to note that eq. (122), developed for flat plates, can also be used with sufficient accuracy in cases of spherical and cylindrical shells (see p. 262).

25. Bending of Circular Plates Loaded Symmetrically with Respect to the Center.¹³—The deflection surface in this case is symmetrical about the axis perpendicular to the plate through its center and the consideration of a diametral section through this axis is sufficient for calculating deflections and stresses. Figure 84 represents such a diametral section, with the axis of symmetry oz . Let w denote the deflection of the plate at any point A a distance x from the axis, and restrict it to small values. Let

$$\varphi \approx -\frac{dw}{dx}$$

represent the slope of the deflection surface at the same point. The curvature of the plate in the diametral section xz is

$$\frac{1}{r_1} = -\frac{d^2w}{dx^2} = \frac{d\varphi}{dx}. \quad (a)$$

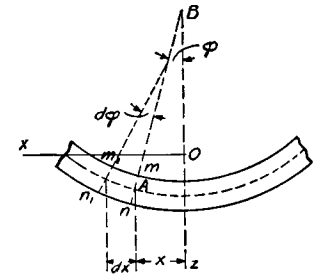


FIG. 84.

In determining the radius of curvature r_2 in the direction perpendicular to the xz plane it is necessary to note that after deflection of the plate sections such as nm form a conical surface whose apex B is the point of intersection of nm with the axis oz . Then AB represents the radius r_2 and, from the figure,

$$\frac{1}{r_2} = \frac{\varphi}{x}. \quad (b)$$

¹³ This case of bending was developed by Poisson, Paris, Mém. de l'Acad., Vol. 8, 1829.

We proceed in the same manner as in the bending of a bar and assume that there is always the same relation between the bending moments and the curvatures as in the case of pure bending of a plate (art. 23). Equations (116) and (117) can therefore be used here also. Substituting (a) and (b) into these equations we find

$$M_1 = D \left(\frac{d\varphi}{dx} + \mu \frac{\varphi}{x} \right), \quad (123)$$

$$M_2 = D \left(\frac{\varphi}{x} + \mu \frac{d\varphi}{dx} \right). \quad (124)$$

Here, as before, M_1 and M_2 denote bending moments per unit length, M_1 along circumferential sections of the plate such as mn , and M_2 along diametral sections xz . Equations (123) and (124) contain only one variable φ , which is determined from the equilibrium of an element $abcd$ (Fig. 85) cut out from the plate by two cylindrical sections ab and cd and

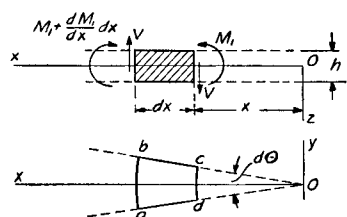


FIG. 85.

by two diametral sections ao and bo . The couple acting on the side cd of the element is

$$M_1 x d\theta. \quad (c)$$

The corresponding couple on side ab is

$$\left(M_1 + \frac{dM_1}{dx} dx \right) (x + dx) d\theta. \quad (d)$$

The couples on the sides ad and bc are each $M_2 dx$, and they have a resultant in the plane xz equal to

$$M_2 dx d\theta. \quad (e)$$

In addition to these couples there are shearing forces V on the sides ab and cd .¹⁴ If V represents the shearing force per unit length, the total shearing force acting on the side cd of the element is $V x d\theta$. Neglecting small quantities of

¹⁴ It follows from symmetry that there are no shearing forces on the sides bc and ad of the element.

higher order, a shearing force of the same magnitude acts on the side ab . These two forces give a couple in the plane xz equal to

$$V x d\theta dx. \quad (f)$$

Summing up moments (c), (d), (e) and (f) with proper signs, the equation of equilibrium of the element $abcd$ is

$$\left(M_1 + \frac{dM_1}{dx} dx \right) (x + dx) d\theta - M_1 x d\theta - M_2 dx d\theta + V x dx d\theta = 0,$$

from which we find, by neglecting small quantities of higher order,

$$M_1 + \frac{dM_1}{dx} x - M_2 + V x = 0. \quad (g)$$

Substituting expressions (123) and (124) for M_1 and M_2 , eq. (g) becomes

$$\frac{d^2\varphi}{dx^2} + \frac{1}{x} \frac{d\varphi}{dx} - \frac{\varphi}{x^2} = -\frac{V}{D}. \quad (125)$$

In any particular case of a symmetrically loaded circular plate, the shearing force V may be determined from statics; then eq. (125) can be used for determining the slope φ and the deflection w of the plate. Take, for example, a circular plate loaded by a uniformly distributed load of intensity q and a concentrated load P applied at the center. Taking a section of the plate by a cylindrical surface with axis oz and radius x , the shearing force V per unit length of this section is found from the statement of the equilibrium of the inner part of the plate cut out by the cylindrical surface. The load acting on this part of the plate is $P + \pi x^2 q$. This load must be equal to the resultant of the shearing forces distributed over the cylindrical section; hence

$$2\pi x V = P + \pi x^2 q$$

and

$$V = \frac{qx}{2} + \frac{P}{2\pi x}. \quad (126)$$

Substituting into eq. (125),

$$\frac{d^2\varphi}{dx^2} + \frac{1}{x} \frac{d\varphi}{dx} - \frac{\varphi}{x^2} = -\frac{1}{D} \left(\frac{qx}{2} + \frac{P}{2\pi x} \right)$$

or

$$\frac{d}{dx} \left[\frac{1}{x} \frac{d}{dx} (x\varphi) \right] = -\frac{1}{D} \left(\frac{qx}{2} + \frac{P}{2\pi x} \right),$$

from which, by simple integration,

$$\frac{1}{x} \frac{d}{dx} (x\varphi) = -\frac{1}{D} \left(\frac{qx^2}{4} + \frac{P}{2\pi} \log_n x \right) + C_1, \quad (h)$$

where C_1 is a constant of integration. The integration of (h) gives

$$x\varphi = -\frac{qx^4}{16D} - \frac{P}{2\pi D} \left(\frac{x^2 \log_n x}{2} - \frac{x^2}{4} \right) + C_1 \frac{x^2}{2} + C_2$$

or

$$\varphi = -\frac{qx^3}{16D} - \frac{Px}{8\pi D} (2 \log_n x - 1) + \frac{C_1 x}{2} + \frac{C_2}{x}, \quad (127)$$

where C_2 is the second constant of integration. For small deflections (Fig. 84),

$$\varphi = -\frac{dw}{dx},$$

giving us the following equation for deflections:

$$\frac{dw}{dx} = \frac{qx^3}{16D} + \frac{Px}{8\pi D} (2 \log_n x - 1) - \frac{C_1 x}{2} - \frac{C_2}{x},$$

from which, by integration,

$$w = \frac{qx^4}{64D} + \frac{Px^2}{8\pi D} (\log_n x - 1) - \frac{C_1 x^2}{4} - C_2 \log_n x + C_3. \quad (128)$$

The constants of integration C_1 , C_2 and C_3 must be determined in each particular case from the conditions at the edge of the plate.

In the above discussion it was assumed that the middle surface of the plate is a neutral surface, i.e., that there is no strain in this plane. This assumption is justified only if the edges of the plate are free from stresses in the middle plane of the plate and the deflections are small in comparison with the thickness of the plate.

26. Uniformly Loaded Circular Plate.—Clamped Edges.

The slope and the deflection are given by eqs. (127) and (128) by putting $P = 0$ in these equations. In the case of clamped edges, $\varphi = 0$ for $x = a$ and for $x = 0$, where a is the outer radius of the plate. The following equations for calculating the arbitrary constants C_1 and C_2 are then obtained from eq. (127):

$$\left(\frac{qx^3}{16D} - \frac{C_1 x}{2} - \frac{C_2}{x} \right)_{x=a} = 0,$$

$$\left(\frac{qx^3}{16D} - \frac{C_1 x}{2} - \frac{C_2}{x} \right)_{x=0} = 0,$$

from which

$$C_2 = 0 \quad \text{and} \quad C_1 = \frac{qa^2}{8D}, \quad (a)$$

and these, put in eq. (127), give

$$\varphi = \frac{qx}{16D} (a^2 - x^2). \quad (129)$$

The deflections are calculated from eq. (128). In this equation set $P = 0$ and the arbitrary constants C_1 and C_2 as in eqs. (a). Then

$$w = \frac{qx^4}{64D} - \frac{qa^2 x^2}{32D} + C_3. \quad (b)$$

The constant C_3 is found from the condition that at the edge the deflection is zero. Hence

$$\frac{qa^4}{64D} - \frac{qa^4}{32D} + C_3 = 0,$$

from which

$$C_3 = \frac{qa^4}{64D}.$$

Substituting in equation (b), we obtain

$$w = \frac{q}{64D} (a^2 - x^2)^2. \quad (130)$$

The maximum deflection is at the center of the plate and is

$$\delta = \frac{qa^4}{64D}. \quad (131)$$

This deflection is equal to $\frac{3}{8}$ of the deflection of a strip (Fig. 76) clamped at the ends and of length equal to the diameter of the plate. The bending moments are obtained from eqs. (123) and (124); expression (129) for (φ) is substituted into these equations, which gives

$$M_1 = \frac{q}{16} [a^2(1 + \mu) - x^2(3 + \mu)], \quad (c)$$

$$M_2 = \frac{q}{16} [a^2(1 + \mu) - x^2(1 + 3\mu)]. \quad (d)$$

At the edge ($x = a$) these equations give

$$M_1 = -\frac{qa^2}{8}; \quad M_2 = -\frac{\mu qa^2}{8}. \quad (e)$$

At the center ($x = 0$),

$$M_1 = M_2 = \frac{1 + \mu}{16} qa^2. \quad (f)$$

The maximum stress is at the edge and is equal to

$$(\sigma_x)_{\max} = \frac{6}{h^2} \frac{qa^2}{8} = \frac{3}{4} \frac{qa^2}{h^2}. \quad (132)$$

Simply Supported at the Edge. The method of superposition is used in calculating deflections of a plate simply supported at the edge. It was shown (eqs. *e*) that in the case of clamped edges there are negative bending moments

$M_1 = - (qa^2/8)$ acting along the edge,

Fig. 86 (a). If this case is combined with that of pure bending shown in Fig. 86 (b), so as to eliminate the bending moment at the edge, we get the bending of a plate simply supported at the edge. The deflection

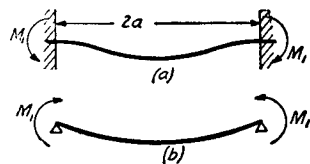


FIG. 86.

due to pure bending is obtained from eq. (120). Substituting in this equation $M = qa^2/8$, we find

$$\frac{1}{r} = \frac{qa^2}{8D(1 + \mu)}.$$

The corresponding deflection at the middle for a spherical surface is (see p. 94, Part I)

$$\delta_1 = \frac{a^2}{2r} = \frac{qa^4}{16D(1 + \mu)}.$$

This is added to the deflection (131) to get the deflection of a plate supported at the edge,

$$\delta = \frac{qa^4}{64D} + \frac{qa^4}{16D(1 + \mu)} = \frac{5 + \mu}{64(1 + \mu)D} qa^4. \quad (133)$$

For $\mu = 0.3$, this deflection is about four times as great as it is when the edges are clamped.

In calculating bending moments, the constant bending moment $qa^2/8$ must be superposed on the moments (*c*) and (*d*) found above for the case of clamped edges. Hence

$$M_1 = \frac{q}{16} (3 + \mu)(a^2 - x^2),$$

$$M_2 = \frac{q}{16} [a^2(3 + \mu) - x^2(1 + 3\mu)].$$

The maximum bending moment is at the center, where

$$M_1 = M_2 = \frac{3 + \mu}{16} qa^2.$$

The corresponding maximum stress is

$$(\sigma_x)_{\max} = (\sigma_y)_{\max} = \frac{6M_1}{h^2} = \frac{3(3 + \mu)}{8} \cdot \frac{qa^2}{h^2}. \quad (134)$$

For comparison of the bending stresses σ_x and σ_y at the lower sides of the plates with clamped and simply supported edges, the variation in these stresses along the radius of the plates is graphically represented in Fig. 87. Measuring the ordi-

nates from the horizontal axis passing through the point O , we obtain the stresses for the plate with the clamped edges. Adding to these stresses the constant value $3qa^2/4h^2$, i.e., measuring the ordinates from the horizontal axis passing through the point O_1 in Fig. 87, we obtain the stresses for the

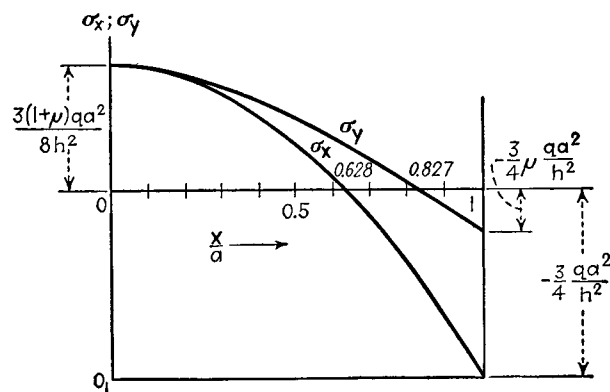


FIG. 87.

simply supported plate. It may be seen that a more favorable stress condition is obtained by clamping the edge.

In the previous discussion the effect of shearing strain on the deflection was neglected. When the thickness of the plate is fairly large in comparison with its radius, this effect may be considerable and must be taken into account.¹⁵ The additional deflection due to shear is found by the same method as in the case of beams (art. 39, Part I). In the case of uniform loading the shearing force, from eq. (126), is

$$V = \frac{qx}{2}.$$

If we assume the same distribution of shearing stresses over the thickness of the plate, as in the case of a bar of rectangular cross section, the maximum shearing stress is at the middle

¹⁵ The increase in deflection due to shear was demonstrated by experiments made by G. M. Russell, *Engineering*, Vol. 123, 1927, p. 343. See also paper by H. Carrington, *Engineering*, Vol. 125, 1928, p. 31.

surface and its magnitude at a distance x from the center of the plate is

$$\tau = \frac{3}{2} \frac{V}{h} = \frac{3}{4} \frac{qx}{h}.$$

The corresponding shearing strain at the middle surface of the plate is

$$\gamma = \frac{\tau}{G} = \frac{3}{4} \frac{qx}{Gh},$$

and the additional deflection due to distortion of such an element as $abcd$ in Fig. 85 is

$$\gamma dx = \frac{3}{4} \frac{qxdx}{Gh}.$$

Summing up these deflections along the length of the radius of the plate and noting that at the edge the deflection is zero, we find

$$w_1 = \frac{3}{4} \frac{q}{Gh} \int_x^a x dx = \frac{3}{8} \frac{q}{Gh} (a^2 - x^2).$$

This is added to the deflection (130) due to bending moments to get the total deflection,

$$w = \frac{q}{64D} (a^2 - x^2)^2 + \frac{3}{8} \frac{q}{Gh} (a^2 - x^2),$$

or, using eq. (109),

$$w = \frac{q}{64D} \left[(a^2 - x^2)^2 + \frac{4}{1 - \mu} h^2 (a^2 - x^2) \right]. \quad (135)$$

The deflection at the center is

$$\delta = \frac{qa^4}{64D} \left(1 + \frac{4}{1 - \mu} \frac{h^2}{a^2} \right). \quad (136)$$

In the case of thick plates the second term in the parenthesis, which represents the effect of shearing stresses, may be of practical importance.

The above theory of bending of circular plates is based on the assumption that deflections are small in comparison

with the thickness. For larger deflections the stretching of the middle surface of the plate must be considered. If this is done it can be shown that at larger deflections the plate becomes stiffer than the above theory¹⁶ indicates and the deflections are no longer proportional to the load.

In the case of a uniformly loaded circular plate clamped at the edge the deflection can be calculated from the following equation:¹⁷

$$\delta + 0.58 \frac{\delta^3}{h^2} = \frac{qa^4}{64D}, \quad (137)$$

which is in good agreement with experiments.

In practical applications, very thin uniformly loaded plates are sometimes used. In such cases the bending stresses may be small in comparison with the stresses due to the stretching of the middle surface and the plate can be considered as a thin membrane which has no flexural rigidity at

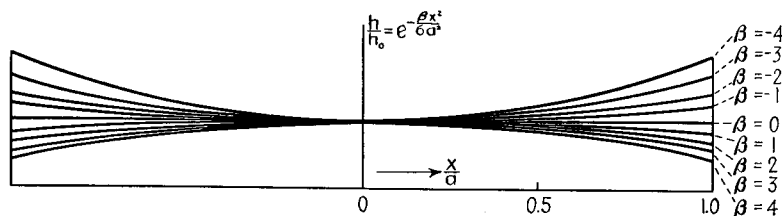


FIG. 88.

all.¹⁸ The deflection at the middle of a uniformly loaded circular membrane is given by the equation

$$\delta = 0.662a \sqrt[3]{\frac{qa}{Eh}}. \quad (138)$$

We obtain an analogous equation by neglecting δ in comparison with the term containing δ^3 in eq. (137). Experiments

¹⁶ See author's paper, loc. cit., p. 133. See also "Theory of Plates and Shells," 1940.

¹⁷ See "Theory of Plates and Shells," p. 336, 1940.

¹⁸ See H. Hencky, Zeitschr. f. Math. u. Physik, Vol. 63 (1915), p. 311.

made on thin membranes are in good agreement with eq. (138).¹⁹

In the case of a uniformly loaded circular plate of variable thickness the variation of the thickness with the radial distance can be expressed with sufficient accuracy by the equation:

$$\frac{h}{h_0} = e^{-\beta x^2 / 6a^2},$$

in which h/h_0 is the ratio of the thickness at the radial distance x to the thickness h_0 at the center, and β is a constant. The

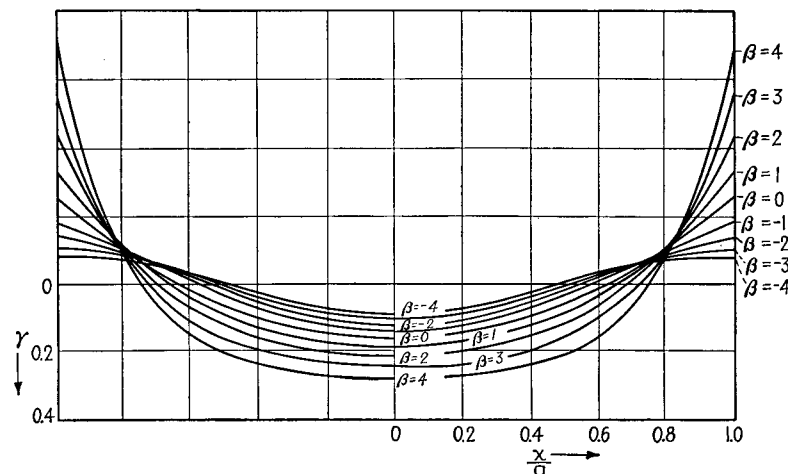


FIG. 89.

shapes of the diametrical sections of plates for various values of the constant β are shown in Fig. 88. The maximum bending stress σ_x in radial direction at a radial distance x from the center can be expressed by the equation:

$$\sigma_x = \gamma \frac{3qa^2}{h_0^2},$$

in which γ is a factor varying with the radial distance x .

¹⁹ Bruno Eck, Zeitschr. f. angew. Math. und Mech., Vol. 7, 1927, p. 498. Information on corrugated diaphragms see in "Techn. Notes" 738, 1939, Nat. Adv. Comm. Aeron.

The values of this factor ²⁰ for a plate with clamped edges are given by the curves in Fig. 89. For a simply supported plate these values are given in Fig. 90.

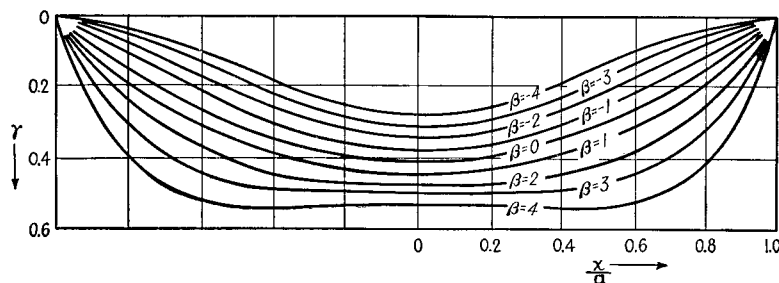


FIG. 90.

27. Circular Plate Loaded at the Center.—Clamped Edge.
For this case $q = 0$ is substituted in eq. (127), which gives

$$\varphi = -\frac{Px}{8\pi D}(2 \log_n x - 1) + \frac{C_1 x}{2} + \frac{C_2}{x}. \quad (a)$$

The constants of integration C_1 and C_2 are found from the conditions that φ is equal to zero at the clamped edge and at the center of the plate; hence

$$\begin{aligned} \left[-\frac{Px}{8\pi D}(2 \log_n x - 1) + \frac{C_1 x}{2} + \frac{C_2}{x} \right]_{x=0} &= 0, \\ \left[-\frac{Px}{8\pi D}(2 \log_n x - 1) + \frac{C_1 x}{2} + \frac{C_2}{x} \right]_{x=a} &= 0. \end{aligned} \quad (b)$$

As $(x \log_n x)_{x=0} = 0$, the following values of arbitrary constants are obtained from (b):

$$C_1 = \frac{P}{4\pi D}(2 \log_n a - 1); \quad C_2 = 0, \quad (c)$$

and eq. (a) becomes

$$\varphi = \frac{Px}{4\pi D} \log_n \frac{a}{x}. \quad (d)$$

²⁰ These values are given in the dissertation by O. Pichler, "Die Biegung Kreissymmetrischer Platten von Veränderlicher Dicke," Berlin, 1928.

The equation for the deflection surface is obtained by substituting $q = 0$ and the values (c) of the arbitrary constants into eq. (128), which gives

$$w = \frac{Px^2}{8\pi D} \left(\log_n \frac{x}{a} - \frac{1}{2} \right) + C_3. \quad (e)$$

The constant C_3 is obtained from the condition that at the clamped edge the deflection is zero, giving $C_3 = Pa^2/16\pi D$. Substituting this into eq. (e) we obtain

$$w = \frac{Px^2}{8\pi D} \log_n \frac{x}{a} + \frac{P}{16\pi D} (a^2 - x^2). \quad (f)$$

The deflection at the middle is

$$\delta = \frac{Pa^2}{16\pi D}. \quad (139)$$

This deflection is four times as great as that produced by a uniformly distributed load of the same magnitude (eq. 131).

Bending moments are calculated from eqs. (123) and (124), using expression (d),

$$M_1 = \frac{P}{4\pi} \left[(1 + \mu) \log_n \frac{a}{x} - 1 \right], \quad (g)$$

$$M_2 = \frac{P}{4\pi} \left[(1 + \mu) \log_n \frac{a}{x} - \mu \right]. \quad (h)$$

At the edge ($x = a$) these moments become

$$M_1 = -\frac{P}{4\pi}; \quad M_2 = -\mu \frac{P}{4\pi}, \quad (140)$$

and the corresponding maximum stresses are

$$\sigma_x = \frac{3}{2} \frac{P}{\pi h^2}, \quad \sigma_y = \frac{3\mu}{2} \frac{P}{\pi h^2}. \quad (141)$$

Comparison with eq. (132) for a uniform load shows that the concentrated load at the center produces stresses at the clamped edge of the plate which are twice as great as the stresses produced by a load of the same magnitude but uniformly distributed over the plate.

At the center of the plate, eqs. (g) and (h) give infinitely large values for the bending moments and the stresses. This result is due to the assumption made that the load is concentrated at the point.²¹ If the distribution of the load is taken over a small circle, the stresses become finite (see p. 151).

In determining the safe dimensions of a circular plate loaded at the center we can limit our investigation to the calculation of the maximum tensile bending stresses at the bottom of the plate. It was already mentioned that expressions (g) and (h) are not suitable for this purpose, and the more detailed investigation indicates²² that the proper formula for calculating the above mentioned tensile stress is

$$(\sigma_x)_{\max} = \frac{P}{h^2} (1 + \mu) \left(0.485 \log \frac{a}{h} + 0.52 \right). \quad (142)$$

Although the compressive stresses at the top of the plate may be many times as large as the tensile stresses at the bottom in the case of a strong concentration of the load, they do not represent a direct danger because of their highly localized character. The local yielding in the case of a ductile material will not affect the deformation of the plate in general if the tensile stresses at the bottom of the plate remain within safe limits. The compressive strength of a brittle material is usually many times greater than its tensile strength, so that a plate of such a material will also be safe if the tensile stress at the bottom is within the limit of safety.

Simply Supported Edge. The deflection of a plate simply supported at the edge is obtained by the method of superposition. On the deflections (f) found above for the case of a clamped edge, we superpose the deflection produced in the

²¹ Local stresses at the point of application of a concentrated load are discussed in the paper by H. Hencky, *Der Spannungszustand in rechteckigen Platten*, Darmstadt, 1913, p. 54. See also A. Nadai, "Elastische Platten," p. 97, 1925.

²² This question is discussed in "Theory of Plates and Shells," p. 75.

plate by moments $M_1 = P/4\pi$ uniformly distributed along the edge and thus obtain the case of a simply supported plate. The curvature produced by the moments $M_1 = P/4\pi$ is, from eq. (120),

$$\frac{1}{r} = \frac{P}{4\pi(1 + \mu)D},$$

and the corresponding deflection at the middle is

$$\delta_1 = \frac{a^2}{2r} = \frac{Pa^2}{8\pi(1 + \mu)D}.$$

This is added to the deflection (139), and the deflection at the middle of a simply supported plate becomes

$$\delta = \frac{Pa^2}{16\pi D} + \frac{Pa^2}{8\pi(1 + \mu)D} = \frac{Pa^2}{16\pi D} \cdot \frac{3 + \mu}{1 + \mu}. \quad (143)$$

This deflection is about 2.5 times as great as that for the case of a clamped plate.

The expressions for bending moments are found by adding $P/4\pi$ to the moments (g) and (h) obtained above for a clamped plate. The maximum tensile stress is obtained by adding $6/h^2 \cdot P/4\pi$ to the stress calculated from formula (142).

28. Circular Plate Concentrically Loaded.—We begin with the case in which the load is uniformly distributed along a circle of radius b (Fig. 91). In this case we consider separately the portion of the plate inside this circle and the portion outside. For each portion the general eq. (128) is used, with $q = 0$ for both portions and $P = 0$ for the inner portion. The arbitrary constants are determined in such a manner as to satisfy the conditions of continuity at the circle $x = b$.²³ Denoting by P the total load, the following results are obtained:²⁴




FIG. 91.

²³ The effect of shearing stress which produces discontinuity in the slope at the circle $x = b$ is neglected in this case; see paper by G. A. Garabedian, *J. de l'École Polytechnique*, 2^e Ser., C. no. 26, 1927.

²⁴ See note of article 45 of St. Venant's translation of the book by Clebsch, "Theorie der Elasticität fester Körper," Paris.

Clamped Edge. For inner portion ($x < b$),

$$w = \frac{P}{8\pi D} \left[- (x^2 + b^2) \log_n \frac{a}{b} + (x^2 - b^2) + \frac{1}{2} \left(1 + \frac{b^2}{a^2} \right) (a^2 - x^2) \right]. \quad (a)$$

For outer portion ($x > b$),

$$w = \frac{P}{8\pi D} \left[- (x^2 + b^2) \log_n \frac{a}{x} + \frac{1}{2} \left(1 + \frac{b^2}{a^2} \right) (a^2 - x^2) \right]. \quad (b)$$

Simply Supported Edge. For inner portion ($x < b$),

$$w = \frac{P}{8\pi D} \left[- (x^2 + b^2) \log_n \frac{a}{b} + (x^2 - b^2) + \frac{(3 + \mu)a^2 - (1 - \mu)b^2}{2(1 + \mu)a^2} (a^2 - x^2) \right]. \quad (c)$$

For outer portion ($x > b$),

$$w = \frac{P}{8\pi D} \left[- (x^2 + b^2) \log_n \frac{a}{x} + \frac{(3 + \mu)a^2 - (1 - \mu)b^2}{2(1 + \mu)a^2} (a^2 - x^2) \right]. \quad (d)$$

Any case of bending of a circular plate loaded symmetrically with respect to the center can be solved by use of these equations together with the method of superposition.

Consider, for instance, the case shown in Fig. 92, in which the load is uniformly distributed over the inner part of the plate bounded by a circle of radius c . Substitute in eq. (a) $P = 2\pi b q db$, and the deflection produced at the center of the plate by the elemental ring loading shown in the figure is

$$dw = \frac{q}{4D} \left[- b^2 \log_n \frac{a}{b} - b^2 + \frac{1}{2} (a^2 + b^2) \right] b db. \quad (e)$$

The deflection produced by the entire load is

$$\begin{aligned} \delta &= \int_0^c dw = \frac{q}{4D} \int_0^c \left[- b^2 \log_n \frac{a}{b} - b^2 + \frac{1}{2} (a^2 + b^2) \right] b db \\ &= \frac{q}{4D} \left[- \frac{c^4}{4} \log_n \frac{a}{c} - \frac{3}{16} c^4 + \frac{a^2 c^2}{4} \right]. \quad (144) \end{aligned}$$




FIG. 92.

If $c = a$, this equation coincides with eq. (131) for a uniformly loaded plate. By substituting in eq. (144) $c = 0$ and $\pi c^2 q = P$, eq. (139) for deflection by a concentrated load is obtained. To determine bending moments and stresses at the center of the plate, we calculate the second derivative with respect to x of the expression (a). Setting $x = 0$ and $P = 2\pi b q db$ in this derivative, the curvature at the center, produced by the elemental ring loading (Fig. 92), is

$$\frac{q}{4D} \left(- 2 \log_n \frac{a}{b} + 1 - \frac{b^2}{a^2} \right) b db.$$

The curvature at the center produced by the entire load is then

$$\begin{aligned} \left(\frac{d^2 w}{dx^2} \right)_{x=0} &= \frac{q}{4D} \int_0^c \left(- 2 \log_n \frac{a}{b} + 1 - \frac{b^2}{a^2} \right) b db \\ &= - \frac{q c^2}{4D} \left(\log_n \frac{a}{c} + \frac{c^2}{4a^2} \right). \quad (145) \end{aligned}$$

The corresponding bending moment at the center from eqs. (118) and (119) is

$$M_1 = M_2 = - D(1 + \mu) \frac{d^2 w}{dx^2} = \frac{1 + \mu}{4} q c^2 \left(\log_n \frac{a}{c} + \frac{c^2}{4a^2} \right) \quad (146)$$

and the maximum bending stresses at the center are

$$(\sigma_x)_{\max} = (\sigma_y)_{\max} = \frac{3}{2} (1 + \mu) \frac{q c^2}{h^2} \left(\log_n \frac{a}{c} + \frac{c^2}{4a^2} \right). \quad (147)$$

Using the notation P for the entire load $\pi c^2 q$, this becomes

$$(\sigma_x)_{\max} = (\sigma_y)_{\max} = \frac{3}{2} (1 + \mu) \frac{P}{\pi h^2} \left(\log_n \frac{a}{c} + \frac{c^2}{4a^2} \right). \quad (148)$$

By diminishing the radius c of the circle over which the load is distributed, we approach the condition of a concentrated load. The stresses at the center increase as c decreases, but remain finite as long as c is finite.

29. Deflection of a Symmetrically Loaded Circular Plate with a Circular Hole at the Center.—Bending by Couples. Denote by M_{1a} and M_{1b} the bending moments per unit length on the outer and inner edges respectively (Fig. 93, a). For this case let $P = q = 0$

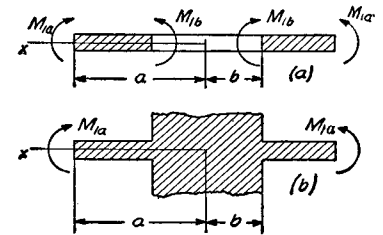


FIG. 93.

in eqs. (127) and (128) and we find

$$\varphi = \frac{C_1 x}{2} + \frac{C_2}{x}, \quad (a)$$

$$w = -\frac{C_1 x^2}{4} - C_2 \log_n \frac{x}{a} + C_3. \quad (b)$$

The arbitrary constants are now to be determined from the conditions at the edges. Substituting (a) into eq. (123) we obtain

$$M_1 = D \left[\frac{C_1}{2} - \frac{C_2}{x^2} + \mu \left(\frac{C_1}{2} + \frac{C_2}{x^2} \right) \right]. \quad (c)$$

By putting $x = a$ and afterwards $x = b$ we get the following equations for determining C_1 and C_2 :

$$D \left[\frac{C_1}{2} (1 + \mu) - \frac{C_2}{a^2} (1 - \mu) \right] = M_{1a},$$

$$D \left[\frac{C_1}{2} (1 + \mu) - \frac{C_2}{b^2} (1 - \mu) \right] = M_{1b},$$

from which

$$C_1 = \frac{2(a^2 M_{1a} - b^2 M_{1b})}{(1 + \mu)D(a^2 - b^2)}; \quad C_2 = \frac{a^2 b^2 (M_{1a} - M_{1b})}{(1 - \mu)D(a^2 - b^2)}. \quad (d)$$

The constant C_3 is determined from a consideration of the deflection of the plate. Assume, for instance, that the plate is supported at the outer edge; then the deflection at this edge is zero and C_3 is calculated from (b), which becomes

$$-\frac{C_1 a^2}{4} + C_3 = 0.$$

The deflection surface of the plate is obtained by substituting C_1 , C_2 and C_3 into eq. (b).

As a second example let us consider the case of bending of the plate by the couples M_{1a} when the inner edge is built in (Fig. 93, b). The arbitrary constants C_1 and C_2 in eq. (a) are determined from the conditions $\varphi = 0$ for $x = b$ and $M_1 = M_{1a}$ for $x = a$. Then from eqs. (a) and (c)

$$\frac{C_1 b}{2} + \frac{C_2}{b} = 0,$$

$$\frac{C_1}{2} (1 + \mu) - \frac{C_2}{a^2} (1 - \mu) = \frac{M_{1a}}{D},$$

from which

$$C_1 = \frac{2a^2 M_{1a}}{D[a^2(1 + \mu) + b^2(1 - \mu)]},$$

$$C_2 = -\frac{a^2 b^2 M_{1a}}{D[a^2(1 + \mu) + b^2(1 - \mu)]}.$$

Substituting into (a) and (c),

$$\varphi = \frac{a^2 M_{1a}}{D[a^2(1 + \mu) + b^2(1 - \mu)]} \left(x - \frac{b^2}{x} \right), \quad (e)$$

$$M_1 = \frac{a^2 M_{1a}}{a^2(1 + \mu) + b^2(1 - \mu)} \left[1 + \mu + (1 - \mu) \frac{b^2}{x^2} \right]. \quad (f)$$

Bending by Load Uniformly Distributed along Inner and Outer Edges. If bending is produced by a loading uniformly distributed along the edges (Fig. 94, a), $q = 0$ and P is equal to the entire load on the inner edge. These values are substituted into eqs. (127) and (128). Then, from eq. (127),

$$\varphi = -\frac{Px}{8\pi D} (2 \log_n x - 1) + \frac{C_1 x}{2} + \frac{C_2}{x}. \quad (g)$$

The arbitrary constants C_1 and C_2 are to be determined from the conditions at the edges. For example, if the plate is clamped at the edges (Fig. 94, b), the arbitrary constants are determined from the conditions $\varphi = 0$ for $x = a$ and $x = b$. Then, from eq. (g),

$$-\frac{Pa}{8\pi D} (2 \log_n a - 1) + \frac{C_1 a}{2} + \frac{C_2}{a} = 0,$$

$$-\frac{Pb}{8\pi D} (2 \log_n b - 1) + \frac{C_1 b}{2} + \frac{C_2}{b} = 0.$$

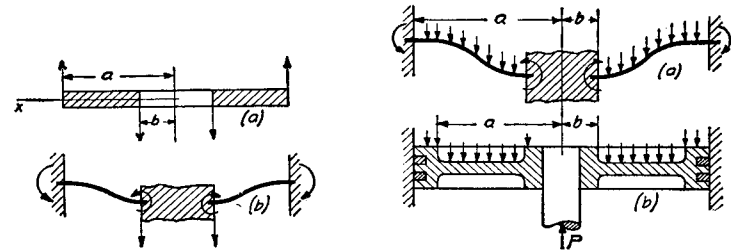


FIG. 94.

FIG. 95.

The expression for φ is obtained after C_1 and C_2 are calculated and

substituted into eq. (g). The bending moments may then be calculated from eqs. (123) and (124).

In the case of a uniformly distributed load (Fig. 95, *a*) the shearing force V at any point a distance x from the center is

$$V = \frac{1}{2\pi x} \pi q(x^2 - b^2) = \frac{qx}{2} - \frac{qb^2}{2x}.$$

This quantity must be substituted into eq. (125), and eqs. (127) and (128) become

$$\varphi = -\frac{qx^3}{16D} + \frac{qb^2x}{8D} (2 \log_n x - 1) + \frac{C_1x}{2} + \frac{C_2}{x},$$

$$w = \frac{qx^4}{64D} - \frac{b^2qx^2}{8D} (\log_n x - 1) - \frac{C_1x^2}{4} - C_2 \log_n x + C_3.$$

For determining arbitrary constants the conditions at the edges are used. For instance, if the plate is clamped at the edges, the equations for determining C_1 and C_2 are

$$-\frac{qa^3}{16D} + \frac{qab^2}{8D} (2 \log_n a - 1) + \frac{C_1a}{2} + \frac{C_2}{a} = 0,$$

$$-\frac{qb^3}{16D} + \frac{qb^2}{8D} (2 \log_n b - 1) + \frac{C_1b}{2} + \frac{C_2}{b} = 0.$$

Solutions of such problems as the bending of pistons of steam engines and the bending of flanges²⁵ of cylinders and tubes may be obtained by combining the solutions discussed in this article. For example, by combining the cases shown in Figs. 94 (*b*) and 95 (*a*), an approximate solution of the problem of the bending of a piston (Fig. 95, *b*) by steam pressure may be obtained.²⁶

Several cases of practical importance are represented in Fig. 96.²⁷ In all these cases the maximum stress is given by a formula

²⁵ See paper by Everett O. Waters and J. Hall Taylor, Trans. Amer. Soc. Mech. Engrs., 1927.

²⁶ Several problems of this kind are considered in the paper by M. Ensslin, Dinglers Polytech. Journal, 1903 and 1904. See also Pfeiderer, Forschungsarbeiten, n. 97, 1911. Experiments with pistons are described in the paper by C. Codron, Revue de Mécanique, Vol. 13 (1903), p. 340. Circular plates reinforced by ribs are discussed by M. Schilhansl; see Zeitschr. f. Angew. Mathem. und Mech., Vol. 6 (1926), p. 484, and V. D. I., Vol. 71 (1927), p. 1154. A further discussion of circular plates see in "Theory of Plates and Shells," 1940.

²⁷ See paper by A. M. Wahl and G. Lobo, Trans. A. S. M. E. Vol. 52, 1929.

of the type:

$$\sigma_{\max} = k \frac{qa^2}{h^2} \quad \text{or} \quad \sigma_{\max} = \frac{kP}{h^2}, \quad (149)$$

depending on whether the applied load is uniformly distributed over the surface or concentrated along the edge. The numerical values

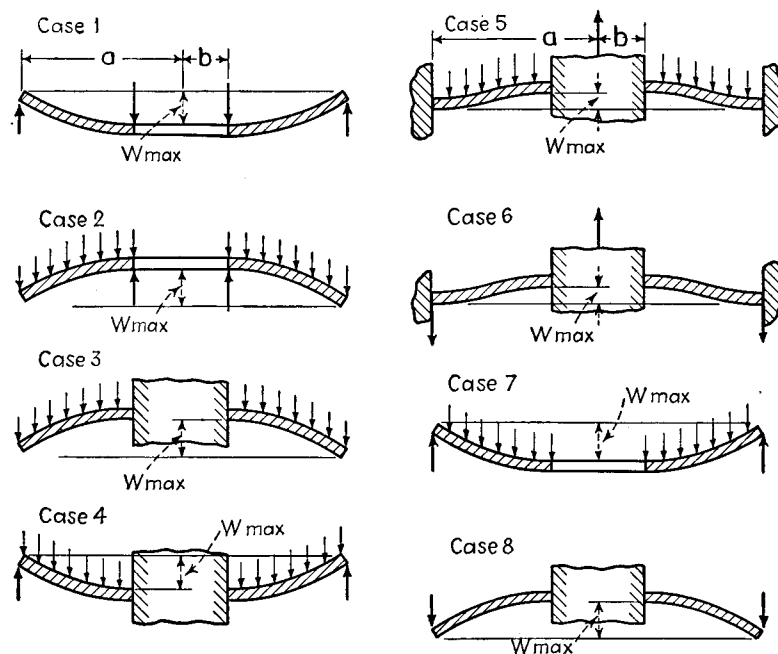


FIG. 96.

of the factor k , calculated for several values of the ratio a/b and for Poisson's ratio $\mu = 0.3$, are given in Table 9.

The maximum deflections in the same cases are given by formulas of the type:

$$w_{\max} = k_1 \frac{qa^4}{Eh^3} \quad \text{or} \quad w_{\max} = k_1 \frac{Pa^2}{Eh^3}. \quad (150)$$

The coefficients k_1 are also given in Table 9.

30. Bending of Rectangular Plates.—The theory of bending of rectangular plates is more complicated than that for circular plates and only some final results for the bending moments and deflections

are given below.²⁸ In deriving these results, it is assumed that deflections are small in comparison with the thickness of the plate, and that during bending the edges can freely displace in the plane of

TABLE 9.—COEFFICIENTS k AND k_1 IN EQS. (149) AND (150) FOR THE EIGHT CASES SHOWN IN FIG. 96

$a/b =$	1.25		1.5		2		3		4		5	
Case	k	k_1	k	k_1	k	k_1	k	k_1	k	k_1	k	k_1
1	1.10	0.341	1.26	0.519	1.48	0.672	1.88	0.734	2.17	0.724	2.34	0.704
2	0.66	0.202	1.19	0.491	2.04	0.902	3.34	1.220	4.30	1.300	5.10	1.310
3	0.135	0.00231	0.410	0.0183	1.04	0.0938	2.15	0.293	2.99	0.448	3.69	0.564
4	0.122	0.00343	0.336	0.0313	0.74	0.1250	1.21	0.291	1.45	0.417	1.59	0.492
5	0.090	0.00077	0.273	0.0062	0.71	0.0329	1.54	0.110	2.23	0.179	2.80	0.234
6	0.115	0.00129	0.220	0.0064	0.405	0.0237	0.703	0.062	0.933	0.092	1.13	0.114
7	0.592	0.184	0.976	0.414	1.440	0.664	1.880	0.824	2.08	0.830	2.19	0.813
8	0.227	0.00510	0.428	0.0249	0.753	0.0877	1.205	0.209	1.514	0.293	1.745	0.350

the plate, i.e., there are no stresses acting on the middle plane of the plate.

Plate Supported at the Edges. In the case of a uniformly distributed load q the maximum deflection occurs at the center of the plate (Fig. 97) and is given by the equation:

$$\delta = \alpha \frac{qa^4}{Eh^3}, \quad (151)$$

in which a is the shorter side of the plate, h the thickness of the plate and α is a numerical factor depending on the magnitude of the ratio b/a . As before, we use the notations M_1 and M_2 for the bending moments per unit length on the sections parallel to the y and x axes respectively. The maximum bending moments occur at the center of the plate and are

$$(M_1)_{\max} = \beta_1 qa^2; \quad (M_2)_{\max} = \beta_2 qa^2, \quad (152)$$

in which β_1 and β_2 denote numerical factors depending upon the ratio b/a . Several values of the coefficients α , β_1 and β_2 are given in Table 10. These values are calculated on the assumption that Poisson's ratio is equal to 0.3.

²⁸ The complete discussion of bending of rectangular plates is given in "Theory of Plates and Shells," 1940.

TABLE 10.—CONSTANTS FOR CALCULATING UNIFORMLY LOADED RECTANGULAR PLATES WITH SIMPLY SUPPORTED EDGES

$b/a =$	1.0	1.1	1.2	1.3	1.4	1.5	1.6	1.7
$\alpha =$	0.0443	0.0530	0.0616	0.0697	0.0770	0.0843	0.0906	0.0964
$\beta_1 =$	0.0479	0.0553	0.0626	0.0693	0.0753	0.0812	0.0862	0.0908
$\beta_2 =$	0.0479	0.0494	0.0501	0.0504	0.0506	0.0500	0.0493	0.0486
$b/a =$	1.8	1.9	2.0	3.0	4.0	5.0	∞	
$\alpha =$	0.1017	0.1064	0.1106	0.1336	0.1400	0.1416	0.1422	
$\beta_1 =$	0.0948	0.0985	0.1017	0.1189	0.1235	0.1246	0.1250	
$\beta_2 =$	0.0479	0.0471	0.0464	0.0404	0.0384	0.0375	0.0375	

It may be seen from the above table that for $b/a > 3$ the maximum deflection and the maximum bending moment do not differ substantially from those calculated for $b/a = \infty$. This means that for long rectangular plates ($b/a > 3$) the effect of the short sides can be neglected and the formulas derived in arts. 20, 21, 22 for bending to a cylindrical surface can be used with sufficient accuracy.

Plate Built-In at the Edges. The maximum deflection takes place at the center of the plate and can be expressed by the same equation (151) as was used for the plate with supported edges. The numerical maximum bending moment occurs at the middle of the longer sides and is given by the equation:

$$(M_1)_{\max} = \beta qa^2. \quad (153)$$

Several values of the coefficients α and β are given in Table 11 below.

TABLE 11.—CONSTANTS FOR UNIFORMLY LOADED RECTANGULAR PLATES WITH CLAMPED EDGES

$b/a =$	1.00	1.25	1.50	1.75	2.00	∞
$\alpha =$	0.0138	0.0199	0.0240	0.0264	0.0277	0.0284
$\beta =$	0.0513	0.0665	0.0757	0.0806	0.0829	0.0833

This indicates that clamping the edges of the plate diminishes considerably its maximum deflection. The effect of clamping on the magnitude of the maximum bending stress is not so large. Also in the case of clamped edges the maximum deflection and the maximum bending moment for $b/a = 2$ nearly coincide with those obtained for $b/a = \infty$. This justifies the use of the results obtained in art. 21 for bending to a cylinder, when we make calculations for comparatively long rectangular plates ($b/a \geq 2$) with clamped edges.

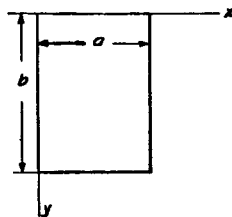


FIG. 97.

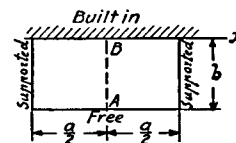


FIG. 98.

Plate with Two Opposite Sides Supported, Third Side Built-In and the Fourth Side Free (Fig. 98). In the case of a uniformly distributed load, the maximum deflection is at the middle of the free side at the point A . This deflection can be represented by the equation:

$$\delta = \alpha \frac{qb^4}{Eh^3} \quad (154)$$

The values of the numerical factor α in this equation are given in the table below. The maximum bending moment M_1 also occurs at the point A , and its magnitude is given by the equation:

$$(M_1)_{\max} = \beta_1 qa^2 \quad (155)$$

The maximum bending moment M_2 occurs at the point B , at the middle of the built-in side, and is given by the equation:

$$(M_2)_{\max} = -\beta_2 qb^2 \quad (156)$$

Several values of the coefficients β_1 and β_2 are given in the table below.

TABLE 12.—CONSTANTS FOR UNIFORMLY LOADED RECTANGULAR PLATE SHOWN IN FIG. 98

$b/a = 0$	1/3	1/2	2/3	1
$\alpha = 1.37$	1.03	0.635	0.366	0.123
$\beta_1 = 0$	0.0078	0.0293	0.0558	0.0972
$\beta_2 = 0.500$	0.428	0.319	0.227	0.119

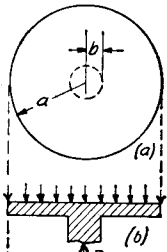
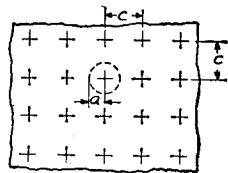


FIG. 99.

It can be seen from the table that when a is large compared to b the middle strip AB approaches the condition of a cantilever built-in at B and uniformly loaded.

Uniformly Loaded Plate Supported at Many Equidistant Points (Fig. 99). In this case we can obtain a good approximation to the maximum stress and to the stress distribution near a support as follows. A part of the plate near the support, bounded by a circle of radius $a = 0.22c$ (where c is the distance between supports), is considered as a circular plate simply supported at the outer edge loaded at the inner edge by the load, $P = qc^2$ acting upward and uniformly loaded by a load of intensity q acting downward. This loading is

shown in Fig. 99 (b).²⁹ The problem may be solved by using the methods developed in art. 29.

The bending of rectangular plates on an elastic foundation in connection with the stress analysis in concrete roads was discussed by H. M. Westergaard.³⁰

31. Thin-walled Vessels Submitted to Internal Pressure.

—This consideration will be confined to vessels having the form of a surface of revolution, which are subjected to a continuous internal pressure of intensity p , not necessarily uniform but symmetrically distributed with reference to the axis of revolution $O-O$ (Fig. 100). If the thickness of the

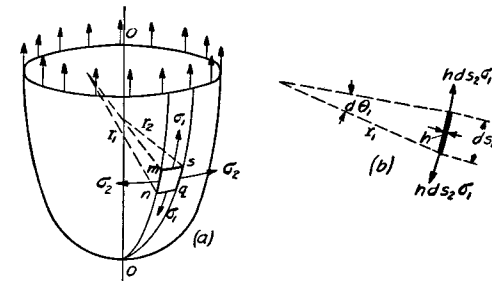


FIG. 100.

wall is small in comparison with the radii of curvature and there are no discontinuities such as sharp bends in the meridional curves, the stresses can be calculated with sufficient accuracy by neglecting the bending of the wall of the vessel, i.e., by assuming that the tensile stresses in the wall are uniformly distributed through the thickness.³¹ The magnitudes of the stresses may then be easily calculated from the equations of statics.

Let us consider an element $mnsq$, cut from the wall of the vessel by two meridional sections such as mn and sq and two sections ms and nq normal to the meridians. From the

²⁹ See paper by H. M. Westergaard and A. Slater, Proceedings of the Amer. Concrete Inst., Vol. 17, 1921. See also V. Lewy, "Die strenge Lösung des Pilzdeckenproblems," Berlin, 1922.

³⁰ See his paper in "Ingeniøren," Copenhagen, Denmark, 1923, p. 513, and also in "Public Roads," Vol. 7, 1926, p. 25.

³¹ Shells which do not resist bending are sometimes called "membranes" and the stresses calculated by neglecting bending are called "membrane stresses." It is assumed that the external forces, uniformly distributed along the edge of the shell, are tangent to meridians.

condition of symmetry it is seen that only normal stresses act on the sides of this element. Let

σ_1 be the tensile stress in the meridional direction, i.e., the *meridional stress*,

σ_2 , the tensile stress along the parallel circle, i.e., the *hoop stress*,

h , the uniform thickness of the shell,

ds_1 , the dimension of the element in the meridional direction,

ds_2 , the dimension of the element in the direction of the parallel circle,

r_1 , the meridional radius of curvature,

r_2 , the radius of curvature of the section perpendicular to the meridian.

Then the total tensile forces acting on the sides of element are $h\sigma_1 ds_2$ and $h\sigma_2 ds_1$. The tensile forces $hds_2\sigma_1$ acting on the sides ms and nq of the element have a component in the direction normal to the element equal to (see Fig. 100, *b*)

$$hds_2\sigma_1 d\theta_1 = \frac{h\sigma_1 ds_1 ds_2}{r_1}. \quad (a)$$

In the same manner the tensile forces acting on the sides mn and sq have a normal component,

$$hds_1\sigma_2 d\theta_2 = \frac{h\sigma_2 ds_1 ds_2}{r_2}. \quad (b)$$

The sum of these normal components is in equilibrium with the normal pressure on the element; hence

$$\frac{h\sigma_1 ds_1 ds_2}{r_1} + \frac{h\sigma_2 ds_1 ds_2}{r_2} = p ds_1 ds_2 \quad (c)$$

or

$$\frac{\sigma_1}{r_1} + \frac{\sigma_2}{r_2} = \frac{p}{h}. \quad (157)$$

Some applications of this equation will now be discussed.

Spherical Vessel. In this case $r_1 = r_2 = r$ and $\sigma_1 = \sigma_2 = \sigma$. Equation (157) becomes

$$\sigma = \frac{pr}{2h}.$$

Conical Tank. Let us consider an open conical tank filled with a liquid (Fig. 101). In this case, the curvature of the meridian $1/r_1 = 0$ and the hoop stress σ_2 due to the liquid pressure can be calculated from eq. (157). The internal pressure at points $m-n$ a distance $d-y$ from the surface of the liquid is

$$p = \gamma(d-y),$$

FIG. 101.

where γ is the weight per unit volume of the liquid. The radius of curvature r_2 at these points is

$$r_2 = \frac{y \tan \alpha}{\cos \alpha}.$$

Equation (157) then becomes

$$\sigma_2 \frac{\cos \alpha}{y \tan \alpha} = \frac{\gamma(d-y)}{h},$$

from which

$$\sigma_2 = \frac{\gamma(d-y)y \tan \alpha}{h \cos \alpha}. \quad (d)$$

The maximum value of this stress occurs at points where the product $(d-y)y$ is a maximum. If we set the derivative of $(d-y)y$ equal to zero, we find $y = d/2$ and the stress at this point is

$$(\sigma_2)_{\max} = \frac{\gamma d^2 \tan \alpha}{4h \cos \alpha}. \quad (e)$$

The stress σ_1 at the level $m-n$ is found from the condition that the vertical components of the meridional tensile forces in the shell support the weight of the volume $tmons$ of the liquid (Fig. 101); hence

$$2\pi y \tan \alpha h \sigma_1 \cos \alpha = \pi y^2 \tan^2 \alpha (d-y + \frac{1}{3}y)\gamma,$$

from which

$$\sigma_1 = \frac{y \tan \alpha (d - \frac{2}{3}y) \gamma}{2h \cos \alpha}. \quad (f)$$

This stress is maximum when $y = \frac{3}{4}d$. Substituting in eq. (f), we find

$$(\sigma_1)_{\max} = \frac{3}{16} \frac{d^2 \gamma \tan \alpha}{h \cos \alpha}. \quad (g)$$

Equations (d) and (f) represent the complete solution of the problem as long as the bending stresses in the wall of the tank may be neglected.

In the case of a *cylindrical shell* of diameter d , submitted to uniform pressure p , we found before (see p. 42, Part I)

$$\sigma_1 = \frac{pd}{4h}; \quad \sigma_2 = \frac{pd}{2h}.$$

Problems

1. The tank of Fig. 102 contains liquid at the level shown.

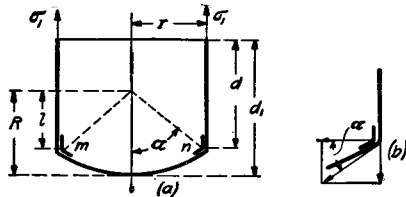


FIG. 102.

Determine the maximum stresses σ_1 and σ_2 in the cylindrical and the spherical portions and also the compressive force in the reinforcing ring mn .

Solution. The weight of the liquid in the container is

$$Q = \left[\pi d r^2 + \pi \left(\frac{2}{3} R^3 - R^2 l + \frac{l^3}{3} \right) \right] \gamma.$$

For the cylindrical portion of the tank,

$$\sigma_1 = \frac{Q}{2\pi r h} = \text{const.} \quad \text{and} \quad (\sigma_2)_{\max} = \frac{d\gamma r}{h}.$$

For the spherical portion of the tank the maximum stress is at the bottom, where the liquid pressure is γd_1 and $\sigma_1 = \sigma_2 = \gamma d_1 R / 2h$. The tensile force in the spherical portion of the tank per unit length of the ring mn is $Q / (2\pi r \sin \alpha)$. The radial component of this force, producing compression of the ring (Fig. 102, b), is $(Q / 2\pi r) \cot \alpha$, and

the compressive force in the ring is $(Q / 2\pi) \cot \alpha$. This is only an approximation obtained on the assumption that the cylindrical and spherical portions are membranes, resisting only to tension. In calculating compressive stress in the ring adjacent portions of cylindrical and spherical shells must be added to the cross section of the ring mn itself.

2. Determine the stresses at the points mn of a cylindrical tank with a hemispherical bottom, which contains liquid at the level indicated (Fig. 103).

Solution. From eq. (157) for any point of the spherical portion at a distance x from the surface of the liquid we have

$$\frac{\sigma_1 + \sigma_2}{R} = \frac{\gamma x}{h}. \quad (a)$$

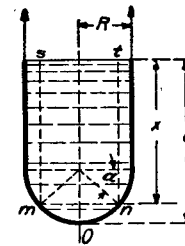


FIG. 103.

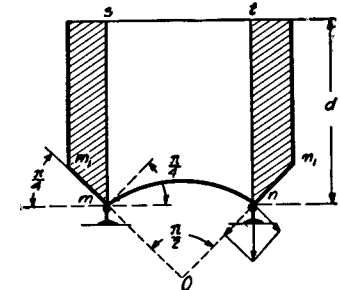


FIG. 104.

Since the meridional forces along the section mn support the weight of the volume $smont$ of the liquid, the second equation is

$$\sigma_1 = \frac{\gamma R}{h} \left(\frac{d - R}{2} + \frac{R}{3} \frac{1 - \sin^3 \alpha}{\cos^2 \alpha} \right) \quad (b)$$

and eq. (a) becomes

$$\sigma_2 = \frac{\gamma R}{h} \left(\frac{d - R}{2} + \frac{R \sin^3 \alpha + 3 \sin \alpha \cos^2 \alpha - 1}{3 \cos^2 \alpha} \right).$$

3. In Fig. 104 determine the relation between the outer diameter of the tank, the diameter of the supporting ring mn and the depth d of the liquid for which the ring mn is submitted to vertical pressure only. The middle portion of the bottom of the tank is a *spherical surface* of central angle $\pi/2$. The same angle has also the conical portion mm_1nn_1 .

Hint. The necessary relation may be obtained from the con-

dition that the pressures on the ring from the side of the spherical bottom and from the conical lateral surface both inclined 45° give no horizontal component. From this it follows that the volume of the liquid indicated in the figure by the shaded areas is equal to the volume $mnst$.

4. Determine the maximum stress in the tank represented in Fig. 102 if $R = 10$ feet, $r = 8$ feet, $d = 20$ feet, $\gamma = 62.5$ lbs. per cubic foot and $h = \frac{1}{4}$ in.

5. Determine stresses σ_1 and σ_2 in the wall of a torus submitted to uniform inner pressure p (Fig. 105).

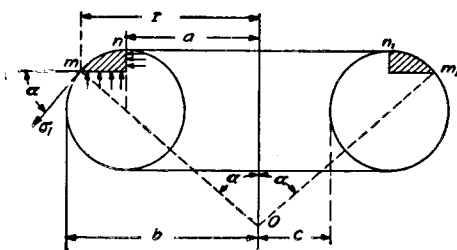


FIG. 105.

Solution. The condition of equilibrium with respect to vertical forces of the portion mm_1n_1 cut from the vessel by a vertical cylindrical surface of radius a and conical surface mom_1 gives

$$\pi(r^2 - a^2)p - \sigma_1 h 2\pi r \sin \alpha = 0,$$

from which

$$\sigma_1 = \frac{p(r^2 - a^2)}{2rh \sin \alpha}.$$

The stress σ_2 can now be calculated from eq. (157).

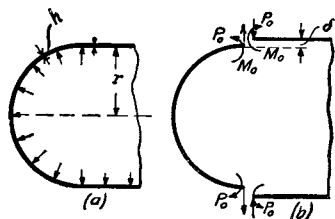


FIG. 106.

6. Determine the maximum stress in the wall of the vessel represented in Fig. 105 if $a = 10'$, $b = 12'$, $h = \frac{1}{4}"$ and $p = 50$ lbs. per sq. in.

32. Local Bending Stresses in Thin Vessels.—In the previous article, bending of the wall of the vessel was neglected and only tensile stresses, so-called *membrane stresses*, were considered. The displacements due to membrane stresses cause bending of the wall and the resulting bending stresses

may be of practical importance. This is especially so at the places of discontinuity in the meridian. If the meridian consists of curves which are not tangent, a reinforcing ring as shown in Fig. 102 is necessary in order to prevent large bending of the wall of the vessel. The stresses may be high also at the junctions in a meridian consisting of several curves tangent to one another. The additional stresses set up at such points will be called *discontinuity stresses*.

The method of calculating them will now be shown for the simple case of a cylindrical vessel with hemispherical ends submitted to the action of uniform internal pressure (Fig. 106). We consider first the membrane stresses only, and find for the cylindrical portion

$$\sigma_1 = \frac{pr}{2h}; \quad \sigma_2 = \frac{pr}{h}, \quad (a)$$

where r is the radius of cylinder and hemisphere and h the thickness of the wall. For the spherical portion,

$$\sigma_1 = \sigma_2 = \sigma = \frac{pr}{2h}.$$

The corresponding radial displacements for the cylindrical and spherical portions are

$$\frac{r}{E}(\sigma_2 - \mu\sigma_1) = \frac{pr^2}{2hE}(2 - \mu) \quad \text{and} \quad \frac{pr^2}{2hE}(1 - \mu)$$

respectively.

If the spherical and cylindrical parts of the vessel were disjointed (Fig. 106, *b*), the difference in radii due to membrane stresses would be

$$\delta = \frac{pr^2}{2hE}. \quad (b)$$

In the actual vessel, the head and the cylinder are kept together at the joint by shearing forces P_0 and bending moments M_0 (Fig. 106, *b*) per unit length of the circumference of the middle surface of the vessel. These forces produce bending of the adjacent parts of the vessel. In discussing bending in the cylinder, since the deformation is symmetrical with respect to the axis, it is sufficient to consider the bending of an elemental strip (Fig. 107), and the deflection of this strip will be radial. For simplicity it is assumed the strip is of unit

width. If y denotes the radial displacement at any cross section of the strip, then the radius of the cylinder shortens at this section by y and as a result of this there is a compressive strain in the circumferential direction of the magnitude y/r . The corresponding compressive stress is Ey/r . Hence when the strip deflects towards the axis of the cylinder, lateral compressive forces T (Fig. 107, *c*) are produced whose magnitude per unit length of the strip is

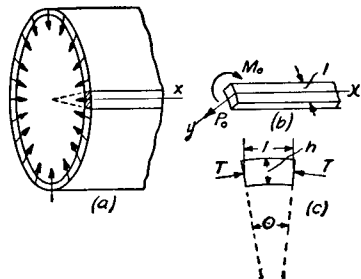


FIG. 107.

Since the angle θ is equal to $1/r$, these forces give a radial resultant³²

$$\frac{Eyh}{r} \theta = \frac{Eyh}{r^2}, \quad (d)$$

which opposes the deflection of the strip. These reactive forces are distributed along the strip in proportion to the deflections y so that the strip is in the same condition with respect to bending as a beam on an elastic foundation (art. 1) with $k = Eh/r^2$. Since any change in the shape of the cross section of the strip is prevented by the adjacent strips in a manner similar to that in plates (see p. 119), $D = Eh^3/12(1 - \mu^2)$ is to be used for its flexural rigidity. The differential equation of the deflection curve of the strip is then (see eq. 1)

$$D \frac{d^4 y}{dx^4} = - \frac{Eh}{r^2} y.$$

Introducing, as before, the notation

$$\beta = \sqrt[4]{\frac{Eh}{4Dr^2}} = \sqrt[4]{\frac{3(1 - \mu^2)}{r^2 h^2}}, \quad (158)$$

the deflection curve of the strip becomes (see eq. 11, p. 12)

$$y = \frac{e^{-\beta x}}{2\beta^3 D} [P_0 \cos \beta x - \beta M_0 (\cos \beta x - \sin \beta x)]. \quad (e)$$

This is a rapidly damped oscillatory curve of wave length

$$l = \frac{2\pi}{\beta} = 2\pi \sqrt[4]{\frac{r^2 h^2}{3(1 - \mu^2)}}, \quad (f)$$

³² It is assumed that θ is a small angle.

which is small in comparison with r if h is small. From this it can be shown that bending at the joint of cylinder and head is of *local character* and has an appreciable effect on the stresses only in a narrow zone in the vicinity of the joint. This narrow zone at the edge of the head is nearly cylindrical in shape and hence eq. (e) can be used for calculating deflections and stresses in the head also.³³

In the simplest case, in which cylindrical wall and spherical head are of the same thickness, the deflections and the slopes produced at the edges of the spherical and cylindrical parts by the forces P_0 are equal. The conditions of continuity at the joint are satisfied if $M_0 = 0$ and P_0 has such a magnitude as to produce a deflection at the edge of the cylinder equal to $\delta/2$. Putting $M_0 = 0$, $x = 0$ in eq. (e), the equation for calculating P_0 is

$$\frac{P_0}{2\beta^3 D} = \frac{\delta}{2},$$

from which

$$P_0 = \delta \beta^3 D = \frac{pr^2}{2hE} \frac{Eh}{4\beta r^2} = \frac{p}{8\beta}. \quad (159)$$

With P_0 known the deflection and the bending moment at any cross section of the strip may be calculated from eq. (e). The corresponding discontinuity stresses must be added to the membrane stresses given by eqs. (a). If the head and the cylindrical portion of the vessel have different thicknesses, there will be both a shearing force P_0 and a moment M_0 at the joint. These two quantities are calculated from the conditions: (1) the sum of edge deflections in the spherical and in the cylindrical parts must be equal to δ (Fig. 106, *b*); (2) the angles of rotations of the two edges must be equal.

The above method can be used also in the cases of heads which are not of hemispherical shape.³⁴ If the thickness of the wall of

³³ The proof that this is a sufficiently accurate assumption was given by E. Meissner, Schweiz. Bauzeitung, Vol. 86, 1925, p. 1.

³⁴ This method was used in investigating stress distribution in various shapes of steam boiler heads. See E. Höhn and A. Huggenberger, Über die Festigkeit der gewölbten Boden und der Zylinderschale, Zürich, 1927. See also W. M. Coates, "The State of Stress in Full Heads of Pressure Vessels," Transactions, A. S. M. E., Applied Mech. Div., 1929. It was used also in investigating local bending in tanks containing liquid. See T. Pöschl and K. Terzaghi, Berechnung von Behältern, Berlin, 1926; H. Reissner, Beton und Eisen, Vol. 7, 1908, and C. Runge, Zeitschr. f. Math. u. Phys., Vol. 51, 1904, p. 254. Cylindrical shells with flat ends were discussed by E. O. Holmberg and K. Axelsson, Trans. A. S. M. E. Vol. 54, p. 13, 1932. A further discussion of cylindrical shells see in "Theory of Plates and Shells," 1940.

pressure vessels is not small, the bending stresses in the wall may become of primary importance and a more detailed investigation of the stress distribution becomes necessary.³⁵

Problems

1. Determine the discontinuity stresses in the vessel represented in Fig. 106 if $p = 150$ lbs. per sq. in., $r = 25$ in., $h = \frac{1}{2}$ in., $\mu = 0.3$.

Solution. From eq. (158) $\beta = 0.364$ and from eq. (159)

$$P_0 = \frac{150}{8 \times 0.364} = 51.5 \text{ lbs. per in.}$$

The bending moment in the elemental strip is

$$M = -D \frac{d^2 y}{dx^2}$$

and, by using eq. (e) and substituting

$$y = \frac{P_0}{2\beta^3 D} e^{-\beta x} \cos \beta x,$$

we obtain

$$M = -\frac{P_0}{\beta} e^{-\beta x} \sin \beta x.$$

The numerical maximum of this moment is at $\beta x = \pi/4$, when $M_{\max} = 45.4$ lbs. ins. The corresponding maximum bending stress in the strip is $6M_{\max}/h^2 = 1,090$ lbs. per sq. in. This stress must be added to the membrane stress

$$\sigma_1 = \frac{pr}{2h} = 150 \times 25 = 3,750 \text{ lbs. per sq. in.}$$

The bending of the strip produces also hoop stresses. These are made up of two parts: (1) stresses preventing cross sections of the strip from distortion (see p. 120) (the maximum value of these stresses at any cross section of the strip is $\pm 6\mu M/h^2$) and (2) stresses $-(yE/r)$ due to shortening of the circumference. Substituting the above expressions for y and M , the discontinuity stress, which must be added to the membrane stress σ_2 , is

$$\begin{aligned} & -\frac{P_0 E}{2\beta^3 D r} e^{-\beta x} \cos \beta x + \frac{6\mu P_0}{\beta h^2} e^{-\beta x} \sin \beta x \\ & = \frac{6\mu P_0}{\beta h^2} e^{-\beta x} (\sin \beta x - 1.83 \cos \beta x). \end{aligned}$$

³⁵ See "Theory of Plates and Shells," 1940.

The maximum value of this stress can easily be found by the usual method. It will be small in comparison with the membrane hoop stress $pr/h = 7,500$ lbs. per sq. in., so that discontinuity stresses in this case do not materially affect the maximum stress.

2. A thin cylindrical drum attached to two solid discs rotates about the axis $O-O$ (Fig. 108) with a peripheral velocity v . Determine the local bending stresses in the drum if it is built in along the edges mn and m_1n_1 .

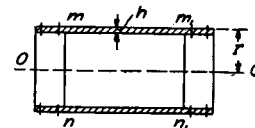


FIG. 108.

Solution. If the drum were separated from the discs the increase in the radius of the drum, due to centrifugal force, would be (see eq. 15, Part I) $\gamma v^2 r / gE$. The increase in the radius of the solid discs is (see eq. 223)

$$\frac{1 - \mu}{4} \frac{\gamma v^2 r}{gE}.$$

The difference of these two quantities is

$$\delta = \frac{3 + \mu}{4} \frac{\gamma v^2 r}{gE}.$$

Applying the same method as in the previous problem and considering a strip of unit width, the magnitude of the shearing force P_0 and the bending moment M_0 at the edge mn is found by using eqs. (11) and (12). Consider the discs as very rigid in comparison with the drum and neglect the deformations produced in them by the forces P_0 and couples M_0 . The equations for calculating P_0 and M_0 are

$$\frac{1}{2\beta^3 D} (P_0 - \beta M_0) = \delta,$$

$$\frac{1}{2\beta^2 D} (P_0 - 2\beta M_0) = 0,$$

from which

$$P_0 = 4\delta\beta^3 D; \quad M_0 = 2\delta\beta^2 D.$$

Having these quantities, the deflections and the bending stresses are found from an equation analogous to eq. (11).

3. Determine the maximum bending stress in the drum of the previous problem if $r = 25$ in., $h = \frac{1}{2}$ in., $v = 500$ feet per sec. and the material is steel.

4. Determine the bending stresses produced in a pipe by a narrow ring shrunk onto it (Fig. 109).

Solution. Consider a longitudinal strip of unit width and denote by P the pressure between the ring and the pipe, per unit length of the circumference of the pipe. The bending of the strip is the same as that of a long bar on an elastic foundation, which carries a single load P (art. 1). The decrease in the radius of the pipe due to P , from (eq. 8), is $P/8\beta^3 D$. The increase in the radius of the ring is $^{36} Pr^2/AE$, where A is the cross-sectional area of the ring. If δ is the initial difference in the inner radius of the ring and the outer radius of the pipe, the equation for calculating P is

$$\frac{P}{8\beta^3 D} + \frac{Pr^2}{AE} = \delta$$

or, by using eq. (158) and taking $\mu = 0.3$,

$$0.643 \frac{P}{E} \left(\frac{r}{h} \right)^{3/2} + \frac{Pr^2}{AE} = \delta. \quad (g)$$

P is determined from this equation, and the maximum bending moment in the strip is found from eq. (9).³⁷ The maximum bending stress in the strip is

$$\sigma = \frac{3}{2} \frac{P}{h^2} \sqrt{\frac{r^2 h^2}{3(1-\mu^2)}}.$$

The same method is applicable also to cases in which a cylindrical tube with reinforcing rings is submitted to either a uniform internal or a uniform external pressure. If the distance between the rings is so large that the effect of each on the deflections produced by the others may be neglected, P can be obtained from eq. (g) by substituting $\delta = pr^2/Eh$. This represents the change in the radius of the pipe due to the uniform pressure.³⁸

5. Solve the preceding problem assuming that the length l of the pipe is not large and that the ring is at the middle of the length.

³⁶ The dimension of the ring in the radial direction is assumed to be small in comparison with r .

³⁷ An example of such calculations is given in the paper by G. Cook, Engineering, Vol. 116, 1923, p. 479. See also R. Lorenz, V. D. I., Vol. 52, 1908, p. 1706; M. Westphal, V. D. I., Vol. 41, 1897, p. 1036.

³⁸ The application of this method to the calculation of hull stresses in a submarine having a circular cross section is given in the paper by K. v. Sanden in the periodical, Werft und Reederei, 1920, p. 189.




FIG. 109.

Hint. In calculating the pressure P per unit length of the ring we use the results obtained for the problem shown in Fig. 13, p. 18. Then the deflection produced in the pipe by the forces P is

$$\frac{P\beta}{2k} \cdot \frac{\cosh \beta l + \cos \beta l + 2}{\sinh \beta l + \sin \beta l} = \frac{P}{8\beta^3 D} \cdot \frac{\cosh \beta l + \cos \beta l + 2}{\sinh \beta l + \sin \beta l}.$$

The equation for calculating P then is

$$\frac{P}{8\beta^3 D} \cdot \frac{\cosh \beta l + \cos \beta l + 2}{\sinh \beta l + \sin \beta l} + \frac{Pr^2}{AE} = \delta.$$

Find P for steel pipe if $r = 25$ in., $h = \frac{1}{2}$ in., $l = 50$ in., $A = 4$ sq. in., and $\delta = 0.05$ in.

6. A cylindrical pipe with simply supported edges is submitted to a uniform internal pressure p . Find the longitudinal bending stress and the deflection at the middle of the pipe, Fig. 110. The dimensions of the pipe are the same as in the preceding problem.

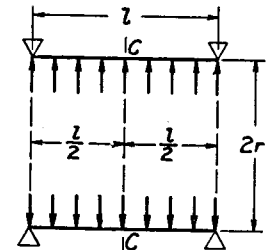


FIG. 110.

Hint. From the results of the problem shown in Fig. 20, p. 24, the deflection and the bending moment per unit length of the circumference at the middle cross section $c-c$ are

$$y_c = \frac{pr^2}{Eh} \left(1 - \frac{2 \cosh \frac{\beta l}{2} \cos \frac{\beta l}{2}}{\cosh \beta l + \cos \beta l} \right),$$

$$M = \frac{p}{2\beta^2} \frac{\sinh \frac{\beta l}{2} \sin \frac{\beta l}{2}}{\cosh \beta l + \cos \beta l}.$$

7. Solve the preceding problem assuming that the edges of the pipe are absolutely built-in.

Hint. Use the results of the problem shown in Fig. 21, p. 24.

8. A circular steel pipe is reinforced by rings, a distance l apart, Fig. 111a, and submitted to internal pressure p . Find the pressure P produced per unit length of the inner circumference of a ring. Find the maximum bending stresses in the pipe.

Solution. Let us begin with a consideration of the portion of the pipe between the two rings³⁹ under the action of shearing forces

³⁹ The width of the ring is assumed to be negligible in comparison with the distance l between the rings.

V_0 (Fig. 111*b*) and bending moments M_0 (Fig. 111*c*) per unit length of the circumference of the pipe. Considering a longitudinal strip of unit width as a beam on an elastic foundation and using the

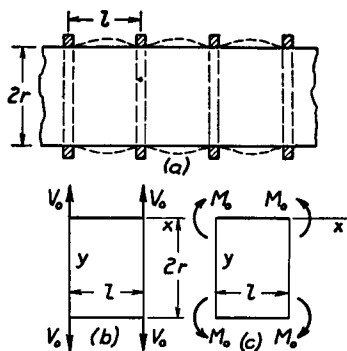


FIG. 111.

results of the problems in Fig. 12, p. 17, and in Fig. 18, p. 23, we find for the deflection and the slope at the left end of the strip in Fig. 111*b*:

$$(w_1)_{x=0} = -\frac{2V_0\beta r^2}{Eh} \cdot \frac{\cosh \beta l + \cos \beta l}{\sinh \beta l + \sin \beta l}, \quad (h)$$

$$\left(\frac{dw_1}{dx}\right)_{x=0} = \frac{2V_0\beta^2 r^2}{Eh} \cdot \frac{\sinh \beta l - \sin \beta l}{\sinh \beta l + \sin \beta l}. \quad (i)$$

For the left end in Fig. 111*c* we obtain

$$(w_2)_{x=0} = -\frac{2M_0\beta^2 r^2}{Eh} \cdot \frac{\sinh \beta l - \sin \beta l}{\sinh \beta l + \sin \beta l}, \quad (j)$$

$$\left(\frac{dw_2}{dx}\right)_{x=0} = \frac{4M_0\beta^3 r^2}{Eh} \cdot \frac{\cosh \beta l - \cos \beta l}{\sinh \beta l + \sin \beta l}. \quad (k)$$

From our definition of P it follows that

$$V_0 = -\frac{P}{2}.$$

Substituting this in equation (i) and observing that in the pipe (Fig. 111*a*) the tangent to the strip must be parallel to the axis of the pipe, we obtain

$$\left(\frac{dw_1}{dx}\right)_{x=0} + \left(\frac{dw_2}{dx}\right)_{x=0} = 0,$$

from which

$$M_0 = \frac{P}{4\beta} \cdot \frac{\sinh \beta l - \sin \beta l}{\cosh \beta l - \cos \beta l}. \quad (l)$$

In calculating P we assume first that the rings are absolutely rigid. In such a case the deflection in the pipe produced by forces P under the rings must be equal to the radial expansion pr^2/Eh which the pipe would have in the absence of the reinforcing rings. Hence the equation for calculating P is

$$(w_1)_{x=0} + (w_2)_{x=0} = \frac{pr^2}{Eh}$$

or

$$\frac{P\beta r^2}{Eh} \cdot \frac{\cosh \beta l + \cos \beta l}{\sinh \beta l + \sin \beta l} - \frac{P\beta r^2}{2Eh} \times \frac{(\sinh \beta l - \sin \beta l)^2}{(\sinh \beta l + \sin \beta l)(\cosh \beta l - \cos \beta l)} = \frac{pr^2}{Eh}. \quad (m)$$

In each particular case this equation can be readily solved for P . Substituting the value of P in expression (l), we obtain the required value of the bending moment M_0 .

To take into account the expansion of the reinforcing rings, we observe that the forces P produce an extension of the inner radius of the ring equal to Pr^2/AE , where A is the cross-sectional area of the ring. By the same amount the deflection of the pipe is diminished. Hence to obtain the force P in this case we have only to substitute

$$\frac{pr^2}{Eh} - \frac{Pr^2}{AE}$$

instead of pr^2/Eh into equation (m).

9. Find the bending moment M_0 and the shearing force V_0 per unit length of circumference at the bottom of the cylindrical tank filled with liquid, Fig. 112, if $r = 30$ ft., $d = 26$ ft., $h = 14$ in., $\gamma = 0.03613$ lb. per cu. in., and $\mu = 0.25$.

Answer. $M_0 = 13,960$ in. lb. per in., $V_0 = 563.6$ lb. per in.

10. Solve problem 5 assuming that the ring is fitted at the left end of the pipe. The resistance of the ring to torsion should be neglected.

Hint. Use the result obtained for the problem shown in Fig. 22, p. 24.

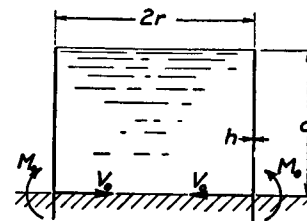


FIG. 112.

33. Thermal Stresses in Cylindrical Shells.—If a cylindrical shell with free edges undergoes a uniform temperature change, no thermal stresses will be produced. But if the edges are supported or clamped, free expansion of the shell is prevented, and local bending stresses are set up at the edges. Assume, for example, that the edges of a long cylindrical pipe are built-in; then the shearing forces and the bending moments at the edges are obtained as in problem 2 of the preceding article. It is only necessary to substitute in the equation of that problem $\delta = rat$, which represents the increase in the radius of the shell due to thermal expansion. If the length of the pipe is not large and both ends have to be considered simultaneously, the bending moments and the shearing forces can be readily obtained by using the results of problem 8 of the preceding article.

Let us now consider the case in which there is a temperature gradient in the radial direction. Assume that t_1 and t_2 are the uniform temperatures of the cylindrical wall at the inside and the outside surfaces, respectively, and that the variation of the temperature through the thickness is linear. In such a case, at points at a large distance from the ends of the shell, there will be no bending, and the stresses can be calculated by using equation (122), p. 132, derived for a plate with a clamped edge. This gives for the maximum bending stress

$$\sigma_{\max} = \frac{\alpha E(t_1 - t_2)}{2(1 - \mu)}. \quad (a)$$

It is assumed that $t_1 > t_2$. Then the tensile stress will act at the outer surface of the shell.

Near the ends of the shell there will be some bending of the shell and the total thermal stresses will be obtained by superposing upon stresses (a) the stresses due to that bending. Let us consider, as an example, the stresses at a free end of a long cylindrical pipe. In calculating the stresses in this case we observe that at the edge the stresses represented by expression (a) result in uniformly distributed moments M_0 ,

Fig. 113 *a*, of the magnitude

$$M_0 = \frac{\alpha E(t_1 - t_2)h^2}{12(1 - \mu)}. \quad (b)$$

To obtain a free edge, the moments of the same magnitude but opposite in direction must be superposed, Fig. 113 *b*. Hence the thermal stresses at the free edge are obtained by superposing upon the stresses (a) the stresses produced by the moments shown in Fig. 113 *b*. These latter stresses can be readily obtained by considering the bending of an elemental strip and then using solution (11), p. 12, which gives

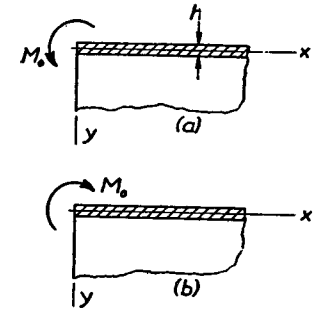


FIG. 113.

$$y = -\frac{M_0}{2\beta^2 D} e^{-\beta x} (\cos \beta x - \sin \beta x), \quad (c)$$

where β is given by equation (158). The largest deflection, obtained at the free edge ($x = 0$), is

$$y_{\max} = -\frac{M_0}{2\beta^2 D} \quad (d)$$

and the corresponding hoop stresses are

$$\frac{M_0}{2\beta^2 D} \cdot \frac{E}{r} = \frac{E\alpha(t_1 - t_2)}{2\sqrt{3}(1 - \mu)} \sqrt{1 - \mu^2}. \quad (e)$$

The bending moment acting on the end of the elemental strip is given by expression (b). The bending moments preventing the cross sections of the strip from distortion during bending are

$$\mu M_0 = \mu \frac{\alpha E(t_1 - t_2)h^2}{12(1 - \mu)}. \quad (f)$$

The maximum thermal stress is acting at the outer surface of

the pipe in the circumferential direction and consists of the three parts: (1) stress (a), (2) stress (e), and (3) stress produced by moments (f). Hence

$$\sigma_{\max} = \frac{\alpha E(t_1 - t_2)}{2(1 - \mu)} \left[1 + \frac{\sqrt{1 - \mu^2}}{\sqrt{3}} - \mu \right]. \quad (160)$$

For $\mu = 0.3$ this stress is about 25 per cent greater than the stress (a) calculated at points at a large distance from the ends. We can therefore conclude that if a crack will occur in a brittle material such as glass due to a temperature difference $t_1 - t_2$, it will start at the edge and will proceed in the axial direction. In a similar manner the stresses can also be calculated in cases in which the edges are clamped or supported.⁴⁰

Problems

1. Find the thermal stresses produced in a long steel pipe with built-in edges if $r = 25$ in., $h = \frac{1}{2}$ in., $\mu = 0.3$, coefficient of thermal expansion $\alpha = 70 \cdot 10^{-7}$, and the increase in the uniform temperature of the pipe is 100°F .

Solution. With the given dimensions we find

$$\beta = 0.364 \text{ in.}^{-1}, \quad D = 343 \cdot 10^3 \text{ lb. in.}$$

The free elongation of the radius of the pipe due to temperature rise is $\delta = \alpha r(t - t_0) = 70 \cdot 25 \cdot 100 \cdot 10^{-7} = 175 \cdot 10^{-4}$ in. Substituting in the equations of the problem 2 of the preceding article, we find the shearing force and the bending moment per unit length of the circumference at the built-in edge:

$$P_0 = 4\delta\beta^3 D = 1160 \text{ lbs. per in.}$$

$$M_0 = 2\delta\beta^2 D = 1590 \text{ lb. in. per in.}$$

With these values of P_0 and M_0 the stresses in axial and circumferential directions at the built-in edge can be readily calculated.

2. Solve the preceding problem assuming that the edges are simply supported.

3. A steel tube of the same dimensions as in problem 1 has the temperatures t_1 and t_2 at the inside and the outside surfaces re-

⁴⁰ Several examples of this kind are discussed in the paper by C. H. Kent, Trans. Am. Soc. Mech. Eng. vol. 53, p. 167, 1931. The case of a temperature gradient in the axial direction is discussed in "Theory of Plates and Shells," p. 423.

spectively. Find the maximum stress in the tube if $t_1 - t_2 = 100^\circ \text{F}$. and the edges are free.

Answer. $\sigma_{\max} = 18,750$ lbs. per sq. in.

4. Solve the preceding problem assuming that the edges of the tube were built-in when the tube had a uniform temperature equal to $(t_1 + t_2)/2$.

34. Twisting of a Circular Ring by Couples Uniformly Distributed along its Center Line.

—There are cases in which a circular ring of uniform cross section is submitted to the action of twisting couples uniformly distributed along its center line.⁴¹ Taking half the ring (Fig. 114, a) as a free body, from the condition of equilibrium with respect to moments about the diameter ox , there must be a bending moment on each cross section m and n ,

$$M = M_t a, \quad (a)$$

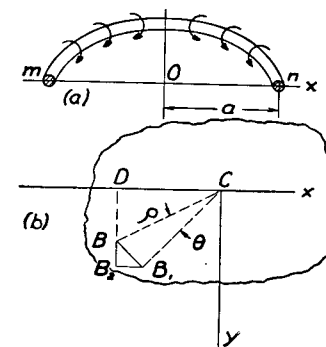


FIG. 114.

where a is the radius of the center line and M_t is twisting couple per unit length of the center line. Let us consider now the deformation of the ring. From the condition of symmetry it can be concluded that during twist each cross section rotates in its own plane through the same angle θ , which is assumed to be small in the following discussion.⁴² Let C be the center of rotation (Fig. 114, b) and B a point in the cross section at distance ρ from C . Due to rotation of the cross section the point B describes a small arc $\overline{BB_1} = \rho\theta$. Due to this displacement the annular fiber of the ring, which is perpendicular to the section at the point B , increases its radius by $\overline{B_2B_1}$. If the coordinate axes are taken as indicated, we have,

⁴¹ An instance of such a problem is the calculation of stresses in the retaining rings of commutators of electric machines. Another is the stress analysis of pipe flanges.

⁴² A general discussion of the problem, when θ is not small, is given by R. Grammel, Zeitschr. f. Angew. Math. u. Mech., Vol. 3, 1923, p. 429, and Vol. 7, 1927, p. 198.

from the similarity of the triangles BB_1B_2 and BDC ,

$$\overline{B_1B_2} = \overline{BB_1} \frac{\overline{DB}}{\overline{BC}} = \rho \theta \frac{y}{\rho} = \theta y. \quad (b)$$

Let us consider first the case in which the cross sectional dimensions of the ring are small in comparison with the radius a of the center line. Then the radii of all ring fibers may be taken equal to a without great error and the unit elongation of the fiber B , due to the displacement given by eq. (b), is

$$\epsilon = \frac{\theta y}{a}. \quad (c)$$

If there is no lateral pressure between the ring fibers, the fiber stress, due to elongation ϵ , is

$$\sigma = \frac{E\theta y}{a}. \quad (d)$$

Now, from the equilibrium of the half ring, the sum of all the normal forces acting on the cross section of the ring must be equal to zero and the moment of these forces about the x axis must be equal to M (see eq. a). If dA denotes an elemental area of the cross section, these equations of equilibrium become

$$\int_A \frac{E\theta y}{a} dA = 0; \quad \int_A \frac{E\theta y^2}{a} dA = M, \quad (e)$$

where the integration is extended over the cross sectional area A . The first of these equations shows that the centroid of the cross section must be on the x axis; from the second, we find

$$\theta = \frac{Ma}{EI_x} = \frac{M_1 a^2}{EI_x}, \quad (161)$$

where I_x is the moment of inertia of the cross section of the ring with respect to the x axis. Substituting in eq. (d), we find

$$\sigma = \frac{M_1 a y}{I_x}, \quad (162)$$

i.e., the distribution of the normal stresses over the cross section of the ring is the same as in the case of bending of straight bars; the stress is proportional to the distance from the neutral axis x and the maximum stress occurs at the points most remote from this axis.

As a second example let us consider a ring of rectangular cross section (Fig. 115) whose width b is not small in comparison with the radius a of the center line. Let c and d denote the inner and outer radii of the ring respectively, and r the radius of any fiber of the ring, and assume as before that the deformation of the ring consists of a rotation of its cross section⁴³ through an angle θ . The elongation of the fiber at a radius r and the corresponding stress are

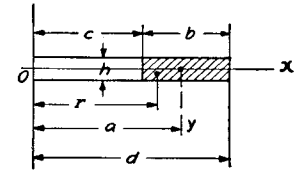


FIG. 115.

$$\epsilon = \frac{\theta y}{r}; \quad \sigma = \frac{E\theta y}{r}. \quad (f)$$

The equation of equilibrium analogous to the second of eqs. (e) becomes

$$\int_{-h/2}^{+h/2} \int_c^d \frac{E\theta y^2 dr dy}{r} = M$$

and, by performing the integration,

$$\frac{E\theta h^3}{12} \log_e \frac{d}{c} = M,$$

from which

$$\theta = \frac{12M}{Eh^3 \log_e \frac{d}{c}} = \frac{12M_1 a}{Eh^3 \log_e \frac{d}{c}}. \quad (163)$$

Substitute into the second of eqs. (f), and

$$\sigma = \frac{12M_1 y}{h^3 r \log_e \frac{d}{c}}.$$

⁴³ The possibility of distortion of the cross section is neglected in this consideration. The corresponding error is small, provided $d/c < 1.5$. See A. M. Wahl, Trans. Amer. Soc. Mech. Engrs., 1929.

The maximum stress is found at the inner corners of the ring, where $r = c$ and $y = h/2$:

$$\sigma_{\max} = \frac{6M}{h^2 c \log_e \frac{d}{c}} = \frac{6M_0 a}{h^2 c \log_e \frac{d}{c}}. \quad (164)$$

If b is small, eq. (163) can easily be changed to the form (161). Put

$$d = a + \frac{b}{2} \quad \text{and} \quad c = a - \frac{b}{2};$$

then

$$\log_e \frac{d}{c} = \log_e \frac{a + \frac{b}{2}}{a - \frac{b}{2}} \cong \log_e \left(1 + \frac{b}{a} \right).$$

For small values of the ratio b/a the above logarithm is approximately equal to b/a . Substitution of this into eq. (163) gives eq. (161).

These results can be used in calculating the stresses produced at the joint of a pipe and a flange⁴⁴ by forces R (Fig. 116). R is the force per unit length of the inner circumference of the pipe. The force per unit length of the outer circumference of the flange is $R(c/d)$. Under the action of these forces the cross section of the flange rotates through the angle θ , and the wall of the pipe bends as shown in Fig. 116 (b) by the dotted lines. Let M_0 and P_0 be the bending moment and the shearing force at the joint per unit length of the inner circumference of the pipe. The magnitude of these quantities can be found from the condition of continuity at the junction of pipe and flange. As ordinarily the flange is very rigid

in the plane perpendicular to the axis of the pipe, the radial displacement produced in the flange by forces P_0 is negligible, and the deflection at the edge of the pipe can be considered zero. The angle of rotation of the edge of the pipe is equal to θ , the angle of rotation of cross sections of the flange. Then eqs. (11) and (12)

⁴⁴ Another method of calculating these stresses is given by E. O. Waters, *Journal Appl. Mech.*, Vol. 59, 1937, p. 161. See also J. D. Mattimore, N. O. Smith-Petersen and H. C. Bell, *Trans. A. S. M. E.*, Vol. 60, 1938, p. 297.

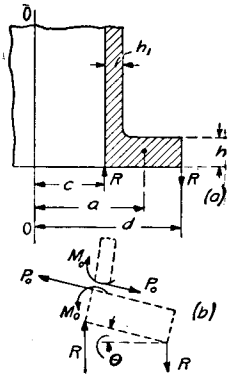


FIG. 116.

give the following equations for calculating M_0 and P_0 :

$$\begin{aligned} \frac{1}{2\beta^3 D} (P_0 - \beta M_0) &= 0, \\ -\frac{1}{2\beta^2 D} (P_0 - 2\beta M_0) &= \theta. \end{aligned}$$

From the first of these equations

$$P_0 = \beta M_0. \quad (g)$$

Then

$$M_0 = 2\beta D \theta \quad \text{and} \quad P_0 = 2\beta^2 D \theta. \quad (h)$$

For a pipe of thickness h_1 and inner radius c , β is⁴⁵ given by eq. (158),

$$\beta = \sqrt[4]{\frac{3(1 - \mu^2)}{c^2 h_1^2}}. \quad (k)$$

The torque per unit length of the center line of the flange, produced by the forces shown in the figure, is

$$\begin{aligned} M_t &= \frac{c}{a} \left[R(d - c) - M_0 - P_0 \frac{h}{2} \right] \\ &= \frac{c}{a} \left[R(d - c) - M_0 - M_0 \frac{h}{2} \beta \right]. \quad (l) \end{aligned}$$

The substitution of this into eq. (163) gives the angle θ and from the first of eqs. (h)

$$M_0 = 2\beta D \cdot \frac{12c}{Eh^3 \log_e \frac{d}{c}} \left[R(d - c) - M_0 - M_0 \frac{h}{2} \beta \right].$$

Replace D by its magnitude $Eh_1^3/12(1 - \mu^2)$, and

$$M_0 = R(d - c) \frac{1}{1 + \frac{\beta h}{2} + \frac{1 - \mu^2}{2\beta c} \left(\frac{h}{h_1} \right)^3 \log_e \frac{d}{c}}. \quad (165)$$

From eqs. (165) and (g) the quantities M_0 and P_0 can be calculated if we are given the dimensions of the pipe, Poisson's ratio and the forces R . Then the bending stresses in the pipe may be found as in article 32.

⁴⁵ For small thickness of the pipe the difference between the inner radius and the radius of the middle surface can be neglected.

Problems

1. Determine the bending moment M_0 and the shearing force P_0 in the pipe shown in Fig. 116 if $d = 6\frac{1}{4}''$, $c = 3\frac{5}{16}''$, $h = 1\frac{7}{16}''$, $h_1 = 13/16''$, $\mu = 0.3$.

Solution. From eq. (k)

$$\beta = \frac{\sqrt[4]{2.73}}{\sqrt{ch_1}} = 0.784 \text{ in.}^{-1},$$

$$\log_e \frac{d}{c} = 0.635; \quad \frac{\beta h}{2} = 0.564.$$

Substituting in eq. (165), we have

$$M_0 = 0.459R(d - c); \quad P_0 = \beta M_0 = 0.360R(d - c).$$

The maximum bending stress in the pipe is given by

$$\sigma = \frac{6M_0}{h_1^2}.$$

2. Find the expression for the small deflection of the conical ring, shown in Fig. 117, which represents an element of a Belleville

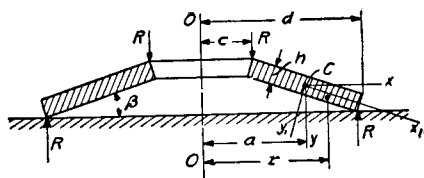


FIG. 117.

spring. R is the load per unit length of the inner edge of the ring.

Solution. Take, as before, the coordinates x and y with the origin at the center of rotation C . The unit elongation and the stress for any fiber with the radius r are given by eqs. (f). From the equilibrium of the half ring, we obtain

$$\int_A \frac{E\theta y}{r} dA = 0; \quad \int_A \frac{E\theta y^2}{r} dA = M = Rc(d - c). \quad (m)$$

The position of the center of rotation C can be determined from the first of these two equations. Let a be the radius at the point C and assume the angle β of the cone to be so small that we can take $\sin \beta = \beta$; $\cos \beta = 1$. Then by taking the axes x_1 and y_1 parallel to the sides of the rectangular cross section and noting that $y = y_1$

+ $\beta x_1 = y_1 + \beta(r - a)$ the first of eqs. (m) becomes

$$\int_{-h/2}^{+h/2} \int_c^d \frac{E\theta}{r} [y_1 + \beta(r - a)] dr dy_1 = E\theta\beta h \left[r - a \log_e r \right]_c^d$$

$$= E\theta\beta h \left(d - c - a \log_e \frac{d}{c} \right) = 0,$$

from which

$$a = \frac{d - c}{\log_e \frac{d}{c}}. \quad (n)$$

The second of eqs. (m) becomes

$$\int_{-h/2}^{+h/2} \int_c^d \frac{E\theta}{r} [y_1 + \beta(r - a)]^2 dr dy_1$$

$$= E\theta \left[\frac{h^3}{12} \log_e \frac{d}{c} + \beta^2 h \left(\frac{d^2 - c^2}{2} - 2a(d - c) + a^2 \log_e \frac{d}{c} \right) \right] = Rc(d - c),$$

and by substituting eq. (n) for a we obtain for the vertical deflection of the upper edge of the cone with respect to the lower

$$\delta = \theta(d - c) = \frac{Rc(d - c)}{E \left[\frac{h^3}{12(d - c)} \log_e \frac{d}{c} + \beta^2 h \left(\frac{d + c}{2} - \frac{d - c}{\log_e \frac{d}{c}} \right) \right]}. \quad (p)$$

This gives δ if we know the dimensions of the ring, the modulus of elasticity of the material and the load R . This derivation neglects the effect of the change in the angle β due to the rotation θ .⁴⁶

⁴⁶ For larger deflections the change in the angle β must be considered. In such cases the deflection is no longer proportional to the load. See paper by W. A. Brecht and A. M. Wahl, Journal Appl. Mech. Trans. A. S. M. E. Vol. 52, 1930, p. 52. See also papers by J. O. Almen and A. Laszlo, Trans. Am. Soc. Mech. Engrs. Vol. 58, p. 305, 1936, and Siegfried Gross, V. D. I. Vol. 79, p. 865, 1935.

CHAPTER IV

BUCKLING OF BARS, PLATES, AND SHELLS¹

35. Lateral Buckling of Bars Compressed within the Elastic Limit.—The discussion of simultaneous bending and compression of struts (p. 244, Part I) showed that there is a certain *critical value* of the compressive force at which large lateral deflection may be produced by the slightest lateral load. For a prismatical bar with hinged ends this *critical compressive force* is

$$P_{cr} = \frac{\pi^2 EI}{l^2}. \quad (a)$$

Experiments show that when the compressive force in a slender² strut approaches this value, lateral deflection begins and increases so rapidly with increase of the compressive force that a load equal to the critical value is usually sufficient to produce complete failure of the structure. Consequently this *critical load* must be considered as the criterion of strength for slender columns and struts.

From the equation above it will be seen that this critical load does not depend upon the strength of the *material* but only upon the dimensions of the structure and the modulus of elasticity of the material. Two equal slender struts, one of high strength steel and the other of common structural steel, will buckle at the same compressive force, although the strength of the material in the two cases is very different. Equation (a) shows also that the strength of a strut may be raised by increasing I . This may be done without changing the cross sectional area by distributing the material as far as possible from the principal axes of the cross section. Hence

¹ For more information on buckling problems see, "Theory of Elastic Stability," 1936.

² When the strut is not slender enough, lateral buckling occurs at a compressive stress above proportional limit. This case is discussed in "Theory of Elastic Stability," p. 156, 1936.

tubular sections are more economical than solid for compression members. By diminishing the wall thickness of such sections and increasing the transverse dimensions their stability can be increased. There is a lower limit for the wall thickness however below which the wall itself becomes unstable and, instead of buckling of the strut as a whole, there occurs a buckling of its longitudinal elements, which brings about a corrugation of the wall.

This discussion shows then that the sidewise buckling of compression members, i.e., their *elastic stability*, is of great practical importance. This is especially true in many modern structures where the cross sectional dimensions are being made smaller and smaller due to the use of stronger materials and the desire to save weight. In many cases failure of an engineering structure is to be attributed to elastic instability and not to the lack of strength on the part of the material.

In the previous discussion (p. 239, Part I) the magnitude of the critical load was obtained by considering the simultaneous action of compressive and bending forces. The same result may be obtained by assuming that the bar is only compressed by a centrally applied load.³ Let us consider the case of a bar in the form of a slender vertical prism built in at the bottom and loaded axially at the top (Fig. 118). If the load P is less than its critical value the bar remains straight and undergoes only axial compression. This straight form of elastic equilibrium is *stable*, i.e., if a lateral force be applied and a small deflection produced, this deflection disappears when the lateral force is removed and the bar becomes straight

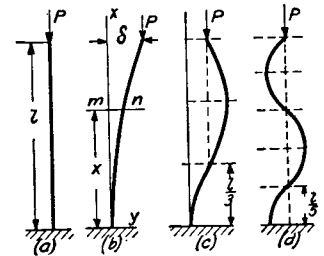


FIG. 118.

³ The values of the critical loads, for various conditions at the ends of a compressed prismatical bar, were obtained first by L. Euler; see Additamentum, "De curvis elasticis," in the "Methodus inveniendi lineas curvas maximi minimive proprietate gaudentes," Lausanne, 1744. See also Histoire de l'Academie, Berlin, Vol. 13, 1757. An English translation of this work is given in "Isis," No. 58, Vol. 201, 1933.

again. By increasing P gradually we may arrive at a condition in which the straight form of equilibrium becomes unstable and a slight lateral force may produce a lateral deflection which does not disappear with the cause which produces it. The critical load is then defined as the axial load, which is sufficient to keep the bar in a slightly bent form (Fig. 118, b).

This load is calculated by use of the differential equation of the deflection curve (eq. 79, Part I). The axes are taken as indicated in Fig. 118, b . Then the bending moment at any cross section mn is $P(\delta - y)$ and the differential equation of the deflection curve is ⁴

$$EI \frac{d^2y}{dx^2} = P(\delta - y). \quad (b)$$

It is clear that, with the upper end free, buckling of the bar will occur in the plane of *smallest flexural rigidity* which we will call EI . Let

$$p^2 = \frac{P}{EI}. \quad (c)$$

Equation (b) then becomes

$$\frac{d^2y}{dx^2} + p^2y = p^2\delta. \quad (b')$$

The general solution of this equation is

$$y = \delta + C_1 \cos px + C_2 \sin px, \quad (d)$$

in which C_1 and C_2 are constants which must be adjusted to satisfy the conditions at the built-in end:

$$(y)_{x=0} = 0; \quad \left(\frac{dy}{dx}\right)_{x=0} = 0.$$

These conditions are fulfilled if

$$C_1 = -\delta; \quad C_2 = 0.$$

Then

$$y = \delta(1 - \cos px). \quad (e)$$

⁴ For the deflection shown in Fig. 118 (b) d^2y/dx^2 is positive, hence the positive sign on the right side of eq. (b).

The condition at the upper end is that

$$(y)_{x=l} = \delta.$$

It is satisfied if $\cos pl = 0$, i.e., if

$$pl = (2n + 1) \frac{\pi}{2}, \quad (f)$$

where n is an integer. The smallest value of pl , and therefore of P , which satisfies eq. (f) is obtained by putting $n = 0$. Then, using eq. (c),

$$pl = l \sqrt{\frac{P}{EI}} = \frac{\pi}{2},$$

from which

$$P_{cr} = \frac{\pi^2 EI}{4l^2}. \quad (166)$$

This is the *critical load* for the bar represented in Fig. 118a, i.e., the smallest load which can keep the bar in a slightly bent shape.

With $n = 1, n = 2, \dots$, in eq. (f) we obtain

$$P = \frac{9EI\pi^2}{4l^2}, \quad P = \frac{25EI\pi^2}{4l^2}.$$

The corresponding deflection curves are shown in Figs. 118 (c) and 118 (d). For the shape shown in Fig. 118 (c) a force nine times larger than critical is necessary, and for that in part (d) twenty-five times larger. These forms of buckling are unstable and have no practical meaning because the structure fails as the load reaches the value (166).

The critical load for some other cases can easily be obtained from the solution for the foregoing case. For example, in the case of a bar with hinged ends (Fig. 119) it is evident from symmetry that each half of the bar is in the same condition as the entire bar of Fig. 118. Hence the critical load for this case

is obtained by using $l/2$, instead of l , in eq. (166), which gives

$$P_{cr} = \frac{EI\pi^2}{l^2}. \quad (167)$$

The case of a bar with hinged ends is very often encountered in practical applications and is called the *fundamental case* of




FIG. 119.




FIG. 120.

buckling of a prismatical bar. In the case of a bar with built-in ends (Fig. 120) there are reactive moments which keep the ends from rotating during buckling. The combination of the compressive force with these moments is equivalent to the compressive force P , Fig. 120, applied eccentrically. There are inflection points where the line of action of P intersects the deflection curve, because the bending moment at these points is zero. These points and the mid point of the span divide the bar into four equal portions, each of which is in the same condition as the bar represented in Fig. 118. Hence the critical load for a bar with built-in ends is found from eq. (166) by using $l/4$ instead of l , which gives

$$P_{cr} = \frac{4\pi^2 EI}{l^2}. \quad (168)$$

It was assumed in the previous discussion that the bar is very slender so that the bending, which occurs during buckling, remains within the proportional limit. Only with this condition can eq. (b) be applied. To establish the limit of applicability of the above formulas for critical loads let us

consider the *fundamental case* (Fig. 119). Divide eq. (167) by the cross sectional area A of the bar, and let $k = \sqrt{I/A}$ be the smaller radius of gyration. Then the critical value of the compressive stress is

$$\sigma_{cr} = \frac{P_{cr}}{A} = \pi^2 E \left(\frac{k}{l} \right)^2. \quad (169)$$

This equation is applicable as long as the stress σ_{cr} remains within the proportional limit. With this limit and also the modulus E known for a given material, the limiting value of the ratio l/k (which characterizes the *slenderness* of the bar) can easily be obtained from eq. (169) for each particular case.

In the cases represented in Figs. 118 and 120, proceeding as above, we find

$$\sigma_{cr} = \pi^2 E \left(\frac{k}{2l} \right)^2; \quad (170) \quad \sigma_{cr} = \pi^2 E \left(\frac{k}{\frac{1}{2}l} \right)^2. \quad (171)$$

The equation for the fundamental case (169) may be used for these cases also if we use a *reduced length* l_1 instead of the length of the bar. In the case of a prismatical bar with one end built in and the other free the reduced length is twice as great as the actual length $l_1 = 2l$. In the case of a prismatical bar with both ends built in the reduced length is half the actual length, $l_1 = \frac{1}{2}l$. The equation for the critical stress may consequently be represented in the form:

$$\sigma_{cr} = \pi^2 E \left(\frac{k}{\beta l} \right)^2 = \pi^2 E \left(\frac{k}{l_1} \right)^2, \quad (172)$$

in which β depends upon the conditions at the ends of the bar and is sometimes called the *length coefficient*.

In discussing the design of columns (p. 249, Part I) the fundamental case of a column with hinged ends was considered. The information given there can be applied to columns, with other end conditions, provided the reduced length, l_1 , instead of the actual length, l , is used. Thus in each particular case the design of a column reduces to the determination of the proper value of the *length coefficient*.

As an example of the calculation of this coefficient, let us consider the case of a centrally compressed strut with the lower end built in and the upper end hinged (Fig. 121). The critical value of the compressive force is that value, P_{cr} , which can keep the strut in a slightly buckled shape. It may be seen that in this case, during buckling, a lateral reaction Q will be produced, and the differential equation of the deflection curve becomes:

$$EI \frac{d^2 y}{dx^2} = -Py + Q(l - x). \quad (g)$$

The general solution of this equation with notation (c) is

$$y = C_1 \cos px + C_2 \sin px + \frac{Q}{P}(l - x). \quad (h)$$

For determining the constants C_1 and C_2 and the unknown reaction Q , we have the following conditions at the ends:

$$(y)_{x=0} = 0, \quad (y)_{x=l} = 0, \quad \left(\frac{dy}{dx}\right)_{x=0} = 0.$$

Substituting solution (h) for y we obtain

$$C_1 + \frac{Q}{P}l = 0, \quad C_1 \cos pl + C_2 \sin pl = 0, \quad pC_2 - \frac{Q}{P} = 0. \quad (i)$$

Determining the constants C_1 and C_2 from the first and the third of these equations and substituting in the second equation, we find

$$\tan pl = pl. \quad (j)$$

The graphical method is useful in solving this trigonometric equation. In Fig. 122 the curves represent $\tan pl$ as a function of pl . These curves have the verticals $pl = \pi/2, 3\pi/2, \dots$ as asymptotes, since for these values of pl , $\tan pl$ becomes infinity. The roots of equation (j) are now obtained as the intersection points of the above curves with the straight line

$y = pl$. The smallest root, obtained in this way, is

$$pl = 4.493.$$

Then

$$P_{cr} = p^2 EI = \frac{20.16 EI}{l^2} \approx \frac{\pi^2 EI}{(0.7l)^2}. \quad (173)$$

Thus the critical load is the same as for a strut with hinged ends having a reduced length:

$$l_1 = 0.7l.$$

As a second example let us consider a strut on three supports and centrally compressed by forces P , Fig. 123. In calculating the critical value of the compressive force we keep our previous definition and assume that P_{cr} is the force which can keep the strut in a slightly buckled shape. As a result

of buckling there will be some bending moment M_2 at the middle support, for calculation of which equation (38), derived for continuous struts, can be used. By observing that in our case the ends of the strut are hinged, we obtain $M_1 = M_3 = 0$ and equation (38) becomes

$$\left(\beta_1 \frac{l_1}{I_1} + \beta_2 \frac{l_2}{I_2}\right) M_2 = 0. \quad (i)$$

This equation is satisfied and a buckled shape of the strut becomes possible if

$$\beta_1 \frac{l_1}{I_1} + \beta_2 \frac{l_2}{I_2} = 0. \quad (j)$$

⁵ An exception is the trivial case when the two spans are equal and the cross section is constant along the entire length. In this case $M_2 = 0$ at the intermediate support, and each span is in the same condition as a strut with hinged ends.

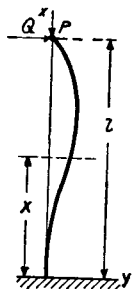


FIG. 121.

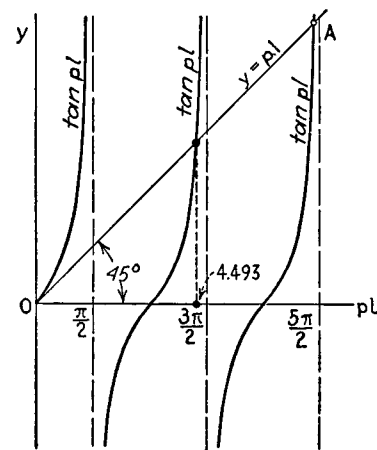


FIG. 122.




FIG. 123.

where β_1 and β_2 are (see expressions (36) p. 36)

$$\beta_1 = 3 \left[\frac{1}{(2u_1)^2} - \frac{1}{2u_1 \tan 2u_1} \right],$$

$$\beta_2 = 3 \left[\frac{1}{(2u_2)^2} - \frac{1}{2u_2 \tan 2u_2} \right] \quad (k)$$

and

$$u_1 = \frac{l_1}{2} \sqrt{\frac{P}{EI_1}}, \quad u_2 = \frac{l_2}{2} \sqrt{\frac{P}{EI_2}}. \quad (l)$$

If the dimensions of the strut are given, the ratio $u_1 : u_2$ is known from the expressions (l) and the ratio $\beta_1 : \beta_2$ from equation (j), which gives

$$\frac{\beta_1}{\beta_2} = - \frac{l_2 I_1}{l_1 I_2}. \quad (m)$$

Having the numerical table of functions β , we can readily solve this equation for the proper values of u_1 and u_2 . Then, from expressions (l), the critical value of P is obtained. Take, for example, $I_1 = I_2 = I$ and $l_2 = 2l_1$. Then $u_2 = 2u_1$ and

$$\frac{\beta_1}{\beta_2} = -2. \quad (n)$$

To solve this equation we have to find such a value $2u_1$ of the argument $2u$ that after doubling it the function β changes the sign and reduces to a half of its numerical value at the argument $2u_1$. Using the table of numerical values of β ,⁶ we readily find that this condition is satisfied if

$$2u_1 = 1.93.$$

Hence, from equations (l),

$$P_{cr} = \frac{1.93^2 EI}{l_1^2} = \frac{3.72 EI}{l_1^2} = \frac{14.9 EI}{l_2^2}.$$

It is seen that the value of the critical load lies between the two values $\pi^2 EI/l_1^2$ and $\pi^2 EI/l_2^2$, calculated for separate spans as if each were a strut with hinged ends. The stability of the shorter span is reduced, owing to the action of the longer span, while the stability of the longer span is increased.

⁶ See such table in "Theory of Elastic Stability."

In the derivation of eq. (e) for the deflection curve after bending, the maximum deflection δ remained indeterminate, i.e., at the critical load the bar may have any small deflection. The above theory applied only to *small* deflections because only for such deflections may we use the approximate expression d^2y/dx^2 for the curvature, in place of the exact expression:

$$\frac{d^2y}{dx^2} \left[1 + \left(\frac{dy}{dx} \right)^2 \right]^{\frac{3}{2}}.$$

The solution of the exact differential equation for the deflection curve has been found for several cases⁷ and shows that there is really no such indeterminateness in the deflection as implied above. For example for a bar with hinged ends the maximum deflection may be represented by the equation:⁸

$$\delta = \frac{l\sqrt{8}}{\pi} \sqrt{\frac{P}{P_{cr}} - 1} \left[1 - \frac{1}{8} \left(\frac{P}{P_{cr}} - 1 \right) \right], \quad (174)$$

which shows that the deflection increases very rapidly, with the load above the critical value. Assuming, for instance, a load only 1 per cent larger than P_{cr} , we find from eq. (174) a deflection about 9 per cent of the length l of the bar.⁹

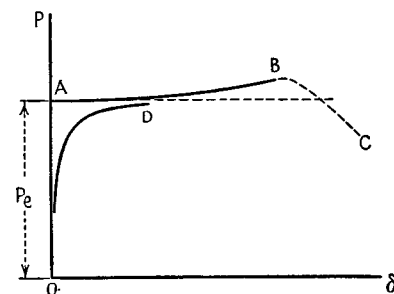


FIG. 124.

The relation between the load and deflection may be

⁷ Saalschütz, "Der Belastete Stab," Leipzig, 1880. See also Halphen *Traité des Fonctions elliptiques*, Vol. 2 (1888), p. 192.

⁸ See R. v. Mises, *Zeitschr. f. Angew. Math. u. Mech.*, Vol. 4, 1924, p. 435; see also O. Domke, *Die Bautechnik*, Vol. 4, 1926, p. 747, and R. W. Burges, *Phys. Rev.*, 1917.

⁹ It is assumed that deformation remains within the proportional limit.

represented graphically as shown in Fig. 124 by the curve OAB , in which the load is represented by ordinates and the deflections by the abscissas. As long as the load is smaller than P_{cr} the deflection is zero. Beyond this limit the deflection increases rapidly with the load.¹⁰

In experimental investigations of the lateral buckling of compressed bars, the relation between the deflection and the load depends very much upon the accuracy with which the load is centered and on the straightness and homogeneity of the bar. The load deflection curve is usually like curve OD in Fig. 124. Due to inaccuracies of one sort or another deflection begins at small loads, but progresses very slowly as long as the load is far below critical but very rapidly when the load approaches the critical value. The more accurately the bar is made and loaded the more nearly the curve approaches the theoretical curve OAB .¹¹

Problems

1. A steel bar of rectangular cross section 1×2 in. with hinged ends is axially compressed. Determine the minimum length at which eq. (167) can be applied if $E = 30 \times 10^6$ lbs. per sq. in. and the limit of proportionality is 30,000 lbs. per sq. in. Determine the magnitude of the critical stress if the length is 5 feet.

Solution. The smaller radius of gyration is $k = 1/2\sqrt{3}$ in.; the minimum length from eq. (169) is

$$l = 100k = \frac{100}{2\sqrt{3}} = 28.9 \text{ in.}$$

¹⁰ When yielding begins the curve AB is no longer applicable and the further buckling is going as indicated by dotted line BC , Fig. 124.

¹¹ A very close coincidence of experimental and calculated values of critical loads was obtained by Th. v. Karman, Forschungsarbeiten, nr. 81, 1910, Berlin; see also K. Memmler, Proceedings of the 2d Internat. Congress of Applied Mech., Zürich, 1926, p. 357.

The critical stress for $l = 5'$, from eq. (169), is

$$\sigma_{cr} = \pi^2 \times 30 \times 10^6 \frac{1}{12 \times 60^2} = 6,850 \text{ lbs. per sq. in.}$$

2. Solve the above problem, assuming a bar of circular cross section 1 in. in diameter and built-in ends.

Answer. Minimum length = 50 in. For $l = 5'$, $\sigma_{cr} = 20,800$ lbs. per sq. in.

3. Determine the critical compressive load for a standard I section 6' long, 6" depth, weight 12.5 lbs. per foot, and with hinged ends.

Answer.

$$P_{cr} = \frac{\pi^2 EI}{l^2} = \frac{9.87 \times 30 \times 10^6 \times 1.8}{72^2} = 103,000 \text{ lbs.}$$

4. Solve problem 1 assuming that one end of the bar is hinged and the other built-in as in Fig. 121.

5. Determine the critical value of the forces P which compress the vertical members of the rectangular frame shown in Fig. 125.

Solution. Buckling produces reactive bending moments M_0 which resist free rotation of the ends of the vertical members. The differential equation for the deflection curve of the vertical member is

$$EI \frac{d^2 y}{dx^2} = -Py + M_0.$$

The general solution of this equation is

$$y = C_1 \cos px + C_2 \sin px + \frac{M_0}{P}.$$

The constants of integration and M_0 are to be determined from the following conditions based on the symmetrical form of the buckled frame (Fig. 125):

$$(y)_{x=0} = 0; \quad \left(\frac{dy}{dx}\right)_{x=l/2} = 0; \quad \left(\frac{dy}{dx}\right)_{x=0} = \theta = \frac{M_0 l_1}{2EI_1}.$$

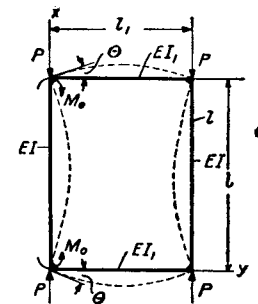


FIG. 125.

From the above solution for y ,

$$C_1 + \frac{M_0}{P} = 0; \quad -C_1 p \sin \frac{pl}{2} + C_2 p \cos \frac{pl}{2} = 0; \quad C_2 p = \frac{M_0 l_1}{2EI_1}.$$

These give the following transcendental equation for determining p and the critical load:

$$\tan \frac{pl}{2} + \frac{Pl_1}{2pEI_1} = 0,$$

or, using notation (c),

$$\tan \frac{pl}{2} + \frac{I l_1 p l}{I_1 l^2} = 0. \quad (o)$$

When $(I/I_1)(l_1/l)$ is large, i.e., when the resistance of the horizontal members of the frame to buckling of the vertical members is small, $\tan (pl/2)$ is a large negative number and $pl/2$ approaches $\pi/2$. The critical load then approaches the value $\pi^2 EI/l^2$ obtained before for a bar with hinged ends (eq. 167).

When $(I/I_1)(l_1/l)$ is small, i.e., when the resistance of the horizontal members of the frame to buckling of the vertical members is very great, $\tan (pl/2)$ is a small negative number and $pl/2$ approaches π . Then the critical load approaches the value $4\pi^2 EI/l^2$ obtained before (eq. 168) for a bar with built-in ends.

In the case of a square frame with all members of the same cross section $l = l_1$, $I = I_1$, and the equation for determining the critical load becomes

$$\tan \frac{pl}{2} + \frac{pl}{2} = 0,$$

from which ¹²

$$\frac{pl}{2} = 2.029, \quad p_{cr} = \frac{16.47EI}{l^2} = \frac{\pi^2 EI}{(0.774l)^2}. \quad (p)$$

The reduced length in this case is therefore $l_1 = 0.774l$.

6. Solve the preceding problem assuming that in addition to vertical forces P there are two pairs of horizontal forces Q which are producing a compression of the horizontal members of the frame.

Hint. Since the horizontal bars are compressed, the angle of

rotation θ , indicated in Fig. 125, is ¹³

$$\theta = \frac{M_0 l_1}{2EI_1} \frac{\tan u}{u},$$

where

$$u^2 = \frac{Ql_1^2}{4EI_1}.$$

The equation for calculating the critical value of P is obtained by substituting $I_1 u / \tan u$ instead of I_1 in equation (o) of the preceding problem.

7. A strut with hinged ends AB , Fig. 126, is compressed by forces P_1 and P_2 . Find the critical value of the force $P_1 + P_2$ if $(P_1 + P_2) : P_1 = m$, $I_2 : I_1 = n$, $l_2/l_1 = r$.

Solution. Assuming that the buckled shape of the strut is as shown in Fig. 126 by the dotted line, there will be horizontal reactions $Q = \delta P_2/l$ produced during buckling. The differential equations of the upper and the lower portions of the deflection curve are

$$\left. \begin{aligned} EI_1 \frac{d^2 y_1}{dx^2} &= -P_1 y_1 - \frac{\delta P_2}{l} (l-x), \\ EI_2 \frac{d^2 y_2}{dx^2} &= -P_1 y_2 - \frac{\delta P_2}{l} (l-x) + P_2 (\delta - y_2). \end{aligned} \right\} \quad (r)$$

Using notations

$$\frac{P_1}{EI_1} = p_1^2, \quad \frac{P_2}{EI_2} = p_2^2, \quad \frac{P_1 + P_2}{EI_2} = p_3^2, \quad \frac{P_2}{EI_1} = p_4^2, \quad (s)$$

we obtain the solutions of equations (r):

$$\begin{aligned} y_1 &= C_1 \sin p_1 x + C_2 \cos p_1 x - \frac{\delta p_4^2}{l p_1^2} (l-x) \\ y_2 &= C_3 \sin p_3 x + C_4 \cos p_3 x + \frac{\delta p_2^2}{l p_3^2} x. \end{aligned}$$

The constants of integration are obtained from the end conditions

¹³ It is obtained from equation (48) by substituting ui for u .

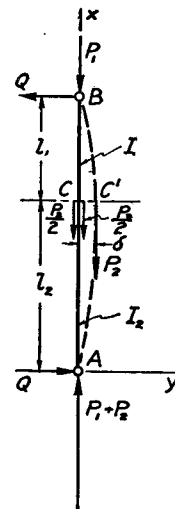


FIG. 126.

¹² Curves similar to those in Fig. 122 can be used also in this case.

of the two portions of the buckled bar:

$$(y_1)_{x=l} = 0, \quad (y_1)_{x=l_2} = \delta, \quad (y_2)_{x=l_2} = \delta, \quad (y_2)_{x=0} = 0.$$

From these,

$$C_1 = \frac{\delta(p_1^2 l + p_4^2 l_1)}{p_1^2 l (\sin p_1 l_2 - \tan p_1 l \cos p_1 l_2)}, \quad C_2 = -C_1 \tan p_1 l$$

$$C_3 = \frac{\delta(p_3^2 l - p_2^2 l_2)}{p_3^2 l \sin p_3 l_2}, \quad C_4 = 0.$$

Substituting these in the continuity condition

$$\left(\frac{dy_1}{dx} \right)_{x=l_2} = \left(\frac{dy_2}{dx} \right)_{x=l_2}$$

we obtain the following transcendental equation for calculating critical loads:

$$\frac{p_4^2}{p_1^2} - \frac{p_1^2 l + p_4^2 l_1}{p_1 \tan p_1 l_1} = \frac{p_2^2}{p_3^2} + \frac{p_3^2 l - p_2^2 l_2}{p_3 \tan p_3 l_2} \quad (t)$$

which can be solved in each particular case by trial and error or by plotting both sides of the equation and determining the intersection point of the two curves. Taking, as an example, $l_1 = l_2$, $I_1 = I_2 = I$ and $P_1 = P_2$, we obtain

$$(P_1 + P_2)_{cr} = \frac{\pi^2 EI}{(0.87l)^2}.$$

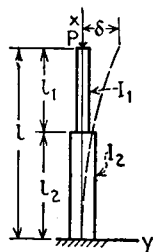


FIG. 127.

8. Find the critical load for the column built-in at the bottom and free at the top and consisting of the two prismatical portions with moments of inertia I_1 and I_2 , Fig. 127.

Solution. If δ is the deflection at the top during buckling the differential equations for the two portions of the deflection curve are

$$EI_1 \frac{d^2 y_1}{dx^2} = P(\delta - y_1),$$

$$EI_2 \frac{d^2 y_2}{dx^2} = P(\delta - y_2).$$

By making use of our previous notations (s) the solutions of these

equations are reached:

$$y_1 = \delta + C \cos p_1 x + D \sin p_1 x,$$

$$y_2 = \delta(1 - \cos p_2 x).$$

The constants of integration are obtained from the conditions:

$$(y_1)_{x=l} = \delta, \quad (y_1)_{x=l_2} = (y_2)_{x=l_2},$$

which give

$$\delta + C \cos p_1 l + D \sin p_1 l = \delta,$$

$$\delta + C \cos p_1 l_2 + D \sin p_1 l_2 = \delta(1 - \cos p_2 l_2),$$

from which

$$C = -D \tan p_1 l, \quad D = \frac{\delta \cos p_2 l_2 \cos p_1 l}{\sin p_1 l_1}.$$

Since the two portions of the deflection curve have the same tangent at $x = l_2$ we have the equation:

$$\delta p_2 \sin p_2 l_2 = -C p_1 \sin p_1 l_2 + D p_1 \cos p_1 l_2.$$

Substituting for C and D the above values, we finally obtain the following equation for calculating P_{cr} :

$$\tan p_1 l_1 \tan p_2 l_2 = \frac{p_1}{p_2}.$$

In the particular case when

$$p_1 l_1 = p_2 l_2 = \frac{l}{2} \sqrt{\frac{P}{EI}},$$

we obtain

$$\tan^2 \left(\frac{l}{2} \sqrt{\frac{P}{EI}} \right) = 1,$$

$$\frac{l}{2} \sqrt{\frac{P}{EI}} = \frac{\pi}{4}$$

and

$$P_{cr} = \frac{\pi^2 EI}{4l^2}.$$

This is the critical load for a column of constant cross section.

36. Energy Method of Calculating Critical Compressive Loads.¹⁴—Euler's formulas, given in article 35, were derived

¹⁴ See writer's papers in Bulletins of the Polytechnical Institute in Kiev, 1910, and Annales des Ponts et Chaussées, 1913, Paris.

by solving the differential equation of the deflection curve for a compression member with certain end conditions. There are cases in which this equation is complicated and exact solution becomes difficult. We may then use an approximate method, based on consideration of the energy of the system. As a simple example consider a column built in at the bottom and carrying a load at the top (Fig. 118 (a) and (b)). The straight form of equilibrium of the compressed bar is *stable* if the compressive force P is small, but *unstable* after P reaches its critical value, at which lateral buckling begins. This critical value of P may be found by comparing the energy of the system in the two cases: (1) when the bar is simply *compressed*, and (2) when it is *compressed and bent*. The strain energy in the bent bar is larger than that in the straight compressed form, because the energy of bending must be added to the energy of compression, which may be considered constant for small deflections. The potential energy of the load P must also be considered; the deflection of the bar is accompanied by a lowering of the point of application of the load P so that the potential energy of the load diminishes. Let U be the potential energy of bending and U_1 the decrease in the potential energy of the load. Then, if U_1 is less than U , deflection of the bar is accompanied by an increase in the potential energy of the system; this means that it would be necessary to apply some additional lateral force to produce bending. In such a case the straight form of equilibrium is *stable*. On the other hand, when $U_1 > U$, the deflection of the bar is accompanied by a decrease in the potential energy of the system and the bending will proceed without the application of any lateral force, i.e., the straight form of equilibrium is *unstable*. The critical value of the compressive force is therefore obtained when

$$U = U_1. \quad (175)$$

To calculate the magnitude of the critical load from this equation we must obtain expressions for U and U_1 . From eq. (e) (p. 186), the deflection curve of the bar, when under the

action of a compressive load equal to the critical load ($p/l = \pi/2$), is

$$y = \delta \left(1 - \cos \frac{\pi x}{2l} \right). \quad (a)$$

With this value for y , expression for the strain energy of bending becomes

$$U = \frac{1}{2} EI \int_0^l \left(\frac{d^2 y}{dx^2} \right)^2 dx = \frac{\delta^2 \pi^4}{64 l^3} EI. \quad (b)$$

The lowering of the point of application of the load during bending is (see p. 47)

$$\lambda = \frac{1}{2} \int_0^l \left(\frac{dy}{dx} \right)^2 dx = \frac{\delta^2 \pi^2}{16 l}. \quad (c)$$

Therefore,

$$U_1 = P\lambda = \frac{\delta^2 \pi^2 P}{16 l}. \quad (d)$$

Substituting (b) and (d) into the fundamental eq. (175), we have

$$P_{cr} = \frac{EI\pi^2}{4l^2},$$

which coincides with eq. (166) obtained previously.

In this case the deflection curve (a) was known and the exact solution for the critical load was obtained from eq. (175). In cases where the deflection curve is unknown an approximation to the critical load may be obtained by assuming a *suitable curve* (that is, one satisfying the conditions at the ends of the bar) for the deflection curve and proceeding in exactly the same manner as above.

In order to show what accuracy can be obtained by using this method, the previous problem will be considered again. Assume, for instance, that in the case shown in Fig. 118 (b) the deflection curve is the same as for a cantilever loaded at the end by a transverse force Q . Then, from eq. (97) Part I, $y = [Qx^2/6EI](3l - x)$. This is substituted into the expression (b) for the strain energy U of bending, and into the

expression (d) for U_1 :

$$U = \frac{EI}{2} \int_0^l \left(\frac{d^2 y}{dx^2} \right)^2 dx = \frac{Q^2 l^3}{6EI},$$

$$U_1 = P\lambda = \frac{P}{2} \int_0^l \left(\frac{dy}{dx} \right)^2 dx = \frac{P}{15} \frac{Q^2 l^5}{(EI)^2}.$$

Substituting into eq. (175), $P_{cr} = 2.5EI/l^2$. Comparing this result with the exact formula (166) above, we see that the error arising from this approximation is only about 1 per cent.

This error can be considerably reduced and a better approximation obtained if we take for the strain energy of bending the expression:

$$U = \frac{1}{2EI} \int_0^l M^2 dx. \quad (e)$$

Substituting in this expression

$$M = P(\delta - y) = P \left[\delta - \frac{Qx^2}{6EI} (3l - x) \right]$$

$$= P\delta \left[1 - \frac{x^2}{2l^3} (3l - x) \right], \quad (f)$$

we find

$$U = \frac{P^2 \delta^2}{2EI} \frac{17l}{35}.$$

The diminishing of the potential energy of the load P is

$$U_1 = \frac{P}{15} \cdot \frac{Q^2 l^5}{(EI)^2} = \frac{3P}{5} \cdot \frac{\delta^2}{l}.$$

Substituting into eq. (175), we obtain

$$\frac{P^2 \delta^2}{2EI} \frac{17l}{35} = \frac{3P}{5} \frac{\delta^2}{l},$$

from which

$$P_{cr} = \frac{42}{17} \cdot \frac{EI}{l^2} = 2.4706 \frac{EI}{l^2}.$$

The correct value is

$$P_{cr} = \frac{\pi^2}{4} \frac{EI}{l^2} = 2.4674 \frac{EI}{l^2}.$$

Hence the error of the approximate solution is only 0.13 per cent. In using expression (e), instead of expression (b), for strain energy we introduce in our calculations the deflection y of the assumed curve, instead of the derivative d^2y/dx^2 . Since y is represented with a much better accuracy than d^2y/dx^2 by the assumed curve, the second method of calculation actually results in a better approximation for P_{cr} .

The energy method usually gives a very satisfactory approximation provided the assumed curve is properly chosen. Sometimes we can make a very rough assumption for the shape of the curve and still obtain a satisfactory result. For example, we might assume the deflection curve in the above example to be a parabola given by the equation

$$y = \frac{\delta x^2}{l^2}.$$

Then

$$U = \int_0^l \frac{M^2 dx}{2EI} = \frac{P^2 \delta^2}{2EI} \int_0^l \left(1 - \frac{x^2}{l^2} \right)^2 dx = \frac{P^2 \delta^2}{2EI} \frac{8}{15} l,$$

$$U_1 = \frac{P}{2} \int_0^l \left(\frac{dy}{dx} \right)^2 dx = \frac{2}{3} \frac{\delta^2}{l} P.$$

By substituting into equation (175),

$$\frac{P^2 \delta^2}{2EI} \frac{8}{15} l = \frac{2}{3} \frac{\delta^2}{l} P$$

and

$$P_{cr} = 2.5 \frac{EI}{l^2}.$$

A satisfactory approximation is thus obtained although the parabolic curve, which we assumed, cannot be considered as a very satisfactory one. It has an approximately constant curvature along the length while in the actual curve the

curvature is proportional to the bending moment. It is zero at the top of the bar and a maximum at the bottom.

Applying the energy method with an assumed curve satisfying the end conditions, we always obtain a value for the critical load which is higher than the true value. This follows from the fact that the actual deflection curve of a buckled bar is always the one that corresponds to the least resistance of the bar. Only by the merest chance will an assumed curve be the true curve of the least resistance. In almost every case the assumed curve will be different from this curve of least resistance, thus giving values too high for the critical loads.

Problems

1. Solve the problem shown in Fig. 121 assuming the deflection curve is the same as for a uniformly loaded beam with one end built-in and the other hinged.

2. Solve by the energy method problem 7 of the preceding article (p. 197) assuming $l_1 = l_2 = l/2$.

Solution. Assuming that the deflection curve is a sine curve,

$$y = \delta \sin \frac{\pi x}{l},$$

the bending moments for the two portions of the curve are

$$M_1 = P_1 y + \frac{\delta P_2}{l} (l - x),$$

$$M_2 = (P_1 + P_2)y - \frac{\delta P_2 x}{l}.$$

The strain energy of bending is

$$\begin{aligned} U &= \int_{l/2}^l \frac{M_1^2 dx}{2EI_1} + \int_0^{l/2} \frac{M_2^2 dx}{2EI_2} \\ &= \frac{\delta^2}{2EI_1} \left(P_1^2 \frac{l}{4} + P_2^2 \frac{l}{24} + P_1 P_2 \frac{2l}{\pi^2} \right) \\ &\quad + \frac{\delta^2}{2EI_2} \left[(P_1 + P_2)^2 \frac{l}{4} + P_2^2 \frac{l}{24} - P_2(P_1 + P_2) \frac{2l}{\pi^2} \right]. \end{aligned}$$

The diminishing of the potential energy due to lowering of the

points of application of the loads P_1 and P_2 is

$$U_1 = \frac{P_1}{2} \int_0^{l/2} \left(\frac{dy}{dx} \right)^2 dx + \frac{P_2}{2} \int_{l/2}^l \left(\frac{dy}{dx} \right)^2 dx = \frac{\delta^2 \pi^2}{4l} (P_1 + \frac{1}{2} P_2).$$

Substituting in equation (175) and using our previous notations, we obtain

$$(P_1 + P_2)_{cr} = \frac{(\pi^2 EI_2 / l^2)(m + 1)}{m + \frac{m(m-1)^2}{6} - \frac{8}{\pi^2}(m-1) + n \left[\frac{1}{m} + \frac{m(m-1)^2}{6} + \frac{8}{\pi^2} \frac{m-1}{m} \right]}. \quad (176)$$

3. Solve problem 8 of the preceding article by using the energy method.

Answer. Assuming the deflection curve

$$y = \delta \left(1 - \cos \frac{\pi x}{2l} \right)$$

we obtain

$$P_{cr} = \pi^2 \frac{EI_2}{4l^2} \cdot \frac{1}{\frac{l_2}{l} + \frac{l_1}{l} \frac{I_2}{I_1} - \frac{1}{\pi} \left(\frac{I_2}{I_1} - 1 \right) \sin \frac{\pi l_2}{l}}. \quad (177)$$

37. Buckling of Prismatical Bars under the Action of Uniformly Distributed Axial Forces.—Assuming that under the action of uniform axial load a slight lateral buckling occurred, Fig. 128, we can obtain the critical value of the load by integrating the differential equation of the deflection curve. The equation in this case is not as simple as we had before and its solution requires the use of Bessel's function.¹⁵ An approximate solution can be readily obtained by using the energy method.

As an approximate expression for the deflection curve let us take

$$y = \delta \left(1 - \cos \frac{\pi x}{2l} \right) \quad (a)$$

which is the true curve for the case where buckling occurs under the action of a compressive load applied at the end. The bending moment resulting from that portion of the load above a cross section

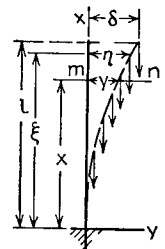


FIG. 128.

¹⁵ See "Theory of Elastic Stability," p. 115.

mn at that cross section is

$$M = \int_x^l q(\eta - y) d\xi.$$

Substituting equation (a) for y and setting

$$\eta = \delta \left(1 - \cos \frac{\pi \xi}{2l} \right),$$

we obtain after integration with respect to ξ :

$$M = \delta q \left[(l - x) \cos \frac{\pi x}{2l} - \frac{2l}{\pi} \left(1 - \sin \frac{\pi x}{2l} \right) \right].$$

Substituting this in the expression for the strain energy of bending, we obtain

$$U = \int_0^l \frac{M^2 dx}{2EI} = \frac{\delta^2 q^2 l^3}{2EI} \left(\frac{1}{6} + \frac{9}{\pi^2} - \frac{32}{\pi^3} \right). \quad (b)$$

In calculating the decrease of the potential energy of the distributed load during lateral buckling, we note that, owing to the inclination of an element ds of the deflection curve at the cross section mn , the upper part of the load undergoes a downward displacement equal to

$$ds - dx \approx \frac{1}{2} \left(\frac{dy}{dx} \right)^2 dx,$$

and the corresponding reduction in the potential energy is

$$\frac{1}{2} \left(\frac{dy}{dx} \right)^2 q(l - x) dx.$$

The total decrease of the potential energy of the load during buckling then is

$$U_1 = \frac{1}{2} q \int_0^l \left(\frac{dy}{dx} \right)^2 (l - x) dx = \frac{\pi^2 \delta^2 q}{8} \left(\frac{1}{4} - \frac{1}{\pi^2} \right). \quad (c)$$

Substituting expressions (b) and (c) into equation (175), we obtain

$$\frac{\delta^2 q^2 l^3}{2EI} \left(\frac{1}{6} + \frac{9}{\pi^2} - \frac{32}{\pi^3} \right) = \frac{\pi^2 \delta^2 q}{8} \left(\frac{1}{4} - \frac{1}{\pi^2} \right),$$

from which

$$(ql)_{cr} = \frac{7.89EI}{l^2}.$$

The exact solution for this case is

$$(ql)_{cr} = \frac{7.83EI}{l^2} = \frac{\pi^2 EI}{(1.122l)^2}. \quad (178)$$

Thus the error of our approximate solution is less than 1 per cent.

Problems

1. A prismatical bar with hinged ends, Fig. 129, is submitted to the action of a uniformly distributed load of intensity q and of a central compressive force P . Find the critical value of P by assuming for the deflection curve the equation:

$$y = \delta \sin \frac{\pi x}{l}.$$

Answer.

$$P_{cr} = \frac{\pi^2 EI}{l^2} - \frac{ql}{2}.$$

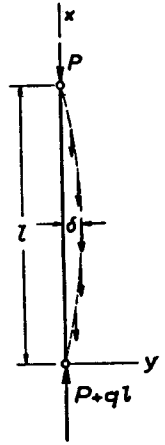


FIG. 129.

38. Buckling of Bars of Variable Cross Section.—A bar of variable cross section symmetrical with respect to the middle and having two axial planes of symmetry is shown in Fig. 130. The middle portion is of uniform cross section with a smaller moment of inertia I_0 . At the ends the cross section varies and the smaller moments of inertia follow the law:

$$I = I_0 \left(\frac{x}{a} \right)^m, \quad (a)$$

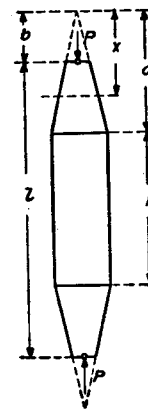


FIG. 130.

in which x and a are distances from a certain fixed point (Fig. 130) and m is a number depending upon the type of column. When the middle portion is a solid cylinder and the ends are solid cones, I varies as the fourth power of x and $m = 4$ in eq. (a). When the column has a constant thickness in the direction perpendicular to the plane of Fig. 130, the moments of inertia I with respect to axes parallel to the plane of the figure are proportional to x and $m = 1$ in eq. (a). When the column consists of four angles connected by lattices, as in Fig. 131, the cross sectional area remains constant and I can be taken proportional to

x^2 . Then $m = 2$ in eq. (a). Calculations made for $m = 1, 2, 3, 4$, show¹⁶ that the critical load within the elastic limit can be represented by the equation:

$$P_{cr} = \alpha \frac{EI_0}{l^2}, \quad (179)$$

in which α is a numerical factor depending upon the ratios h/l and I_1/I_0 , where $I_1 = I_0(b/a)^m$ is the moment of inertia of the end cross sections. Assuming the ends of the column hinged, the magnitudes of α for various proportions are given in the table. It can be seen that as the ratio h/l or the ratio I_1/I_0 approaches unity the factor α approaches π^2 and eq. (179) approaches eq. (167) for a prismatical bar.

TABLE 13.—COEFFICIENT α IN EQ. (179)

I_1/I_0	$h/l =$	0	0.2	0.4	0.6	0.8	1
0.1	$m = 1$	6.48	7.58	8.68	9.46	9.82	π^2
	$m = 2$	5.40	6.67	8.08	9.25	9.79	"
	$m = 3$	5.01	6.32	7.84	9.14	9.77	"
	$m = 4$	4.81	6.11	7.68	9.08	9.77	"
0.2	$m = 1$	7.01	7.99	8.91	9.63	9.82	"
	$m = 2$	6.37	7.49	8.61	9.44	9.81	"
	$m = 3$	6.14	7.31	8.49	9.39	9.81	"
	$m = 4$	6.02	7.20	8.42	9.38	9.80	"
0.4	$m = 1$	7.87	8.60	9.19	9.70	9.84	"
	$m = 2$	7.61	8.42	9.15	9.63	9.84	"
	$m = 3$	7.52	8.38	9.10	9.63	9.84	"
	$m = 4$	7.48	8.33	9.10	9.62	9.84	"
0.6	$m = 1$	8.60	9.12	9.55	9.74	9.85	"
	$m = 2$	8.51	9.03	9.48	9.74	9.85	"
	$m = 3$	8.50	9.02	9.47	9.74	9.85	"
	$m = 4$	8.47	9.01	9.45	9.74	9.85	"
0.8	$m = 1$	9.27	9.54	9.69	9.83	9.86	"
	$m = 2$	9.24	9.50	9.69	9.82	9.86	"
	$m = 3$	9.23	9.50	9.69	9.81	9.86	"
	$m = 4$	9.23	9.49	9.69	9.81	9.86	"
1		π^2	π^2	π^2	π^2	π^2	"

¹⁶ See A. Dinnik, Bulletins of Engineers (Westnik Ingenerov), 1927 (Russian). The numerical table below is taken from this paper.

As an example in the application of this table consider a wooden strut 6' 6" long of rectangular cross section. The thickness of the strut remains constant and equal to $\frac{3}{4}$ in. The width varies according to a straight-line law and is 4 in. at the middle and 2.4 in. at the ends. Determine P_{cr} if $E = 1.2 \times 10^6$. In this case $h/l = 0$, $m = 1$ and $I_1/I_0 = 2.4/4 = 0.6$. From the above table $\alpha = 8.60$ and the critical load, from eq. (179), is

$$P_{cr} = 8.60 \frac{1.2 \times 10^6 \times 4 \times 3^3}{4^3 \times 12 \times 78^2} = 239 \text{ lbs.}$$

As a second example let us consider a pyramidal column (Fig. 131) whose square cross section consists of four angles $3\frac{1}{2} \times 3\frac{1}{2} \times \frac{3}{8}$ in. The outside width of the column at the ends is 12 in. and at the middle $20\frac{1}{2}$ inches. The length of the column is 65 feet. Determine the critical load for this column, taking for structural steel $E = 30 \times 10^6$ lbs. per sq. in. and assuming that the lattice bars are rigid enough to allow the application of eq. (179), derived for solid bars. The cross sectional area $A = 2.48 \times 4 = 9.92$ in.; $I_1 = 2.9 \times 4 + 2.48 \times 4 \times (6 - 1.01)^2 = 259$ in.⁴; $I_0 = 2.9 \times 4 + 2.48 \times 4 \times (10.25 - 1.01)^2 = 860$ in.⁴. Taking $I_1 : I_0 = 0.3$, $m = 2$ approximately and $h/l = 0$, we find from the above table by interpolation $\alpha = 7$ approximately. Then, from eq. (179),

$$P_{cr} = 7 \times \frac{30 \times 10^6 \times 860}{65^2 \times 12^2} = 297,000 \text{ lbs.}$$



FIG. 131.

39. The Effect of Shearing Force on Critical Load.—In the derivation of the critical load, the differential equation used for the deflection curve (see p. 186) neglected the effect of shearing force on the deflection. When buckling occurs, the cross sections of the bar are no longer perpendicular to the compressive force and there will be shearing forces. The effect of these forces may be found by use of the energy method developed in article 36. In using this method the energy of shear must be added to the energy of bending in calculating the strain energy U due to buckling. Let AB (Fig. 132) represent a solid strut with hinged ends, buckled under the action of compressive force P . The




FIG. 132.

magnitudes of the bending moment and the shearing force at any cross section mn are

$$M = Py; \quad V = P \frac{dy}{dx}. \quad (a)$$

From previous considerations (see art. 66, Part I) the potential energy stored in an element of the bar is

$$dU = \frac{M^2 dx}{2EI} + \frac{\alpha V^2 dx}{2GA}, \quad (b)$$

where A is cross sectional area,

α is coefficient depending on the shape of the cross section such that

$\alpha V/GA$ is the magnitude of the shearing strain at the neutral axis (art. 39, Part I).

Accordingly, the displacement of the section mn with respect to m_1n_1 , due to this shear, is $(\alpha V/GA)dx$, and the second member on the right side of (b) represents the potential energy of shear stored in the element. By using (a) and (b), the energy stored in the strut during buckling is

$$U = \int_0^l \frac{P^2 y^2 dx}{2EI} + \int_0^l \frac{\alpha P^2}{2GA} \left(\frac{dy}{dx} \right)^2 dx. \quad (c)$$

The decrease in the potential energy of the load P is

$$U_1 = \frac{P}{2} \int_0^l \left(\frac{dy}{dx} \right)^2 dx. \quad (d)$$

Assuming that the deflection curve of the buckled strut is a sine curve,

$$y = \delta \sin \frac{\pi x}{l}, \quad (e)$$

and with this value in (c) and (d)

$$U = \delta^2 \frac{P^2 l}{4EI} + \delta^2 \frac{P^2 l}{4GA} \frac{\alpha \pi^2}{l^2}, \quad (f)$$

$$U_1 = \delta^2 \frac{P \pi^2}{4l}.$$

Substituting in eq. 175 we obtain

$$P_{cr} = \frac{\pi^2 EI}{l^2} \frac{1}{1 + \frac{EI}{GA} \frac{\alpha \pi^2}{l^2}}. \quad (g)$$

Comparison with Euler's formula (167) shows that, due to the action of shear, the critical load is diminished in the ratio

$$\frac{1}{1 + \frac{EI}{GA} \frac{\alpha \pi^2}{l^2}}. \quad (180)$$

Let

$$\frac{\pi^2 EI}{l^2} = P_e; \quad \frac{GA}{\alpha} = P_d; \quad (h)$$

then eq. (g) becomes

$$P_{cr} = P_e \frac{1}{1 + \frac{P_e}{P_d}}. \quad (181)$$

For solid bars, P_d is very large in comparison with P_e , and the effect of the shearing force can be neglected. In the case of latticed bars, especially when spacing plates or battens only are used (Fig. 134, a), P_d may become of the same order as P_e , in which case the effect of shearing force can no longer be neglected. This will now be considered.

40. Buckling of Latticed Struts.¹⁷—Latticed struts are used extensively in steel structures. Their resisting capacities are always less than those of solid columns having the same cross sectional area and the same slenderness ratio l/k , and depend greatly on the spacing details such as lattice bars, spacing plates and battens. This lowering of the critical stresses is due principally to the fact that in the case of latticed columns shearing forces produce a much larger effect on deflections than in the case of solid bars. To calculate the

¹⁷ See F. Engesser, *Zentralblatt d. Bauverw.*, 1891, p. 483, and 1907, p. 609; L. Prandtl, *V. D. I.*, 1907, and also writer's paper in *Bulletin of the Polytechnical Institute at Kiev*, 1908. These papers discuss the problem of buckling of latticed struts in connection with the collapse of the Quebec bridge.

effect of shearing force on the critical load, eq. (181), which was derived for solid bars, can be adapted to latticed struts. As before, let P_e be the critical load obtained from eq. (167); P_d in eq. (181) has, in the case of solid struts, a simple physical meaning, namely, that V/P_d represents the additional slope γ in the deflection curve produced by shearing forces. P_d has the same meaning also in the case of latticed struts, provided the number of panels is large. To determine P_d in any particular case, therefore, we must investigate the lateral displacements produced by the shearing force.

Consider first one panel of the latticed bar shown in Fig. 133*a*. The displacement due to shear is that due to the

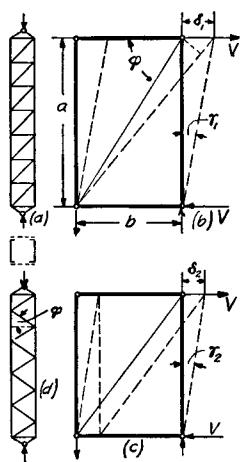


FIG. 133.

elongation and contraction of the diagonals and battens in each panel (Fig. 133, *b*). Assuming hinges at the joints, the elongation of the diagonal produced by the shearing force V is $Va/\sin \phi \cos \phi EA_d$, in which

ϕ is the angle between the batten and the diagonal,

$\frac{V}{\cos \phi}$ is the tensile force in the diagonal,

$\frac{a}{\sin \phi}$ is the length of the diagonal,

A_d is the cross sectional area of two diagonals.

The corresponding lateral displacement, Fig. 133*b*, is

$$\delta_1 = \frac{Va}{\sin \phi \cos^2 \phi EA_d} \quad (a)$$

The shortening of a batten and the corresponding lateral displacement (Fig. 133, *c*) is

$$\delta_2 = \frac{Vb}{EA_b}, \quad (b)$$

where

b is the length of the batten,
 A_b is the cross sectional area of two battens.

From (*a*) and (*b*), the angular displacement produced by the shearing force V is

$$\gamma = \frac{\delta_1 + \delta_2}{a} = \frac{V}{\sin \phi \cos^2 \phi EA_d} + \frac{Vb}{aEA_b}.$$

Then using the above definition $V/P_d = \gamma$, we find

$$\frac{1}{P_d} = \frac{1}{\sin \phi \cos^2 \phi EA_d} + \frac{b}{aEA_b}.$$

Substituting in eq. (181),

$$P_{cr} = \frac{\pi^2 EI}{l^2} \frac{1}{1 + \frac{\pi^2 EI}{l^2} \left(\frac{1}{\sin \phi \cos^2 \phi EA_d} + \frac{b}{aEA_b} \right)} \quad (182)$$

If the sectional areas A_d and A_b are very small in comparison with the cross sectional area of the channels (Fig. 133, *a*), the critical load (182) may be considerably lower than that obtained from Euler's formula (167).

Equation (182) can be used also in the case represented in Fig. 133 (*d*) if the angle ϕ is measured as shown in the figure and the member due to the deformation of the battens is omitted.

In the case of a strut made with battens alone as in Fig. 134*a*, to obtain the lateral displacement produced by the shearing force V , we must consider the deformation of an element of the strut cut out by the sections mn and m_1n_1 . Assuming that the deflection curves of the channels have points of inflection at these sections, the condition of bending will be as shown in Fig. 134 (*b*).¹⁸ The deflection consists of

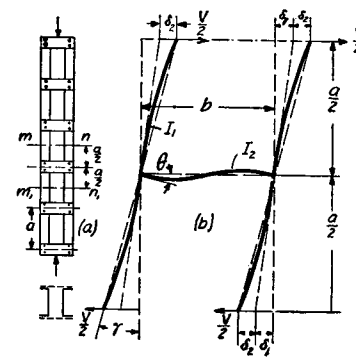


FIG. 134.

¹⁸ The tension and compression forces acting on the cords are not shown in the figure.

two parts: the displacement δ_1 due to bending of the batten, and the displacement δ_2 due to bending of the channels. There are couples $Va/2$ at the ends of the batten and the angle θ of rotation of these ends of the batten is (see eqs. 103, 104, Part I)

$$\theta = \frac{Va}{2} \frac{b}{3EI_2} - \frac{Va}{2} \frac{b}{6EI_2} = \frac{Vab}{12EI_2},$$

where b is the length of the battens and EI_2 is their flexural rigidity. The lateral displacement δ_1 produced by this bending of the battens is

$$\delta_1 = \theta \frac{a}{2} = \frac{Va^2b}{24EI_2}. \quad (e)$$

The displacement δ_2 can be calculated from the cantilever formula:

$$\delta_2 = \frac{V \left(\frac{a}{2}\right)^3}{2 \cdot 3EI_1} = \frac{Va^3}{48EI_1}. \quad (d)$$

The total angular displacement produced by the shearing force V is

$$\gamma = \frac{\delta_1 + \delta_2}{\frac{a}{2}} = \frac{Vab}{12EI_2} + \frac{Va^2}{24EI_1};$$

then, since $V/P_d = \gamma$, we obtain

$$\frac{1}{P_d} = \frac{ab}{12EI_2} + \frac{a^2}{24EI_1},$$

and eq. (181) for determining the critical load becomes

$$P_{cr} = \frac{EI\pi^2}{l^2} \frac{1}{1 + \frac{\pi^2 EI}{l^2} \left(\frac{ab}{12EI_2} + \frac{a^2}{24EI_1} \right)}, \quad (183)$$

where, as before, $EI\pi^2/l^2$ represents the critical load calculated from Euler's formula. It may be seen that when the flexural rigidity of the battens is small the actual critical load is much lower than that given by Euler's formula.

From equations (182) and (183) we note that in calculating critical loads for built-up columns the actual length of a column is replaced by a *reduced length* which is to be determined in the case of a latticed column as shown in Fig. 133, from the equation:

$$l_1 = l \sqrt{1 + \frac{\pi^2 EI}{l^2} \left(\frac{1}{\sin \varphi \cos^2 \varphi EA_d} + \frac{b}{aEA_b} \right)}$$

and, in the case of a batten-plate column as shown in Fig. 134, from the equation:

$$l_1 = l \sqrt{1 + \frac{\pi^2 EI}{l^2} \left(\frac{ab}{12EI_2} + \frac{a^2}{24EI_1} \right)}.$$

When the reduced length of a built-up column is determined, the allowable stress is obtained as for a solid column with the slenderness ratio equal to l_1/k . If the design is made on the basis of the assumed inaccuracies (see art. 56, Part I), the proposed procedure results in a slightly higher factor of safety for built-up columns, which seems completely satisfactory.

In the design of built-up columns the proper dimensioning of the lattice bars and batten plates is of great practical importance. As a basis for determining stresses in these details, an eccentricity in application of compressive forces should be assumed in the design of shorter columns.¹⁹ If the eccentricities at the two ends are equal to e and are in opposite directions, the compressive forces P form a couple of the magnitude $2Pe$ which produces at the ends of the strut the shearing forces:

$$V = \frac{2Pe}{l}. \quad (184)$$

¹⁹ This question is discussed in more detail in the paper by D. H. Young, Proc. Am. Soc. Civil Eng., December, 1934, and another paper by the same author in Pub. Intern. Assoc. Bridge and Structural Eng., Zürich, vol. 2, 1934, p. 480. See also "Theory of Elastic Stability," p. 197.

The maximum value of V is obtained by substituting in this equation for P the maximum load which the column can carry. The eccentricity e is usually taken as a certain portion of the core radius r , say $e/r = 0.3$. The details should then be designed in such a way that the maximum stresses produced in them by V_{\max} does not exceed the yield point stress.

In the case of a compressed latticed member of a truss with rigid joints, some bending moments at the ends of the member are produced during loading of the truss. If the magnitudes M_1 and M_2 of these moments are calculated from the *secondary stresses* analysis, the corresponding eccentricities $e_1 = M_1/P$ and $e_2 = M_2/P$ in application of the compressive force P are known, and the magnitude of their algebraic sum must be substituted in equation (184) instead of $2e$.

41. Buckling of Circular Rings and Tubes under External Pressure.—*Buckling of a Circular Ring.* It is well known that a circular ring or tube can collapse due to external pressure alone; and if the flexural rigidity of the ring is insufficient, such a failure can occur at stresses far below the

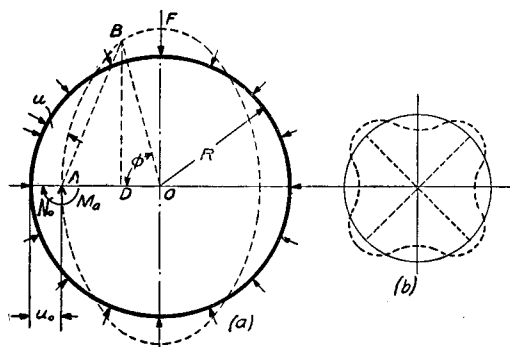


FIG. 135.

elastic limit of the material. This phenomenon must be taken into consideration in such problems as the design of boiler tubes submitted to external pressure and reinforcing rings for submarines.

The pressure at which the circular form becomes unstable

and buckling occurs is known as the critical pressure. Its value will be obtained by use of the general equation (95, p. 103) for the deflection curve.

Assume that under external pressure the ring (Fig. 135) is buckled into an elliptical form as shown by the dotted line. Suppose that

q is external pressure per unit length, of the center line,

R is the radius of the center line of the ring,

u is radial displacements during buckling,

u_0 is radial displacement for the cross section A ,

M_0 is bending moment at the cross section A ,

$N_0 = q(R - u_0)$ is longitudinal compressive force at the cross section A .

The bending moment at any cross section B of the buckled ring is

$$M = M_0 + q\overline{AOAD} - \frac{q}{2}\overline{AB}^2. \quad (a)$$

Now, in the triangle AOB ,

$$\overline{OB}^2 = \overline{AB}^2 + \overline{AO}^2 - 2\overline{AOAD}$$

or

$$\frac{1}{2}\overline{AB}^2 - \overline{AOAD} = \frac{1}{2}(\overline{OB}^2 - \overline{AO}^2) = \frac{1}{2}[(R - u)^2 - (R - u_0)^2].$$

Since u is small in comparison to R , terms in u^2 or u_0^2 can be neglected, whence

$$\frac{1}{2}\overline{AB}^2 - \overline{AOAD} = R(u_0 - u).$$

Substituting this value in equation (a), we obtain

$$M = M_0 - qR(u_0 - u).$$

Equation (95), page 103, becomes

$$\frac{d^2u}{d\varphi^2} + u = -\frac{R^2}{EI}[M_0 - qR(u_0 - u)]$$

or

$$\frac{d^2u}{d\varphi^2} + u \left(1 + \frac{qR^3}{EI}\right) = \frac{-M_0R^2 + qR^3u_0}{EI}. \quad (b)$$

The general solution of this equation is

$$u = C_1 \sin p\varphi + C_2 \cos p\varphi + \frac{-M_0 R^2 + q R^3 u_0}{EI + q R^3}, \quad (c)$$

in which C_1 and C_2 are constants to be determined from the conditions at the cross sections A and F of the buckled ring, and

$$p^2 = 1 + \frac{q R^3}{EI}. \quad (d)$$

From symmetry, it follows that

$$\left(\frac{du}{d\varphi}\right)_{\varphi=0} = 0; \quad \left(\frac{du}{d\varphi}\right)_{\varphi=\pi/2} = 0. \quad (e)$$

From the first of these conditions $C_1 = 0$ and from the second,

$$\sin \frac{p\pi}{2} = 0. \quad (f)$$

The smallest root of this equation is

$$\frac{p\pi}{2} = \pi$$

or

$$p = 2.$$

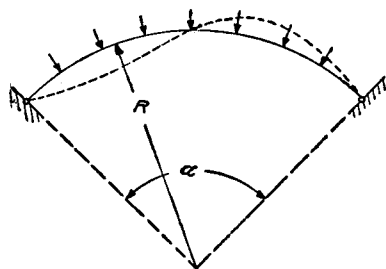


FIG. 136.

Substituting this in (d), we obtain the value for the critical pressure²⁰

$$q_{cr} = \frac{3EI}{R^3}. \quad (185)$$

Other roots of the eq. (f) such as $p\pi/2 = 2\pi$, $p\pi/2 = 3\pi$, etc., correspond to a larger number of waves in the buck-

led ring and give greater values for the pressure q . Figure 135 (b) shows, for instance, the buckled form for $p\pi/2 = 2\pi$.

²⁰ This problem was solved by M. Bresse, "Cours de Mécanique Appliquée," Part I, p. 334. Paris, 1866.

These higher forms of buckling are of interest in studying the stability of short cylindrical tubes with fastened ends.

Buckling of a Circular Arch.—If a circular arch having hinged ends be submitted to uniform pressure, it can buckle as indicated by the dotted line in Fig. 136. The critical value of the pressure depends upon the magnitude of the angle α and may be calculated from the equation:²¹

$$q_{cr} = \frac{EI}{R^3} \left(\frac{4\pi^2}{\alpha^2} - 1 \right). \quad (186)$$

The problem of the buckling of a ring in the direction perpendicular to its plane has also been solved.²²

Buckling of Circular Tubes.—The theory of buckling developed above for a circular ring can also be used in the case of a long circular tube submitted to uniform external pressure. Consider an elementary ring cut out of the tube by two cross sections unit distance apart. The moment of inertia of the cross section of this ring is

$$I = \frac{1 \cdot h^3}{12},$$

where h denotes the thickness of the wall of the tube. Since the cross section of the ring will not be distorted during bending,

$$\frac{E}{1 - \mu^2}$$

must be used instead of E . Equation (185), for calculating the critical pressure, becomes

$$p_{cr} = \frac{Eh^3}{4(1 - \mu^2)R^3}. \quad (187)$$

²¹ See author's paper on the stability of elastic systems, Bulletin of the Polytechnical Institute in Kiev, 1910. French translation, Annales des Ponts et Chaussées, 1913. See also E. Hurlbrink, Schiffbau, Vol. 9, p. 640, 1907-1908; E. Chwalla and C. F. Kollbrunner, "Der Stahlbau," 1937 and 1938; and the recent book by A. N. Dinnik, "Buckling of Bars," Moscow, 1939.

²² See E. L. Nicolai, Zeitschr. f. Angew. Math. u. Mech., Vol. 3, p. 227, 1923. See also author's paper, Zeitschr. f. Angew. Math. u. Mech., Vol. 3, p. 358, 1923.

This equation may be used as long as the corresponding compressive stress in the tube is less than the proportional limit of the material. Beyond the elastic limit the true critical pressure will be less than that obtained from (187) and the following equation may be used:²³

$$p_{cr} = \frac{h}{R} \frac{\sigma_{Y.P.}}{1 + 4 \frac{\sigma_{Y.P.} R^2}{E h^2}}, \quad (188)$$

in which $\sigma_{Y.P.}$ denotes the yield point of the material in compression. As the thickness reduces, the critical pressure approaches the limiting value $Eh^3/4R^3$, which is slightly less than that given by eq. (187) and in all cases its value is less than $h\sigma_{Y.P.}/R$, i.e., less than the pressure corresponding to the yield point.²⁴

The failure of tubes under uniform external pressure depends very much upon the various kinds of imperfections in them. The most important imperfection is an initial ellipticity, the limiting value of which in each type of tube is usually well-known from numerous inspection measurements. Hence it seems desirable to have a design formula in which this initial ellipticity appears explicitly. To derive such a formula²⁵ let us assume that the initial deviation of the shape of the tube from the perfect circular form, indicated by the dotted line in Fig. 137, is given by the equation:

$$u_1 = u_0 \cos 2\varphi, \quad (a)$$

in which u_0 is the maximum initial radial deviation, which is considered small in comparison with R , and φ is the central angle measured as shown in the figure. The initial shape of

²³ See R. V. Southwell, *Phil. Mag.*, Vol. 29, p. 67, 1915.

²⁴ Experiments on the collapse of short tubes by external pressure are described by G. Cook, *Phil. Mag.*, p. 51, 1914. For bibliography on the subject by the same author see *Brit. Assoc. Rep.* (Birmingham), 1913.

²⁵ See writer's paper, *Trans. A. S. M. E., Journal of Applied Mechanics*, vol. 1, 1933, p. 173.

the tube is then represented by the full line in Fig. 137. If on such a non-circular tube an external pressure p is applied, a further flattening of the tube occurs. Denoting the radial displacements corresponding to the later flattening by u_2 and considering an elemental ring of unit width, we obtain from equation (95):

$$\frac{d^2 u_2}{d\varphi^2} + u_2 = -\frac{1}{D} MR^2 \quad (b)$$

where

$$D = \frac{Eh^3}{12(1 - \mu^2)}$$

is the flexural rigidity of the elemental ring. Regarding the bending moment M , we see that owing to pressure p , the decrease in curvature occurs in the portions AB and CD of the elemental ring, hence M is positive there, while in the remaining portions of the ring the moment is negative. At points A , B , C and D the bending moment is zero, and the interaction between the parts of the elemental ring is given by forces S tangential to the dotted circle representing the ideal shape of the tube.²⁶ This circle can be considered as a funicular curve for the external uniform pressure p . The compressive force along this curve remains constant and equal to $S = pR$. Thus the bending moment at any cross section is obtained by multiplying S by the total radial deviation $u_1 + u_2$ at this cross section. Then

$$M = pR(u_2 + u_0 \cos 2\varphi), \quad (c)$$

and equation (b) becomes

$$\frac{d^2 u_2}{d\varphi^2} + u_2 = -\frac{1}{D} pR^3(u_2 + u_0 \cos 2\varphi)$$

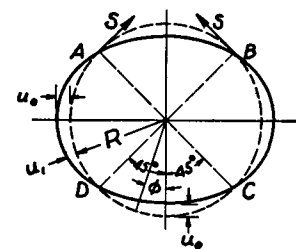


FIG. 137.

²⁶ The action of forces S on the portion AB of the ring is shown in the figure.

or

$$\frac{d^2 u_2}{d\varphi^2} + u_2 \left(1 + p \frac{R^3}{D} \right) = - \frac{1}{D} p R^3 u_0 \cos 2\varphi.$$

The solution of this equation satisfying the conditions of continuity at the points A, B, C , and D is

$$u_2 = \frac{u_0 p}{p_{cr} - p} \cos 2\varphi, \quad (189)$$

in which p_{cr} is given by formula (187). It is seen that at the points A, B, C and D the displacement u_2 and its second derivative vanish. Hence the bending moments at these points are zero, as was previously assumed. The maximum bending moment occurs at $\varphi = 0$ and $\varphi = \pi$ where

$$M_{\max} = pR \left(u_0 + \frac{u_0 p}{p_{cr} - p} \right) = \frac{p u_0 R}{1 - \frac{p}{p_{cr}}}. \quad (190)$$

It is seen that for small values of the ratio p/p_{cr} the change in the ellipticity of the tube due to pressure p can be neglected, and that the maximum bending moment is obtained by multiplying the compressive force $S = pR$ by the initial deviation u_0 . If the ratio p/p_{cr} is not small, the change in the initial ellipticity of the tube must be considered, and equation (190) must be used in calculating M_{\max} .

The maximum compressive stress is now obtained by adding the maximum compressive stress due to bending moment M_{\max} to the stress produced by the compressive force pR . Thus we find:

$$\sigma_{\max} = \frac{pR}{h} + \frac{6pRu_0}{h^2} \cdot \frac{1}{1 - \frac{p}{p_{cr}}}. \quad (d)$$

The dangerous value of the pressure p is that value at which the yielding of the material begins. Denoting this value by

$p_{Y.P.}$ and substituting $\sigma_{Y.P.}$ for σ_{\max} , we obtain

$$\sigma_{Y.P.} = \frac{p_{Y.P.} R}{h} + \frac{6p_{Y.P.} R u_0}{h^2} \cdot \frac{1}{1 - \frac{p_{Y.P.}}{p_{cr}}} \quad (e)$$

from which the value of the dangerous pressure $p_{Y.P.}$ can be calculated if $\sigma_{Y.P.}$ and initial deviation u_0 are known. By using the notations

$$\frac{R}{h} = m \quad \text{and} \quad \frac{u_0}{R} = n, \quad (f)$$

the equation (e) for calculating $p_{Y.P.}$ becomes

$$p_{Y.P.}^2 - \left[\frac{\sigma_{Y.P.}}{m} + (1 + 6mn)p_{cr} \right] p_{Y.P.} + \frac{\sigma_{Y.P.} p_{cr}}{m} = 0. \quad (191)$$

From this equation the curves can be plotted giving the average compressive stress $p_{Y.P.} R/h$ as a function of R/h for various values of the ratio u_0/R and for various values of $\sigma_{Y.P.}$. By using such curves, together with a proper factor of safety, the suitable wall thickness of a pipe can be readily calculated. It should be noted that the pressure $p_{Y.P.}$ determined in this manner is smaller than the pressure at which the complete collapsing of the tube occurs; hence by using $p_{Y.P.}$ as the ultimate value of pressure, we are always on the safe side.

In our preceding discussion it was assumed that the length of the tube l is large in comparison with its radius, say $l/R > 20$. For shorter tubes, if the edges are built-in or supported, the value of p_{cr} is larger than that given by equation (187) and depends on the ratio l/R . The theory of buckling of such tubes is more complicated,²⁷ since the tube subdivides during buckling in several waves along the circumference and the number of these waves depends on the ratio l/R .²⁸

²⁷ For discussion of this problem see writer's "Theory of Elastic Stability," p. 445.

²⁸ Some curves for calculating critical pressures on short tubes are prepared by the Research Committee on the Strength of Vessels under External Pressure, A. S. M. E., December 1933.

The problem of the buckling of tubes closed at the ends and submitted to uniform pressure on both the ends and the sides²⁹ has also been solved.³⁰

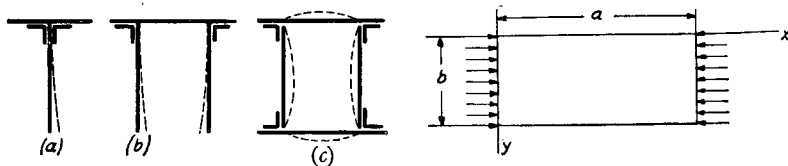


FIG. 138.

42. Buckling of Rectangular Plates.—The problem of buckling of compressed rectangular plates is of a practical importance in discussing elastic stability of compression members built up of plates such as we often encounter in steel structures, Fig. 138. A failure of such members may be brought about by buckling of the web or of the sides, instead of by buckling of the member as a whole. For example, in the cases shown in Fig. 138 such buckling of the plates as is indicated by the dotted lines may occur if the thickness of the plate is not satisfactorily chosen. Since the length of a compression member is usually large in comparison with the cross-sectional dimensions, the problem reduces to that of buckling of a long compressed plate, Fig. 139. The short sides of the plate can be considered as simply supported; the conditions along the other two sides depend on the shape of the cross section. For example, if a tubular section, shown in Fig. 138c, has a square form, and the side plates are all of the same thickness, they have the tendency to buckle simultaneously, and each side can be considered as a compressed rectangular plate, all four sides of which are simply supported. In the cases shown in Figs. 138a and 138b, the

²⁹ We have such a condition in the investigation of the stability of the hull of a submarine between two reinforcing rings.

³⁰ See paper by R. v. Mises in Festschrift von Prof. A. Stodola, Zürich, 1929.

lower edges of the vertical webs are free and the upper are elastically built-in.³¹

Rigorous solutions of the buckling problem for various conditions along the longitudinal sides of a plate such as shown in Fig. 139 have been worked out.³² We give here only the values of the critical stresses obtained from these solutions.

Rectangular plate supported on four sides under uniform compression in the direction of the x axis (Fig. 139) buckles by subdividing into squares or rectangles which approximate squares.

The critical value of the compressive stress is given by the equation:³³

$$\sigma_{cr} = \beta \sigma_e, \quad (192)$$

in which

$$\sigma_e = \frac{\pi^2 E h^2}{12 b^2 (1 - \mu^2)}, \quad (193)$$

h is the thickness of the plate, b its width.

$$\beta = \left(\frac{a}{mb} + \frac{mb}{a} \right)^2 \quad (a)$$

denotes a coefficient depending upon the magnitude of the ratio a/b and the integer m , the number of waves into which the plate divides in buckling. This later must be so chosen as to make β a minimum.³⁴ Several values of this coefficient are given in table 14.

³¹ First experiments in which the question of buckling of the thin-walled structures was discussed were made by William Fairbairn and were described in his book, "Britannia and Conway Tubular Bridges," London, 1849.

³² See "Theory of Elastic Stability," 1936.

³³ The solution of this problem is due to G. H. Bryan; see London Math. Soc. Proc., Vol. XXII, p. 54, 1891. Other cases of buckling of rectangular plates were considered by the writer. See author's papers: (1) On the stability of compressed plates, Bull. of the Polyt. Inst. in Kiev, 1907; (2) Z. f. Mathematik und Physik, Vol. 58, 1910; (3) Der Eisenbau, Vol. 12, 1921; Proceedings Am. Soc. C. E., Vol. 55, 1929, p. 855. See also H. Reissner, Zentralbl. d. Bauverw. (Berlin), p. 93, 1909.

³⁴ It may be seen that this minimum is equal to 4 and occurs when $a = mb$, i.e., when the plates subdivide during buckling in squares.

TABLE 14.—CONSTANTS FOR CALCULATING CRITICAL COMPRESSIVE STRESS FOR SIMPLY SUPPORTED RECTANGULAR PLATES

$a/b =$	0.4	0.6	0.8	1.0	1.2	1.4	1.6
$\beta =$	8.41	5.14	4.20	4.00	4.13	4.47	4.20
$\sigma_{cr} =$	22,800	14,000	11,400	10,900	11,200	12,100	11,400

$a/b =$	1.8	2.0	2.2	2.4	2.7	3
$\beta =$	4.04	4.00	4.04	4.13	4.04	4.00
$\sigma_{cr} =$	11,000	10,900	11,000	11,200	11,000	10,900

For longer plates ($a/b > 3$) $\beta = 4$ is always a good approximation. The values of σ_{cr} given in the above table are calculated on the assumption that $E = 30 \times 10^6$ lbs. per sq. in., $\mu = 0.3$ and $h/b = 0.01$. The critical stress for any other value of the ratio h/b can be obtained by multiplying the tabular values by $10^4(h^2/b^2)$. To illustrate, consider a long steel plate having a yield point stress of 40,000 lbs. per sq. in.; suppose we wish to determine the value of the ratio b/h at which the critical stress is equal to the yield point stress. Assuming $\beta = 4$ and using Table 14,

$$\sigma_{cr} = 10,900 \times 10^4 \times \frac{h^2}{b^2} = 40,000 \text{ lbs. per sq. in.,}$$

from which

$$\frac{b}{h} = 52.2. \quad (b)$$

For larger values of the ratio b/h failure occurs by buckling at a compressive stress smaller than the yield point of the material.

TABLE 15.—CONSTANT β FOR CALCULATING CRITICAL COMPRESSIVE STRESS FOR A RECTANGULAR PLATE WITH THREE SUPPORTED EDGES AND THE FOURTH ($y = b$) FREE

$a/b =$	0.5	1.0	1.2	1.4	1.6	1.8	2.0	2.5	3.0	4.0	5.0
$\beta =$	4.40	1.440	1.135	0.952	0.835	0.755	0.698	0.610	0.564	0.516	0.506

Under such condition the critical stress and not the yield point of the material must be taken as the basis for determining working stress.

Three Sides of the Plate Supported and the Fourth Free. If one

of the longitudinal edges such as $y = b$ (see Fig. 139) is free, the previous equation (192) can be used for calculating the critical values of the compressive stress, taking the values of the coefficient β from the table 15.

Two Opposite Sides Simply Supported, the Third Built-In, and the Fourth Free. The sides $x = 0$, $x = a$ in Fig. 139 are considered as simply supported and side $y = 0$ as built-in. The same equation (192) can be used. The values of the coefficient β are given in Table 16.

TABLE 16.—CONSTANT β FOR CALCULATING CRITICAL COMPRESSIVE STRESS FOR A RECTANGULAR PLATE WITH TWO OPPOSITE SIDES SIMPLY SUPPORTED, THE THIRD BUILT-IN, AND THE FOURTH ($y = b$) FREE

$a/b =$	1.0	1.1	1.2	1.3	1.4	1.5	1.6	1.7	1.8	1.9	2.0	2.2	2.4	2.6	2.8	3
$\beta =$	1.70	1.56	1.47	1.41	1.36	1.34	1.33	1.33	1.34	1.36	1.38	1.45	1.47	1.41	1.36	1.34

For larger values of the ratio a/b , a good approximation is $\beta = 1.33$.

*Two Opposite Sides Simply Supported and Other Two Built-In.*³⁵ The sides $x = 0$ and $x = a$ are considered simply supported. The corresponding values of the coefficient β in eq. (192) are given in the table below:

TABLE 17.—CONSTANT β FOR CALCULATING CRITICAL COMPRESSIVE STRESS FOR A RECTANGULAR PLATE, TWO OPPOSITE SIDES OF WHICH ARE SIMPLY SUPPORTED, AND TWO OTHERS BUILT-IN

$a/b =$	0.4	0.5	0.6	0.7	0.8	0.9	1.0	1.2	1.4	1.6	1.8	2.1
$\beta =$	9.44	7.69	7.05	7.00	7.29	7.83	7.69	7.05	7.00	7.29	7.05	7.00

Rectangular Plate Supported on Four Sides and Submitted to the Action of Shearing Stresses Uniformly Distributed along the Sides (Fig. 140). The critical value of the shearing stress which may produce buckling of the plate is

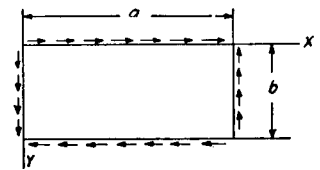


FIG. 140.

$$\tau_{cr} = \beta \sigma_e. \quad (194)$$

³⁵ Such condition we have when the two opposite sides of the compressed member, shown in Fig. 138c, are very rigid and only the other two may buckle.

The values of the numerical coefficient β are given in the table below.

TABLE 18.—CONSTANT β FOR CALCULATING CRITICAL STRESS FOR A RECTANGULAR PLATE SUPPORTED ON FOUR SIDES AND SUBMITTED TO THE ACTION OF A UNIFORM SHEAR

$a/b =$	1	1.2	1.4	1.5	1.6	1.8	2.0	2.5	3	∞
$\beta =$	9.42	8.0	7.3	7.1	7.0	6.8	6.6	6.3	6.1	5.4

This table can be used in choosing the thickness of the web of a plate girder. Near the supports the shearing force is the most important factor. Therefore the part of the web between two stiffeners may be considered as a rectangular plate with supported edges, subjected only to the action of shearing stresses. For instance, if the distance between the stiffeners is 5 ft., $E = 30 \times 10^6$ lbs. per sq. in. and $\mu = 0.3$, the following values of critical stress in lbs. per sq. in. are obtained for girders of thickness h and depth b by using the above table:³⁶

TABLE 19

b	$h = 3/8''$	$h = 7/16''$	$h = 1/2''$	$h = 9/16''$
5'	9,980	13,600	17,700	22,400
7'	7,730	10,500	13,700	17,400
10'	6,990	9,510	12,400	15,700

The necessary thickness of steel plates to be used in the built-up compression members whose sections are shown in Fig. 138 can be obtained from Tables 14-19. If the sides of the hollow section (Fig. 138, c) are considered to be long rectangular plates simply supported, the critical compressive stress is then

$$\sigma_{cr} = 4\sigma_e = \frac{\pi^2 h^2}{3b^2} \frac{E}{1 - \mu^2} \quad (c)$$

³⁶ More data regarding the buckling of the web and design of stiffeners are given in the writer's papers, Proc. Am. Soc. C. E., Vol. 55 (1929), p. 855, "Engineering," Vol. 138, p. 207, 1934. See also E. Chwalla, Reports Second Congress International Assoc. for Bridge and Structural Eng., Berlin, 1936; "Der Stahlbau," 1936, Heft, 21 and 22.

Taking, for instance, $h/b = 0.01$, we find

$$\sigma_{cr} = 10,900 \text{ lbs. per sq. in.}$$

This stress is far below the proportional limit of structural steel. If the longitudinal edges of the same plate are assumed to be built in, we find

$$\sigma_{cr} = 7\sigma_e = \frac{7}{4} 10,900 = 19,100 \text{ lbs. per sq. in.}$$

In cases (a) and (b) (Fig. 138) the compressed vertical steel plates may be considered as long plates built-in³⁷ along the upper edge and free along the lower edge. The critical stress is therefore

$$\sigma_{cr} = 1.33\sigma_e = \frac{1.33\pi^2}{12} \frac{h^2}{b^2} \frac{E}{1 - \mu^2} \quad (d)$$

Again the stability of the plate depends on the magnitude of the ratio b/h . Assuming that the yield point of structural steel is 30,000 lbs. per sq. in., the value of b/h which makes σ_{cr} equal to this stress is, from (d),

$$\frac{b}{h} = \sqrt{\frac{1.33\pi^2}{12 \times 30,000} \times \frac{30 \times 10^6}{0.91}} \approx 35.$$

Consequently, if $b/h > 35$, the critical stress becomes less than yield point of the material. This fact must be considered in choosing the magnitude of working stress. The stability of the plate can be increased by reinforcing the free edge of the plate.

In all the above cases it was assumed that the critical stress is below the proportional limit. For stresses beyond the proportional limit our equations give exaggerated values of the critical stresses.³⁸

43. Buckling of Beams without Lateral Supports.—It is well known that, in the absence of lateral supports, I beams loaded in the plane of the web may prove to be insufficiently stable in a lateral direction. If the load is increased beyond a certain *critical limit*, such beams buckle sidewise, and further loading causes them

³⁷ This assumption gives an upper limit for the critical stress. The true critical stress will be somewhat lower, due to the fact that the fastening of the upper edge is not absolutely rigid.

³⁸ This question is discussed in "Theory of Elastic Stability," p. 384, 1936.

to collapse.³⁹ The energy method may be used to determine this limit.

As an illustration consider a beam AB (Fig. 141) of narrow rectangular cross section with a central concentrated load P acting in the longitudinal vertical plane of symmetry. If this force is

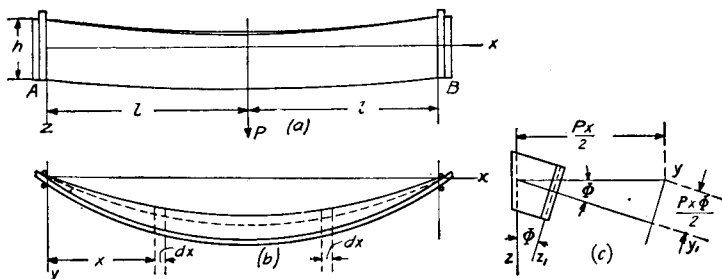


FIG. 141.

small, the deflection of the beam is in the vertical plane only and this plane form of bending is a stable one. If the beam is deflected sidewise by a lateral force, this deflection disappears with the removal of the force and the beam returns to its initial form. If P is increased, a limiting value is reached at which the plane form of bending becomes unstable. The beam then buckles sidewise and large lateral deflections may occur with a very small increase of the load. This limiting value of P is called the *critical load*. It is determined by considering the potential energy of the system. Any lateral deflection of the beam is accompanied by an increase of the strain energy. Since after a small lateral buckling we have not only the strain energy of bending in the vertical plane, which may be considered unchanged, but also strain energy of bending in the lateral direction and strain energy of twist. At the same time, the potential energy of the load diminishes, because sidewise buckling

³⁹ The collapse of girders as a consequence of sidewise buckling is illustrated by the bridge disaster near Tarbes, France. See *La Revue Technique*, November 15, 1897. The lateral buckling of beams of a narrow rectangular cross section was discussed by L. Prandtl, *Dissertation*, Nürnberg, 1899, and A. G. M. Michell, *Phil. Mag.*, Vol. 48, 1899. Buckling of I beams was discussed by the writer; see *Bulletin of the Polytechnical Institute*, St. Petersburg, Vols. 4 and 5, 1905, 1906. See also *Annales des Ponts et Chaussées*, 1913, and *Transactions Amer. Soc. C. E.*, Vol. 87 (1924), p. 1247. The practical application of the theory is discussed by E. Chwalla, "Die Kipp-Stabilität gerader Träger mit doppelt-symmetrischem I-Querschnitt," Berlin, 1939.

is accompanied by a lowering of its point of application. Let U_1 denote this decrease in the potential energy of the load, U the strain energy due to bending in the lateral direction, and U_2 that due to twist. Then the critical load is determined by eq. (175) (p. 200), which becomes

$$U + U_2 = U_1. \quad (a)$$

We must now calculate the quantities entering into this equation. The bending moment in the vertical plane at any cross section a distance x from the left support (see Fig. 141) is $Px/2$. In calculating sidewise buckling, the bending moment with respect to the z_1 axis (Fig. 141, c) must be considered. This moment is equal to $(Px/2)\varphi$, in which φ denotes the small angle of twist, variable along the length of the beam. Then for small lateral deflection⁴⁰ we have the following differential equation:

$$EI_z \frac{d^2 y}{dx^2} = -\frac{Px}{2} \varphi. \quad (b)$$

The corresponding strain energy of bending is

$$U = EI_z \int_0^l \left(\frac{d^2 y}{dx^2} \right)^2 dx = \frac{P^2}{4EI_z} \int_0^l x^2 \varphi^2 dx. \quad (c)$$

The strain energy of twist is (see eq. 210, Part I)

$$U_2 = C \int_0^l \left(\frac{d\varphi}{dx} \right)^2 dx, \quad (d)$$

in which the torsional rigidity C for a rectangular cross section is obtained from eq. (156), Part I.

Let us consider now the lowering of the point of application of the load P due to the lateral deflection. Take two symmetrically situated elements dx of the beam (Fig. 141, b and c) and consider the effect of the bending in the plane xy_1 of these two elements only. The angular deflection due to this bending is equal to $-(d^2 y/dx^2)dx$. As this bending occurs in the plane xy_1 inclined at an angle φ to the horizontal (Fig. 141, c), it causes a lowering of the load P equal to $-x\varphi(d^2 y/dx^2)dx$. The total lowering of P due to such bending of all the elements of the beam in buckling is therefore

$$\delta = - \int_0^l x \varphi \frac{d^2 y}{dx^2} dx,$$

⁴⁰ In this case it is legitimate to take $d^2 y/dx^2$ for the curvature instead of $d^2 y_1/dx^2$.

or, using eq. (b),

$$\delta = \frac{P}{2EI_z} \int_0^l x^2 \varphi^2 dx.$$

Hence

$$U_1 = P\delta = \frac{P^2}{2EI_z} \int_0^l x^2 \varphi^2 dx. \quad (e)$$

Substituting (c), (d) and (e) in eq. (a), we find

$$P_{cr}^2 = \frac{4EI_z C \int_0^l \left(\frac{d\varphi}{dx}\right)^2 dx}{\int_0^l x^2 \varphi^2 dx}. \quad (f)$$

By taking for the angle of twist φ a suitably chosen function of x to satisfy the end conditions we obtain an approximate value of the critical load from eq. (f). Assume, for instance, that

$$\varphi = a \sin \frac{\pi x}{2l}. \quad (g)$$

This function is zero at the ends of the beam, where the angle of twist is zero, and is a maximum at the middle ($x = l$). Substituting (g) in eq. (f), we find ⁴¹

$$P_{cr} = \frac{17.2\sqrt{CEI_z}}{(2l)^2}. \quad (195)$$

The critical value of the load thus depends upon the product of the torsional and lateral flexural rigidities of the beam.

It was assumed that the load P is applied at the centroid of the middle cross section of the beam. If the point of application is at a distance a above the centroid, the right side of eq. (195) must be multiplied by $[1 - 1.74(a/2l)\sqrt{EI_z/C}]$.⁴²

If the load is uniformly distributed along the central axis of the beam (Fig. 141), its critical value is

$$(2ql)_{cr} = \frac{28.3\sqrt{CEI_z}}{(2l)^2}. \quad (196)$$

For a cantilever of length l loaded at the center of the free end, the

⁴¹ A more detailed investigation shows that the error of this approximate solution is about $1\frac{1}{2}$ per cent. Hence eq. (195) is accurate enough for applications.

⁴² See writer's paper in *Annales des Ponts et Chaussées*, 1913. See also "Theory of Elastic Stability," p. 254, 1936.

critical load is

$$P_{cr} = \frac{4.01\sqrt{CEI_z}}{l^2}. \quad (197)$$

In the case of an I beam, the equations for the critical loads have the form obtained above for a beam of narrow rectangular cross section except that the numerical factor in the numerator on the right side is not a constant but depends upon the magnitude of the expression:⁴³

$$\alpha = \frac{C}{EI_z} \left(\frac{2l}{h}\right)^2. \quad (h)$$

For instance, if an I beam is supported as shown in Fig. 141 and uniformly loaded along the central axis of the beam, the critical value of the total distributed load is

$$(2ql)_{cr} = \frac{\beta\sqrt{CEI_z}}{(2l)^2}. \quad (198)$$

The magnitudes of the coefficient β for various values of the ratio α are given in the table.

TABLE 20.—CRITICAL STRESSES, IN TERMS OF THE CONSTANT α , FOR $\gamma = 0.0001$ AND $E = 30,000,000$ LBS. PER SQ. IN., UNIFORM LOAD
(STRESSES IN POUNDS PER SQUARE INCH)

$\alpha =$	0.1	1	2	4	6	8	12
$\beta =$	143.0	53.0	42.6	36.3	33.8	32.6	31.5
$\sigma_{cr} =$	8,520	9,950	11,300	13,600	15,600	17,300	20,300
$\sigma_{cr}' =$	5,510	6,810	8,070	10,300	12,200	13,800	16,800
$\sigma_{cr}'' =$	13,200	14,500	15,800	18,000	20,000	21,500	24,500
$\alpha =$	16	20	32	50	70	90	100
$\beta =$	30.5	30.1	29.4	29.0	28.8	28.6	28.6
$\sigma_{cr} =$	23,000	25,200	31,200	38,600	45,300	51,000	53,700
$\sigma_{cr}' =$	19,400	21,600	27,600	35,000	41,600	47,400	50,000
$\sigma_{cr}'' =$	27,200	29,400	35,300	42,600	49,200	55,100	57,600

It will be seen that as α increases the constant β approaches the magnitude given before for a beam of rectangular cross section. In the third line of the table the magnitudes of the corresponding

⁴³ Torsional rigidity C of I-beams is discussed in art. 51, p. 275.

values of the critical bending stresses are given, calculated on the assumption that the quantity

$$\gamma = \frac{I_z}{I_y} \left(\frac{h}{2l} \right)^2 = 0.0001. \quad (k)$$

Here I_z/I_y is the ratio of lateral and vertical flexural rigidities, and $h/2l$ is the ratio of the depth of the beam to its span. For any other proportions of the beam the critical stresses are obtained by multiplying the figures of the third line by the number $10^4\gamma$.

The fourth and the fifth lines of this table give the critical stress when the load is applied to the upper or to the lower flange of the beam respectively. All calculations are made assuming perfect elasticity of the material.⁴⁴ Consider as an example a structural beam of the following dimensions:

Length $2l = 20$ ft.

Depth $h = 24$ in.

Flange width $b = 7$ in.

Thickness of web $\delta_1 = 0.5$ in.

Mean thickness of flanges $\delta = \frac{1}{2}(0.60 + 1.14) = 0.87$ in.

Area of section $A = 23.3$ sq. in.

Principal rigidity $EI_y = 2,087E$ lb. \times sq. in.

Principal rigidity $EI_z = 42.7E$ lb. \times sq. in.

Using eq. (256), p. 275,

$$C = G\left(\frac{2}{3}b\delta^3 + \frac{1}{3}h\delta_1^3\right) = 4.07G.$$

Then, from eq. (h), assuming $E = 2.6G$,

$$\alpha = 3.67,$$

and from eq. (k),

$$\gamma = \frac{42.7}{2,087 \times 100} = 205 \times 10^{-6}.$$

Table 20 gives, by interpolation, for $\alpha = 3.67$,

$$\sigma_{cr} = 11,300 + \frac{1}{2}(13,600 - 11,300)1.67 = 13,200 \text{ lbs. per sq. in.}$$

This is the critical stress for $\gamma = 0.0001$. The critical stress in the example considered will be $13,200 \times \gamma \times 10^4 = 26,900$ lbs. per

⁴⁴ For more detailed investigation of this subject, see the writer's paper, Trans. Amer. Soc. C. E., Vol. 87, 1924, p. 1247, and "Theory of Elastic Stability," Chapter 5. See also E. Chwalla, "Die Kipp-Stabilität gerader Träger," Berlin, 1939.

sq. in. The load corresponding to this stress must be considered as the ultimate for the beam. This numerical result shows that side-wise buckling may occur at stresses far less than the ultimate stress of the material under direct compression and even less than the elastic limit. This fact must be considered and the critical stress instead of yield point must be taken as the basis for determination of working stresses. For instance, with a factor of safety of 3, the working stress will be equal to $26,900/3 = 8,970$ lbs. per sq. in.

CHAPTER V

DEFORMATIONS SYMMETRICAL ABOUT AXIS

44. Thick Walled Cylinder.—If a circular cylinder of constant wall thickness is submitted to the action of uniformly distributed internal and external pressures, the deformation produced is symmetrical about the axis of the cylinder and does not change along its length. In the following we consider a ring cut from the cylinder by two planes perpendicular to its axis a unit distance apart (Fig. 142). From the condition of symmetry, there are no shearing stresses on the sides of an element of this ring, such as $mnmm_1n_1$ (Fig. 142) which is bounded by two axial planes and two concentric cylindrical surfaces. Let σ_t denote the normal hoop stress acting on the sides mm_1 and nn_1 of the element, and σ_r the normal radial stress on the side mn . This stress varies with the radius r and changes by an amount $(d\sigma_r/dr)dr$ in the distance dr . The normal radial stress on the side m_1n_1 is consequently

$$\sigma_r + \frac{d\sigma_r}{dr} dr.$$

Summing up the forces on the element in the direction of the bisector of the angle $d\varphi$ gives us the following equation of equilibrium:¹

$$\sigma_r r d\varphi + \sigma_t dr d\varphi - \left(\sigma_r + \frac{d\sigma_r}{dr} dr \right) (r + dr) d\varphi = 0, \quad (a)$$

or, neglecting small quantities of higher order,

$$\sigma_t - \sigma_r - r \frac{d\sigma_r}{dr} = 0. \quad (b)$$

This equation contains two unknowns, the stresses σ_t and σ_r . The second equation necessary for the determination of these quantities is obtained from a consideration of the deformation

of the cylinder. The deformation is symmetrical with respect to the axis and consists of a radial displacement of all points in the wall of the cylinder. This displacement is constant in the circumferential direction but varies along the radius, i.e., it is a function of the radius. If u denotes the displacement of a cylindrical surface of radius r , then the displacement for a surface of radius $r + dr$ is

$$u + \frac{du}{dr} dr.$$

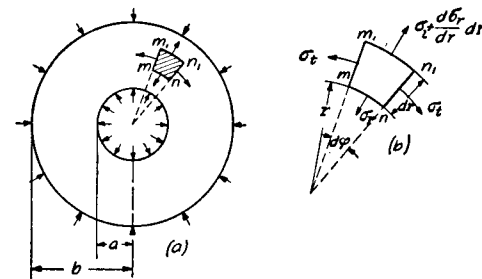


FIG. 142.

Hence an element such as $mnmm_1n_1$ undergoes a total elongation in the radial direction of $(du/dr)dr$, and the unit elongation in the radial direction is therefore

$$\epsilon_r = \frac{du}{dr}. \quad (c)$$

The unit elongation of the same element in the tangential direction is equal to the unit elongation of the corresponding radius, i.e.,

$$\epsilon_t = \frac{u}{r}. \quad (d)$$

From eqs. (38), p. 52, Part I, the expressions for the stresses in terms of the strains are

$$\begin{aligned} \sigma_r &= \frac{E}{1 - \mu^2} \left(\frac{du}{dr} + \mu \frac{u}{r} \right), \\ \sigma_t &= \frac{E}{1 - \mu^2} \left(\frac{u}{r} + \mu \frac{du}{dr} \right). \end{aligned} \quad (199)$$

The normal stresses σ_r and σ_t are evidently not independent, as they can be expressed in terms of one function u . By

¹ The weight of the element is neglected here.

substituting expressions (199) into eq. (b), we obtain the following equation for determining u :

$$\frac{d^2u}{dr^2} + \frac{1}{r} \frac{du}{dr} - \frac{u}{r^2} = 0. \quad (e)$$

The general solution of this equation is

$$u = C_1 r + \frac{C_2}{r}, \quad (f)$$

which can be verified by substitution. The constants C_1 and C_2 are determined from the conditions at the inner and outer surfaces of the cylinder where the pressures, i.e., the normal stresses σ_r , are known. Substituting (f) into eqs. (199), we obtain

$$\sigma_r = \frac{E}{1 - \mu^2} \left[C_1(1 + \mu) - C_2 \frac{1 - \mu}{r^2} \right], \quad (h)$$

$$\sigma_t = \frac{E}{1 - \mu^2} \left[C_1(1 + \mu) + C_2 \frac{1 - \mu}{r^2} \right]. \quad (k)$$

If p_i and p_0 denote the internal and external pressures respectively, the conditions at the outer and inner surfaces of the cylinder are

$$(\sigma_r)_{r=b} = -p_0 \quad \text{and} \quad (\sigma_r)_{r=a} = -p_i. \quad (l)$$

The sign on the right side of each equation is negative because normal stress is taken as positive for tension. Substitution of expression (h) for σ_r in eqs. (l) gives two equations for determining the constants C_1 and C_2 , from which

$$C_1 = \frac{1 - \mu}{E} \frac{a^2 p_i - b^2 p_0}{b^2 - a^2}; \quad C_2 = \frac{1 + \mu}{E} \frac{a^2 b^2 (p_i - p_0)}{b^2 - a^2}. \quad (m)$$

With these values for the constants in eqs. (h) and (k) the general expressions for the normal stresses σ_r and σ_t become ²

² This solution appeared first in the paper by Lamé and Clapeyron, "Mémoire sur l'équilibre intérieur des corps solides homogènes," Mémoires présentés par divers savans, Vol. 4, 1833.

$$\begin{aligned} \sigma_r &= \frac{a^2 p_i - b^2 p_0}{b^2 - a^2} - \frac{(p_i - p_0) a^2 b^2}{r^2 (b^2 - a^2)}, \\ \sigma_t &= \frac{a^2 p_i - b^2 p_0}{b^2 - a^2} + \frac{(p_i - p_0) a^2 b^2}{r^2 (b^2 - a^2)}. \end{aligned} \quad (200)$$

It is interesting to note that the sum of these two stresses remains constant, so that the deformation of all elements in the direction of the axis of the cylinder is the same, and cross sections of the cylinder remain plane after deformation.

Let us consider the particular case $p_0 = 0$, i.e., the cylinder is submitted to *internal pressure only*. Then eqs. (200) become

$$\sigma_r = \frac{a^2 p_i}{b^2 - a^2} \left(1 - \frac{b^2}{r^2} \right), \quad (201)$$

$$\sigma_t = \frac{a^2 p_i}{b^2 - a^2} \left(1 + \frac{b^2}{r^2} \right). \quad (202)$$

These equations show that σ_r is always a compressive stress and σ_t a tensile stress. The latter is maximum at the inner surface of the cylinder, where

$$(\sigma_t)_{\max} = \frac{p_i (a^2 + b^2)}{b^2 - a^2}. \quad (203)$$

$(\sigma_t)_{\max}$ is always numerically greater than the internal pressure and approaches this quantity as b increases. The minimum value of σ_t is at the outer surface of the cylinder. The ratio

$$\frac{(\sigma_t)_{\max}}{(\sigma_t)_{\min}} = \frac{a^2 + b^2}{2a^2}$$

increases with increase in the thickness of the wall of the cylinder. For a comparatively small thickness there is not a great difference between the maximum and minimum values of σ_t . Taking, for instance, $b = 1.1a$, $(\sigma_t)_{\max}$ exceeds $(\sigma_t)_{\min}$ by only $10\frac{1}{2}$ per cent. We should then make no very great error if we assume the tensile stresses σ_t uniformly distributed

over the thickness of the wall and use the equation:

$$\sigma_t = \frac{p_i a}{b - a},$$

which coincides with equation on page 162 given for thin cylinders. The shearing stress is maximum at the inner surface of the cylinder where

$$\tau_{\max} = \frac{\sigma_t - \sigma_r}{2} = \frac{1}{2} \left[\frac{p_i(a^2 + b^2)}{b^2 - a^2} + \frac{p_i(b^2 - a^2)}{b^2 - a^2} \right] = \frac{p_i b^2}{b^2 - a^2}. \quad (n)$$

When only an *external pressure* acts on the cylinder, $p_i = 0$, and eqs. (200) give

$$\sigma_r = -\frac{p_0 b^2}{b^2 - a^2} \left(1 - \frac{a^2}{r^2} \right), \quad (204)$$

$$\sigma_t = -\frac{p_0 b^2}{b^2 - a^2} \left(1 + \frac{a^2}{r^2} \right). \quad (205)$$

In this case σ_r and σ_t are both compressive stresses and σ_t is always numerically greater than σ_r . The maximum compressive stress is at the inner surface of the cylinder, where

$$(\sigma_t)_{r=a} = -\frac{2p_0 b^2}{b^2 - a^2}. \quad (206)$$

It is interesting to note that as the ratio b/a of the radii of the cylinder is increased, this maximum compressive stress approaches twice the value of the external pressure acting on the cylinder, namely, $-2p_0$.

Let us consider now the *deformation of the cylinder*. Substituting expressions (m) for the arbitrary constants in eq. (f), we find

$$u = \frac{1 - \mu}{E} \frac{a^2 p_i - b^2 p_0}{b^2 - a^2} r + \frac{1 + \mu}{E} \frac{a^2 b^2 (p_i - p_0)}{(b^2 - a^2) r}. \quad (207)$$

This gives the radial displacement of any point in the wall of the cylinder. In the particular case of a cylinder submitted to internal pressure only, $p_0 = 0$, and the radial displacement

at the inner surface, from eq. (207), is

$$(u)_{r=a} = \frac{a p_i}{E} \left(\frac{a^2 + b^2}{b^2 - a^2} + \mu \right). \quad (208)$$

When the cylinder is submitted to external pressure only, $p_i = 0$, and the radial displacement at the outer surface is

$$(u)_{r=b} = -\frac{b p_0}{E} \left(\frac{a^2 + b^2}{b^2 - a^2} - \mu \right). \quad (209)$$

The minus sign indicates that the displacement is towards the axis of the cylinder.

45. Stresses Produced by Shrink Fits.—If it is necessary to produce contact pressure between a hub and a shaft or between two rings mounted one inside the other, it is usual practice to make the inner radius of the outer part smaller than the outer radius of the inner part and to assemble the structure after a preliminary heating of the outer part. After cooling, a contact pressure between the two parts is produced, which is called the *shrink-fit pressure*. The magnitude of this pressure and the stresses produced by it can easily be calculated with the equations of the previous article. Assume, for instance, that the external radius of the inner cylinder in an unstressed condition is larger than the internal radius of the outer cylinder (Fig. 143) by the amount δ . Then, after assembly, a pressure p is produced between the cylinders; its

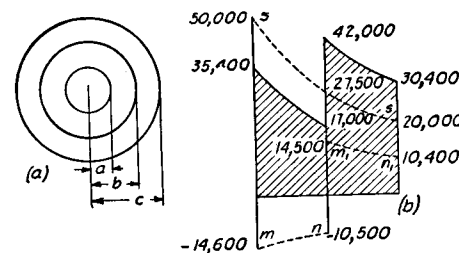


FIG. 143.

magnitude is found from the condition that the increase in the inner radius of the outer cylinder plus the decrease in

the outer radius of the inner cylinder, produced by p , must be equal to δ . Hence, from eqs. (208) and (209),

$$\frac{bp}{E} \left(\frac{b^2 + c^2}{c^2 - b^2} + \mu \right) + \frac{bp}{E} \left(\frac{a^2 + b^2}{b^2 - a^2} - \mu \right) = \delta,$$

from which

$$p = \frac{E\delta}{b} \frac{(b^2 - a^2)(c^2 - b^2)}{2b^2(c^2 - a^2)}. \quad (210)$$

Equations (201) and (202) then give the stresses in the outer cylinder and eqs. (204) and (205) the stresses in the inner cylinder. Usually the stresses to be considered in design are those at the inner surface of the outer cylinder. These stresses are

$$\sigma_t = \frac{p(b^2 + c^2)}{c^2 - b^2}, \quad \sigma_r = -p.$$

The maximum shearing stress at this surface is (see eq. n , p. 240)

$$\tau_{\max} = \frac{pc^2}{c^2 - b^2}$$

or, substituting expression (210) for p ,

$$\tau_{\max} = \frac{E\delta c^2(b^2 - a^2)}{2b^3(c^2 - a^2)}. \quad (211)$$

In the particular case of a solid shaft and a hub we have $a = 0$, from which

$$p = \frac{E\delta}{2bc^2} (c^2 - b^2), \quad (212)$$

$$\tau_{\max} = \frac{E\delta}{2b}, \quad (213)$$

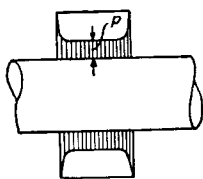


FIG. 144.

i.e., the maximum shearing stress is the same as in a simple tie rod which undergoes a unit elongation equal to δ/b .

The above discussion assumed that both cylinders have the same length. In dealing with a hub and a shaft (Fig. 144) the projecting portions of the shaft resist com-

pression which results in an increased pressure near the faces of the hub as indicated by the shaded areas.³

If a built-up cylinder, such as represented in Fig. 143, is subjected to internal pressure, the stresses produced by this pressure are the same as in a cylinder with a solid wall of the thickness $c - a$. These stresses are superposed on the shrink fit stresses. The shrink fit produces a tangential compressive stress at the inner surface of the cylinder which reduces the maximum tangential tensile stress at this point produced by the internal pressure so that a more favorable stress distribution may be obtained than in the case of a solid tube (see problem 2, p. 244). This is one reason why cylinders built up of several tubes are used in cases of very high internal pressures, such as are found in guns.

A distribution of initial stresses analogous to those described above in the case of built-up cylinders can also be obtained in a solid tube by applying a high internal pressure sufficient to produce permanent set in the inner part of the tube. After removing this internal pressure some stresses remain in the tube due to the permanent set, so that the inner part is then in a state of compression, and the outer in a state of tension.⁴

Problems

1. Determine the tangential stresses at the inner and outer surfaces and at the middle thickness of the wall of a cylinder with inner radius 4 in. and outer radius 8 in. submitted to an internal pressure $p_i = 30,000$ lbs. per sq. in.

Answer. From eq. (202): $(\sigma_t)_{r=4''} = 50,000$ lbs. per sq. in.; $(\sigma_t)_{r=6''} = 27,500$ lbs. per sq. in.; $(\sigma_t)_{r=8''} = 20,000$ lbs. per sq. in.

³ An experimental investigation of shrink fit stresses is given in a paper by A. Huggenberger, Technische Blätter, Schweiz. Lokomotiv. und Maschinenfabrik, Winterthur, 1926. A further discussion of shrink fit stresses see in the paper by W. Janicki, "Schweiz. Bauz.," Vol. 88, p. 93, 1926 and Vol. 90, p. 127, 1927. See also papers by J. W. Baugher, Trans. A. S. M. E., Vol. 52, 1930, and O. J. Horger and C. W. Nelson, "Journal of Appl. Mech.," Vol. 4, p. 183, 1937 and Vol. 5, p. 32, 1938.

⁴ A further discussion of this question see in art. 71.

2. Determine the stresses in a built-up steel cylinder (Fig. 143) submitted to an internal pressure $p_i = 30,000$ lbs. per sq. in. if $a = 4$ in.; $b = 6$ in.; $c = 8$ in.; and the shrinkage $\delta = 0.005$ in.

Solution. Determine first the initial stresses in the cylinder due to shrinkage. From eq. (210)

$$p = \frac{30 \times 10^6 \times 0.005(6^2 - 4^2)(8^2 - 6^2)}{6 \times 2 \times 6^2(8^2 - 4^2)} = 4,050 \text{ lbs. per sq. in.}$$

The tangential stresses produced by this pressure in the inner cylinder, from eq. (205), are

$$(\sigma_t)_{r=4''} = -\frac{2pb^2}{b^2 - a^2} = -\frac{2 \times 4,050 \times 6^2}{6^2 - 4^2} = -14,600 \text{ lbs. per sq. in.,}$$

$$(\sigma_t)_{r=6''} = -\frac{p(b^2 + a^2)}{b^2 - a^2} = -10,500 \text{ lbs. per sq. in.}$$

The stresses for the outer cylinder, from eq. (202), are

$$(\sigma_t)_{r=6''} = \frac{p(b^2 + c^2)}{c^2 - b^2} = \frac{4,050(6^2 + 8^2)}{8^2 - 6^2} = 14,500 \text{ lbs. per sq. in.,}$$

$$(\sigma_t)_{r=8''} = \frac{2pb^2}{c^2 - b^2} = \frac{4,050 \times 2 \times 6^2}{8^2 - 6^2} = 10,400 \text{ lbs. per sq. in.;}$$

the distribution of initial stresses σ_t over the thickness of the wall is shown in Fig. 143 (b) by the dotted lines mn and m_1n_1 . The stresses produced by the internal pressure are the same as in the previous problem and are represented in the figure by the dotted line ss . Superposition of the two stress distributions gives the distribution represented by the shaded area. It may be seen that, due to assembly stresses, the maximum stress when the cylinder is submitted to internal pressure is reduced from 50,000 to 42,000 lbs. per sq. in.

3. Referring to Fig. 143 find the shrink fit stresses σ_t at $r = 6$ in. and $r = 10$ in. if $a = 4$ in., $b = 8$ in., $c = 12$ in. Use a shrinkage factor $\delta/b = 0.001$, and take $E = 30.10^6$ lbs. per sq. in.

Answer.

$$(\sigma_t)_{r=6''} = -13,500 \text{ lbs. per sq. in.}$$

$$(\sigma_t)_{r=10''} = 13,750 \text{ lbs. per sq. in.}$$

4. For the hub and shaft in Fig. 144 find the uniform pressure p if the radius of the shaft is 6 in., and the outer radius of the hub is 12 in. The initial difference in diameters between hub and shaft is 0.012 in. Take $E = 30.10^6$ lbs. per sq. in.

46. Rotating Disc of Uniform Thickness.—When a circular disc rotates about the axis of symmetry perpendicular to the disc the inertia forces set up stresses which become considerable at high speeds. These stresses are distributed symmetrically with respect to the axis of rotation and may be calculated by the method indicated in article 44. It is assumed that the stresses do not vary over the thickness of the disc and this thickness is taken equal to unity. The equation of equilibrium of an element such as $mnmm_1n_1$ in Fig. 142 is derived by adding to the forces which were considered in article 44 the inertia force acting on the element

$$\frac{\gamma\omega^2 r^2}{g} drd\theta. \quad (a)$$

Here γ is the weight per unit volume and ω the angular velocity of the disc. The remaining notation is the same as in article 44. The equation of equilibrium is now

$$\sigma_t - \sigma_r - r \frac{d\sigma_r}{dr} - \frac{\gamma\omega^2 r^2}{g} = 0. \quad (b)$$

By substituting for the stresses their expressions as functions of the displacement u (eqs. 199, p. 238), we obtain the following equation:

$$\frac{d^2u}{dr^2} + \frac{1}{r} \frac{du}{dr} - \frac{u}{r^2} + (1 - \mu^2) \frac{\gamma\omega^2 r}{gE} = 0. \quad (214)$$

The general solution of this equation is obtained by adding any particular solution of it to the solution of the corresponding homogeneous equation (see eq. f , p. 238). Such a particular solution is

$$u = - (1 - \mu^2) \frac{\gamma\omega^2 r^3}{gE \cdot 8}.$$

Then, using the notation

$$N = (1 - \mu^2) \frac{\gamma\omega^2}{gE}, \quad (c)$$

the general solution of eq. (214) is

$$u = -N \frac{r^3}{8} + C_1 r + \frac{C_2}{r}, \quad (d)$$

in which, as before, C_1 and C_2 are constants which must be determined in such a way as to satisfy the conditions at the edges of the disc. For a *disc with a hole at the center* (Fig. 142) and with no forces acting on its edges, these conditions are

$$(\sigma_r)_{r=a} = 0; \quad (\sigma_r)_{r=b} = 0. \quad (e)$$

The general expression for σ_r is obtained by substituting expression (d) into the first of eqs. (199) (p. 238) which gives

$$\sigma_r = \frac{E}{1-\mu^2} \left[-\frac{3+\mu}{8} N r^2 + (1+\mu) C_1 - (1-\mu) C_2 \frac{1}{r^2} \right]. \quad (f)$$

When $r = a$, $r = b$, this must be zero, as stated in eqs. (e). Making this substitution, we obtain the following equations for calculating C_1 and C_2 :

$$\begin{aligned} -\frac{3+\mu}{8} N a^2 + (1+\mu) C_1 - (1-\mu) C_2 \frac{1}{a^2} &= 0, \\ -\frac{3+\mu}{8} N b^2 + (1+\mu) C_1 - (1-\mu) C_2 \frac{1}{b^2} &= 0, \end{aligned} \quad (g)$$

from which

$$C_1 = \frac{3+\mu}{8(1+\mu)} (a^2 + b^2) N; \quad C_2 = \frac{3+\mu}{8(1-\mu)} a^2 b^2 N. \quad (h)$$

The general expression for u is obtained when these values are put into eq. (d). Substituting this expression for u into eqs. (199) (p. 238), we find:

$$\sigma_r = \frac{3+\mu}{8(1-\mu^2)} E N \left(a^2 + b^2 - r^2 - \frac{a^2 b^2}{r^2} \right), \quad (215)$$

$$\sigma_t = \frac{3+\mu}{8(1-\mu^2)} E N \left(a^2 + b^2 - \frac{1+3\mu}{3+\mu} r^2 + \frac{a^2 b^2}{r^2} \right). \quad (216)$$

Replace N by its value (eq. c) and let

$$\frac{a}{b} = \alpha; \quad \frac{r}{b} = x; \quad b\omega = v. \quad (k)$$

Equations (215) and (216) then become

$$\sigma_r = \frac{\gamma v^2}{g} \frac{3+\mu}{8} \left(1 + \alpha^2 - x^2 - \frac{\alpha^2}{x^2} \right), \quad (217)$$

$$\sigma_t = \frac{\gamma v^2}{g} \frac{3+\mu}{8} \left(1 + \alpha^2 - \frac{1+3\mu}{3+\mu} x^2 + \frac{\alpha^2}{x^2} \right). \quad (218)$$

It will be seen that the radial stress σ_r becomes zero at the edges, where $x = 1$ or $x = \alpha$, and that it is positive for other values of x and becomes maximum at the points

$$x = \sqrt{\alpha} = \sqrt{\frac{a}{b}},$$

i.e., where

$$r = \sqrt{ab}, \quad (l)$$

with this value for r , eq. (217) gives

$$(\sigma_r)_{\max} = \frac{\gamma v^2}{g} \frac{3+\mu}{8} (1 - \alpha)^2. \quad (219)$$

The tangential stress σ_t is maximum at the inner edge of the disc, where $x = \alpha$. From eq. (218) we then obtain

$$(\sigma_t)_{\max} = \frac{\gamma v^2}{g} \frac{3+\mu}{4} \left(1 + \frac{1-\mu}{3+\mu} \alpha^2 \right). \quad (220)$$

It can be seen that $(\sigma_t)_{\max}$ is always larger than $(\sigma_r)_{\max}$. In Fig. 145 the values of the parentheses of eqs. (217) and (218) are plotted as ordinates for values of x as abscissas; the full lines represent the case $\alpha = \frac{1}{4}$, i.e., the inner radius is one fourth the outer radius. The dotted lines represent the values of the parenthesis of eq. (218) for other values of α . Equation (220) shows that the stress $(\sigma_t)_{\max}$ at the inner edge varies with α according to a parabolic law. This is shown by the curve *mn* in Fig. 145.

It is interesting to note that when the inner radius is very small, i.e., α approaches zero, there is a very sharp change in the stress σ_t near the hole. This is shown by the curve mpq , for which

$$(\sigma_t)_{\max} = \frac{\gamma v^2}{g} \frac{3 + \mu}{4}. \quad (221)$$

For the other extreme case, when the inner radius approaches the outer radius of the disc, α approaches unity, and eq. (220) becomes

$$(\sigma_t)_{\max} = \frac{\gamma v^2}{g}.$$

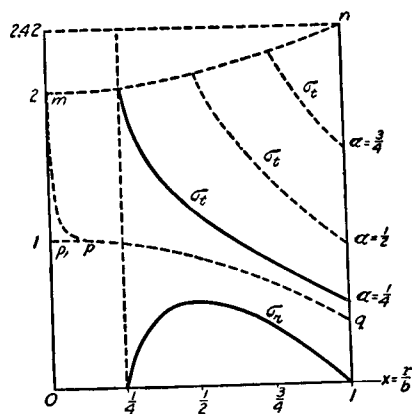


FIG. 145.

This coincides with eq. (15), Part I, which was obtained for a thin rotating ring. It will be seen that, in the case of the disc with a hole at the center, the maximum stress does not change very much with the radius of the hole; the value for a very thin ring is only about 20 per cent higher than that for a very small hole.

In the case of a *solid disc* $u = 0$ for $r = 0$; hence the constant C_2 in the general solution (d) must be taken equal to zero. The constant C_1 is found from the condition that $\sigma_r = 0$ at the outer edge of the disc. Then, from the second of eqs. (g),

$$C_1 = \frac{3 + \mu}{8(1 + \mu)} N b^2. \quad (m)$$

This value of C_1 , and zero for C_2 , are introduced into the general expression for the displacement u (eq. d) which is then substituted into eqs. (199) (p. 238). In this way we obtain

$$\sigma_r = \frac{\gamma v^2}{g} \frac{3 + \mu}{8} (1 - x^2), \quad (222)$$

$$\sigma_t = \frac{\gamma v^2}{g} \frac{3 + \mu}{8} \left(1 - \frac{1 + 3\mu}{3 + \mu} x^2 \right), \quad (223)$$

where, as before, $x = r/b$. Both stresses are always positive and increase with decrease of x , i.e., as we approach the center. At the center $x = 0$ and

$$(\sigma_t)_{\max} = (\sigma_r)_{\max} = \frac{\gamma v^2}{g} \frac{3 + \mu}{8}. \quad (224)$$

Comparing this with eq. (221), we see that, due to stress concentration, the stress at the edge of a small central hole is twice as great as that at the center of a solid disc. The variation of the stress σ_t along the radius of a solid disc is represented in Fig. 145 by the dotted line p_1pq .

The equations derived above for rotating discs are sometimes used also for comparatively long cylinders,⁵ for instance for rotors of electric machines. In large machines the peripheral velocities are very large. The above discussion shows that the stresses produced by inertia forces are proportional to the square of the peripheral velocity and are therefore of primary importance in such cases. Hence, for a material of a given strength and for a given angular velocity of the rotor, there is a definite limit to the diameter of the rotor beyond which it is dangerous to go. In discussing working stresses for such rotors it is important to note that very large forgings are likely to have defects in the material at the center, which is exactly the place of maximum stress produced by inertia forces. To eliminate uncertainties it is a usual practice now to bore a central hole along the axis of the rotor. Although the maximum stress is doubled, due to the presence of the hole, this is compensated for by the possibility of investigating the soundness of the material inside the forging. It is also usual to run the rotor at a certain overspeed⁶ during the preliminary tests, so that the stresses around the hole may exceed the yield point. After stopping the rotor, the stresses will not disappear completely, due to a permanent set of the material at the hole. The inner portion of metal, which has

⁵ Stress distribution in thick discs is discussed in "Theory of Elasticity," p. 319.

⁶ In electric machines usually 20 per cent above service speed.

yielded, is compressed by the outer, and the outer is kept in tension by the inner.⁷ The conditions are similar to those in a thick cylinder, overstressed by internal pressure (p. 243). The residual stress, produced at the hole by overstressing, is opposite in sign to that produced by inertia forces; hence overstressing produces a favorable effect on the final distribution of stresses in the rotor.⁸

It is important to note also that the equations for stresses obtained above (see eqs. 217, 218) contain besides v only ratios such as α and x ; hence for a given material and peripheral velocity, the stresses are equal in similarly situated points of geometrically similar rotors. This may simplify the calculations of stresses in geometrically similar discs. It is also used in establishing the strength of large discs from tests on models.

In the previous discussion it was assumed that the edges of the discs are free from external forces. If there are tensile or compressive forces uniformly distributed around the edges of the disc, the stresses due to them are found by using the theory of thick cylinders (article 44). These stresses (see eqs. 200) can be represented in the following form:

$$\begin{aligned}\sigma_r &= k - \frac{n}{r^2}, \\ \sigma_t &= k + \frac{n}{r^2},\end{aligned}\quad (n)$$

in which k and n are constants depending upon the dimensions of the disc and the magnitude of the external forces acting at the edges. Stresses (n) are to be superposed upon the stresses (217) and (218) and the total stresses may then be represented in the

⁷ This question is discussed by C. Honegger, Brown Bowery C. Mitteilungen, November, 1919.

⁸ Residual stresses in rotating discs due to yielding of metal were investigated by A. Nadai and L. H. Donnell; see Trans. Amer. Soc. Mech. Engrs., Applied Mechanics Division, 1928. See also H. Hencky, Zeitschr. f. Angew. Math. u. Mech., Vol. 4, 1924, p. 331, and F. Laszlo, Zeitschr. f. Angew. Math. u. Mech., Vol. 5, 1925, p. 281.

following form:

$$\begin{aligned}\sigma_r &= A + \frac{B}{r^2} - \beta_1 \omega^2 r^2, \\ \sigma_t &= A - \frac{B}{r^2} - \beta \omega^2 r^2,\end{aligned}\quad (225)$$

in which

$$\beta_1 = \frac{\gamma}{g} \frac{3 + \mu}{8}; \quad \beta = \frac{\gamma}{g} \frac{1 + 3\mu}{8}, \quad (226)$$

and A and B are constants of integration which may be calculated in each particular case by using eqs. (200), (217), (218). With the notation:

$$\begin{aligned}s &= \sigma_r + \beta_1 \omega^2 r^2, \\ t &= \sigma_t + \beta \omega^2 r^2\end{aligned}\quad (227)$$

and

$$w = \frac{1}{r^2}, \quad (228)$$

eqs. (225) become

$$s = A + Bw; \quad t = A - Bw. \quad (229)$$

If s and t are known for any point of the disc, their magnitudes for any other point can easily be obtained by using the following graphical method.⁹ Let s_1 and t_1 denote the magnitudes of s and t for the point where $w = w_1$ (see Fig. 146). Then the magnitudes s_2 and t_2 of s and t for any other point where $w = w_2$ are obtained from the intersection of the vertical line through w_2 with the straight lines s_1s_2 and t_1t_2 , which have their point of intersection on the vertical axis of the coordinates ($w = 0$) and are equally inclined to this axis. These lines represent equations (229) graphically. They have the common ordinate A on the axis $w = 0$, and have equal and opposite slopes ($\pm B$). This graphical construction is very useful in calculating stresses in rotating discs of variable thickness as we shall see later.

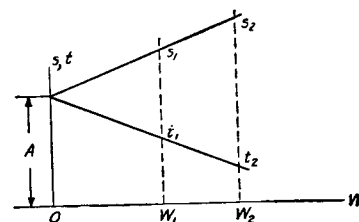



FIG. 146.

⁹ This method was developed by R. Grammel, Dinglers Polytechnical Journal, Vol. 338, 1923, p. 217.

Problems

1. Determine the stresses due to centrifugal forces in a rotor with 26" outer radius and 4" radius of inner hole. The outer portion of the rotor is cut by slots 10" deep, which take the windings (Fig. 147). The rotor is of steel and makes 1,800 revolutions per minute. The weight of the windings in the slots is the same as that of the material removed.

Solution. Because of the radial slots, the part of rotor between the outer and the 16 inch radii can support no tensile hoop stresses. The centrifugal force due to this rotating ring is transmitted as a radial tensile stress across the surface of the cylinder of 16 inch radius. The magnitude of this stress is

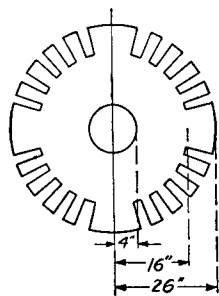

$$p_0 = \frac{1}{2\pi \times 16} \int_{r=16}^{r=26} \frac{\gamma}{g} \omega^2 r dV = \frac{1}{2\pi \times 16} \frac{\gamma \omega^2}{g} 2\pi \int_{16}^{26} r^2 dr = \frac{\gamma \omega^2}{g} \frac{1685}{6},$$

with $\gamma = 0.284$ lb. per cubic inch, $g = 32.2 \times 12$ inch sec.⁻²; this gives

$$p_0 = 7,334 \text{ lbs. per sq. in.}$$

The maximum tangential stress at the inner edge produced by the tensile stress p_0 is, from eq. (206),

$$\sigma'_t = 7,334 \times \frac{2 \times 16^2}{16^2 - 4^2} = 15,700 \text{ lbs. per sq. in.}$$

The maximum tangential stress at the same edge due to the mass between the 16 inch and 4 inch radii, calculated as for a rotating disc (eq. 220), is $\sigma''_t = 5,580$ lbs. per sq. in. The total maximum circumferential stress at the inner edge is then $(\sigma_t)_{\max} = \sigma'_t + \sigma''_t = 15,700 + 5,580 \approx 21,300$ lbs. per sq. in.

2. A steel ring is shrunk on a cast iron disc (Fig. 143). Determine the change in the shrink fit pressure produced by inertia forces at 3,600 r.p.m., if $a = 1''$, $b = 5''$, $c = 10''$, $E_s = 30 \times 10^6$ lbs. per sq. in., $E_{c.i.} = 16 \times 10^6$ lbs. per sq. in., $\gamma_s = 0.284$ lb. per cubic in., $\gamma_{c.i.} = 0.260$ lb. per cubic in.

Solution. Let p_0 be the increase in pressure between the ring and the disc. The arbitrary constants in eq. (f) for the outer ring

are determined by the equations:

$$\begin{aligned} \frac{E}{1-\mu^2} \left[-\frac{3+\mu}{8} N c^2 + (1+\mu) C_1 - (1-\mu) C_2 \frac{1}{c^2} \right] &= 0, \\ \frac{E}{1-\mu^2} \left[-\frac{3+\mu}{8} N b^2 + (1+\mu) C_1 - (1-\mu) C_2 \frac{1}{b^2} \right] &= -p_0. \end{aligned} \quad (p)$$

When we apply eq. (f) to the inner disc, for which the arbitrary constants are denoted by C'_1 and C'_2 and N' is the constant defined by eq. (c), we obtain the equations for determining C'_1 and C'_2 :

$$\begin{aligned} \frac{E}{1-\mu^2} \left[-\frac{3+\mu}{8} N' b^2 + (1+\mu) C'_1 - (1-\mu) C'_2 \frac{1}{b^2} \right] &= -p_0, \\ \frac{E}{1-\mu^2} \left[-\frac{3+\mu}{8} N' a^2 + (1+\mu) C'_1 - (1-\mu) C'_2 \frac{1}{a^2} \right] &= 0. \end{aligned} \quad (r)$$

From equations (p) and (r), the four constants C_1 , C_2 , C'_1 and C'_2 can be found as functions of p_0 . The magnitude of p_0 is now found from the condition that, at the surface of contact, the radial displacements of the disc and of the ring are equal. Using eq. (d), the equation for determining p_0 is therefore

$$-N \frac{b^3}{8} + C_1 b + \frac{C_2}{b} = -N' \frac{b^3}{8} + C'_1 b + \frac{C'_2}{b}. \quad (s)$$

The numerical calculations are left to the reader.

3. Find the change in pressure p calculated for problem 4 of the preceding article if the shaft and the hub rotate at 1,800 r.p.m., $\gamma = 0.284$, $E = 30.10^6$ lbs. per sq. in.

47. Rotating Disc of Variable Thickness.—In the case of a disc of variable thickness the problem of determining stresses becomes more involved.¹⁰ We will now discuss an approximate method of solving this problem, based on the replacement of the actual profile by a system of discs of uniform thickness (Fig. 148).¹¹

¹⁰ The general equation for this case, together with a consideration of the different methods of its solution, can be found in the well-known book by A. Stodola, "Dampf- und Gasturbinen," 6th ed., pp. 312-340, 1924. A rotating disc of conical profile was considered by H. M. Martin, Engineering, Vol. 115, p. 1, 1923; by B. Hodgkinson, Engineering, Vol. 116, p. 274, 1923; and A. Fischer, Zeitschr. d. Oesterr. Ing. u. Arch. Vereines, Vol. 74, 1922, p. 46. See also the book by I. Malkin, "Festigkeitsberechnung rotierender Scheiben," Berlin, 1935.

¹¹ This method was developed by M. Donath, "Die Berechnung rotierender Scheiben und Ringe," 1912, Berlin. It is described in English

The stresses in the separate discs are calculated by the equations given in art. 46. We must then consider conditions at the boundaries between these discs, that is, at sections such as 2, 3, 4 (Fig. 148), where abrupt changes in the thickness occur. If y and $y + \Delta y$ denote the thickness of the discs on opposite sides of the section under consideration, the corresponding change $\Delta\sigma_r$ in the magnitude of the radial stress σ_r is found from the equation:

$$\sigma_r y = (\sigma_r + \Delta\sigma_r)(y + \Delta y),$$

in which it is assumed, as before, that the stresses are uniformly distributed over the thickness of the disc. Then

$$\Delta\sigma_r = -\frac{\Delta y}{y + \Delta y} \sigma_r. \quad (a)$$

The change $\Delta\sigma_t$ in the tangential stress at the same section is found from the condition that the unit circumferential elongation is the same on both sides of the section. Hence

$$\sigma_t - \mu\sigma_r = (\sigma_t + \Delta\sigma_t) - \mu(\sigma_r + \Delta\sigma_r),$$

from which

$$\Delta\sigma_t = \mu\Delta\sigma_r.$$

From eqs. (227),

$$\left. \begin{aligned} \Delta s &= \Delta\sigma_r = -\frac{\Delta y}{y + \Delta y} \sigma_r, \\ \Delta t &= \Delta\sigma_t = \mu\Delta s. \end{aligned} \right\} \quad (230)$$

Equations (226), (227), (228) and (230) together with the graphical solution given in Fig. 146 are sufficient for the calculation of a disc of a variable thickness.

Consider, as an example, the disc represented in Fig. 148, rotating at a speed of 3,000 r.p.m. All the dimensions are given in the table below. Assume that the centrifugal forces applied at the outer edge, for instance centrifugal forces due to the blades in the case of a turbine disc, are such that at the outer edge

$$(\sigma_r)_1 = 1,420 \text{ lbs. per sq. in.}$$

by H. Hearle in Engineering, Vol. 106, 1918, p. 131. Further development of the method was given by R. Grammel, loc. cit., p. 251, and the numerical example given below is taken from this paper. See also the paper by M. G. Driessen, Trans. Amer. Soc. Mech. Eng., 1928, Applied Mechanics Division; R. Grammel, Ing. Arch., Vol. 7, p. 136, 1936; R. G. Olsson, Ing. Arch., Vol. 8, p. 270 and p. 373, 1937; A. Held, Ing. Arch., Vol. 10, p. 339, 1939.

TABLE 21. STRESS CALCULATION IN ROTATING DISCS

	1	2	3	4	5	6	7	8	9	10	11	12	13	14
Cross Section		r in.	r^2 in. ²	$10^6 w$ in. ⁻²	$\beta \omega^2 r^2$ lbs. in. ²	$\beta \omega^2 r^2$ lbs. in. ²	y in.	$-\frac{\Delta y}{y + \Delta y}$	σ_r lbs. in. ²	Δs lbs. in. ²	Δt lbs. in. ²	σ_t lbs. in. ²	σ_r^0 lbs. in. ²	σ_t^0 lbs. in. ²
1		19.7	388	2.58	11,620	6,680			1,420 0			6,360 710	1,420	6,800
2		17.7	314	3.18	9,410	5,420	.985	+ 1.50	3,630 80	5,450 130	1,640 40	7,620 795	6,250	8,900
3		13.8	190	5.26	5,700	3,290	.394	-.333	14,000 510	- 4,670 170	- 1,390 60	10,020 1,070	11,400	10,000
4		9.85	97.0	10.31	2,910	1,680	.591	-.400	13,500 1,020	- 5,400 410	- 1,620 130	8,900 1,820	10,300	9,300
5		7.87	62.0	16.1	1,860	1,070	.985	-.286	9,680 1,340	- 2,740 380	- 825 110	7,300 2,640	7,600	8,600
6		6.89	47.4	21.1	1,420	820	1.38	-.263	7,550 1,550	- 1,990 410	- 597 130	6,530 3,300	5,700	8,400
7		5.91	34.9	28.6	1,050	603	1.87	-.321	5,970 1,990	- 1,920 640	- 570 200	6,110 4,270	3,980	8,600
8		4.92	24.2	41.3	726	418	2.76	-.300	4,280 2,590	- 1,250 780	- 370 230	5,960 5,720	2,260	9,500
9		3.94	15.5	64.5	465	268	3.94		2,530 4,000			6,350 8,100	0	11,500

and that $\mu = 0.3$; $\gamma = 0.283$ lb. per cubic inch. Then from eqs. (226)

$$\beta_1 \omega^2 = 30.0 \frac{\text{lbs.}}{\text{in.}^4}; \quad \beta \omega^2 = 17.3 \frac{\text{lbs.}}{\text{in.}^4}.$$

The first eight columns of the table above are filled from these data and from Fig. 148.

We begin the stress calculation from the outer edge of the disc, where $(\sigma_r)_1$ is given. The magnitude of the tangential stress $(\sigma_t)_1$

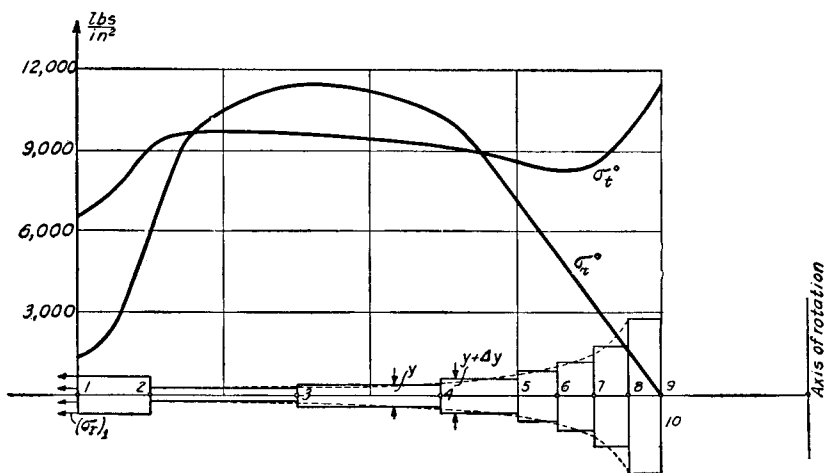


FIG. 148.

at the outer edge is usually unknown and an arbitrary magnitude must be assumed for a beginning. The simplest assumption is to take $(\sigma_t)_1$ so as to make s and t (see eq. 227) equal, in which case

$$(\sigma_t)_1 = (\sigma_r)_1 + \beta_1 \omega^2 r_1^2 - \beta \omega^2 r_1^2,$$

or, by using the figures in the fifth and sixth columns of the table,

$$(\sigma_t)_1 = 1,420 + 11,620 - 6,680 = 6,360 \text{ lbs. per sq. in.}$$

Now, from eqs. (227),

$$s_1 = (\sigma_r)_1 + \beta_1 \omega^2 r_1^2 = 1,420 + 11,620 = 13,040 \text{ lbs. per sq. in.,}$$

$$t_1 = (\sigma_t)_1 + \beta \omega^2 r_1^2 = 6,360 + 6,680 = 13,040 \text{ lbs. per sq. in.}$$

Since $s_1 = t_1$, the s and t straight lines coincide in the construction explained in Fig. 146. In Fig. 149 in which s and t are taken as ordinates and $w = 1/r^2$ as abscissa these lines are represented by the line $a-a$ parallel to the w axis. The length of this line, corresponding

to the radial distance 1-2 of the disc (Fig. 149), is determined from the figures in column 4 of the table. From this we obtain for section 2 (Fig. 148)

$$s_2 = t_2 = 13,040 \text{ lbs. per sq. in.};$$

then by using eqs. (227),

$$(\sigma_r)_2 = s_2 - \beta_1 \omega^2 r_2^2 = 13,040 - 9,410 = 3,630 \text{ lbs. per sq. in.,}$$

$$(\sigma_t)_2 = t_2 - \beta \omega^2 r_2^2 = 13,040 - 5,420 = 7,620 \text{ lbs. per sq. in.}$$

At section 2 an abrupt change in the thickness of the disc takes place. To take this into account, we use eqs. (230) together with the figures in column 8 in the table. Then

$$\begin{aligned} (\Delta s)_2 &= (\Delta \sigma_r)_2 = \left(-\frac{\Delta y}{y + \Delta y} \sigma_r \right) \\ &= 1.50 \times 3,630 = 5,450 \text{ lbs. per sq. in.,} \end{aligned}$$

$$(\Delta t)_2 = (\Delta \sigma_t)_2 = \mu (\Delta s)_2 = 0.3 \times 5,450 = 1,640 \text{ lbs. per sq. in.}$$

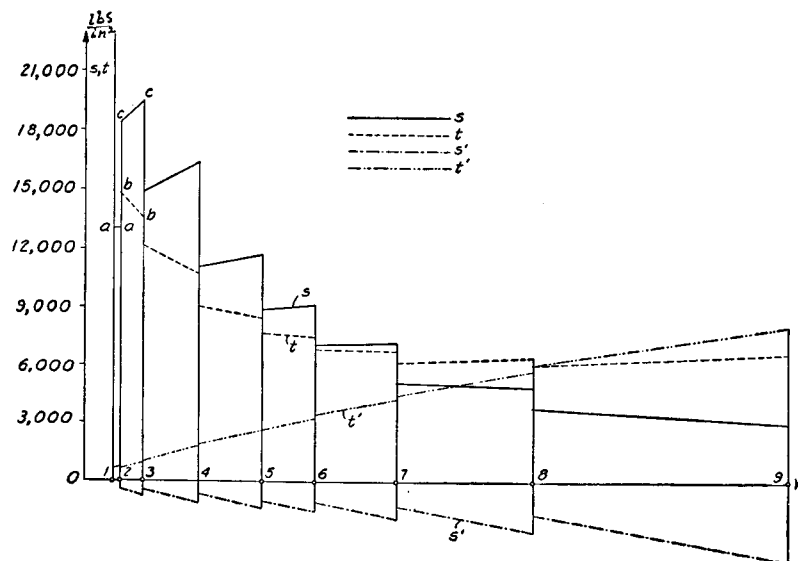


FIG. 149.

These quantities are added to the ordinate of the point a in Fig. 149 which gives points b and c ; the lines bb and cc are then constructed as explained in Fig. 146. In this manner s_3 and t_3 are found for section 3. By repeating the above process all the data

necessary for the third section are obtained, and so on. By this method we may compute all the values in the upper lines in columns nine to twelve of the above table.

Due to the fact that the stress $(\sigma_t)_1$ at the periphery of the disc was taken arbitrarily, the conditions at the inner edge will usually not be satisfied, and the stress $(\sigma_r)_9$ obtained by the above method will not be the stress which actually exists there. In order to satisfy the condition at the inner edge, an additional calculation is required. We assume $(\sigma_r)_1 = 0$, $\omega = 0$, and take an arbitrary value for $(\sigma_t)_1$ (in the calculations $(\sigma_t)_1$ was taken 710 lbs. per sq. in.) and obtain the corresponding stress distribution in the same manner as before. For this case, from eqs. (227), $s = \sigma_r$ and $t = \sigma_t$. The results of these calculations are given in columns nine to twelve in the lower lines, and the corresponding constructions, in Fig. 149, by the lines t' and s' . The solution which satisfies the actual condition at the inner edge of the disc is obtained by combining the above two stress distributions as follows: Let $(\sigma_r)_9$ and $(\sigma_r)_{9'}$ be the radial stresses at the inner edge of the disc, obtained by the first and the second calculations respectively, and $(\sigma_r)_9^0$ denote the actual stress at the inner edge. Then the solution for the actual condition is obtained by superposing on the first stress distribution the stresses of the second distribution multiplied by

$$n = \frac{(\sigma_r)_9^0 - (\sigma_r)_9}{(\sigma_r)_{9'}}.$$

The average stresses at the sections at which the thickness changes abruptly may be calculated as follows:

$$\begin{aligned} (\sigma_r)^0 &= \left(\sigma_r + \frac{\Delta s}{2} \right) + n \left(\sigma_{r'} + \frac{\Delta s'}{2} \right), \\ (\sigma_t)^0 &= \left(\sigma_t + \frac{\Delta t}{2} \right) + n \left(\sigma_{t'} + \frac{\Delta t'}{2} \right). \end{aligned}$$

The results of such calculations for the case when the radial stress at the inner edge is zero are given in the last two columns of the above table and are represented by the two curves in Fig. 148.

48. Thermal Stresses in a Long Hollow Cylinder.—When the wall of a cylinder is non-uniformly heated, its elements do not expand uniformly, and mutual interference sets up thermal stresses. In the following the distribution of the temperature is taken to be symmetrical with respect to the axis of the cylinder, and constant along this axis. The deformation of the cylinder is then symmetrical about the axis and we may use the method developed in

art. 44. A ring is cut from the cylinder by two cross sections perpendicular to the axis, unit distance apart. During deformation such cross sections can be assumed to remain plane if taken sufficiently distant from the ends of the cylinder,¹² hence the unit elongations in the direction of the axis are constant. Let the z axis be the axis of the cylinder, w the displacement in the direction of the z axis, and the other notation the same as in article 44 and Fig. 142. Then the unit elongations in the three perpendicular directions are

$$\begin{aligned} \epsilon_z &= \frac{dw}{dz} = \text{const.}, \\ \epsilon_r &= \frac{du}{dr}, \\ \epsilon_t &= \frac{u}{r}. \end{aligned} \quad (a)$$

These elongations can be represented as functions of the stresses σ_z , σ_r , σ_t , and the thermal expansion. Let α denote the coefficient of linear expansion and t the increase in temperature, which varies with the radial distance r . From eqs. (43) (see p. 62, Part I) the elongations are

$$\begin{aligned} \epsilon_z &= \frac{\sigma_z}{E} - \frac{\mu}{E} (\sigma_r + \sigma_t) + \alpha t, \\ \epsilon_r &= \frac{\sigma_r}{E} - \frac{\mu}{E} (\sigma_z + \sigma_t) + \alpha t \\ \epsilon_t &= \frac{\sigma_t}{E} - \frac{\mu}{E} (\sigma_z + \sigma_r) + \alpha t, \end{aligned} \quad (b)$$

Using the notation Δ for unit increase in volume,

$$\Delta = \epsilon_z + \epsilon_r + \epsilon_t = \frac{1 - 2\mu}{E} (\sigma_z + \sigma_r + \sigma_t) + 3\alpha t. \quad (c)$$

From this and eqs. (b) we find

$$\begin{aligned} \sigma_z &= \frac{E}{1 + \mu} \left(\epsilon_z + \frac{\mu}{1 - 2\mu} \Delta \right) - \frac{\alpha t E}{1 - 2\mu}, \\ \sigma_r &= \frac{E}{1 + \mu} \left(\epsilon_r + \frac{\mu}{1 - 2\mu} \Delta \right) - \frac{\alpha t E}{1 - 2\mu}, \\ \sigma_t &= \frac{E}{1 + \mu} \left(\epsilon_t + \frac{\mu}{1 - 2\mu} \Delta \right) - \frac{\alpha t E}{1 - 2\mu}. \end{aligned} \quad (d)$$

¹² At the ends the stresses in the direction of the axis of the cylinder are zero and the stress distribution is more complicated.

These values are substituted into the equation of equilibrium of the element mnm_1n_1 in Fig. 142 (eq. (b), p. 236)

$$\frac{d\sigma_r}{dr} + \frac{\sigma_r - \sigma_t}{r} = 0 \quad (e)$$

and give, after using eqs. (a),

$$\frac{d^2u}{dr^2} + \frac{1}{r} \frac{du}{dr} - \frac{u}{r^2} = \frac{1+\mu}{1-\mu} \alpha \frac{dt}{dr}. \quad (231)$$

This equation determines the displacement u for any particular distribution of temperature. It may be written in the form:

$$\frac{d}{dr} \left[\frac{1}{r} \frac{d}{dr} (ru) \right] = \frac{1+\mu}{1-\mu} \alpha \frac{dt}{dr}.$$

Integration with respect to r gives

$$\frac{d}{dr} (ru) = \frac{1+\mu}{1-\mu} \alpha r + 2C_1r.$$

A second integration gives the solution:

$$u = \frac{1}{r} \frac{1+\mu}{1-\mu} \int_a^r \alpha t r dr + C_1r + C_2 \frac{1}{r}, \quad (f)$$

in which C_1 and C_2 are constants of integration which must be determined in such a manner as to satisfy the conditions at the surfaces of the cylinder. If these surfaces are assumed to be free from external forces, C_1 and C_2 are determined from the conditions

$$(\sigma_r)_{r=a} = 0; \quad (\sigma_r)_{r=b} = 0. \quad (g)$$

A general expression for σ_r is obtained by substituting $\epsilon_r = du/dr$ and $\epsilon_t = u/r$ into the second of eqs. (d) and taking u from eq. (f), which gives

$$\sigma_r = \frac{E}{1+\mu} \left(-\frac{1+\mu}{1-\mu} \frac{1}{r^2} \int_a^r \alpha t r dr + \frac{C_1}{1-2\mu} - \frac{C_2}{r^2} + \frac{\mu}{1-2\mu} \epsilon_z \right). \quad (h)$$

From eqs. (g) we obtain

$$\begin{aligned} C_2 &= \frac{1+\mu}{1-\mu} \frac{a^2}{b^2 - a^2} \int_a^b \alpha t r dr, \\ C_1 &= \frac{(1+\mu)(1-2\mu)}{1-\mu} \frac{1}{b^2 - a^2} \int_a^b \alpha t r dr - \mu \epsilon_z. \end{aligned} \quad (k)$$

With these values substituted in expression (h) the general expression for σ_r becomes

$$\sigma_r = \frac{E}{1-\mu} \left[-\frac{1}{r^2} \int_a^r \alpha t r dr + \frac{r^2 - a^2}{r^2(b^2 - a^2)} \int_a^b \alpha t r dr \right]. \quad (232)$$

The general expression for σ_t is obtained from the equation of equilibrium (e) which gives

$$\begin{aligned} \sigma_t = \sigma_r + r \frac{d\sigma_r}{dr} &= \frac{E}{1-\mu} \left[\frac{1}{r^2} \int_a^r \alpha t r dr \right. \\ &\quad \left. + \frac{r^2 + a^2}{r^2(b^2 - a^2)} \int_a^b \alpha t r dr - \alpha t \right]. \end{aligned} \quad (233)$$

When the distribution of the temperature over the thickness of the wall is known, we can evaluate the integrals of eqs. (232) and (233) and obtain σ_r and σ_t .

Let us consider the case of a cylinder with a thin wall at the temperature t_i on the inner surface and zero on the outer.¹³ For thin walls the stationary distribution of the temperature over the thickness is practically linear; hence

$$t = t_i \left(1 - \frac{r-a}{b-a} \right). \quad (234)$$

When this is substituted into eqs. (232) and (233) and the integration is performed, we obtain

$$\sigma_r = \frac{E \alpha t_i}{3(1-\mu)(b-a)} \left[r - \frac{a^3}{r^2} - \left(1 - \frac{a^2}{r^2} \right) \frac{b^3 - a^3}{b^2 - a^2} \right], \quad (235)$$

$$\sigma_t = \frac{E \alpha t_i}{3(1-\mu)(b-a)} \left[2r + \frac{a^3}{r^2} - \left(1 + \frac{a^2}{r^2} \right) \frac{b^3 - a^3}{b^2 - a^2} \right]. \quad (236)$$

The tangential stresses at the inner and outer surfaces are

$$\begin{aligned} (\sigma_t)_{r=a} &= \frac{E \alpha t_i}{3(1-\mu)(b-a)} \left(3a - 2 \frac{b^3 - a^3}{b^2 - a^2} \right), \\ (\sigma_t)_{r=b} &= \frac{E \alpha t_i}{3(1-\mu)(b-a)} \left[2b + \frac{a^3}{b^2} - \left(1 + \frac{a^2}{b^2} \right) \frac{b^3 - a^3}{b^2 - a^2} \right]. \end{aligned}$$

¹³ Any temperature condition at the surfaces of the cylinder may be obtained by superposing on this a uniform heating or cooling, which does not produce stresses.

These equations may be represented in a simpler form by using

$$\frac{b}{a} = 1 + m, \quad (l)$$

where m is small for a thin cylinder. With this notation the above eqs. become

$$(\sigma_t)_{r=a} = -\frac{E\alpha t_i}{2(1-\mu)} \left(1 + \frac{m}{6+3m} \right), \quad (237)$$

$$(\sigma_t)_{r=b} = \frac{E\alpha t_i}{2(1-\mu)} \left(1 - \frac{m}{6+3m} \right). \quad (238)$$

In the case of a very thin wall, the second term in the parenthesis of these equations is negligible and the equations coincide with that derived for a non-uniformly heated plate (see eq. 122).

When the thickness of the wall is not small, the stationary temperature distribution is no longer a linear function of r but may be represented by the function

$$t = \frac{t_i}{b} \log_e \frac{b}{r}. \quad (239)$$

With this expression for t eqs. (232) and (233) become

$$\sigma_r = \frac{E\alpha t_i}{2(1-\mu) \log_e \frac{b}{a}} \left[-\log_e \frac{b}{r} - \frac{a^2}{b^2 - a^2} \left(1 - \frac{b^2}{r^2} \right) \log_e \frac{b}{a} \right], \quad (240)$$

$$\sigma_t = \frac{E\alpha t_i}{2(1-\mu) \log_e \frac{b}{a}} \left[1 - \log_e \frac{b}{r} - \frac{a^2}{b^2 - a^2} \left(1 + \frac{b^2}{r^2} \right) \log_e \frac{b}{a} \right]. \quad (241)$$

The maximum σ_t occurs at the inner or outer surface of the cylinder. Substituting in the above equation $r = a$ and $r = b$,

$$(\sigma_t)_{r=a} = \frac{E\alpha t_i}{2(1-\mu) \log_e \frac{b}{a}} \left(1 - \frac{2b^2}{b^2 - a^2} \log_e \frac{b}{a} \right), \quad (242)$$

$$(\sigma_t)_{r=b} = \frac{E\alpha t_i}{2(1-\mu) \log_e \frac{b}{a}} \left(1 - \frac{2a^2}{b^2 - a^2} \log_e \frac{b}{a} \right). \quad (243)$$

In the above discussion only σ_r and σ_t were considered and it was shown that these quantities do not depend upon the elongation ϵ_z

in the direction of the cylinder. σ_z may be calculated from the first of eqs. (d). Substituting $\epsilon_r = du/dr$, $\epsilon_t = u/r$, and using eq. (f) for u and eqs. (k) for the arbitrary constants, we find the general expression for σ_z to contain the constant elongation ϵ_z in the direction of the axis of the cylinder. If we assume that the cylinder can expand freely, we calculate the magnitude of ϵ_z from the condition that the sum of the normal forces over the cross section of the cylinder perpendicular to the z axis is equal to zero. As a result of this calculation the following final expression for σ_z is obtained:

$$\sigma_z = \frac{E\alpha t_i}{2(1-\mu) \log_e \frac{b}{a}} \left(1 - 2 \log_e \frac{b}{r} - \frac{2a^2}{b^2 - a^2} \log_e \frac{b}{a} \right). \quad (244)$$

It may be seen that at the inner and outer surfaces of the cylinder the stress σ_z is equal to σ_t . A more detailed discussion of thermal stresses in cylinders has been made by C. H. Lees.¹⁴ Charts for rapid calculation of stresses from eqs. (240), (241) and (244) are given by L. H. Barker.¹⁵

In the case of a disc without a hole at the center and of a uniform thickness, which is assumed small in comparison with the radius b of the disc, the radial and the tangential stresses are given by the following expressions:

$$\sigma_r = \alpha E \left(\frac{1}{b^2} \int_0^b t r dr - \frac{1}{r^2} \int_0^r t r dr \right), \quad (m)$$

$$\sigma_t = \alpha E \left(-t + \frac{1}{b^2} \int_0^b t r dr + \frac{1}{r^2} \int_0^r t r dr \right). \quad (n)$$

In each particular case when the temperature t is known as a certain function of r , the integrals entering in these expressions can be readily evaluated and the thermal stresses obtained.

Thermal stresses are of great practical importance, especially in the case of large cylinders, such as steam turbine rotors, heavy shafts or large turbine discs. In all these cases the heating or cooling must be made gradual in order to reduce the temperature

¹⁴ See C. H. Lees, Proc. Roy. Soc., Ser. A, Vol. 101 (1922).

¹⁵ L. H. Barker, Engineering, Vol. 124 (1927), p. 443. The numerical example given below is taken from this paper.

gradient in a radial direction.¹⁶ Thermal stresses are also important in Diesel engines.¹⁷

Problems

1. Determine the thermal stresses in a cylinder having $2a = 3/8$ in., $2b = 1\frac{1}{4}$ in., $E\alpha/(1-\mu) = 615$, if the inner temperature is $t_i = -1^\circ\text{C}$. and the outer temperature is zero.

Solution. From eqs. (242) and (243)

$$\begin{aligned}(\sigma_t)_{r=a} &= (\sigma_z)_{r=a} = 420 \text{ lbs. per sq. in.}, \\ (\sigma_t)_{r=b} &= (\sigma_z)_{r=b} = -194 \text{ lbs. per sq. in.}\end{aligned}$$

σ_r maximum, from eq. (240), occurs at $r = 0.3$ in. and is equal to 87 lbs. per sq. in. The distribution of the stresses over the thickness of the wall is shown in Fig. 150.

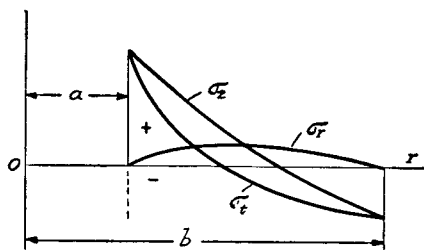


FIG. 150.

¹⁶ A discussion of thermal stresses in cylinders in which the temperature varies along the axis is given by A. Stodola, loc. cit., p. 253, Appendix. See also G. Eichelberg, *Forschungsarbeiten*, nr. 220, 1923, and nr. 263. For thermal stresses in discs, see H. Quednau, *V. D. I.*, Vol. 72, 1928, p. 522. The same problem is discussed in "Theory of Elasticity," p. 366, 1934.

¹⁷ See R. Zulzer, "Temperature Variation and Heat Stresses in Diesel Engines," *Engineering*, Vol. 121 (1926), p. 447; A. Nägel, "The Transfer of Heat in Reciprocating Engines," *Engineering*, Vol. 127 (1929), p. 282, and W. Nusselt, *V. D. I.*, Vol. 70 (1926), p. 468; J. N. Goodier, *Journal Appl. Mech.*, Vol. 4, p. 33A, 1937.

CHAPTER VI

TORSION

49. Shafts of Non-Circular Cross Section.—In the first part of our book (see p. 261, part I) the problem of torsion of circular shafts was considered. Formulas for maximum stress and for the angle of twist for rectangular shafts also were given. There are several other shapes of cross section of a twisted shaft for which the problems of stress distribution and of the angle of twist are solved. In the following only some final results, which may be of practical interest, are given.

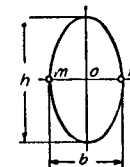


FIG. 151.

*Elliptical Cross Section.*¹—The maximum shearing stress takes place at the ends of the minor axis, Fig. 151, and is

$$\tau_{\max} = \frac{16M_t}{\pi b^2 h} \quad (245)$$

The angle of twist per unit length is

$$\theta = \frac{4\pi^2 M_t I_p}{A^4 G}, \quad (246)$$

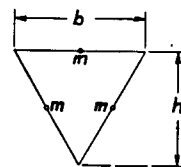


FIG. 152.

where $I_p = (\pi/64)(bh^3 + b^3h)$ is the polar moment of inertia of the cross section (see appendix, Part I, p. 347), and $A = \pi bh/4$ is area of the cross section.

Equilateral Triangle.—The maximum shearing stress occurs at the middle of the sides (points m in Fig. 152) and can be calculated from the equation

$$\tau_{\max} = \frac{20M_t}{b^3} \quad (247)$$

The angle of twist per unit length is

$$\theta = \frac{M_t}{0.6GI_p} = \frac{46.2M_t}{b^4 G} \quad (248)$$

¹ The solution of this problem and of the following is due to Saint Venant, *Mém. des Savans étrangers*, Vol. 14, 1855. The derivation of the given formulas can be found in "Theory of Elasticity," see p. 234.

*Regular Hexagon.*²—For this case

$$\tau_{\max} = \frac{M_t}{0.217Ad}, \quad (249)$$

$$\theta = \frac{M_t}{0.133Ad^2G}, \quad (250)$$

where d is the diameter of the inscribed circle and A the cross sectional area.

*Regular Octagon.*³—For this case

$$\tau_{\max} = \frac{M_t}{0.223Ad}, \quad (251)$$

$$\theta = \frac{M_t}{0.130Ad^2G}, \quad (252)$$

where A and d have the same meaning as in the previous case.

*Trapezoid.*⁴—In the case of an isosceles trapezoid approximate values for the maximum stress and the angle of twist are obtained by replacing the trapezoid by an *equivalent* rectangle, which is obtained as indicated by the dotted lines in Fig. 153. From the centroid C of the trapezoid are drawn perpendiculars, BC and CD , to the lateral sides, and then verticals are drawn through B and D . Equations (155) and (156) given in Part I (see p. 270), if applied to the rectangular cross section thus obtained, give approximate values of τ_{\max} and θ for the trapezoid in Fig. 153.

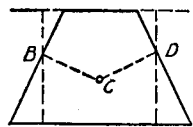


FIG. 153.

For any solid (non-tubular) shaft an approximate value for the angle of twist is obtained by replacing the cross section by an *equivalent* elliptical one of the same area A and the same polar moment of inertia I_p . Then the approximate value for θ is given by formula (246).

50. Membrane Analogy.⁵—This analogy establishes certain relations between the deflection surface of a uniformly

² See C. Weber, *Die Lehre von der Drehungsfestigkeit*, Berlin, 1921.

³ See C. Weber, ref. 2.

⁴ See C. Weber, ref. 2.

⁵ This analogy was developed by L. Prandtl; see *Phys. Zeitschr.*,

loaded membrane and the distribution of stresses in a twisted bar. Imagine a homogeneous membrane with the same outline as that of the cross section of the torsional member subjected to uniform tension at the edges and submitted to a uniform lateral pressure. It can be shown that the differential equation of the deflection surface⁶ of this membrane has the same form as the equation which determines the stress distribution over the cross section of the twisted bar. If S is the tensile force per unit length of the boundary line of the membrane, p the lateral pressure per unit area, and θ the angle of twist per unit length of the bar, then the two above-mentioned equations are identical if

$$\frac{p}{S} = 2G\theta. \quad (a)$$

If this condition is fulfilled, the following relationships hold between the surface of the membrane and the distribution of shearing stresses in twist: (1) The tangent to a *contour line* at any point of the deflected membrane gives the direction of the shearing stress at the corresponding point in the cross section of the twisted bar. (2) The maximum slope of the membrane at any point is equal to the magnitude of the shearing stress at the corresponding point in the twisted bar. (3) Twice the volume included between the surface of the deflected membrane and the plane of its outline is equal to the torque of the twisted bar.

All these statements can be readily proved in the case of a circular shaft. Let Fig. 154 represent the corresponding circular membrane uniformly stretched by the forces S and loaded by uniform pressure p acting upwards. Considering a concentric portion mn of a radius r of the membrane, Fig.

1903, p. 758; *Jahresberichte d. Deutsch. Math. Ver.*, Vol. 13 (1904), p. 31. For further development see the papers by A. A. Griffith and G. I. Taylor, in *Proc. Inst. Mech. Eng.*, 1917, p. 755, and in *Technical Report of the Advisory Committee for Aeronautics*, Vol. 3 (1917-1918), pp. 920, 938, 950. See also "Theory of Elasticity," p. 239.

⁶ It is assumed that deflections are small.

154*a*, we observe that the total pressure on that portion is $\pi r^2 p$. This pressure is balanced by the tensile forces S uniformly distributed along a circle of the radius r and having that direction tangent to the deflected membrane. Denoting by w the deflections of the membrane, we obtain

$$\pi r^2 p = -2\pi r S \frac{dw}{dr}$$

and

$$-\frac{dw}{dr} = \frac{pr}{2S}. \quad (b)$$

Substituting in this equation the value of p/S given by the formula (a), we obtain

$$-\frac{dw}{dr} = G\theta r. \quad (c)$$

On the right side of this equation we have the known expression for the torsional stress in a twisted circular shaft (see equation (b), p. 263, Part I). Hence the slope of the deflected

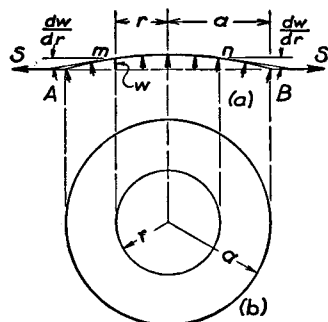


FIG. 154.

membrane gives us the required magnitude of the torsional stress. The maximum slope of the membrane at each point is in the direction of the meridian; hence the torsional stress in the shaft at each point has that direction perpendicular to the radius. This conclusion again agrees with the result of the elementary theory of torsion. To determine the torque which produces the stresses given by the equation (c), let us calculate the volume included between the deflected membrane, Fig. 154*a*, and the plane of the boundary AB . The integration of equation (c) gives the deflection surface of the membrane:

$$w = \frac{G\theta}{2} (a^2 - r^2),$$

and the required volume is

$$V = \int_0^a 2\pi r dr w = G\theta \frac{\pi a^4}{4} = \frac{1}{2} G\theta I_p.$$

Comparing this with the usual formula for torque (see eq. 147, Part I), we conclude that in the membrane analogy the double volume gives the magnitude of the torque. Hence all three statements made above regarding the analogy can be readily proved in the case of a circular shaft.

In other cases the shape of the surface of the deflected membrane is easily visualized for a given cross section of the shaft; consequently qualitative conclusions are readily drawn concerning the stress distribution in torsion. For instance, with a rectangular cross section (Fig. 155*a*), the corresponding surface of the deflected membrane is as represented by the contour lines. The stress is inversely proportional to the distance between these lines; hence it is larger where the lines are closer to each other. The maximum stress occurs at points $m-m$, where the slope of the membrane is largest. At the corners a, b, c, d , where the surface of the membrane coincides with the plane of the contour $abcd$, the slope of this surface is zero; hence the shearing stress at these points is zero.

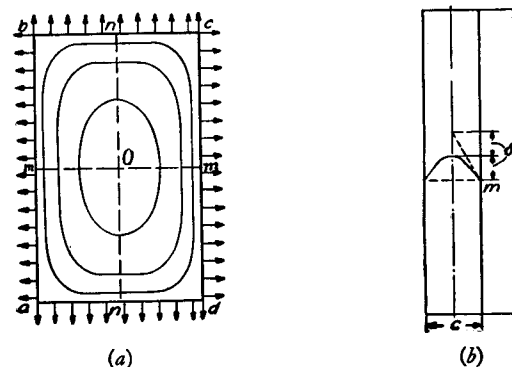


FIG. 155.

Consider now the case of a narrow rectangular cross section (Fig. 155*b*). The deflection surface of the uniformly loaded membrane at some distance from the short sides of

the rectangle can be considered cylindrical. With this assumption, each strip mm of the surface behaves like a uniformly loaded cord and its maximum deflection is given by equation:

$$\delta = \frac{pc^2}{8S}, \quad (b)$$

or, using eq. (a),


$$\delta = \frac{c^2}{4} G\theta. \quad (c)$$

The maximum stress is equal to the slope at points $m-m$. This slope is $4\delta/c$, for a parabolic curve; hence

$$\tau_{\max} = \frac{4\delta}{c} = cG\theta. \quad (d)$$

The corresponding torque is twice the volume enclosed by the membrane. Neglecting the effect of the short sides of the rectangle on the deflection of the membrane and calculating the volume as for a parabolic cylinder of length b , we find

$$M_t = 2 \cdot \frac{2}{3} \delta bc = \frac{1}{3} bc^3 G\theta. \quad (e)$$

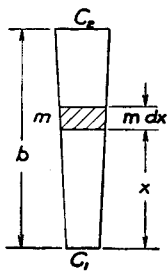

from which

$$\theta = \frac{M_t}{\frac{1}{3} bc^3 G}. \quad (253)$$

Substituting in equation (d), we obtain

$$\tau_{\max} = \frac{M_t}{\frac{1}{3} bc^2}. \quad (254)$$

FIG. 156. These formulas coincide with formulas (155) and (156) given in Part I (see p. 270) if the rectangle is assumed to be a very narrow one.

If instead of a narrow rectangle we have a narrow trapezoid, as shown in Fig. 156, an approximate solution is obtained by assuming that the surface of the deflected membrane at a sufficient distance from the narrow sides is a conical one. The double volume corresponding to an element mm of the cross section is obtained

as in equation (e) above and is equal to

$$\frac{1}{3} G\theta c^3 dx, \quad (f)$$

where c is the variable width of the cross section given by the equation:

$$c = c_1 + \frac{c_2 - c_1}{b} x. \quad (g)$$

Substituting this in expression (f) and integrating the result, we obtain the torque:

$$M_t = \int_0^b \frac{1}{3} G\theta c^3 dx = \frac{bG\theta}{12} (c_1 + c_2)(c_1^2 + c_2^2).$$

The angle of twist then is

$$\theta = \frac{M_t}{\frac{1}{12} b(c_1 + c_2)(c_1^2 + c_2^2)G}. \quad (255)$$

When $c_1 = c_2 = c$, this formula coincides with formula (253) obtained for the narrow rectangle.

In more complicated cases in which the form of the deflection surface of the membrane cannot easily be obtained analytically, this surface can be investigated experimentally by using soap film for the uniformly stretched membrane and measuring the slope of its surface by optical methods. For this purpose the apparatus shown in Fig. 157 has been used.⁷ The aluminum plate with two holes—one circular and the other of the required shape—is clamped between the two halves of the cast-iron box A . The lower part of the box, having the form of a shallow tray, is supported on leveling screws. By pumping air into this portion of the box, the deflection of soap films covering the above mentioned holes is produced. The mapping of contour lines of the soap film surfaces is done by using the screw B passing through a hole in a sheet of plate glass sufficiently large to cover the box in any possible position. The lower end of the screw carries a

⁷ See the paper by G. I. Taylor and A. A. Griffith, loc. cit., p. 267.

hard steel point, whose distance from the glass plate is adjustable by the screw. The point is made to approach the film by moving the glass plate until the distortion of the image in the film shows that contact has occurred. The record is

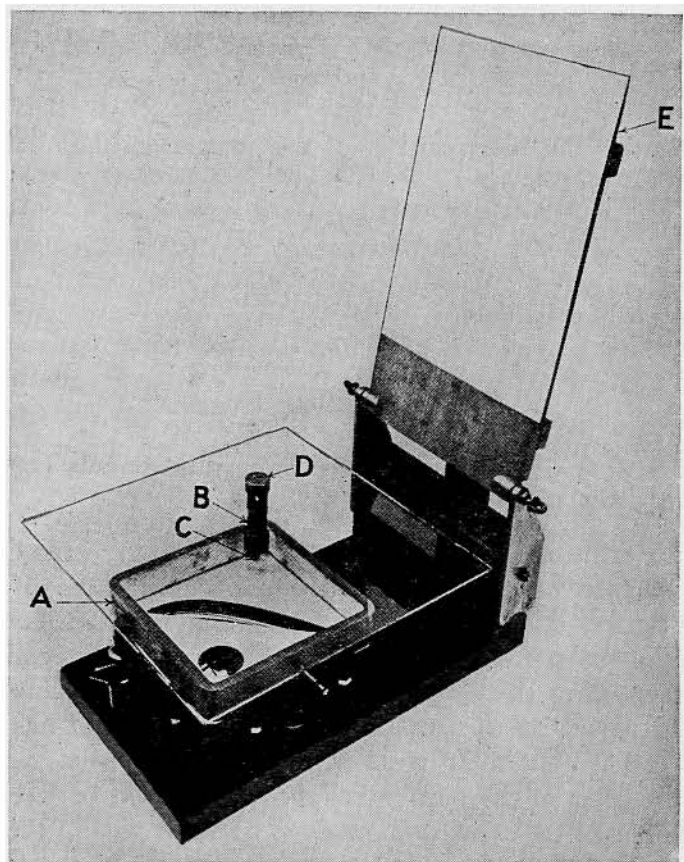


FIG. 157.

made on a sheet of paper attached to the board *E*, which can swing about a horizontal axis at the same height as the steel recording point *D*. To mark any position of the screw it is only necessary to prick a dot on the paper by swinging it down on the recording point. After the point has been made to touch the film at a number of places, the dots recorded on the

paper are used for drawing a contour line. By adjusting the screw *B*, this can be repeated for as many contour lines as may be required. When these lines have been mapped, the volume and the corresponding torque can be obtained by summation. The slopes and the corresponding stresses are obtained by measuring the distances between neighboring contour lines. A better accuracy for measuring slopes can be obtained by projecting a beam of light onto the surface of the film and measuring the angle of the reflected ray. To establish the relation between the measured slope and the stress, the films covering the two holes mentioned before are compared at the same air pressure. Since both films have the same ratio p/S , the corresponding two shafts have the same values of $G\theta$ (see equation (a)). Hence, by measuring the slopes of the two soap films we can compare the stresses in the shaft of the given cross section with those in a circular shaft of known diameter under the condition that they have the same angle of twist θ per unit length and the same shearing modulus G . The corresponding ratio n of the torques is determined by the ratio of the volumes between the soap films and the plane of the plate. This ratio gives, evidently, the ratio of the torsional rigidities of the two shafts. Regarding stresses for a circular shaft, the stress can be readily calculated at any point for any given torque M_t . The stress τ , produced at any point of the non-circular shaft by the torque nM_t , is obtained by multiplying the stress τ_0 in a chosen point of the circular shaft by the experimentally determined ratio of the maximum slopes at the two points under consideration.

Figure 158 represents an example of contour lines obtained for a portion of the I-beam (wooden wing spar of an airplane). From the close grouping

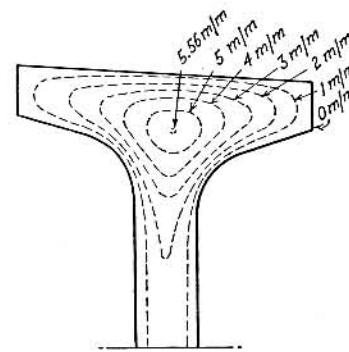


FIG. 158.

of the contour lines at the fillets of the reëntrant corners and at the middle of the upper face, it follows that the shearing stresses are high at these places. The projecting parts of the flange are very lightly stressed. The maximum stress in the middle portion of the web is practically constant along the side of the web and equal to that in a narrow rectangle for the same angle of twist.

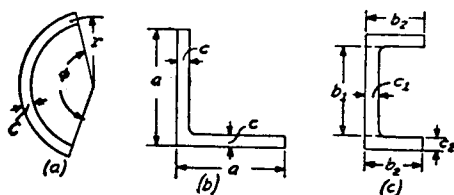


FIG. 159.

51. Torsion of Rolled Profile Sections.—Equations (253) and (254), derived for a narrow rectangular cross section, can be used also for approximate solutions in other cases in which the width of the cross section is small. For instance, in the case of the cross sections of equal thickness shown in Fig. 159 (a) and (b) the angle of twist is obtained from equation (253) by putting in this equation for b the developed length of the center line, namely, $b = \varphi r$ in the case of section represented in Fig. 159 (a) and $b = 2a - c$ in the case represented in Fig. 159 (b). The maximum stress for the first of these two sections will be obtained from equation (254). For the angle section (Fig. 159, b) the maximum stress is at the reëntrant corner. This maximum stress is obtained by multiplying the stress given by equation (254) by a factor larger than unity; the magnitude of this factor will be discussed later (see article 60, p. 329).

These conclusions follow from the membrane analogy discussed in the preceding article. The reader may have anticipated from that discussion that if the thickness c of the cross section shown in Fig. 159 (a) is small in comparison with

the radius r , the parabolic curve shown in Fig. 155 (b) and defining the deflection of the film can still be used with a sufficient accuracy.⁸ In such a case the maximum slope of the film and the corresponding maximum stress for the cross section in Fig. 159 (a) will be approximately the same as for a narrow rectangle.

In the case of a channel section (Fig. 159, c) the angle of twist is obtained by subdividing the cross section into the three rectangles shown in the figure and substituting, in equation (253), $b_1c_1^3 + 2b_2c_2^3$ instead of bc^3 . Then

$$\theta = \frac{3M_t}{(b_1c_1^3 + 2b_2c_2^3)G} \quad (256)$$

To calculate the stress, which occurs at the middle of the sides b_2 of the sections of flanges, it is only necessary, as seen from equations (253) and (254), to multiply θ by c_2G ; then

$$\tau = \frac{3M_t \cdot c_2}{b_1c_1^3 + 2b_2c_2^3} \quad (257)$$

The same approximate equations can be used also in the case of the twist of I beams⁹ with a constant thickness of the flanges (Fig. 160, a).

In the case of an I beam with sloping flanges, Fig. 160 (b), we denote by c_2 the thickness of the flange at the edges and by c_3 the largest thickness of the flange defined by the equation:

$$c_3 = c_2 + \frac{1}{2}b_2 \tan \alpha.$$

Using, then, equation (255) for flanges, we conclude that the angle of twist θ is obtained from equation (256) by substituting

⁸ The deflection surface here is no longer cylindrical, but if c is small in comparison with r , the curvature of the film in the tangential direction is small in comparison with that in the radial direction and can be neglected.

⁹ The maximum stress occurs at the reëntrant corners and will be discussed later (see art. 60, p. 329).

in it the quantity

$$\frac{1}{4}(c_2 + c_3)(c_2^2 + c_3^2)$$

instead of c_2^3 .

The maximum stress usually occurs at the fillets and is of a localized character. Its magnitude will be discussed in art. 60. Considerable stress may also occur at the points m , Fig. 160 (b), at the middle of the outer surfaces of the flanges.

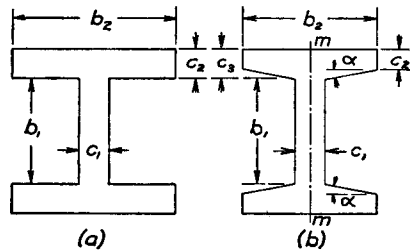


FIG. 160.

This latter stress is obtained, as before, by multiplying the angle of twist θ by c_3G , where c_3 is the maximum thickness of the flange.

It should be noted that in the derivation of equation (256) the formula for an infinitely narrow rectangle was used, and that the action of the narrow sides of the rectangle in Fig. 155 on the magnitude of the volume bounded by the soap film was entirely neglected. Owing to the presence of the narrow sides, the volume will evidently be somewhat diminished. At the same time at the corners of the channel section, Fig. 159 (c), where two rectangles come together, a larger deflection of the soap film should be expected than for a single rectangle, and this added deflection will cause some increase in the volume. Thus two factors, which were neglected in the derivation of equation (256), are acting in opposite directions and to some extent neutralize each other, so that equation (256) is sufficiently accurate—especially for thin-walled sections.¹⁰

¹⁰ The experiments with torsion of thin-walled I beams were made

For the cases of torsion of rolled I beams and channels in which the thickness of the flanges is not small and is varying along the width of the flange, a more elaborate formula for torsional rigidity has been developed, which is in a very satisfactory agreement with experiments.¹¹

Problems

1. Find the ratio of the angles of twist of a seamless and of a split circular thin tube of equal geometrical dimensions (Fig. 161) under the action of equal torques.

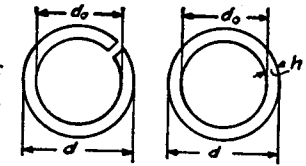


FIG. 161.

Solution. By using equations (151), Part I, and (253) we obtain for a seamless and for a split tube respectively

$$\theta = \frac{32M_t}{\pi d^4 \left(1 - \frac{d_0^4}{d^4}\right) G};$$

$$\theta_1 = \frac{3M_t}{\pi \left(\frac{d+d_0}{2}\right) \left(\frac{d-d_0}{2}\right)^3 G}.$$

The ratio of the angles of twist is

$$\frac{\theta}{\theta_1} = \frac{2}{3} \frac{(d-d_0)^2}{d^2 + d_0^2}.$$

For very thin tubes $(d^2 + d_0^2) \approx 2d^2$ and the ratio of angles of twist is

$$\frac{4}{3} \left(\frac{h}{d}\right)^2.$$

by the writer, Bulletin of the Polytechnical Institute, St. Petersburg, Vol. 5, 1906. They showed a satisfactory agreement with equation (256). A very extensive series of torsional tests of rolled beams were made by A. Föppl, Sitz. Berichte d. Bayer. Akad. d. Wiss., 1921, p. 295, and "Der Bauingenieur," Vol. 3, 1922, p. 42. Some correction factors for equation (256) were suggested on a basis of these experiments.

¹¹ The experiments on a basis of which that formula was derived were made by Inge Lyse and B. G. Johnston, Lehigh University Publication, Vol. 9, 1935.

2. Determine the angle of twist per inch of a channel (Fig. 159, *c*) if $M_t = 20,000$ lbs. ins., $b_1 = 10$ in., $b_2 = 3.5$ in., $c_1 = 0.4$ in., $c_2 = 0.6$ in., $G = 12 \times 10^6$ lbs., per sq. in.

Solution.

$$\theta = \frac{3 \times 20,000}{(10 \times 0.4^3 + 7 \times 0.6^3) 12 \times 10^6} = 0.00233 \text{ radians per in.}$$

3. Determine the ratio of the maximum shearing stresses of the tubes discussed in problem 1 if the torques are equal for both tubes.

4. Determine the torsional rigidity C for the I beam considered on p. 275 if the sloping of the flanges is considered as explained on p. 276.

52. Torsion of Thin Tubular Members.—In discussing the torsion of thin tubular members the membrane analogy again can be used to advantage.¹² In this case the outer and inner boundaries of the cross section are to be located in different horizontal planes with the membrane connecting the boundaries, as at mn in Fig. 162. If the thickness of the tube is small, the curvature of the membrane may be neglected,

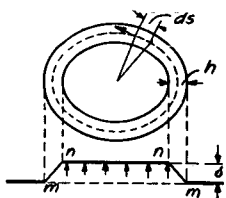


FIG. 162.

i.e., the lines mn may be considered straight. The slope of the membrane surface is then constant over the thickness of the wall and is equal to δ/h , where δ is the difference in the levels of the two boundaries and h is the thickness of the tube, which may vary along the circumference of the cross section. The

membrane analogy indicates that in this case the shearing stresses are uniformly distributed over the thickness of the wall and are given by the slope

$$\tau = \frac{\delta}{h}. \quad (a)$$

The stress along the circumference is therefore inversely proportional to the thickness of the wall. The volume included between the surfaces mm and nn is calculated by

¹² Torsion of tubular members was discussed by R. Bredt, V. D. I., Vol. 40, p. 815, 1896. See also T. Prescott, Phil. Mag., Vol. 60, 1920.

using the center line of the ring cross section, indicated by the dotted curve in the figure. If A is the area bounded by this line, the volume $mmnn$ is $A\delta$ and, from the membrane analogy, we obtain

$$M_t = 2A\delta. \quad (b)$$

From eqs. (a) and (b) we then find

$$\tau = \frac{M_t}{2Ah}. \quad (258)$$

This equation may be used in calculating the stresses in tubular members under torsion if the thickness of the wall is small, variation in thickness is not abrupt, and there are no reentrant corners.

The angle of twist θ per unit length of a tubular member may be calculated by considering the strain energy of torsion. The strain energy per unit length of the tubular member is

$$U = \int_0^s \frac{\tau^2 h ds}{2G},$$

where s is the length of the center line of the ring cross section shown in Fig. 162 by the dotted line. Substituting expression (258) for τ in this equation and equating the strain energy to the work done by the torque, we obtain

$$\frac{M_t^2}{8A^2G} \int_0^s \frac{ds}{h} = \frac{1}{2} M_t \theta, \quad (c)$$

from which

$$\theta = \frac{M_t}{4A^2G} \int_0^s \frac{ds}{h} = \frac{1}{2AG} \int_0^s \tau ds. \quad (259)$$

In the case of a tube of uniform thickness τ is constant and eq. 259 becomes

$$\theta = \frac{\tau s}{2AG}. \quad (260)$$

From this equation the angle of twist can be readily calculated as soon as the dimensions of the cross section are given, and τ is determined by using formula (258).

Equation (259), derived from a consideration of the strain energy of a twisted tubular member, can be obtained also from the membrane analogy. Considering the equilibrium of the plane $n-n$ in Fig. 162, we conclude that the pressure pA ¹³ acting on this plane is balanced by the tensile forces S acting in the membrane. The tensile force Sds , acting on an element ds of the boundary, has a small slope equal to τ ; hence the vertical component of this force is τSds , and the condition of equilibrium of the plane $n-n$ is

$$pA = \int_0^s \tau S ds. \quad (d)$$

Observing that the tension S in the membrane is constant and that $p/S = 2G\theta$ (see eq. a , art. 50), we find from equation (d):

$$\frac{p}{S} = \frac{1}{A} \int_0^s \tau ds = 2G\theta.$$

Solving this equation for θ , we obtain formula (259), given above, for the angle of twist.

Sometimes the torsional stresses in a tubular member with intermediate walls, as in Fig. 163 (a), must be calculated. The boundary of the cross section in this case is formed by the three closed curves.

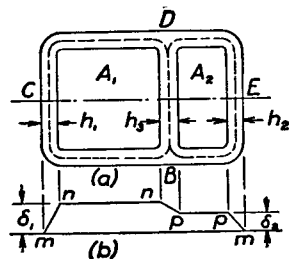


FIG. 163.

In applying the membrane analogy these curves are to be located in three different horizontal planes, mn , pp , and mm , as shown in Fig. 163 (b). The soap film connecting these three curves forms a narrow surface, the cross sections of which are shown by the lines mn , np , and pm . Assuming again that the wall thicknesses— h_1 , h_2 , and h_3 —are small, and neglecting the curvature of

the membrane in the directions normal to the boundaries, we consider that the lines mn , np , and pm are straight. In such a case

¹³ In the case of thin-walled members the area A bounded by the dotted line can be considered instead of the area of the plane $n-n$.

the slopes of the membrane, giving the stresses in the wall of the tubular member, are:

$$\tau_1 = \frac{\delta_1}{h_1}, \quad \tau_2 = \frac{\delta_2}{h_2}, \quad (e)$$

$$\tau_3 = \frac{\delta_1 - \delta_2}{h_3} = \frac{h_1\tau_1 - h_2\tau_2}{h_3}. \quad (f)$$

The magnitude of the torque producing these stresses is obtained by doubling the volume of the space $mmnppm$ in Fig. 163 (b). If we denote the areas bounded by the dotted lines in Fig. 163 (a) by A_1 and A_2 this torque is

$$M_t = 2(A_1\delta_1 + A_2\delta_2), \quad (g)$$

or, by using equations (e), we obtain

$$M_t = 2A_1h_1\tau_1 + 2A_2h_2\tau_2. \quad (h)$$

Further equations for the solution of the problem are obtained by applying equation (259) to the two closed curves indicated by the dotted lines in Fig. 163 (a). Assuming that the portion BCD of the wall has a constant thickness h_1 and that the portions DEB and DB have the constant thicknesses h_2 and h_3 , respectively, equation (259) becomes

$$\tau_1s_1 + \tau_3s_3 = 2G\theta A_1, \quad (i)$$

$$\tau_2s_2 - \tau_3s_3 = 2G\theta A_2. \quad (j)$$

Here s_1 , s_2 , and s_3 are the lengths measured along the dotted lines BCD , DEB and DB , respectively. In applying the integral (259) to the closed curves $BCDB$ and $DEBD$, we are passing the portion DB of the length s_3 in the two opposite directions. Hence the second terms on the left sides of equations (i) and (j) appear with opposite signs. The angle of twist θ on the right side of the equations (i) and (j) is evidently the same as the angle of twist of the entire tubular member. The four equations (f), (h), (i) and (j) contain the four unknown τ_1 , τ_2 , τ_3 and θ , which can be easily calculated. Eliminating θ , we obtain for shearing stresses the following formulas:

$$\tau_1 = M_t \cdot \frac{h_3s_2A_1 + h_2s_3(A_1 + A_2)}{2[h_1h_3s_2A_1^2 + h_2h_3s_1A_2^2 + h_1h_2s_3(A_1 + A_2)^2]}, \quad (k)$$

$$\tau_2 = M_t \cdot \frac{h_3 s_1 A_2 + h_1 s_3 (A_1 + A_2)}{2[h_1 h_3 s_2 A_1^2 + h_2 h_3 s_1 A_2^2 + h_1 h_2 s_3 (A_1 + A_2)^2]}, \quad (l)$$

$$\tau_3 = M_t \cdot \frac{h_1 s_2 A_1 - h_2 s_1 A_2}{2[h_1 h_3 s_2 A_1^2 + h_2 h_3 s_1 A_2^2 + h_1 h_2 s_3 (A_1 + A_2)^2]}. \quad (m)$$

If the wall DB of the cross section in Fig. 163 (*a*) is the plane of symmetry of the cross section we have

$$s_1 = s_2, \quad h_1 = h_2, \quad \text{and} \quad A_1 = A_2,$$

and equation (*m*) gives $\tau_3 = 0$. Thus in this case the torque is taken entirely by the outer wall of the tube, and the intermediate web remains unstressed.¹⁴

To obtain the angle of twist θ for the tubular member, we have to substitute the calculated values of stresses in equations (*i*) or (*j*). Thus the torsional problem for a tubular member, such as is shown in Fig. 163, can be readily solved with a sufficient accuracy provided the wall thickness is small in comparison with the general dimensions of the cross section.

53. Torsion of Thin-Walled Members in which Some Cross Sections are Prevented from Warping.—In our previous discussion of the twist of I beams and channels (p. 275) it was assumed that the torque was applied at the ends of the bar and that all cross sections were completely free to warp. There are cases, however, where the conditions are such as to cause one or more cross sections to remain plane and the question arises as to how such prevention of warping affects the angle of twist and the distribution of stresses. For bars of solid cross sections, such as ellipses or rectangles such constraint produces only a negligible effect on the angle of twist¹⁵ if the cross-sectional dimensions are small in comparison with the length of the bar. With I beams, channels and other thin-walled members the prevention of warping of the cross sections during twist is accompanied by a bending of the

¹⁴ The small stresses corresponding to the change in slope of the membrane across the thickness of the web are neglected in this derivation.

¹⁵ For the discussion of this question see "Theory of Elasticity," p. 273.

flanges and may have a considerable effect on the angle of twist, depending on the rigidity of the flanges. A simple case of this is an I beam which is twisted by a couple applied at the middle and supported¹⁶ at the ends (Fig. 164). From

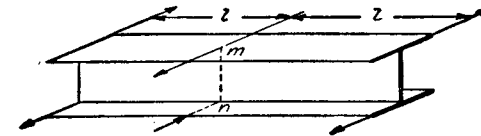


FIG. 164.

symmetry, the cross section mn must remain plane during twist and the consequent rotation of this cross section with respect to the end cross sections is accompanied by bending of the flanges. The end torque is balanced at any cross

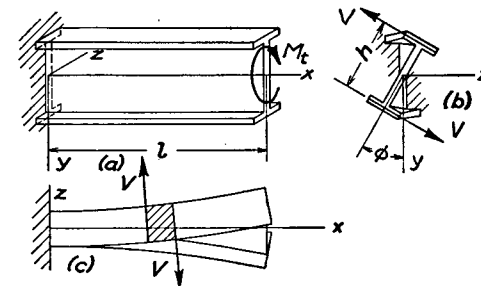


FIG. 165.

section partially by shearing stresses due to the twisting and partially by shearing stresses due to the bending of the flanges.¹⁷ Figure 165 (*a*) represents half of the beam shown in Fig. 164. The middle section mn remains plane due to

¹⁶ Supports are such that the ends of the beam can not rotate about a longitudinal axis but are free to warp.

¹⁷ See paper by the author, Bull. Polyt. Inst. S. Petersburg, 1905-1906, and Ztschr. f. Math. u. Phys., Vol. 58, 1910, p. 361. See also K. Huber, Dissertation, München, 1922, and C. Weber, Ztschr. f. angew. Math. u. Mech., Vol. 6, 1926, p. 85. Further discussion of the problem for various shapes of thin-walled members is given by A. Ostenfeld,

symmetry and we may consider it as built in, with the torque applied at the other end of the beam. Let φ be the angle of twist for any cross section of the beam. Then $d\varphi/dx = \theta$ is the angle of twist per unit length of the beam. That part of the torque M_t' which is balanced by the shearing stresses due to torsion is determined from the equation:

$$M_t' = C\theta, \quad (a)$$

in which C is the *Torsional Rigidity* of the bar (see p. 270, Part I). In order to determine the portion M_t'' of the torque which is balanced by the shearing forces in the flanges due to bending, we must consider the bending of a flange (Fig. 165, c). Denoting by h the distance between the centroids of the flanges (Fig. 165, b), the deflection at any cross section of the upper flange is

$$z = \frac{h\varphi}{2}, \quad (b)$$

and by differentiation we obtain:

$$\frac{d^3z}{dx^3} = \frac{h}{2} \frac{d^3\varphi}{dx^3} = \frac{h}{2} \frac{d^2\theta}{dx^2}. \quad (c)$$

Now, if we denote by D the flexural rigidity of one flange in the plane xz and observe that z is positive as shown (Fig. 165, c), the expression for the shearing force in the flange due to bending becomes

$$V = \frac{dM}{dx} = D \frac{d^3z}{dx^3} = \frac{Dh}{2} \frac{d^2\theta}{dx^2}. \quad (d)$$

Considering the positive direction of V (as shown in Fig. 165, c), we therefore have

$$M_t'' = -Vh = -\frac{Dh^2}{2} \frac{d^2\theta}{dx^2} \quad (e)$$

Laboratorium f. Baustatik d. techn. Hochschule, Kopenhagen, Mitteilung Nr. 6, 1931. The case of rectangular tubular members was discussed by H. Reissner, Zeitschr. f. Flugtechnik u. Motorluftschiffahrt, Vol. 17, 1926, p. 385 and Vol. 18, 1927, p. 153.

and the total torque is

$$M_t = M_t' + M_t'' = C\theta - \frac{Dh^2}{2} \frac{d^2\theta}{dx^2}. \quad (261)$$

In our case, M_t is constant along the length l of the beam, and the general solution of equation (261) is

$$\theta = \frac{M_t}{C} \left[1 - \frac{\cosh\left(\frac{l-x}{a}\right)}{\cosh\left(\frac{l}{a}\right)} \right], \quad (f)$$

in which

$$a^2 = \frac{Dh^2}{2C}. \quad (g)$$

Since the flexural rigidity D and torsional rigidity C are both measured in the same units (lbs. in.²), equation (g) shows that a has the dimension of length and depends upon the proportions of the beam.

If we know the portions M_t' and M_t'' of the total torque M_t may be calculated for any cross section from equations (a) and (e). For the built-in section $x = 0$, $\theta = 0$, and we obtain, from (a), $M_t' = 0$. Hence at this point the whole torque is balanced by the moment of the shearing forces due to bending in the flanges, and we have $V = -M_t/h$. For the other end $x = l$, and from equation (f)

$$\theta = \frac{M_t}{C} \left(1 - \frac{1}{\cosh\left(\frac{l}{a}\right)} \right). \quad (h)$$

If the length of the beam is large in comparison with the cross sectional dimensions, l is large in comparison with a , and the second term in the parenthesis of equation (h) becomes negligible; hence θ approaches the value M_t/C .

Equation (d) gives the shearing force in the flanges, and

from this the bending moment in the flange is

$$M = \frac{Dh}{2} \frac{d\theta}{dx}, \quad (i)$$

or, substituting equation (f) for θ , and using notation (g),

$$M = \frac{Dh}{2} \frac{M_t}{aC} \frac{\sinh\left(\frac{l-x}{a}\right)}{\cosh\left(\frac{l}{a}\right)} = \frac{a}{h} M_t \frac{\sinh\left(\frac{l-x}{a}\right)}{\cosh\left(\frac{l}{a}\right)}. \quad (j)$$

For the bending moment at the built-in end we find

$$M_{\max} = \frac{a}{h} M_t \tanh\left(\frac{l}{a}\right). \quad (k)$$

When l is several times larger than a , $\tanh(l/a)$ approaches unity, and we can use

$$M_{\max} = \frac{aM_t}{h}, \quad (l)$$

i.e., the maximum bending moment in the flange is the same as that in a cantilever of length a , loaded at the end by a force M_t/h . For a very short beam l is small in comparison with a , $\tanh(l/a)$ approaches l/a , and we have, from equation (k),

$$M_{\max} = \frac{M_t l}{h}. \quad (m)$$

Take, as an example, a 12" standard I beam with a cross-sectional area of 9.26 sq. in. Replacing the cross section by the equivalent cross section shown in Fig. 166 consisting of three rectangles having the same cross sectional areas of flanges and web¹⁸ and using equation (256), we find

$$C = 1/3(10.91 \times 0.35^3 + 2 \times 5 \times 0.544^3)G = 0.692G. \quad (n)$$

The magnitude of D is obtained¹⁹ by taking half of the moment of

¹⁸ A somewhat better approximation for C can be obtained by taking account of sloping of the flanges as explained on p. 276.

¹⁹ The moment of inertia of the cross section of the web is neglected here.

inertia of the standard cross section about the vertical principal axis and multiplying it by E . Then $D = (9.5/2) \cdot E = 4.75E$, and we obtain from equation (g)

$$a = h \sqrt{\frac{D}{2C}} = h \sqrt{\frac{4.75 \times 2.6}{0.692 \times 2}} = 2.99h. \quad (o)$$

Hence if the beam is loaded as in Fig. 164, the maximum bending moment in the flange, from equation (l), is approximately three times the torque M_t , provided the beam is long enough to make $\tanh(l/a)$ approach 1. For instance, for $l/a = 2$, l approaches $6h$, $\tanh(l/a) = 0.96$, and the error of the above calculation is 4 per cent.

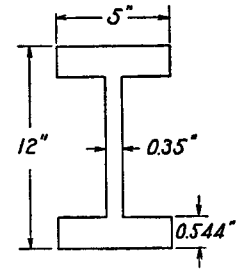


FIG. 166.

To calculate the angle of twist φ we use equation (f). Recalling that $\theta = d\varphi/dx$, integrating equation (f) and adjusting the constant of integration to make $\varphi = 0$ when $x = 0$, we obtain

$$\varphi = \frac{M_t}{C} \left[x + \frac{a \sinh\left(\frac{l-x}{a}\right)}{\cosh\left(\frac{l}{a}\right)} - a \tanh\left(\frac{l}{a}\right) \right]. \quad (p)$$

Substituting $x = l$ in this equation, the angle of twist at the end is

$$(\varphi)_{x=l} = \frac{M_t}{C} \left(l - a \tanh\left(\frac{l}{a}\right) \right). \quad (q)$$

The second term in the parenthesis represents the effect of the bending of the flanges on the angle of twist. For long beams $\tanh(l/a) \approx 1$ and equation (q) becomes

$$(\varphi)_{x=l} = \frac{M_t}{C} (l - a). \quad (r)$$

The effect of the bending of the flanges on the angle of twist is therefore equivalent to diminishing the length l by the quantity a .

The method developed above for a constant torque may

also be used when the torque varies along the length of the beam. It is only necessary to substitute in equation (261) in place of M_t its expression as a function of x .

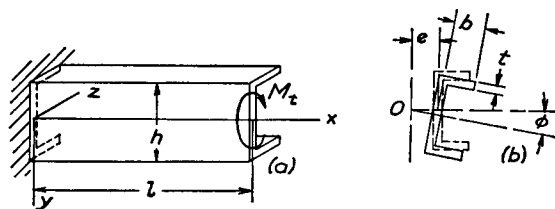


FIG. 167.

In the preceding discussion of torsion of an I beam, Fig. 165, it was concluded from symmetry that its cross sections are rotating with respect to the center axis of the beam. Hence only bending of the flanges has to be considered. It is seen also that this bending does not interfere with the simple torsion of the web since at the points of junction of the web and flanges the bending stresses in the flanges vanish. In the case of non-symmetrical cross sections or cross sections with only one axis of symmetry the problem becomes more complicated since not only bending of flanges but also that of the web will be produced during torsion. As an example of such a kind, let us consider the case of torsion of a channel, Fig. 167. It was already shown (see p. 51) that in this case each cross section rotates with respect to the center of twist O which is on the horizontal axis of symmetry of the cross section at a distance (see p. 53)

$$e = b^2 h^2 t / 4 I_z \quad (s)$$

from the middle plane of the web. From this it follows that the deflections of the flanges and of the web in their respective planes are

$$z = \pm \frac{h}{2} \varphi \quad \text{and} \quad y = e \varphi, \quad (t)$$

where φ , as before, is the small angle of twist. It is assumed

that the thickness of the flanges and of the web are small so that the stresses due to bending of these parts in the directions perpendicular to their surfaces can be neglected. In such a

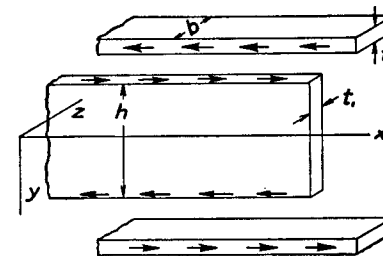


FIG. 168.

case the action between the upper flange and the web is represented only by shearing stresses $(\tau_{xz})_0$ shown in Fig. 168. These stresses produce bending and compression of the flange. If S is the magnitude of the compressive force in the flange at a distance x from the built-in end, we have

$$t(\tau_{xz})_0 = -\frac{dS}{dx} \quad \text{and} \quad S = t \int_x^l (\tau_{xz})_0 dx.$$

The magnitude of the force S is now determined from the condition that the strain ϵ_x in a longitudinal direction at the junction of the web and the flange is the same for both these parts. Calculating the curvatures of the deflection curves from the expressions (t), we find that this condition is represented by the equation

$$\epsilon_x = e \frac{d^2 \varphi}{dx^2} \cdot \frac{h}{2} = \frac{h}{2} \frac{d^2 \varphi}{dx^2} \cdot \frac{b}{2} - \frac{S}{btE}, \quad (u)$$

from which, using expression (s), and using notation $I_z = t_1 h^3 / 12 + bt h^2 / 2$, we obtain

$$S = \frac{Eb^2 h^4 t_1}{48 I_z} \cdot \frac{d^2 \varphi}{dx^2}. \quad (v)$$

Having this expression for S we can readily calculate the shearing stresses in the web and the flanges and also the portion M_i'' of the torque balanced by these stresses. Let us begin with the shearing stresses in the web. Taking two adjacent cross sections mn and m_1n_1 , Fig. 169 (a), and con-

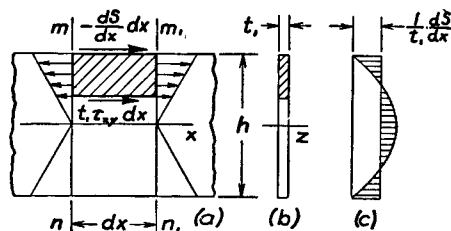


FIG. 169.

sidering in the usual way the equilibrium of the shaded element, we obtain the equation

$$\tau_{xy} t_1 dx - \frac{dS}{dx} dx + \frac{dM}{dx} \cdot \frac{Q}{I_z'} dx = 0$$

in which Q is the moment with respect to z axis of the shaded portion of the cross section of the web, Fig. 169 (b), $I_z' = t_1 h^3/12$ is the moment of inertia of the cross section of the web with respect to z axis and M is the bending moment in the web taken positive if producing tension at the upper edge and equal to

$$M = EI_z' e \frac{d^2 \varphi}{dx^2} = Sh.$$

The expression for the stresses τ_{xy} then becomes

$$\tau_{xy} = \frac{dS}{t_1 dx} \left(1 - \frac{Qh}{I_z'} \right).$$

Observing that the variation of Q along the depth of the cross section follows the parabolic law, we find that the distribution of τ_{xy} is such as given by the shaded area in Fig. 169 (c) and that the resultant shearing force in the web vanishes. This

latter conclusion should be anticipated, since the shearing forces in the web and in the two flanges must balance the portion M_i'' of the torque and this is possible only if the shearing force in the web vanishes and the shearing forces in the two flanges form a couple.

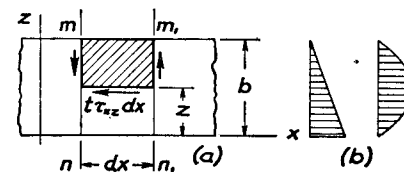


FIG. 170.

In calculating shearing stresses τ_{xz} in the flange, Fig. 170 (a), we observe that at a cross section mn there are acting a compressive force S and a bending moment ²⁰

$$M = D \frac{d^2 \varphi}{dx^2} \cdot \frac{h}{2}. \quad (w)$$

Considering the equilibrium of the shaded element between the two adjacent cross sections we then obtain

$$t \tau_{xz} dx + \frac{dS}{dx} dx \cdot \frac{b-z}{b} + \frac{dM}{dx} dx \frac{Q_1}{I_1} = 0$$

where Q_1 and I_1 are to be calculated for the flange in the same manner as Q and I_z' for the web. Substituting for M its expression (w) we obtain

$$\tau_{xz} = -\frac{1}{t} \frac{dS}{dx} \frac{b-z}{b} - \frac{E}{t} \cdot \frac{d^3 \varphi}{dx^3} \cdot \frac{h Q_1}{2}.$$

The two terms on the right-hand side of this equation are represented in Fig. 170 (b) by the shaded areas of the triangle and of the parabolic segment respectively. The sum of these two areas multiplied by t gives the total shearing force in the

²⁰ $D = Etb^3/12$ denotes, as before, the flexural rigidity of the flange in its plane.

flange which is ²¹

$$V = \frac{b}{2} \frac{dS}{dx} + E \frac{htb^3}{24} \frac{d^3\varphi}{dx^3}$$

or substituting for S its expression (v) and setting $\theta = d\varphi/dx$ we obtain

$$V = \frac{Eb^3ht}{24} \left(1 + \frac{t_1h^3}{4I_z} \right) \frac{d^2\theta}{dx^2}. \quad (x)$$

Hence the torque balanced by the shearing forces in the flanges is

$$M_t'' = -Vh = -\frac{Dh^2}{2} \left(1 + \frac{t_1h^3}{4I_z} \right) \frac{d^2\theta}{dx^2}. \quad (y)$$

This expression, instead of the expression (e) obtained for the I beam, should be used in calculating the angle of twist of the channel shown in Fig. 167. Hence all the conclusions obtained for the I beam can be used also for the channel if the quantity a^2 given by expression (g) is replaced by the quantity

$$a^2 = \frac{Dh^2}{2C} \left(1 + \frac{t_1h^3}{4I_z} \right).$$

The method used in discussing torsion of a symmetrical channel, Fig. 167, can be applied also in the more general case of a non-symmetrical channel section, Fig. 171. We begin with determination of the center of twist O . Assuming that the channel is built in at one end and loaded at the other end in such a way that the bending without twist occurs in

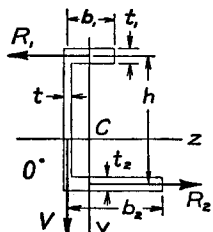


FIG. 171.

the plane of the web, we find in the usual manner (see p. 53) the shearing forces R_1 , R_2 and V acting in the flanges and in the web of the channel. The resultant of these forces must pass through the center of twist O (see art. 8). Another line passing through the same point is obtained, if we assume that the channel is bent in the horizontal plane and calculate again the

²¹ The positive direction for V is as shown in Fig. 165 (c).

three corresponding shearing forces in the flanges and in the web. The point of intersection of the resultant of these latter forces and the previously determined resultant of the forces R_1 , R_2 and V is the required center of twist O of the unsymmetrical cross section. Having this center and proceeding as before (see eqs. (t)), we express the deflection curves of the flanges and of the web by the angle of twist φ . The tension compression forces S_1 and S_2 in the flanges are now determined from the conditions that at the junctions the longitudinal strain ϵ_x is the same for the web as for the adjacent flange. When the forces S_1 and S_2 are calculated, the distribution of shearing stresses can be found as in the above discussed case of a symmetrical channel, and it can be shown ²² that the shearing force in the web vanishes and the shearing forces R in the two flanges give a couple balancing the portion M_t'' of the torque.

Problems

1. A cantilever of a Γ section, Fig. 172, built in at one end is twisted by a couple M_t applied at the other end. Find the angle of twist and the maximum bending moment in the flanges.

Solution. In this case the center of twist coincides with the centroid C of the cross section. There will be no bending of the web. The forces S are identical in this case for both flanges and the distribution of shearing stresses is such as shown in Fig. 172 (b). The shearing force in the web vanishes and the equal and opposite shearing forces V in the flanges equal

$$\pm \frac{Eb^3ht}{12} \left(2 - \frac{3bt}{2bt + ht_1} \right) \frac{d^3\varphi}{dx^3}$$

form a couple so that

$$M_t'' = -Vh = -Dh^2 \left(2 - \frac{3bt}{2bt + ht_1} \right) \frac{d^3\varphi}{dx^3}$$

²² The calculations are given in the paper by A. Ostenfeld, loc. cit., p. 283.

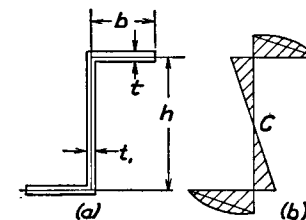


FIG. 172.

where D is the flexural rigidity of one flange. The angle of twist and the maximum bending moment in the flanges are calculated from eqs. (k) and (l) in which, for this case,

$$a^2 = \frac{Dh^2}{C} \left(2 - \frac{3bt}{2bt + ht_1} \right).$$

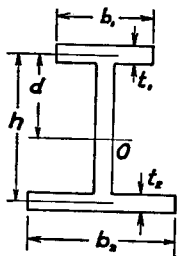


FIG. 173.

2. Solve the preceding problem assuming that the cross section is as shown in Fig. 173.

Answer. The shearing forces in the flanges are

$$V = \pm Dd \frac{d^3 \phi}{dx^3}$$

where

$$D = \frac{Et_1 b_1^3}{12}, \quad \frac{d}{h-d} = \frac{b_2^3 t_2}{b_1^3 t_1}.$$

The torque M_t'' taken by the bending of flanges is

$$M_t'' = -Ddh \frac{d^3 \phi}{dx^3}.$$

The value of a to be substituted in eqs. (k) and (l) is obtained from the equation

$$a^2 = \frac{Ddh}{C}.$$

3. Solve the problem 1 for the cross sections shown in Fig. 174.

Answer. In both these cases the center of twist O is at the junction of the flanges. Rotation with respect to this point does not produce any bending of flanges in their planes and the entire torque is transmitted by the torsional stresses alone.

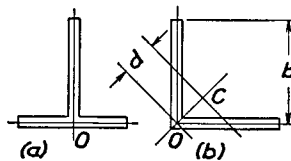


FIG. 174.

54. Torsional Buckling of Thin-Walled Compression Members.—From the discussion of art. 51 it may be concluded that the torsional rigidity C of thin-walled open sections decreases as the cube of the wall thickness while the flexural rigidities are decreasing in a smaller proportion. Hence a thin-walled member is more flexible in torsion than in flexure. If such

a member is submitted to the action of an axial compression a *torsional buckling* may occur²³ at a smaller load than the Euler load discussed in art. 35. The approximate magnitude of the load at which this torsional buckling occurs may be readily obtained by using in each particular case an equation, equivalent to equation (261) of the preceding article, defining the torsion of a thin-walled member one of the cross sections of which is prevented from warping. As an example let us consider here a column of a channel cross section, built-in at the bottom and centrally loaded at the top (Fig. 175, a). If the column buckles sidewise as indicated in the figure by the dotted lines, the vertical compressive force P gives, in each cross section, a component Pdy/dx acting in the plane of the cross section and passing through its centroid. The action of this force can be replaced by the bending action of an equal force passing through the shear center O , Fig. 175 (b), and the torque

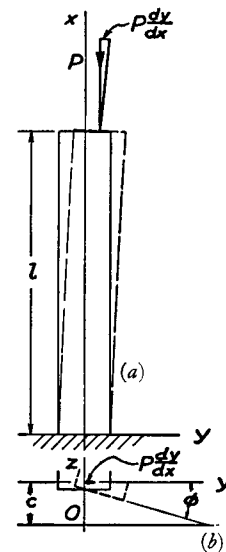


FIG. 175.

$$M_t = cP \frac{dy}{dx} = c^2 P \frac{d\phi}{dx} = c^2 P \theta \quad (a)$$

in which c denotes the distance of the shear center O from the centroid of the cross section and ϕ is the angle of twist. If the compressive force P is several times smaller than the Euler load for the buckling of the column in the xy plane the above mentioned bending action may be neglected and only the

²³ The torsional buckling was discussed by H. Wagner, Technische Hochschule, Danzig, the 25th Anniversary Publication, 1904-1929. See also H. Wagner and W. Pretschner, Luftfahrtforschung, Vol. 11, 1934, p. 174; and R. Kappus, Luftfahrtforschung, Vol. 14, 1937, p. 444. English Translation of the later paper see in Tech. Mem. No. 851, 1938, Nat. Adv. Com. Aern. Regarding experiments with torsional buckling see paper by A. S. Niles, Tech. Notes No. 733, 1939, Nat. Adv. Com. Aern.

torsion considered.²⁴ In such a case equation (261) can be used. Substituting for M_t expression (a) and for M_t'' expression (y) derived for a channel section, we obtain

$$c^2 P \theta = C \theta - \frac{D h^2}{2} \left(1 + \frac{t_1 h^3}{4 I_z} \right) \frac{d^2 \theta}{dx^2}$$

or

$$\frac{d^2 \theta}{dx^2} + k^2 \theta = 0 \quad (b)$$

where

$$k^2 = \frac{c^2 P - C}{\frac{D h^2}{2} \left(1 + \frac{t_1 h^3}{4 I_z} \right)} \quad (c)$$

Since the lower end of the column is built in and there is no bending moment acting on the flanges at the top, the end conditions for θ are

$$(\theta)_{x=0} = 0, \quad \left(\frac{d\theta}{dx} \right)_{x=l} = 0. \quad (d)$$

To satisfy the first of these conditions we take the solution of the equation (b) in the following form:

$$\theta = A \sin kx. \quad (e)$$

This solution will satisfy also the second of the conditions (d) if we put

$$kl = \frac{\pi}{2}, \quad k = \frac{\pi}{2l}. \quad (f)$$

Substituting for k^2 its expression (c) we obtain

$$P_{cr} = \frac{\pi^2}{4l^2} \cdot \frac{D h^2}{2c^2} \left(1 + \frac{t_1 h^3}{4 I_z} \right) + \frac{C}{c^2}. \quad (262)$$

The first term on the right side of this equation is due to local bending resistance at the built-in end, and the second, independent of the length l , is due to torsional resistance.

If instead of a channel we have a thin-walled open section

²⁴ If this force is approaching the Euler load a more elaborate analysis is required as shown by R. Kappus, footnote 23.

of some other shape we have only properly to change the first member in expression (262) as explained in the preceding article. In a particular case of a \perp section or of an angle, Fig. 174, the center of twist O coincides with the point of junction of flanges, and there will be no bending of flanges in their respective planes during torsion. Hence the first term in the expression (262) vanishes, and we obtain

$$P_{cr} = \frac{C}{c^2}. \quad (263)$$

It should be noted that in the discussion of the preceding article the thickness of the flanges was assumed as very small and the flexural rigidity of the flanges in the direction perpendicular to the flange was neglected. If that rigidity is taken into consideration, an additional term on the right side of the expression (263) appears, the magnitude of which for an angle with equal legs is $\pi^2 2 b t^3 E / 12 (1 - \mu^2) 4 l^2$. This is the sum of the Euler loads calculated for the two flanges. It rapidly decreases as the length l increases so that expression (263) has a satisfactory accuracy for long columns.²⁵ Having the value of the torsional buckling load for a column with one end built-in and the other free, we readily obtain the buckling load for a member with hinged ends by substituting, as usual, $l/2$ for l . In this way we obtain for a channel member with hinged ends, from expression (262)

$$P_{cr} = \frac{\pi^2}{l^2} \frac{D h^2}{2c^2} \left(1 + \frac{t_1 h^3}{4 I_z} \right) + \frac{C}{c^2}. \quad (264)$$

²⁵ A more accurate formula for torsional buckling of an angle with equal legs was derived by the writer, considering each flange as a longitudinally compressed rectangular plate. See Bull. of the Polyt. Inst. Kiev, 1907, and also Ztschr. f. Math. u. Phys., Vol. 58, 1910. It seems that that problem was the first case in which the torsional buckling was discussed. The fundamental equation (261) was given by the writer in 1905, loc. cit., p. 283. The extension of this equation on channel sections was given by C. Weber, loc. cit., p. 283. The application of the equation in studying torsional buckling is due to H. Wagner, Technische Hochschule, Danzig, the 25th Anniversary Publication, 1929.

It may be seen from the formula that the first term on the right side, dealing with bending of flanges, diminishes as the length l increases so that for comparatively long members the stability is practically controlled by the second term in expression (264).

The formula was developed by assuming that the cross sections at the ends of the member are free to warp. Any constraint preventing free warping of the end cross sections will result in an increase of the first term in formula (264). If the ends are built-in the length $l/2$ instead of l must be substituted in formula (264) and we obtain for this case

$$P_{cr} = \frac{4\pi^2 D h^2}{l^2} \frac{D h^2}{2c^2} \left(1 + \frac{t_1 h^3}{4I_z} \right) + \frac{C}{c^2}. \quad (265)$$

It is interesting to note that the formula

$$P_{cr} = \frac{C}{c^2}$$

which is obtained for the critical load if the bending resistance can be neglected follows at once from the energy consideration. Since during torsion the cross sections rotate with respect to their shear centers, the center line of the member becomes a helix, the tangent to which makes an angle θc with the initially straight axis of the member. Due to this angle the compressive forces P come together by an amount $\theta^2 c^2 l/2$. Equating the corresponding work to the strain energy of torsion we obtain

$$P \frac{l}{2} \theta^2 c^2 = \frac{C \theta^2}{2} l$$

which gives

$$P_{cr} = \frac{C}{c^2}.$$

55. Longitudinal Normal Stresses in Twisted Bars.—In discussing torsion of circular shafts (art. 58, Part I), it is usually assumed that the distance between any two cross sections of a shaft remains unchanged during torsion. It will be shown now that this assumption

is very accurate for such material as steel in which the maximum shearing strain during torsion is very small. But for a material such as rubber the maximum shearing strain during torsion may be considerable. Then the change in distances between the cross sections of the shaft during torsion must be taken into account if we wish to get the correct values of stresses. The same conclusion holds also for steel torsional members of a narrow rectangular cross section or of thin-walled cross sections such as shown in Fig. 159.

Let us begin the discussion with the case of a solid circular shaft and assume first that the distance between the two consecutive cross sections, Fig. 176, remains unchanged during torsion. If γ is the shearing strain at the surface of the shaft, the elongation of the longitudinal fiber ac is obtained from the triangle acc_1 as follows:

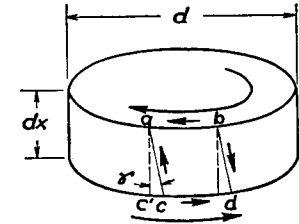


FIG. 176.

$$ac = \frac{ac_1}{\cos \gamma} = ac_1 \left(1 + \frac{1}{2} \gamma^2 \right).$$

Expressing γ by the angle of twist per unit length θ , we obtain

$$ac = ac_1 \left[1 + \frac{1}{2} \left(\frac{\theta d}{2} \right)^2 \right]$$

and the unit elongation of the fiber ac is

$$\epsilon_{\max} = \frac{ac - ac_1}{ac_1} = \frac{1}{2} \gamma^2 = \frac{1}{8} \theta^2 d^2 = \frac{1}{2} \frac{\tau_{\max}^2}{G^2}. \quad (a)$$

The corresponding tensile stress is

$$\sigma_{\max} = \epsilon_{\max} E = \frac{E}{2} \cdot \frac{\tau_{\max}^2}{G^2}.$$

For any other fiber at a distance r from the axis of the shaft, the unit shear is less than γ in the ratio $r : d/2$ and the tensile stress is

$$\sigma = \sigma_{\max} \left(\frac{2r}{d} \right)^2 = E \frac{2r^2}{d^2} \frac{\tau_{\max}^2}{G^2}. \quad (b)$$

The assumption made that the distance between the cross sections remains unchanged during twist brings us therefore to the conclusion that a longitudinal tensile force, producing tensile stresses (b), should be applied at the ends to keep its length unchanged. If no such

force is applied, but only a pure torque, the twist will be accompanied by some shortening of the shaft. Let ϵ_0 be the corresponding unit shortening. Then instead of equation (b) we obtain

$$\sigma = \frac{2r^2}{d^2} \frac{E\tau_{\max}^2}{G^2} - \epsilon_0 E. \quad (c)$$

The quantity ϵ_0 is determined from the condition that the longitudinal force corresponding to the stress distribution (c) should be equal to zero. Dividing the cross section into elemental rings and making a summation of forces corresponding to stresses (c), we obtain²⁶

$$\begin{aligned} \int_0^{d/2} 2\pi r \sigma dr &= 2\pi \int_0^{d/2} \left(\frac{2r^2}{d^2} \frac{E\tau_{\max}^2}{G^2} - \epsilon_0 E \right) r dr \\ &= \frac{\pi d^2 E}{4} \left(\frac{\tau_{\max}^2}{4G^2} - \epsilon_0 \right) = 0, \end{aligned}$$

from which

$$\epsilon_0 = \frac{\tau_{\max}^2}{4G^2},$$

and the stress distribution, from equation (c), becomes

$$\sigma = \frac{E\tau_{\max}^2}{4G^2} \left(\frac{8r^2}{d^2} - 1 \right). \quad (266)$$

The maximum stress occurs at the outer surface, where $r = d/2$, and we obtain

$$\sigma_{\max} = \frac{E\tau_{\max}^2}{4G^2}. \quad (267)$$

At the center of the cross section we obtain a compressive stress of the same amount.

It is interesting to note that the stress σ is proportional to τ_{\max}^2 ; hence the importance of this stress increases with increasing τ_{\max} , i.e., with increasing angle of twist. For such material as steel τ_{\max} is always very small in comparison with G and the magnitude of σ_{\max} is therefore small in comparison with τ_{\max} , and can be neglected. But for such material as rubber τ_{\max} may become of the same order as G and σ_{\max} will no longer be small in comparison with τ_{\max} and must be taken into consideration.

If, instead of a circular cross section, we have a narrow rec-

²⁶ It is assumed that the cosines of the angles between the fibers and the axis of the bar can be taken equal to unity.

tangular one, it can be shown²⁷ that even for such materials as steel the stresses σ may become of the same order of magnitude as τ_{\max} . If the longer side of the cross section, b , is large in comparison with its shorter side, c , the maximum elongation of the most remote fiber due to twist alone is, from equation (a), with b substituted for d ,

$$\epsilon_{\max} = \frac{b^2}{8} \theta^2.$$

For any fiber at distance y from the axis, the elongation is less, in the ratio $(2y/b)^2$. Combining this elongation with the longitudinal unit contraction ϵ_0 , we obtain

$$\epsilon = \frac{b^2}{8} \theta^2 \left(\frac{2y}{b} \right)^2 - \epsilon_0 = \frac{\theta^2 y^2}{2} - \epsilon_0.$$

The corresponding tensile stress is

$$\sigma = E \left(\frac{\theta^2 y^2}{2} - \epsilon_0 \right). \quad (d)$$

The constant ϵ_0 is determined, as before, from the condition that the tensile longitudinal force is equal to zero; hence

$$\int_{-b/2}^{b/2} c \sigma dy = cE \int_{-b/2}^{b/2} \left(\frac{\theta^2}{2} y^2 - \epsilon_0 \right) dy = cE \left(\frac{\theta^2}{2} \cdot \frac{b^3}{12} - \epsilon_0 b \right) = 0,$$

from which

$$\epsilon_0 = \frac{\theta^2}{2} \cdot \frac{b^2}{12},$$

and we obtain, from (d),

$$\sigma = \frac{E\theta^2}{2} \left(y^2 - \frac{b^2}{12} \right). \quad (e)$$

The maximum tensile stress for the most remote fiber ($y = b/2$) is

$$\sigma_{\max} = \frac{E\theta^2 b^2}{12}. \quad (f)$$

The maximum compressive stress at the center ($y = 0$) is

$$\sigma_{\min} = - \frac{E\theta^2 b^2}{24}. \quad (g)$$

²⁷ See paper by Buckley, Phil. Mag., 1914, p. 778. See also C. Weber, "Die Lehre der Verdrehungsfestigkeit," Berlin, 1921, and also his paper in A. Foepppl, Festschrift, Berlin, 1924.

To compare these stresses with τ_{\max} , equations (253) and (254) can be used. For a very narrow rectangular section we obtain

$$\theta = \frac{\tau_{\max}}{cG}. \quad (h)$$

Substituting this in expressions (f) and (g), we obtain

$$\sigma_{\max} = \frac{E\tau_{\max}^2}{12G^2} \cdot \frac{b^2}{c^2}; \quad \sigma_{\min} = -\frac{E\tau_{\max}^2}{24G^2} \cdot \frac{b^2}{c^2}. \quad (268)$$

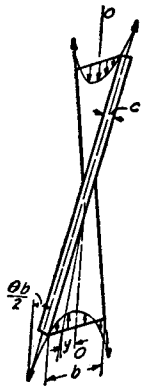


FIG. 177.

It is seen that when b/c is a large number the stresses σ_{\max} and σ_{\min} may not be small in comparison with τ_{\max} . The distribution of the stresses (see eq. e) is shown²⁸ in Fig. 177. These stresses have the direction of longitudinal fibers of the twisted strip, and are inclined to the axis of the strip at an angle θy . Their projections on the plane perpendicular to the axis of the bar are

$$\sigma \cdot \theta y = \frac{E\theta^3}{2} \left(y^3 - \frac{b^2 y}{12} \right). \quad (k)$$

The component (k) of stress σ per element cdy of the cross section gives a moment, with respect to the axis of the bar equal to

$$\frac{E\theta^3}{2} \left(y^3 - \frac{b^2 y}{12} \right) cy dy.$$

Hence the torque resulting from the stresses σ is

$$\int_{-b/2}^{b/2} \frac{E\theta^3}{2} \left(y^3 - \frac{b^2 y}{12} \right) cy dy = \frac{Ec b^5}{360} \theta^3.$$

Combining this torque with that due to the shearing stresses and determined from equation (253), we obtain the following expression for the total torque:

$$M_t = \frac{1}{3} bc^3 G \cdot \theta + \frac{1}{360} Ec b^5 \theta^3 = \frac{1}{3} bc^3 G \theta \left(1 + \frac{1}{120} \frac{E b^4}{G c^2} \theta^2 \right). \quad (269)$$

²⁸ This stress distribution takes place at some distance from the ends. Near the ends a more complicated stress distribution, than that in expression (e), is produced and such as to make the ends entirely free from normal stresses. This kind of stress distribution is discussed in "Theory of Elasticity," p. 152.

It can be seen that in the case of a very narrow rectangular cross section and comparatively large angles of twist the stresses σ may contribute an important portion of the torque since this portion, represented by the second term in equation (269), varies as θ^3 while the portion due to the shearing stresses τ varies as θ . When the magnitude of the torque is given, the corresponding angle of twist θ is found from equation (269). The maximum shearing stress τ_{\max} is then calculated from equation (h) and σ_{\max} , σ_{\min} from equations (268). Take, for example, $b = 4$ in., $c = 0.05$ in., $E/G = 2.6$, $G = 11.5 \times 10^6$ lbs. per sq. in. and $M_t = \frac{1}{3} bc^2 \times 15,000$ lbs. ins. = 50 lbs. ins. If the normal stresses σ be neglected, equation (254) gives $\tau_{\max} = 15,000$ lbs. per sq. in. and equation (253) gives

$$\theta = \frac{\tau_{\max}}{cG} = 0.0261.$$

Taking into consideration the longitudinal stresses and using equation (269), we obtain

$$0.0261 = \theta(1 + 2.220\theta^2),$$

from which $\theta = 0.0164$;

$$\tau_{\max} = \theta \cdot c \cdot G = 9,430 \text{ lbs. per sq. in.};$$

$$\sigma_{\max} = \frac{E\tau_{\max}^2}{12G^2} \frac{b^2}{c^2} = 10,700 \text{ lbs. per sq. in.}$$

It can be seen that for such a large angle of twist of a thin metallic strip the normal stresses σ are of the same order as the shearing stresses τ and can not be neglected in calculating the angle of twist.

From the above given discussion it may be concluded that a uniform longitudinal tension will have some influence on the angle of twist of a thin rectangular strip. Assume, for example, that a uniform longitudinal tensile stress σ_0 is applied to the strip which was just considered. In such a case the equation for calculation ϵ_0 is

$$cE \left(\frac{\theta^2}{2} \frac{b^3}{12} - \epsilon_0 b \right) = \sigma_0 bc,$$

and we obtain

$$\epsilon_0 = \frac{\theta^2}{2} \frac{b^2}{12} - \frac{\sigma_0}{E}.$$

The expression for longitudinal stress σ then becomes

$$\sigma = \frac{E\theta^2}{2} \left(y^2 - \frac{b^2}{12} \right) + \sigma_0$$

and the corresponding torque is

$$\int_{-b/2}^{+b/2} \sigma \theta y \cdot cy dy = \frac{Ec b^5}{360} \theta^3 + \frac{\sigma_0 \theta b^3 c}{12}.$$

For the total torque, instead of equation (269), we then obtain

$$M_t = \frac{1}{3} b c^3 G \theta \left(1 + \frac{1}{120} \frac{E}{G} \frac{b^4}{c^2} \theta^2 + \frac{1}{4} \frac{\sigma_0}{G} \cdot \frac{b^2}{c^2} \right). \quad (270)$$

It is seen that when b/c is a large number, i.e., in the case of a thin strip, the tensile stress may reduce considerably the angle of twist θ .

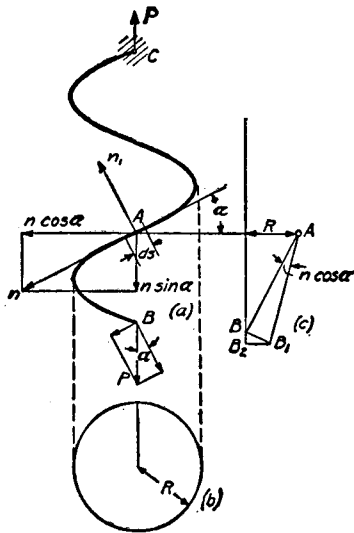


FIG. 178.

56. Open Coiled Helical Spring.

—In the previous discussion of helical springs (see p. 271, Part I), it was assumed that the angle α between the coils and the plane perpendicular to the axis of the helix was very small. This angle neglected, the deformation is only a twisting of the wire. In open coiled springs the angle α is no longer small and the deformation produced by the axial loads P consists of both twist and bending (Fig. 178). At any point A the tangent to the helical center line of the spring is not perpendicular to the force P and this force produces at the cross section A of the wire the bending moment about the axis n_1 and torque. P is resolved into two

components: $P \cos \alpha$ and $P \sin \alpha$, respectively perpendicular to and parallel to the tangent at A . At this cross section the component $P \cos \alpha$ produces the torque

$$M_t = PR \cos \alpha, \quad (a)$$

where R is the radius of the helix, and the component $P \sin \alpha$

produces the bending moment

$$M = PR \sin \alpha. \quad (b)$$

The maximum combined stress is (see p. 277, Part I):

$$\sigma_{\max} = \frac{16}{\pi d^3} \left(M + \sqrt{M^2 + M_t^2} \right) = \frac{16PR}{\pi d^3} (1 + \sin \alpha), \quad (271)$$

in which d is the diameter of the wire. The maximum shearing stress is ²⁹

$$\tau_{\max} = \frac{16}{\pi d^3} \sqrt{M^2 + M_t^2} = \frac{16PR}{\pi d^3}. \quad (272)$$

Let us consider now the deflection of the spring on the assumption that it is fixed at the upper end and loaded by an axial load P at the lower end. An element ds between two adjacent cross sections at A is twisted by the torque M_t through the angle

$$d\phi = \frac{PR \cos \alpha}{GI_p} ds. \quad (c)$$

Due to this twist the lower portion of the spring rotates about the tangent at A through the above angle $d\phi$. This small rotation is represented in the figure by the vector n along the tangent, which is taken in such a direction that between the direction of the vector and the direction of rotation there exists the same relation as between the displacement and the rotation of a right hand screw. The small rotation n may be resolved into two components: (1) a rotation $n \cos \alpha$ about a horizontal axis, and (2) a rotation $n \sin \alpha$ about a vertical axis. The latter rotation does not produce any lowering of end B of the spring and so need not be considered here. The discussion of the lowering of the end B of the spring due to the rotation $n \cos \alpha$ follows the same form as that for a close coiled spring. Due to this rotation point B is displaced to B_1 (Fig. 178, *c*) and we have $\overline{BB_1} = \overline{AB} n \cos \alpha$. The vertical component of this displacement is

$$\overline{BB_2} = \overline{BB_1} \cdot \frac{R}{AB} = Rn \cos \alpha. \quad (d)$$

²⁹ If the diameter d of the wire is not very small in comparison with the diameter $2R$ of the helix this value must be multiplied by the correction factor, which, for $\alpha < 20^\circ$, can be taken to be the same as for close coiled springs (p. 272, Part I). A further discussion of this subject is given by O. Göhner, V. D. I., Vol. 76, 1932, p. 269.

The total deflection of the end B due to twist is the summation of elements such as given by eq. (d), or

$$\delta_1 = \int_B^C Rn \cos \alpha, \quad (e)$$

in which the summation is taken along the total length of the spring from the lower end B to the upper fixed end C .

The deflection due to bending may be calculated in the same manner. The angular deflection due to the bending of the element ds by the moment M (eq. b) is

$$d\phi_1 = \frac{PR \sin \alpha}{EI} ds. \quad (f)$$

The corresponding rotation of the lower portion of the spring is shown in the figure by the vector n_1 . In the same manner as above it may be shown that only its horizontal component $n_1 \sin \alpha$ contributes to the vertical displacement of the end B and that the magnitude of this displacement is

$$\delta_2 = \int_B^C Rn_1 \sin \alpha. \quad (g)$$

By adding (e) and (g), the total deflection of the end B becomes

$$\delta = \delta_1 + \delta_2 = R \int_B^C (n \cos \alpha + n_1 \sin \alpha).$$

Substituting equation (c) for n and equation (f) for n_1 , we obtain

$$\delta = PR^2 \int_B^C \left(\frac{\cos^2 \alpha}{GI_p} + \frac{\sin^2 \alpha}{EI} \right) ds,$$

or, noting that the expression in the parenthesis is constant and denoting the length of the wire of the spring by s , we have

$$\delta = PR^2 s \left(\frac{\cos^2 \alpha}{GI_p} + \frac{\sin^2 \alpha}{EI} \right). \quad (273)$$

If the diameter d of the wire is not small in comparison with $2R$, the torsional rigidity GI_p in equation (273) must be multiplied by the correction factor

$$\beta = 1 + \frac{3 \left(\frac{d}{2R} \right)^2}{16 \left[1 - \left(\frac{d}{2R} \right)^2 \right]}.$$

The same factor can be used also for a spring with a square cross section.³⁰

Equations (271), (272), and (273) give us the complete solution to the problem of an open-coiled helical spring submitted to the action of an axial force.³¹

The *extension* of the spring is accompanied by *rotation* of the end B with respect to the vertical axis of the helix. To determine this rotation, let us again consider the deformation of the element ds in Fig. 178 (a). Due to torsion of this element there will be rotation of the lower portion of the spring by an angle:³²

$$n \sin \alpha = \frac{M_t ds}{GI_p} \sin \alpha.$$

Due to bending of the same element producing the angular change n_1 , Fig. 178 (a), the rotation of the lower portion of the spring with respect to the vertical axis is

$$- n_1 \cos \alpha = - \frac{M ds}{EI} \cos \alpha.$$

Hence the total rotation about the axis of the helix of the lower portion of the spring due to deformation of an element ds , is

$$ds \left(\frac{M_t \sin \alpha}{GI_p} - \frac{M \cos \alpha}{EI} \right). \quad (h)$$

The sum of these elemental rotations equals the total angle of rotation ϕ of the end B with respect to the fixed end C of the spring:

$$\begin{aligned} \phi &= s \left(\frac{M_t \sin \alpha}{GI_p} - \frac{M \cos \alpha}{EI} \right) \\ &= sPR \sin \alpha \cos \alpha \left(\frac{1}{GI_p} - \frac{1}{EI} \right), \quad (274) \end{aligned}$$

where s is the total length of the spring wire.

In the case of other forms of cross section of the wire, the corre-

³⁰ O. Göhner, loc. cit., p. 305.

³¹ The theory of helical springs was developed by St. Venant; see C. R., Vol. 17, 1843, p. 1020. A series of particular cases was discussed by Thompson and Tait, Nat. Phil., 2d part, p. 139; I. Perry, Applied Mechanics, New York, 1907, p. 613; and G. W. Shearer, Engineering, Vol. 93, 1912, p. 206.

³² A circular cross section of the wire is assumed.

sponding value of torsional rigidity C instead of GI_p must be substituted in equation (274).

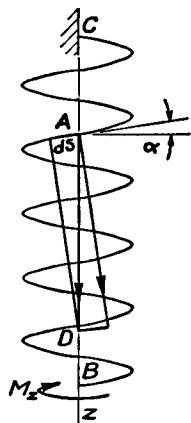


FIG. 179.

Axial Torsion.—Let the vector \overline{AD} represent the torque M_z applied at the end B of the spring, Fig. 179. The bending and the twisting moments acting on the element ds at A are

$$M = M_z \cos \alpha, \quad M_t = M_z \sin \alpha.$$

The rotation of the end B of the spring around the z axis due to deformation of the element ds is

$$ds \left(\frac{M_t}{GI_p} \sin \alpha + \frac{M}{EI} \cos \alpha \right) = ds M_z \left(\frac{\sin^2 \alpha}{GI_p} + \frac{\cos^2 \alpha}{EI} \right).$$

The total rotation of the end B of the spring with respect to the z axis produced by the torque M_z is

$$\varphi_1 = s M_z \left(\frac{\sin^2 \alpha}{GI_p} + \frac{\cos^2 \alpha}{EI} \right). \quad (275)$$

Since the tensile force P produces rotation φ of the end B of the spring, it can be concluded from the reciprocity theorem (p. 330, Part I) that the torque M_z will produce the elongation of the spring. The magnitude δ of this elongation is obtained from the equation:

$$P\delta = M_z\varphi,$$

from which

$$\delta = \frac{M_z}{P} \varphi = M_z s R \sin \alpha \cos \alpha \left(\frac{1}{GI_p} - \frac{1}{EI} \right). \quad (276)$$

Axial Bending.—Sometimes we have to consider pure bending of a helical spring in its axial plane, Fig. 180. Let M_b , represented by vector \overline{AB} , Fig. 180 (b), be the magnitude of the bending couples in yz plane. Considering an element ds of the spring at a point A , defined by the angle θ , we resolve the vector \overline{AB} into two components: $\overline{AC} = M_b \cos \theta$, and $\overline{AD} = M_b \sin \theta$. The first component represents a couple in the plane tangent to the cylindrical surface of the radius R , which produces bending of the wire in that plane. The second component represents a couple acting in the axial plane of the spring, and can be resolved into torque, $M_b \sin \theta \cos \alpha$, and bending moment in the plane of the coil, $M_b \sin \theta \sin \alpha$. Hence the

element ds undergoes bending by a combined bending moment equal to

$$\sqrt{M_b^2 \cos^2 \theta + M_b^2 \sin^2 \theta \sin^2 \alpha}, \quad (j)$$

and twist by a torque equal to $M_b \sin \theta \cos \alpha$. The strain energy of the element then, assuming a circular cross section, is

$$dU = ds \left[\frac{M_b^2 (\cos^2 \theta + \sin^2 \theta \sin^2 \alpha)}{2EI} + \frac{M_b^2 \sin^2 \theta \cos^2 \alpha}{2GI_p} \right]. \quad (k)$$

Substituting $ds = R d\theta / \cos \alpha$, and integrating from $\theta = 0$ to $\theta = 2\pi n$, where n is the number of coils, we obtain

$$U = \frac{\pi n R}{\cos \alpha} \left[\frac{M_b^2 (1 + \sin^2 \alpha)}{2EI} + \frac{M_b^2 \cos^2 \alpha}{2GI_p} \right]. \quad (l)$$

The angular deflection of one end of the spring with respect to the

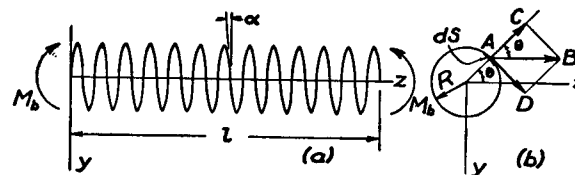


FIG. 180.

other is l/ρ , where l is the length of the spring, Fig. 180 (a), determined from the expression

$$l = s \sin \alpha = \frac{2\pi R n}{\cos \alpha} \cdot \sin \alpha,$$

and ρ is the radius of curvature of the deflection curve. Equating the work done by the bending couples M_b to the strain energy (l), we obtain

$$\frac{M_b}{2} \cdot \frac{l}{\rho} = U,$$

from which

$$\frac{1}{\rho} = M_b \cdot \frac{1}{\sin \alpha} \left[\frac{1 + \sin^2 \alpha}{2EI} + \frac{\cos^2 \alpha}{2GI_p} \right]. \quad (277)$$

Hence the quantity

$$B = \frac{\sin \alpha}{\frac{1 + \sin^2 \alpha}{2EI} + \frac{\cos^2 \alpha}{2GI_p}} \quad (m)$$

must be taken as the flexural rigidity in the case of an axial bending of helical springs of circular cross section. If the angle α is small, we can assume with sufficient accuracy that $\sin^2 \alpha = 0$ and $\cos^2 \alpha = 1$.

Substituting also $\sin \alpha = l/s$, we represent the flexural rigidity of a helical spring by the formula:

$$B = \frac{2EI l}{s} \cdot \frac{1}{1 + \frac{E}{2G}}. \quad (278)$$

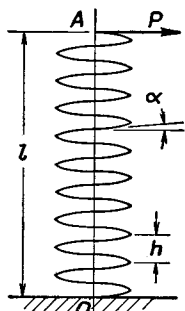


FIG. 181.

In considering bending of a helical spring by a lateral load, Fig. 181, we have to take into account not only deflections produced by bending moment but also deflections produced by shearing force. Assuming that the end O of the spring is fixed and that α is small, we obtain the deflection δ_1 of the upper end A of the spring produced by the bending moment action from the usual cantilever formula by substituting the value (278) for flexural rigidity. Hence

$$\delta_1 = \frac{Pl^3}{3} \cdot \frac{s}{2EI l} \cdot \left(1 + \frac{E}{2G}\right). \quad (n)$$

In discussing the effect of shearing force on the deflections, let us consider the distortion of one coil in its plane³³ produced by the shearing force V, Fig. 182. The bending moment produced by V at any point A is $VR \sin \theta$, and the corresponding strain energy of one coil is

$$U = \int_0^{2\pi} \frac{M^2 R d\theta}{2EI} = \frac{V^2 R^3 \pi}{2EI}.$$

The relative displacement e then is

$$e = \frac{\partial U}{\partial V} = \frac{\pi V R^3}{EI}.$$

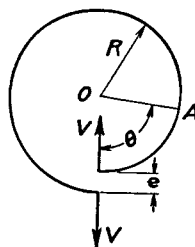


FIG. 182.

Dividing this displacement by the pitch h of the helix, we obtain the additional slope γ of the deflection curve produced by the shearing force action:

$$\gamma = \frac{e}{h} = \frac{\pi V R^3 n}{EI l}.$$

This expression must be used instead of the expression $\alpha V/AG$ in the formulas for deflections produced by shear action in solid beams (see art. 39, Part I), if it is required to adapt these formulas to the calculation of lateral deflections of helical springs. In the case shown in Fig. 181 the shearing force is constant along the length l and equal to P ; hence the deflection due to shear is

$$\delta_2 = \gamma l = \frac{\pi n P R^3}{EI}. \quad (p)$$

Adding expressions (n) and (p) and assuming $s = 2\pi R n$, we obtain

$$\delta = \delta_1 + \delta_2 = \frac{\pi n P l^3 R}{3EI} \left(1 + \frac{E}{2G} + \frac{3R^2}{l^2}\right). \quad (279)$$

The last term in the parenthesis represents the effect of shear action. It is negligible if the radius R of the helix is small in comparison with the length l .³⁴

³⁴ Lateral buckling of helical springs under axial compression is discussed in "Theory of Elastic Stability," p. 165.

³³ The angle α is assumed small in this discussion.

CHAPTER VII

STRESS CONCENTRATION

57. Stress Concentration in Tension or Compression

Members.—In discussing simple tension and compression it was assumed that the bar has a prismatical form. Then for centrally applied forces the stress is uniformly distributed over the cross section. A uniform stress distribution was also assumed in the case of a bar of variable cross section (see Fig. 14, Part I), but this is an approximation which gives satisfactory results only when the variation in the cross section is gradual. Abrupt changes in cross section give rise to great irregularities in stress distribution. These irregularities are of particular importance in the design of machine parts subjected to variable external forces and to reversal of stresses. Irregularity of stress distribution at such places means that at certain points the stress is far above the average and under the action of reversal of stresses progressive cracks are likely to start from such points. The majority of fractures of machine parts in service can be attributed to such progressive cracks.

To illustrate the stress distribution in a bar of variable cross section under tension, let us consider a symmetrical wedge of a constant thickness h loaded as shown in Fig. 183. An exact solution has been found for this case¹ which shows that there is a pure radial stress distribution. An element in the radial direction at a point A is in a condition of simple radial tension. The magnitude of this radial tensile stress is given by the equation

$$\sigma_r = k \frac{P \cos \theta}{hr}, \quad (a)$$

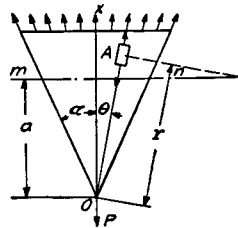


FIG. 183.

¹ See paper by A. Mesnager, *Annales des Ponts et Chaussées*, 1901. See also I. H. Michell, *London Math. Soc. Proc.*, Vol. 32 (1900) and Vol. 34 (1902). The problem is discussed also in "Theory of Elasticity," p. 93, 1934.

in which θ is the angle between the x axis and the radius OA , r is the distance of the point A from O and $k = 1/(\alpha + \frac{1}{2} \sin 2\alpha)$ is a factor depending on the angle 2α of the wedge.

The distribution of normal stresses σ_x over any cross section mn perpendicular to the axis of symmetry of the wedge is not uniform. Using eq. (17) (see p. 36, Part I) and substituting $r = a/\cos \theta$ in eq. (a) above, we find

$$\sigma_x = \sigma_r \cos^2 \theta = \frac{kP \cos^4 \theta}{ah}. \quad (b)$$

This shows that the normal stress is a maximum at the center of the cross section ($\theta = 0$) and a minimum at $\theta = \alpha$. The difference between the maximum and minimum stress increases with the angle α . When $\alpha = 10^\circ$, this difference is about 6 per cent of the average stress obtained by dividing the load P by the area of the cross section mn . Analogous conclusions may be drawn for a conical bar. It may be shown that the distribution of normal stresses over a cross section approaches uniformity as the angle of the cone diminishes.

This discussion shows that the assumption of uniform distribution of normal stresses over a cross section of a non-prismatical bar gives satisfactory results if the variation in cross section along the bar is not rapid.

However the conditions are quite different when there are abrupt changes in the cross section. Then the distribution of stresses at the place of variation is very far from being uniform and results obtained on the assumption of uniform stress distribution are entirely misleading. Several examples of abrupt change in cross section are discussed in the subsequent two articles.

58. Stresses in a Plate with a Circular Hole.—If a small circular hole² is made in a plate submitted to a uniform tensile stress σ , a high stress concentration takes place at the points mn (Fig. 184, a). The exact theory³ shows that the tensile stress at these points is equal to 3σ . It shows also that this stress concentration is of a very localized character and is confined to the immediate vicinity of the hole. If a circle be drawn concentric with the hole and of com-

² The diameter of the hole is less, say, than $\frac{1}{8}$ of the width of the plate.

³ This theory was given by Kirsch, V. D. I., 1898. See also "Theory of Elasticity," p. 75, 1934.

paratively large radius c , as shown in Fig. 184 (a) by the dotted line, it can be assumed that the stress condition at the circumference of this circle is not materially affected by the presence of the hole. Let Fig. 184 (b) represent a circular ring cut out of the plate by a circular cylindrical surface of radius c . At each point of the outer surface of this ring we apply vertically directed stress of magnitude $\sigma \sin \varphi$, i.e., equal to the stress on the corresponding elemental area A of the plate (see eq. 16, Part I); then the stresses in the ring will be approximately the same as in the portion of the plate bounded by the circle of radius c (Fig. 184, a). In this

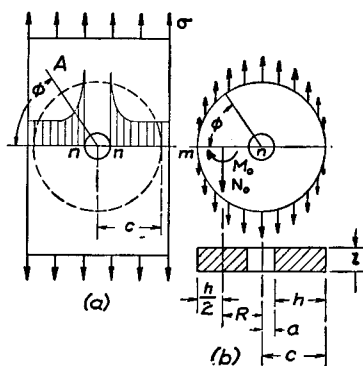


FIG. 184.

manner the problem of the stress distribution near the hole in a plate is reduced to that of an annular ring of rectangular cross section subjected to known vertical forces of intensity $\sigma \sin \varphi$ continuously distributed along its outer boundary.⁴ This latter problem may be solved by using the method discussed on p. 81. Considering one quadrant of the ring, the stresses acting across the cross section mn are reduced to a longitudinal tensile force N_0 at the centroid of the cross section and a bending couple

$$N_0 = \sigma c. \quad (a)$$

The moment M_0 is statically indeterminate and is calculated by use of the theorem of least work. Equation (88), p. 84, is used for the potential energy, in which the longitudinal force and the bending moment at any cross section of the ring, determined by the angle φ (Fig. 184, b), are

$$N = \sigma c \cos^2 \varphi; \quad M = M_0 + \sigma c (1 - \cos \varphi) \left[\frac{c}{2} (1 - \cos \varphi) + \frac{h}{2} \cos \varphi \right] - \sigma c \left(c - \frac{h}{2} \right) (1 - \cos \varphi), \quad (b)$$

where h is the depth of the rectangular cross section. Then

$$\frac{dU}{dM_0} = \int_0^{\pi/2} \frac{Md\varphi}{AEe} - \int_0^{\pi/2} \frac{Nd\varphi}{AE} = 0,$$

⁴ The thickness of the plate is assumed to be unity.

from which, after integration,

$$M_0 = \frac{2\sigma c^2}{\pi} \left[1 - \frac{3}{8}\pi - \frac{h}{2c} \left(1 - \frac{1}{4}\pi \right) + \frac{e\pi}{4c} + \frac{R}{2c}(\pi - 2) \right]. \quad (c)$$

Here, as before, R is the radius of the center line and e the distance of the neutral axis from the centroid of the cross section.

The stress at the point n of the cross section mn of the ring consists of two parts: (1) the tensile stress produced by the longitudinal force N_0 and equal to

$$\sigma_1 = \frac{N_0}{h} = \frac{\sigma c}{h}, \quad (d)$$

and (2) the bending stress produced by M_0 which is, from eq. (66),

$$\sigma_2 = \frac{M_0 h_1}{Aea} = \frac{M_0 \left(\frac{h}{2} - e \right)}{Aea} = \frac{M_0}{2ea} \left(1 - \frac{2e}{h} \right), \quad (e)$$

in which a is the radius of the hole.

The distance e is calculated by use of eq. (70) for various values of the ratio c/a and then the quantities σ_1 and σ_2 are determined from eqs. (d) and (e). The maximum stress is

$$\sigma_{\max} = \sigma_1 + \sigma_2.$$

The results of these calculations are given in the table 22 below.

TABLE 22

$c/a =$	3	4	5	6	8	10
$2e/h$	0.1796	0.2238	0.2574	0.2838	0.3239	0.3536
σ_1/σ	1.50	1.33	1.25	1.20	1.14	1.11
σ_2/σ	2.33	1.93	1.83	1.83	1.95	2.19
σ_{\max}/σ	3.83	3.26	3.08	3.03	3.09	3.30

Comparison of the figures of the last line of the above table with the exact solution $\sigma_{\max} = 3\sigma$ for a small hole shows that for $5 < c/a < 8$ the results of approximate calculation agree closely with the exact solution. When $c/a < 5$, the hole cannot be considered as very small, but has a perceptible effect on the distribution of stresses along the circle of radius c (Fig. 184, a), in which case our assumption regarding the distribution of forces along the outer boundary of the ring (Fig. 184, b) is not accurate enough. The

deviation from the exact theory for $c/a > 8$ is due to insufficient accuracy in the elementary theory of curved bars for the case where the inner radius is very small in comparison with the outer one.

Taking any point in the cross section mn , Fig. 184 (b), at a distance r from the center of the hole the normal stress at that point is

$$\frac{\sigma}{2} \left(2 + \frac{a^2}{r^2} + \frac{3a^4}{r^4} \right) \quad (f)$$

where σ is the uniform tensile stress applied at the ends of the plate. This stress distribution is shown in Fig. 184 (a) by the shaded areas. It is seen that the stress concentration is highly localized in this case.

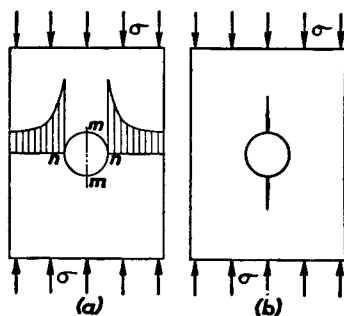


FIG. 185.

At points n , i.e., at $r = a$, we have $\sigma_{\max} = 3\sigma$. The stresses decrease rapidly as the distance from this overstressed point increases; at a distance from the edge of the hole equal to the radius of the hole, i.e., for $r = 2a$, we obtain from expression (f) the normal stress equal to $1\frac{7}{8}\sigma$. The stress decreases rapidly also with the increase of the angle φ , Fig. 184 (b), and for $\varphi = \pi/2$, i.e., for the cross section parallel to the applied tensile stresses σ we find

at the edge of the hole a compressive stress in the tangential direction of the magnitude equal to the tensile stress σ applied at the ends of the plate.

If, instead of tension, we have compression of the plate, Fig. 185 (a), we have only to change the sign of stresses obtained in our preceding discussion, and we conclude that there will be a compressive stress of the magnitude 3σ at points n and a tensile stress of the magnitude σ at points m . In the case of a brittle material such as glass which is very strong in compression and weak in tension, the cracks usually start at points m as shown in Fig. 185 (b).

Having the stresses for simple tension or compression and using the method of superposition, we readily obtain the stress concentration for the cases of *combined tension or compression* in two perpendicular directions. For example, in the case shown in Fig. 186(a) we find that the tangential stress at points n is $3\sigma_y - \sigma_x$ and at points m the stress is $3\sigma_x - \sigma_y$. In the particular case of *pure shear* we have

$$\sigma_x = -\sigma_y = \sigma$$

and we obtain for points n the stress -4σ and for the points m the stress $+4\sigma$; thus in this case the maximum stress is four times larger than the stresses applied at the edges of the plate. Such a condition of high stress concentration we obtain in the torsion of a thin-walled circular tube with a small circular hole in it, Fig. 186 (b). If the

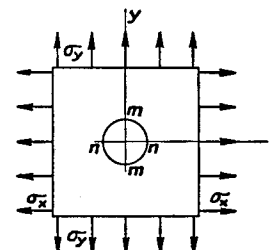


FIG. 186a.



FIG. 186b.

applied torque has the direction indicated in the figure, the maximum tensile stress, four times larger than the shearing stresses applied at the ends, is produced at the edge of the hole at the points marked by plus signs. At the points marked by the minus signs, there will be a compressive stress of the same magnitude.

The approximate method of calculation stresses at a circular hole described above can also be used for the case of a hole with a bead (Fig. 187). This calculation, worked out⁵ for $b/t_1 = 11$, $t/2a = 0.01$, gave the following values of the ratio $\sigma_{\max} : \sigma$ for various values of c/a :

$c/a = 4$	5	6
$\sigma_{\max}/\sigma = 2.56$	2.53	2.56

In the range considered, the ratio σ_{\max}/σ varies but slightly with c/a , so further calculations are made for the case $c/a = 5$ only. The influence of the cross sectional area of the bead on the σ_{\max} can be studied by varying the dimension b of the bead. If $A_1 = 2t_1a$ denotes the decrease in cross section of the plate due to the hole and $A_2 = (b - t_1)t$ the cross sectional area of the bead, the ratio σ_{\max}/σ for several values of the ratio A_2/A_1 is given below:

$A_2/A_1 = 0.10$	0.20	0.30	0.40	0.50
$\sigma_{\max}/\sigma = 2.53$	2.17	1.90	1.69	1.53

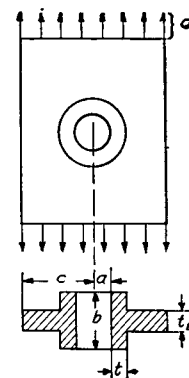


FIG. 187.

⁵ Discussion of this problem is given in the author's paper, Journal of the Franklin Institute, Vol. 197, p. 505, 1924. It is assumed that the entire cross section of the bead is effective.

The above figures can be used also in the case of other shapes of bead cross section provided the dimension t of the bead in the radial direction can be considered as small in comparison with the radius a of the hole. Take, for instance, a wide plate in tension, $\frac{7}{16}$ in. thick, with a circular hole of 40 in. diameter. Let the edge of the hole be stiffened with two angle irons $4 \times 4 \times \frac{7}{16}$ in. In such a case $A_2/A_1 = 0.40$ and the above table gives $\sigma_{\max} : \sigma = 1.69$.

59. Other Cases of Stress Concentration in Tension Members.—There are only a few cases in which, as in the case of a circular hole, the problem on stress concentration is

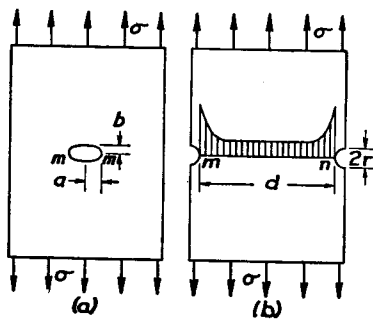


FIG. 188.

solved theoretically. In most cases our information regarding maximum stresses at points of sharp change in cross section is obtained from experiments.⁶ In our further discussion we shall limit ourselves to the final results of some theoretical and experimental investigations, which may be of practical significance.

In the case of a small *elliptical hole* in a plate⁷ (Fig. 188a) the maximum stress is at the ends of the horizontal axis of the hole, and is given by the equation:

$$\sigma_{\max} = \sigma \left(1 + 2 \frac{a}{b} \right). \quad (a)$$

where σ is the tensile stress applied at the ends of the plate. This stress increases with the ratio a/b , so that a very narrow hole perpendicular to the direction of tension produces a very high stress concentration. This explains why cracks perpen-

⁶ Various experimental methods of determining maximum stress are described in articles 63. See also E. Lehr, "Spannungsverteilung in Konstruktionselementen," 1934.

⁷ See G. Kolosoff, Dissertation, 1910, St. Petersburg; see also C. E. Inglis, Engineering, Vol. 95, 1913, p. 415, and Trans. Inst. of Naval Architects, 1913.

dicular to the direction of forces tend to spread. This spreading can be stopped by drilling holes at the ends of the crack to eliminate the sharp corners at the ends of the crack which produce high stress concentration.

Small *semi-circular grooves* in a plate subjected to tension (Fig. 188b) also produce high stress concentration. Experiments⁸ show that at points m and n the stresses are about three times the stress applied at the ends of the plate, if the radius r of the groove is very small in comparison with the width d of the minimum section. In general the maximum

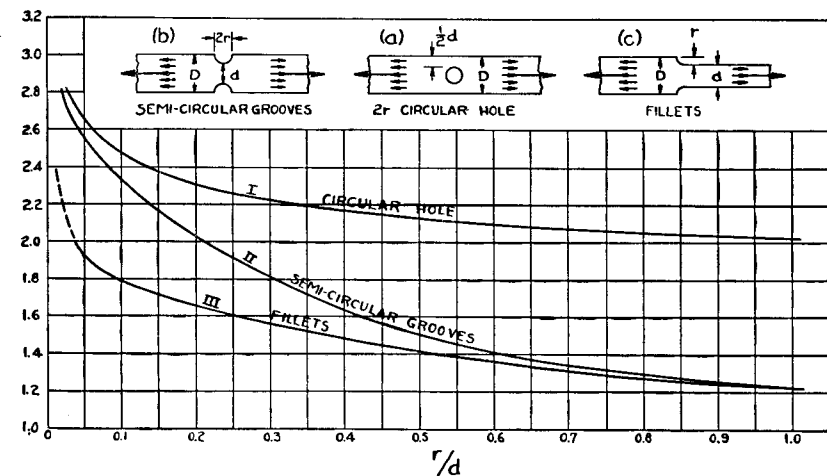


FIG. 189.

stress at points m and n is a function of the ratio r/d . The ratio of the maximum stress to the average stress in the minimum section such, as the cross section mn , is usually called the *factor of stress concentration* and denoted by k . The values of k for various values of the ratio r/d are given in Fig. 189 by the curve II.⁹ In the same figure are given also the factors of stress concentration for the case of a circular hole (curve I)

⁸ See M. M. Frocht, Journal of Applied Mechanics, Vol. 2, p. 67, 1935.

⁹ The curves given in the following discussion are taken from the article by M. M. Frocht, Journal of Applied Mechanics, Vol. 2, 1935, p. 67.

and for the case of fillets (curve III). In Fig. 190 more information regarding stress concentration at fillets is given.

In Fig. 191 the factors k are given for grooves of various depth having a circular shape at the bottom. It is seen that

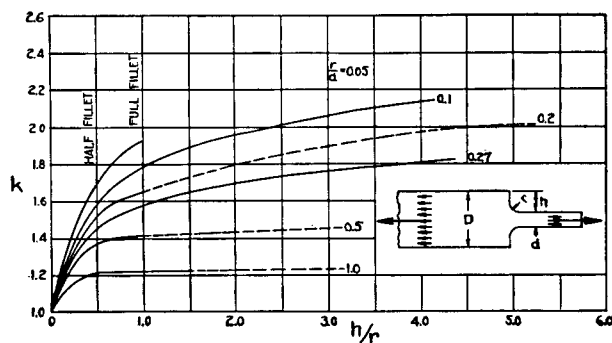


FIG. 190.

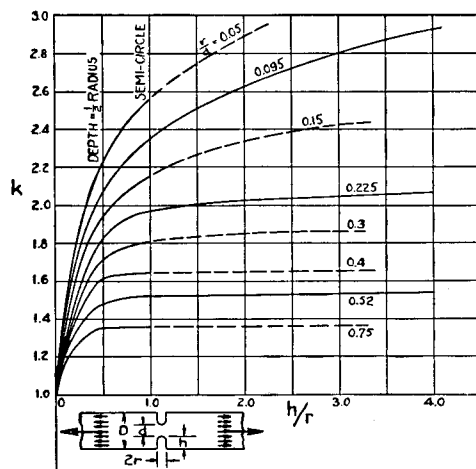


FIG. 191.

for deep grooves the factors of stress concentration are larger than those for semi-circular grooves with the same value of r/d .

The case of a plate of a very large width with hyperbolic grooves, Fig. 192, can be treated theoretically.¹⁰ The solution shows that

¹⁰ H. Neuber, Zeitsch. f. angew. Math. u. Mech., Vol. 13, 1933, p. 439.

the factor of stress concentration, i.e., the ratio of the maximum stress at the points m and n to the average tensile stress over the cross section mn , can be represented by the following approximate formula:¹¹

$$k = \sqrt{0.8 \frac{d}{r} + 1.2 - 0.1} \quad (b)$$

in which d is the width of the minimum section and r is the radius of curvature at the bottom of the groove. It is interesting to note the values of k obtained from this formula are in very good agreement with experimental results obtained for deep grooves ($h/r = 4$) semi-circular at the bottom, Fig. 191.

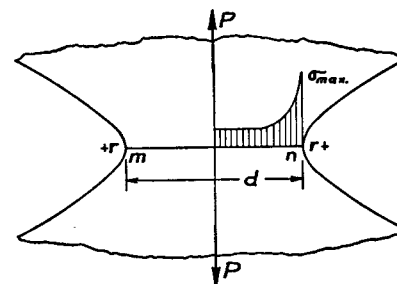


FIG. 192.

Assume now that Fig. 192 represents an axial section of a circular cylinder of a large diameter with deep grooves of a hyperbolic profile under an axial tension. The maximum tensile stress again occurs at the bottom of the groove and the value of the factor of stress concentration is ¹²

$$k = \sqrt{0.5 \frac{d}{r} + 0.85 + 0.08}. \quad (c)$$

The comparison of this formula with formula (b) shows that in the case of a grooved cylinder the stress concentration is smaller than in the case of a grooved plate. A further discussion of this comparison is given later (see art. 62).

In the case of a cylinder in tension with an ellipsoidal cavity at the axis, for which Fig. 188 (a) can be considered as an axial

¹¹ The Poisson ratio is taken equal to 0.3 in formulas (b), (c) and (d).

¹² H. Neuber, loc. cit., p. 320.

section, the maximum tensile stress occurs at points m . Its value is given by the following approximate formula

$$\sigma_{\max} = \sigma \left(\sqrt{0.8 \frac{a}{r}} + 0.05 + 0.78 \right) \quad (d)$$

where σ is a uniform tensile stress applied at the ends of the cylinder and r is the radius of curvature of the ellipse at points m .

The standard tensile test specimen for concrete, Fig 193, is another example of a tension member with sharp variation in cross section. Experiments show¹³ that the maximum stress occurs at points m and n and that this stress is about 1.75 times the average stress over the cross section mn .

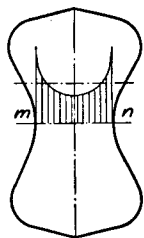


FIG. 193.

Figure 194 represents a *dovetail joint* which is often used in electric machines to hold the magnetic poles to the rim of the spider. The centrifugal force acting on the pole produces large tensile stresses over the cross section mn .

The distribution of these stresses is shown in Fig. 194 (b).¹⁴ Due to the abrupt change in cross section a high stress concentration takes place at points m and n . The tensile stresses σ_x are accompanied by stresses σ_y in a lateral direction. The distribution of these stresses along mn is shown in Fig. 194 (b), and their distribution along the vertical plane of symmetry is shown in Fig. 194 (a).

All the conclusions regarding stress distribution made above assume that the maximum stresses are within the proportional limit of the material. Beyond the proportional limit stress distribution depends on the *ductility* of the material. A *ductile material* can be subjected to considerable

¹³ See E. G. Coker, Proc. International Assoc. for Testing Materials, New York Congress, 1913.

¹⁴ See paper by E. G. Coker, Journal of the Franklin Inst., Vol. 199 (1925), p. 289. T-heads which also have frequent application in machine design were tested by M. Hetényi, "Journal of Applied Mechanics," Vol. 6, 1939, p. 151.

stretching beyond the yield point without great increase in stress. Due to this fact, the stress distribution beyond the yield point becomes more and more uniform as the material stretches. This explains why, with ductile materials, holes and notches do not lower the *ultimate strength* when the notched piece is tested statically. Moreover, in testing mild steel specimens with deep grooves, a certain increase in the ultimate strength is usually obtained, due to the fact that the grooves prevent necking of the specimen at the cross section of fracture (see p. 421).

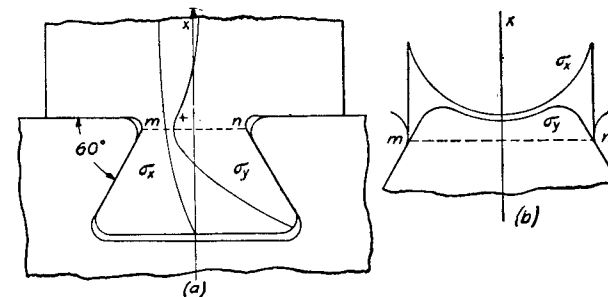


FIG. 194.

However in the case of a *brittle material*, such as glass, the high stress concentration remains right up to the point of breaking. This causes a substantial weakening effect, as demonstrated by the decrease in ultimate strength of any notched bar of brittle material. It is interesting to note that very fine scratches on the surface of a glass specimen do not produce a weakening effect, although stress concentration at the bottom of the scratch must be very high.¹⁵ In explanation of this, it is assumed that common glass in its natural condition has many internal microscopic cracks, and small additional scratches on the surface do not change the strength of the specimen.

The above discussion shows, therefore, that the use of notches and reentrant corners in design is a matter of judg-

¹⁵ This phenomenon was investigated by A. A. Griffith, Phil. Trans. (A), Vol. 221 (1920), p. 163.

ment. In the case of ductile structural steel high stress concentration is not dangerous provided there is no alternating stress. For instance, in the construction shown in Fig. 194, the stresses are very often so high that yielding occurs at m and n , but this yielding is not considered dangerous because the structure is subjected to the action of a constant force. In the case of brittle material, points of stress concentration may have a great weakening effect, and such places should be eliminated or the stress concentration reduced by using generous fillets.

In members subjected to reversal of stress the effect of stress concentration must always be considered, as progressive cracks are liable to start at such points even if the material is ductile (see art. 80).

60. Stress Concentration in Torsion Members.—In discussing the twisting of bars of various cross sections (see arts. 50 and 51) it was mentioned that reëntrant corners or other sharp irregularities in the boundary line of the cross section cause high stress concentration. Longitudinal holes have a similar effect.

As a first example let us consider the case of a *small circular hole* in a twisted circular shaft¹⁶ (Fig. 195). In discussing this problem the *hydrodynamical analogy* is very useful.¹⁷ The problem of the twisting of bars of uniform cross section is mathematically identical to that of the motion of a *frictionless fluid* moving with uniform angular velocity inside a cylindrical shell having the same cross section as the bar.

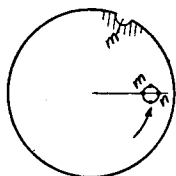


FIG. 195.

¹⁶ This case was investigated by J. Larmour, Phil. Mag., Vol. 33, 1892, p. 76.

¹⁷ This analogy was developed by Lord Kelvin and Tait, Natural Philosophy, Vol. 2; J. Boussinesq, Journal de Mathématique (Liouville), Vol. 16, 1871, and A. G. Greenhill, article "Hydromechanics," Encycl. Brit., 9th ed. Regarding the application of the analogy in experiments see the paper by J. P. Den Hartog and J. G. McGivern, "Journal of Appl. Mech.," Vol. 2, p. 46, 1935.

The velocity of the circulating fluid at any point is taken as representing the shearing stress at that point of the cross section of the bar when twisted. The effect of a small hole in a shaft of circular cross section is similar to that of introducing a stationary solid cylinder of the same size into the stream in the hydrodynamical model. Such a cylinder greatly changes the velocity of the fluid in its immediate neighborhood. The velocities at the front and rear points are reduced to zero, while those at the side points m and n are doubled. A hole of this kind therefore doubles the maximum stress in the portion of the shaft in which it is located. A small *semi-circular groove* on the surface parallel to the length of the shaft (Fig. 195) has the same effect. The shear in the neighborhood of the point m will be nearly twice the shearing stress calculated for points on the surface of the shaft far away from the groove.

The same hydrodynamical analogy explains the effect of a *hole of elliptical cross section* or of a *groove of semi-elliptical cross section*. If one of the principal axes a of the ellipse is in the radial direction and the other principal axis is b , the stresses at the edge of the hole at the ends of the a axis are increased in the proportion $[1 + (a/b)] : 1$. The maximum stress produced in this case thus depends upon the magnitude of the ratio a/b . The effect of an elliptical hole on the stress is greater when the major axis of the ellipse is in the radial direction than when it runs circumferentially. This explains why a radial crack has such a weakening effect on the strength of a shaft. The above discussion applies also to the case of a semi-elliptical groove on the surface parallel to the axis of the shaft.

In the case of a *keyway* with sharp corners (Fig. 196), the hydrodynamical analogy indicates a zero velocity of the circulating fluid at the corners projecting outwards (points $m-m$); hence the shearing stress in the corresponding torsion problem is equal to zero at such corners. At points $n-n$, the vertices of the reëntrant angles, the velocity of the circulating fluid is theoretically infinite. In the corresponding torsion problem

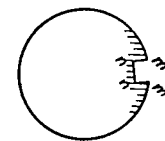


FIG. 196.

the shearing stress is also infinite at the points $n-n$, which means that even a small torque will produce permanent set at these points. Such stress concentration can be reduced by rounding the corners $n-n$.

Experiments made¹⁸ on a hollow shaft of outer diameter 10 in., inner diameter 5.8 in., depth of keyway 1 in., width of keyway 2.5 in., and radius of fillet in corner of keyway r , showed that the maximum stress at the rounded corners is equal to the maximum stress in a similar shaft without a keyway multiplied by the factor k given in the table below:

TABLE 23

r inches = 0.1	0.2	0.3	0.4	0.5	0.6	0.7
k = 5.4	3.4	2.7	2.3	2.1	2.0	1.9

This shows that the stress concentration can be greatly diminished by increasing the radius at the corners n .

The weakening effect of stress concentration in shafts due to holes and grooves depends on whether the material is ductile or not and the conclusions made in the previous article apply here as well.

If a tubular member has reëntrant corners, there is stress concentration at these corners and the magnitude of the maximum stress depends on the radius of the corners.

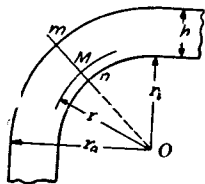


FIG. 197.

The approximate value of this maximum stress can be obtained from the membrane analogy. Let us consider the simple case of a tube of constant thickness, and assume that the corner is bounded by two concentric circles (Fig. 197) with center at O and radii r_i and r_o . The surface of the membrane at the cross section mn may be assumed to be a surface of revolution with axis perpendicular to the plane of the figure at O .¹⁹ We have seen that the slope of the membrane surface at any point M is numerically equal to the shearing stress τ . Referring to

¹⁸ See "The Mechanical Properties of Fluids," a collective work, p. 245, D. Van Nostrand Co., New York, 1924.

¹⁹ This assumption is satisfactory provided r_i is not small in comparison with r_o .

Fig. 198, which shows a meridional section through mn , the principal curvatures of the membrane at this point are

$$\frac{1}{R_1} = \frac{d\phi}{ds} = \frac{d\tau}{dr}$$

for the meridian (taking an element ds of the meridian equal to dr), and

$$\frac{1}{R_2} = \frac{\tau}{r}$$

for the section perpendicular to the meridian. The equation of equilibrium of the membrane, from eq. (157), is then

$$\frac{d\tau}{dr} + \frac{\tau}{r} = \frac{p}{s}$$

or, by using eq. (a), art. 50,

$$\frac{d\tau}{dr} + \frac{\tau}{r} = 2G\theta. \quad (a)$$

Let τ_0 denote the average shearing stress, obtained from eq. (258). From eq. (259) we then find

$$\frac{d\tau}{dr} + \frac{\tau}{r} = 2G\theta = \frac{\tau_0 s}{A}, \quad (b)$$

in which s is the length of the center line of the section of the tubular member. The general solution of eq. (b) is

$$\tau = \frac{C}{r} + \frac{\tau_0 s r}{2A}. \quad (c)$$

The constant of integration C is obtained from the condition:²⁰

$$\int_{r_i}^{r_o} \tau dr = \tau_0 h.$$

²⁰ This condition follows from the hydrodynamical analogy (p. 324). If a fluid circulates in a channel having the shape of the cross section of the tubular member, the quantity of fluid passing each cross section of the channel must remain constant.

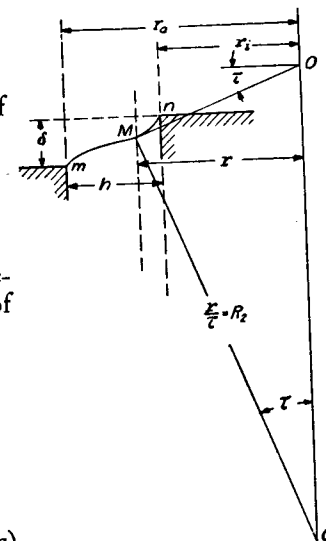


FIG. 198.

Substituting expression (c) for τ , we find

$$C = \tau_0 h \frac{1 - \frac{s}{4A}(r_a + r_i)}{\log_n \frac{r_a}{r_i}},$$

and, from eq. (c),

$$\tau = \frac{\tau_0 h}{r} \cdot \frac{1 - \frac{s}{4A}(r_a + r_i)}{\log_n \frac{r_a}{r_i}} + \frac{\tau_0 s r}{2A}. \quad (280)$$

At the reëntrant corners $r = r_i$, and substituting this in the above equation we can calculate the stress concentration at these corners.²¹


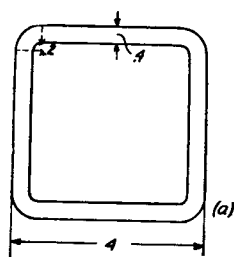


FIG. 199.



Take for example a square tube with outer dimensions 4×4 in., wall thickness $h = 0.4$ in. and radii at the corners $r_i = 0.2$ in.; $r_a = 0.6$ in. (Fig. 199). Then

$$A = 3.6 \times 3.6 - 0.4^2(4 - \pi) = 12.82 \text{ sq. in.},$$

$$s = 3.6 \times 4 - 0.4(8 - 2\pi) = 14.40 - 0.70 = 13.70 \text{ in.}$$

The average stress τ_0 is given by eq. (258). The stress at the reëntrant corners, from eq. (280), is

$$\tau = 1.54\tau_0.$$

The factor of stress concentration in this case is 1.54. It may be seen that this factor increases with decrease in the inner radius r_i . Equation (280) can also be used for an approximate calculation of the stress concentration when only the reëntrant corner is rounded (Fig. 199, *b*). As the stresses are small at projecting corners we can take $r_a = h + r_i$, as indicated in the figure by the dotted line.

In the case of rolled profile sections such as shown in Fig. 159 (*b*) and 159 (*c*), (p. 274), the maximum stress occurs at the reëntrant corners. Its value is obtained by multiplying the stress calculated from formulas (254) or (257) (see p. 275) by the factor of stress concentration for which the following

²¹ Such an equation was given by C. Weber in his paper, loc. cit., p. 301.

expression can be used²²

$$k = 1.74 \sqrt[3]{\frac{c}{r}} \quad (281)$$

in which c is the thickness of the flange and r the radius of the fillet.

61. Circular Shaft of Variable Diameter.²³—If the diameter of a shaft varies gradually along its length, eq. (149) (see p. 264, Part I) derived for a cylindrical shaft gives the maximum stress with sufficient accuracy. But if the change in diameter is abrupt, as shown in Fig. 200, there is a high stress concentration at the points *m-m* at the beginning of fillets. The magnitude of the maximum stress depends on the ratios ρ/d and D/d , where ρ is the radius of the fillet and d , D are the diameters of the two cylindrical portions of the shaft. These high local stresses, although not dangerous for constant loading of a ductile material, may have a pronounced weakening effect when there are stress fluctuations, which is usually the case in such constructions as propeller shafts and crank shafts of Diesel engines. Many cases of fractures in service can be attributed to this cause. The theoretical calculation of the maximum stress at the fillet is too complicated²⁴ for engineering purposes and in the following an

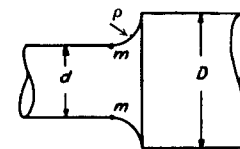


FIG. 200.

²² E. Trefftz, Z. angew. Math. Mech., Vol. 2, 1922, p. 263. Equation (281) is derived for an angle, Fig. 159 (*b*), with equal thickness of flanges. In the case of two different thicknesses c_1 and c_2 , as in Fig. 159 (*c*), the larger thickness must be used in equation (281). A further discussion of this question is given by H. M. Westergaard and R. D. Mindlin, Amer. Soc. C. E. Proceedings, 1935, p. 509.

²³ The general solution of this problem is due to J. H. Michell, Proc. London Math. Soc., Vol. 31 (1899), and A. Föppl, Sitzungsber. d. Bayer. Akad. d. Wissensch., Vol. 35 (1905), p. 249. The case shown in Fig. 200 was considered first by A. Föppl; see V. D. I., 1906, p. 1032. The literature on this subject is compiled in "Theory of Elasticity," p. 276, 1934.

²⁴ Such calculations were made by F. A. Willers by use of an approximate method of integration, Zeitschr. f. Math. u. Phys., Vol. 55 (1907), p. 225. See also R. Sonntag, Dissertation, München, 1926.

experimental method of measuring the maximum stress is given. This uses an analogy between the stress distribution in a twisted shaft and the distribution of electric current in a plate.²⁵

Let us begin with a circular shaft of constant diameter. Imagine such a shaft divided into elemental tubes such that each tube takes an equal portion of the total torque M_t . In Fig. 201, for instance, the shaft is divided into five portions each carrying $\frac{1}{5}M_t$. These tubes will be called *equimomental tubes*, and the corresponding lines in a diametral

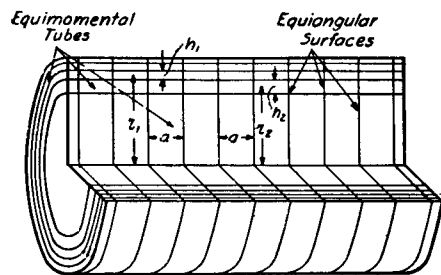


FIG. 201.

section of the shaft *equimomental lines*. Let ΔM_t denote the torque per tube, and assume the thickness of each tube to be small. The angle of twist per unit length is the same for all tubes, and is

$$\theta = \frac{\Delta M_t}{GI_p} = \frac{\Delta M_t}{G2\pi r^3 h}, \quad (a)$$

in which r is the mean radius of the tube and h its thickness. Since ΔM_t and θ ²⁶ are the same for all tubes, the thickness of the tubes varies inversely as the cube of the mean radius. The average shearing stress in a tube is, from eq. (258),

$$\tau = \frac{\Delta M_t r}{I_p} = \frac{\Delta M_t}{2\pi r^2 h}. \quad (b)$$

²⁵ This analogy was developed by L. S. Jacobsen; see Trans. Amer. Soc. Mech. Engrs., Vol. 47 (1926), p. 619.

²⁶ θ is the angle of twist for a solid shaft.

In Fig. 201 is shown a second system of lines in the diametral section. These lines are perpendicular to the equimomental lines and are called *equiangular lines*. They correspond to sections of the shaft which are called *equiangular surfaces* and which are so taken that the angle of twist between two consecutive equiangular surfaces is constant along the length of the shaft. Let $\Delta\phi$ be this angle. In this case the equiangular surfaces are equidistant planes, and let a be the distance between them. Then at any radius r the shearing strain is

$$\gamma = \frac{\Delta\phi r}{a}$$

and the corresponding stress is

$$\tau = \frac{G\Delta\phi r}{a}. \quad (c)$$

The two systems of perpendicular lines, equimomental and equiangular, divide the diametral section of the shaft into elemental rectangles, as indicated in the figure. The dimensions of these rectangles may be used to compare the shearing stresses at the corresponding points of the shaft. Using eq. (b) and comparing the shearing stresses τ_1 and τ_2 at radii r_1 and r_2 respectively, we find

$$\frac{\tau_1}{\tau_2} = \frac{r_2^2 h_2}{r_1^2 h_1}. \quad (d)$$

From eq. (c) we find

$$\frac{\tau_1}{\tau_2} = \frac{r_1 a_2}{r_2 a_1}. \quad (e)$$

In the case under consideration $a_1 = a_2 = a$, but eq. (e) will be used later for a more general case. It is evident that each system of lines may be used in calculating the shearing stresses. In one case (eq. d) the ratio of stresses depends on the ratio of the distances between equimomental lines h_2/h_1 , while in the other case (eq. e) it depends on the ratio of the distances between equiangular lines a_2/a_1 .

Let us consider a shaft of variable diameter as shown in Fig. 200. The irregularities in stress distribution produced at the fillets are of local character. At sufficient distance from the junction of the two diameters the stress distribution is practically the same as in a shaft of uniform cross section, and the two systems of lines described above can be constructed in the diametral section (Fig. 202). Near the cross section of discontinuity, the stress distribution is a more complicated one and the equimomental and equiangular lines become curved. Analysis of the problem shows²⁷ that, although curved, these lines remain mutually orthogonal and subdivide the diametral section into curvilinear rectangles as

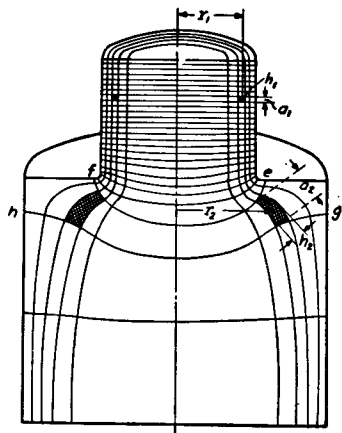


FIG. 202.

indicated by the shaded areas. Also eqs. (d) and (e), which were derived for a uniform shaft, are shown to hold here, if we take for h and a the dimensions measured at the middle of each curvilinear rectangle. Then the equimomental and equiangular lines give a complete picture of the stress distribution in the shaft. Considering, for instance, the equimomental lines and using eq. (d), we see that the stresses increase with decrease in the radius and thickness of the equimomental tubes. It is evident from the figure that the stress is a maximum at the fillets, where the thickness h of the outer equimomental tube is the smallest. We come to the same conclusion also by considering the equiangular lines. It can be seen from the figure that at the fillets the distance a between these lines is very small; hence, from eq. (e), the stress is large. From eq. (d) or (e) we can determine the ratio of the maximum stress at the fillet to the stress at any other point provided the equimomental or equiangular lines are known.

²⁷ See the paper by F. A. Willers, loc. cit., p. 329.

The electric analogy, mentioned above, provides a means for measuring the distances a between the equiangular lines. These distances are measured at the surface of the shaft of smaller diameter d , first at a point remote from the cross section of discontinuity, and then at the fillet. The ratio of these two distances gives [see eq. (e)] the factor by which the stress, as calculated by the usual formula, must be multiplied to obtain the maximum stress at the fillet. In discussing the electric analogy, we begin with the case of a rectangular plate

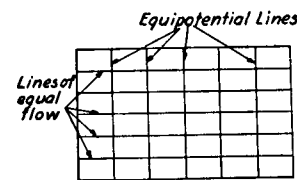


FIG. 203.

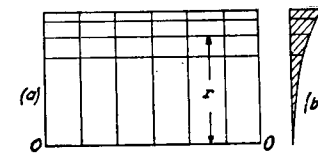


FIG. 204.

of uniform thickness (Fig. 203). If the ends of the plate are maintained at a constant difference of potential, there will flow through the plate an electric current uniformly distributed over its cross section. By dividing the electric flow into equal parts we obtain a system of equidistant *stream lines*. The system of *equipotential lines* is perpendicular to these. With a homogeneous plate of uniform cross section the drop in potential will be uniform along the direction of the current and the equipotential lines are therefore equidistant vertical lines. In order to get two systems of lines analogous to those in Fig. 201, the thickness of the plate is varied as the cube of the distance r , as shown in Fig. 204 (b). Then the distance between the stream lines will be inversely proportional²⁸ to the cube of r , and the distance between the vertical equipotential lines remains constant as before. In this manner we can obtain the same system of mutually orthogonal lines as in Fig. 201. The edge $O-O$ of the plate corresponds to the axis of the shaft. The equipotential lines correspond to the equiangular

²⁸ It is assumed that the flow per unit area of cross section is uniform over the cross section.

lines, and the stream lines to the equimomental lines of the torsional problem. Investigation shows²⁹ that this analogy also holds in the case of a plate of two different widths and of thickness varying as the cube of the distance r (Fig. 205). This makes it possible to investigate the stress concentration at the fillet of a twisted shaft by an electric method. We maintain a constant difference in potential at the ends of the plate and measure the drop in potential along the edge mnp . The distances a_1 and a_2 between equipotential lines at a remote point m and at the fillet n respectively are thus obtained. The ratio a_1/a_2 of these distances gives the factor of stress concentration for the fillet at n .

Actual measurements were made on a steel model 24 in. long, 6 in. wide at the larger end and 1 in. maximum thickness at the edge pq . The drop of potential along the edge $mnpq$ of the model was investigated by using a very sensitive galvanometer, the terminals of which were connected to two

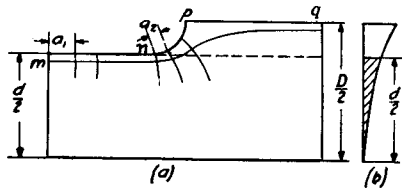


FIG. 205.

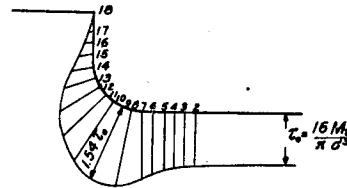


FIG. 206.

sharp needles fastened in a block at a distance 2 mm. apart. By touching the plate with the needles the drop in potential over the distance between the needle points was indicated by the galvanometer. By moving the needles along the fillet it is possible to find the place of maximum voltage gradient and to measure this maximum. The ratio of this maximum to the voltage gradient at a remote point m (Fig. 205) gives the magnitude of the factor of stress concentration k in the equation:

$$\tau_{\max} = k \frac{16M_t}{\pi d^3}. \quad (282)$$

²⁹ See above-mentioned paper by L. S. Jacobsen, loc. cit., p. 330.

The results of such tests in one particular case are represented in Fig. 206, in which the potential drop measured at each point is indicated by the length on the normal to the edge of the plate at this point. From this figure the factor of stress concentration is found to be 1.54. The magnitudes of this factor obtained with various proportions of shafts are given in Fig. 207, in which the abscissas represent the ratios of the

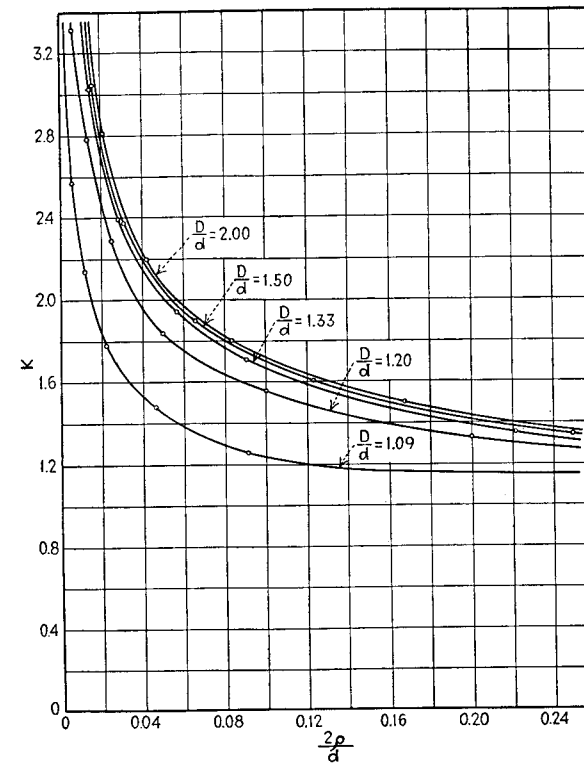


FIG. 207.

radius of the fillet to the smaller radius of the shaft, $2p/d$, and the ordinates the factor k for various ratios of D/d .

62. Stress Concentration in Bending.—The formulas for bending and shearing stresses derived for prismatical beams are very often applied also to the cases of beams of variable

cross section. To give some idea of the accuracy of this method of calculation, the bending of a cantilever having the form of a wedge (Fig. 208) will be considered. The exact solution of this problem³⁰ shows that the stress at any point

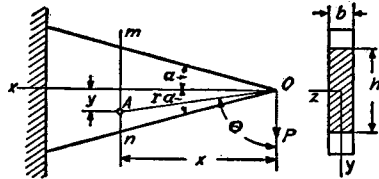


FIG. 208.

A of the beam is a simple tension or compression in the radial direction AO , and has the magnitude

$$\sigma_r = k \frac{P \cos \theta}{rb}, \quad (a)$$

where r is the distance OA , b is the thickness of the wedge, θ is the angle between the radius AO and the direction of the force P , and

$$k = -\frac{2}{2\alpha - \sin 2\alpha},$$

is a constant depending upon the magnitude of the angle of the wedge. By using equations (17) and (18), Part I, p. 36, the normal and tangential components of the stress on a plane perpendicular to x are found to be

$$\left. \begin{aligned} \sigma_x &= \sigma_r \sin^2 \theta = \frac{My}{I_z} \frac{4 \tan^3 \alpha \sin^4 \theta}{3(2\alpha - \sin 2\alpha)}; \\ \tau_{yx} &= \frac{\sigma_r}{2} \sin 2\theta = \frac{P}{bh} \frac{16y^2}{h^2} \frac{\tan^3 \alpha \sin^4 \theta}{2\alpha - \sin 2\alpha}, \end{aligned} \right\} \quad (b)$$

in which

$$I_z = \frac{bh^3}{12}; \quad M = -Px.$$

For the neutral plane of the wedge $\theta = \pi/2$ and the normal and shearing stresses become zero. The maximum normal and shearing stresses occur at $\theta = (\pi/2) + \alpha$. They can be

³⁰ See I. H. Michell, Proceedings of the London Math. Soc., Vol. 32 (1900).

calculated from expressions (b) which give

$$(\sigma_x)_{\max} = -\beta \frac{Mh}{2I_z}; \quad (\tau_{yx})_{\max} = 3\beta \frac{P}{bh}, \quad (c)$$

where

$$\beta = \frac{4}{3} \cdot \frac{\tan^3 \alpha \cos^4 \alpha}{2\alpha - \sin 2\alpha}.$$

For $\alpha = 5^\circ, 10^\circ, 15^\circ$ and 20° , the factor β has the magnitudes 1.00, 0.970, 0.947 and 0.906, respectively. It is seen that the maximum normal stress σ_x , from the first of the formulas (c), is approximately the same as that obtained from the usual beam formula provided the angle α be sufficiently small. For $\alpha = 20^\circ$ the error of the simple beam formula, as it is seen from the value of the factor β , is about 10 per cent. The maximum shearing stress, given by the second of the formulas (c), is about three times the average shearing stress P/bh and occurs at points most remote from the neutral axis. This latter fact is in direct opposition to the results obtained for prismatical bars (p. 109, Part I). In many cases the tangential stresses are of no great importance and only normal bending stresses are considered. Then the formula for maximum bending stress, derived for prismatical beams, can be used with a sufficient accuracy also for bars of variable cross section, provided the variation of the cross section is not too rapid.

If the change in cross section is abrupt there is a considerable disturbance in stress distribution at the section of discontinuity and the maximum stress is usually much greater than that given by the simple beam formula, and can be represented by formula

$$\sigma_{\max} = k\sigma \quad (d)$$

in which σ is the stress at the point under consideration as obtained from the prismatical beam formula and k is the factor of stress concentration. In only a few cases is this factor obtained by the use of the equations of the theory of elasticity.³¹

³¹ H. Neuber, Ingenieur-Archiv, Vol. 5, 1934, p. 238 and Vol. 6, 1935, p. 133.

The plate of large width with hyperbolic notches, Fig. 192, is one of the cases where we have a rigorous solution for stress distribution at the notches. This solution shows that in the case of pure bending of the plate by the couples acting in its middle plane the maximum stress occurs at points *m* and *n* and the factor of stress concentration in formula (d) can be represented by the following approximate formula

$$k = \sqrt{0.355 \frac{d}{r} + 0.85} + 0.08 \quad (e)$$

where *d* is the minimum width of the plate and *r* the radius of curvature at the bottom of the notch.

In the case of a circular shaft with a hyperbolic groove, for which Fig. 192 represents an axial section, the factor of stress concentration in the case of pure bending is

$$k = \frac{3}{4N} \left(\sqrt{\frac{d}{2r} + 1} + 1 \right) \left[\frac{3d}{2r} - (1 - 2\mu) \sqrt{\frac{d}{2r} + 1} + 4 + \mu \right] \quad (f)$$

where

$$N = 3 \left(\frac{d}{2r} + 1 \right) + (1 + 4\mu) \sqrt{\frac{d}{2r} + 1} + \frac{1 + \mu}{1 + \sqrt{\frac{d}{2r} + 1}}, \quad (g)$$

d is the diameter of the minimum cross section and *r* the smallest radius of the curvature at the bottom of the groove. For large values of the ratio *d/2r* the expression (f) can be replaced with a sufficient accuracy by the approximate formula

$$k = \frac{3}{4} \sqrt{\frac{d}{2r}}. \quad (h)$$

Most of the information regarding the magnitude of the factor *k* in equation (d) is obtained experimentally by the photoelastic method.³² The factors of stress concentration for pure bending of plates with semi-circular grooves and with fillets in the form of a quarter of a circle and $D = d + 2r$ are given by the curves in Fig. 209. In Fig. 210 the factors of stress concentration for fillets with various values of the

³² The curves given in the following discussion are taken from the article by M. M. Frocht, loc. cit., p. 319.

ratio *D/d* are given. In Fig. 211 are given the factors of stress concentration for grooves of varying depth in pure bending.

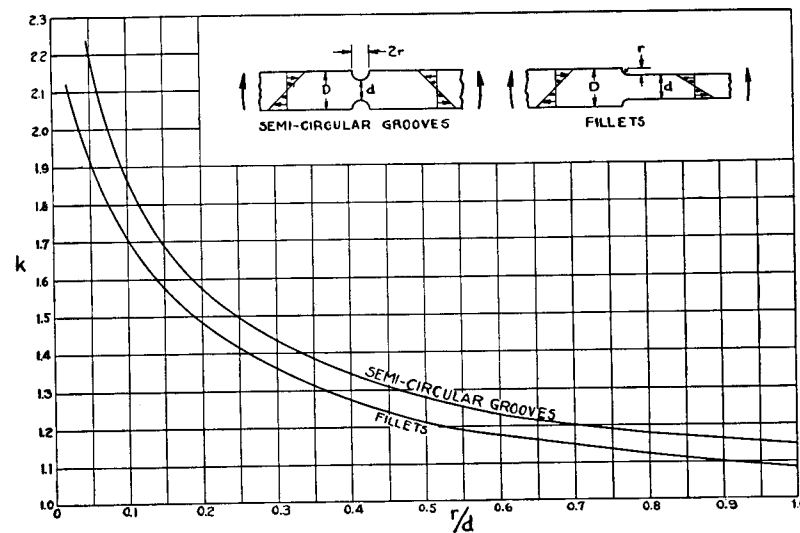


FIG. 209.

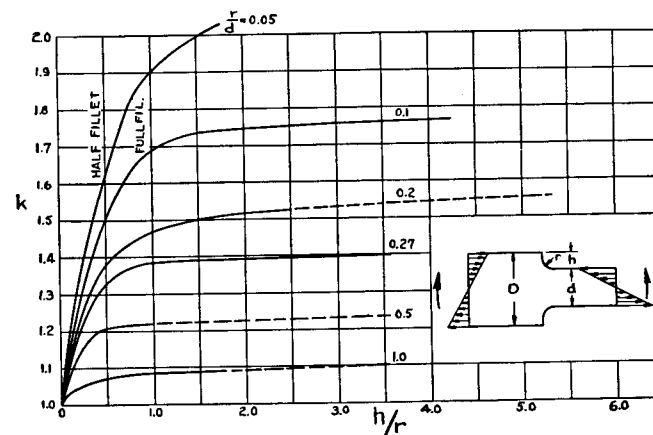


FIG. 210.

For comparison of factors of stress concentration in tension and in bending for plates and for circular shafts the curves

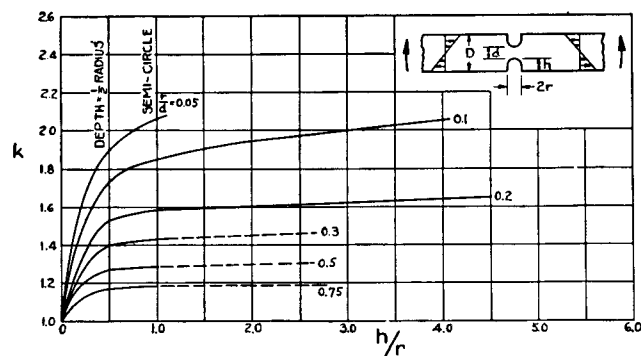


FIG. 211.

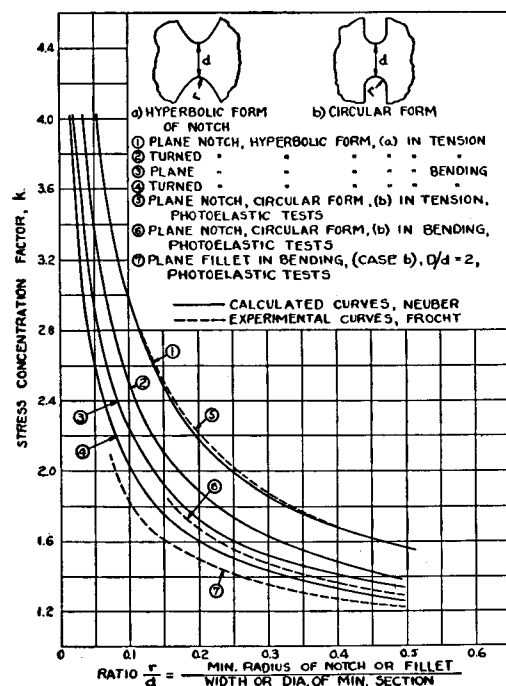


FIG. 212.

in Fig. 212 are given.³³ The curves 1 and 2 giving the factors of stress concentration for a hyperbolic notch in a plate and in a circular shaft in tension are calculated from formulas (b) and (c) in article 59. The curves 3 and 4 showing similar values for notches in pure bending are calculated from formulas (e) and (f), p. 338. It may be seen from these curves that the factors of stress concentration are higher for plates than for circular shafts, the difference being more pronounced in the case of tension. In the case of pure bending which is of greater practical importance, the difference between the two cases is small, around 6 to 8 per cent for notches of practical dimensions. The dashed curves (5) and (6) in Fig. 212 are obtained from the curves in Fig. 191 and 211 by extrapolating these curves to large values of the ratio h/r which corresponds to a deep notch semi-circular at the bottom. It may be seen that the curves (5) and (6) agree satisfactorily with the curves (1) and (3) for hyperbolic notch for ratios r/d between 0.15 and 0.50. This indicates that in the case of deep notches the magnitude of the factor of stress concentration depends principally on the magnitude of the ratio r/d and not on the shape of the notch.

The dashed curve (7) is obtained from the curves in Fig. 210 and represents the factors of stress concentration at the fillets of a plate in pure bending with the ratio $D/d = 2$. It is seen that for fillets the factors of stress concentration are somewhat lower than for deep notches (curves 4 and 6) with the same ratio r/d .

To obtain the factors of stress concentration for fillets in circular shafts the direct test on large steel shafts with the diameter ratio $D/d = 1.5$ were made³⁴ at the Westinghouse research laboratories. The values of these factors obtained by the direct measurement of strain at the fillets are given by the points in Fig. 213. For comparison, the results of photo-

³³ This figure and the following are taken from the paper by R. E. Peterson and A. M. Wahl, *Journal of Applied Mechanics*, Vol. 3, 1936, p. 15.

³⁴ R. E. Peterson and A. M. Wahl, loc. cit., reference 33.

elastic experiments on flat models with $D/d = 2$ and $D/d = 1.5$ are given³⁵ in the same figure by the curves 1 and 2. From these experiments the very important conclusion can be made that the stress concentration factors for the circular shafts agree well with the values obtained photoelastically on flat specimens.

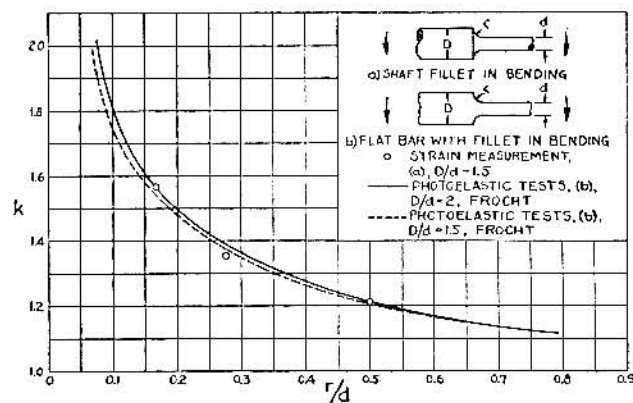


FIG. 213.

63. The Investigation of Stress Concentration with Models.

—It was already stated that a complete theoretical solution for the stress distribution at the section of discontinuity exists in only a few of the simplest cases, such as that of a circular or elliptical hole and hyperbolic notch. In the majority of cases, information regarding stress concentration is obtained by experiment. For this purpose strain measurements at the section of discontinuity may sometimes be made with sensitive extensometers. In this manner, for instance, the stress concentration at grooves in tension specimens has been investigated.³⁶ In using this method, difficulty arises from the highly localized character of the stress distribution at the place

³⁵ These curves were constructed from the data given in Fig. 210.

³⁶ See E. Preuss, V. D. I., Vol. 56, 1912, p. 1349, Vol. 57, 1913, p. 664, and Forschungsarbeiten, nr. 134, 1913. See also Th. Wyss, Proc. Intern. Congress for Applied Mechanics, Delft, 1924, p. 354, and his Dissertation, Zürich, 1923. See also F. Röscher and J. Crumbiegel, V. D. I., Vol. 76, p. 508, 1932.

in question. A very small gauge length, and hence very high magnification, is necessary to obtain satisfactory results.³⁷

A rough estimate of the factor of stress concentration may be obtained by loading the specimens or models of structures with increasing loads until yielding starts at the points of maximum stress. This yielding can be seen clearly in specimens of mild steel with polished surfaces. Figure 214

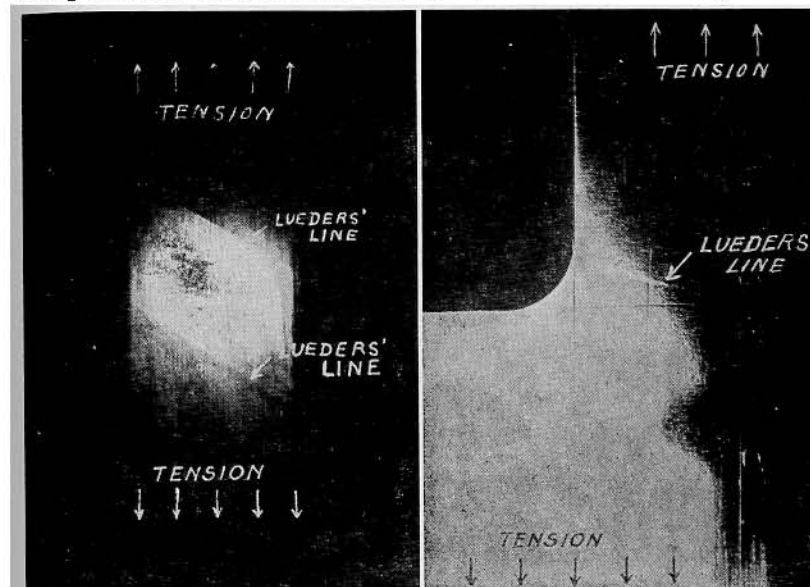


FIG. 214.

FIG. 215.

is a photograph of the yield lines in a strip of mild steel. These yield lines (Lueders' lines, see p. 415) first appear at the places of maximum stress. The distribution of these lines gives valuable information regarding stresses at the places of discontinuity.³⁸

³⁷ Rubber models to increase the deformations at the section of discontinuity have also been used in several cases; see paper by A. Stodola, V. D. I., Vol. 51, 1907, p. 1272; Hummel, Schweizerische Bauzeitung, 1924, p. 143. L. Chitty and A. J. S. Pippard, Proc. Roy. Soc., Vol. 156, 1936, p. 518.

³⁸ See paper by M. A. Voropaev, Bulletin of the Polytechnical Institute at Kiev, 1910, and writer's paper in Proc. Intern. Congress for Applied Mechanics, Zürich, 1926, p. 419.

Figure 215 shows a Lueders' line at the fillet on a mild steel model (Fig. 190), with the proportions $r/d = 0.157$ and $D/d = 2.5$. The line started from the point on the fillet where previous photoelastic experiments showed the maximum stress concentration was to be expected. The factor of stress concentration given by the curve in Fig. 190 is 1.85. According to this, yielding at the weakest part should start when the average tensile stress in the narrower portion of the model is only $1/1.85$ of that necessary to produce Lueders' lines in

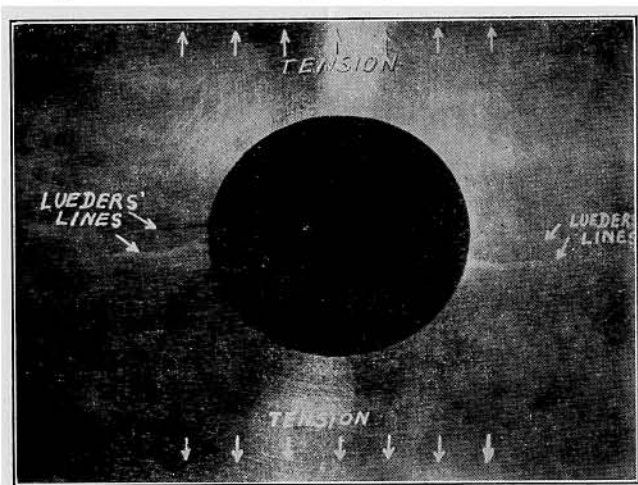


FIG. 216.

prismatical bars (Fig. 214) of the same material. Experiment showed that the load necessary to produce yielding at the fillet was $1/1.8$ of that for the prismatical bar. Figure 216 represents the Lueders' lines at the edge of the circular hole in a strip of mild steel. Again these lines show accurately the points of maximum stress concentration. The average stress over the end cross section of the plate at which yielding occurred was $1/2.3$ of that necessary to produce yielding in the prismatical bar.

In both cases the yielding at the place of maximum stress occurred at an average stress which is higher than indicated by the true factors of stress concentration. This can be explained as follows: The small region of overstressed material

is surrounded by portions where the stress does not exceed the proportional limit. This prevents the sort of sliding shown in Fig. 214, along surfaces perpendicular to the plane of the figure and inclined 45° to the direction of tension. In the cases shown in Fig. 215 and Fig. 216, the Lueders' lines started on the polished surfaces of the plates as thin lines perpendicular to the maximum tensile stress. This indicates that in these cases the sliding occurred along planes through these lines and inclined 45° to the plane of the plates. In such a case the thickness of the plate is an important factor. This thickness must be very small in comparison with the radii of the holes or fillets in order to have the surface of sliding totally within the region of highly overstressed material. The fact that the surface of sliding, beginning at the points of maximum stress, must cross a region with smaller stresses explains³⁹ the retardation in the appearance of Lueders' lines. In the case of the circular hole above, the width of the plate was 6 in. and the diameter of the hole 1 in., while the thickness of the plate was only $1/8$ in. When testing models in which the thickness and the diameter of the hole are of the same order, it was impossible to detect any substantial effect due to stress concentration on the magnitude of the load producing Lueders' lines. Another reason for the Lueders' lines being retarded is the fact that a certain amount of permanent set may occur before Lueders' lines become visible.

The Lueders' lines method of testing the weak points of structures is not confined to any particular type of problem and has an advantage over the photoelastic method, described in the next article, in that it is applicable to three-dimensional problems. To make the yielding of metal visible on a rough surface the covering of the surface with a brittle paint has been successfully used in investigating stresses in boiler heads⁴⁰ and in built-up compression members.⁴¹ By cutting

³⁹ This explanation was suggested to the writer by L. H. Donnell.

⁴⁰ See paper by F. Koerber u. E. Siebel, *Mitteilungen K. W. Institute for Steel Research, Düsseldorf*, Vol. 8, 1926, p. 63, and Vol. 9, 1927, p. 13.

⁴¹ R. S. Johnston, *Iron and Steel Institute*, Vol. 112, 1925, p. 341.

specimens and models apart and using a special etching process on the cut surfaces it is possible to reveal the interior regions which have yielded and thus obtain information regarding the flow of metal at the points of stress concentration.⁴²

64. Photoelastic Method of Stress Measurements.—

There are many stress analysis problems in which the deformation is essentially parallel to a plane. These are called *two-dimensional problems*. Illustrations are the bending of beams of a narrow rectangular cross section, bending of girders, arches, gear teeth, or, more generally, plates of any shape but of constant thickness acted on by forces or couples in the plane of the plate. Their shapes may be such that the stress distributions are very difficult to determine analytically and for such cases the *photoelastic* method has proved very

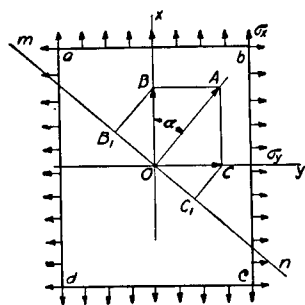


FIG. 217.

useful. In this method models cut out of a plate of an isotropic transparent material such as glass, celluloid or bakelite are used. It is well known that under the action of stresses these materials become *doubly refracting* and if a beam of *polarized light* is passed through a transparent model under stress, a colored picture may be obtained from which the stress distribution can be found.⁴³

The application of the method in investigating stresses in machine parts was made by Dietrich and Lehr, V. D. I., Vol. 76, 1932. See also H. Kayser, "Bautechnik," 1936, and A. V. de Forest and Greer Ellis, Journal of the Aeronautical Sciences, Vol. 7, p. 205, 1940.

⁴² See paper by A. Fry, Krupp'sche Monatshefte, 1921; also Stahl u. Eisen, 1921.

⁴³ The phenomenon of double refraction due to stressing was discovered by D. Brewster, Phil. Trans. Roy. Soc., 1816. It was further studied by F. E. Neumann, Berlin Abh., 1841, and by J. C. Maxwell, Edinburgh Roy. Soc. Trans., Vol. 20, 1853, and his Scientific Papers, Vol. 1, p. 30. The application of this phenomenon to the solution of engineering problems was started by C. Wilson, Phil. Mag. (Ser. 5), Vol. 32 (1891), and further developed by A. Mesnager, Annales des Ponts et Chaussées, 1901 and 1913, and E. G. Coker, General Electric

In Fig. 217 *abcd* represents a transparent plate of uniform thickness and *O* the point of intersection with the plate of a beam of polarized light perpendicular to the plate. Suppose that *OA* represents the plane of vibration of the light and that the length *OA* = *a* represents the amplitude of this vibration. If the vibration is considered to be simple harmonic, the displacements may be represented by the equation:

$$s = a \cos pt, \quad (a)$$

where *p* is proportional to the frequency of vibration, which depends on the color of the light.

Imagine now that the stresses σ_x and σ_y , different in magnitude, are applied to the edges of the plate. Due to the difference in stresses the optical properties of the plate also become different in the two perpendicular directions. Let v_x and v_y denote the velocities of light in the planes *ox* and *oy* respectively. The simple vibration in the plane *OA* is resolved into two components with amplitudes $\overline{OB} = a \cos \alpha$ and $\overline{OC} = a \sin \alpha$ in the planes *ox* and *oy* respectively, and the corresponding displacements are

$$x = a \cos \alpha \cos pt; \quad y = a \sin \alpha \cos pt. \quad (b)$$

If *h* is the thickness of the plate, the intervals of time necessary for the two component vibrations to cross the plate are

$$t_1 = \frac{h}{v_x} \quad \text{and} \quad t_2 = \frac{h}{v_y}, \quad (c)$$

and vibrations (b) after crossing the plate are given by the equations:

$$x_1 = a \cos \alpha \cos p(t - t_1); \quad y_1 = a \sin \alpha \cos p(t - t_2). \quad (d)$$

Co. Magazine, 1920, and Journal of Franklin Institute, 1925. For further development of the photoelastic method see the paper by Henry Favre, Schweizerische Bauzeitung, Vol. 20 (1927), p. 291; see also his dissertation: Sur une nouvelle methode optique de determination des tensions intérieures, Paris, 1929. The use of monochromatic light, so called "Fringe Method," was introduced by Z. Tuzi, "Inst. Phys. and Chem. Research," Vol. 8, p. 247, 1928.

These components have the phase difference $p(t_2 - t_1)$, due to the difference in velocities. Experiments show that the difference in the velocities of light is proportional to the difference in the stresses; hence

$$t_2 - t_1 = \frac{h}{v_y} - \frac{h}{v_x} = \frac{h(v_x - v_y)}{v_x v_y} \\ = \frac{h(v_x - v_y)}{v^2} \text{ (approximately) } = k(\sigma_x - \sigma_y), \quad (e)$$

where v is the velocity of light when the stresses are zero, and k is a numerical factor which depends on the physical properties of the material of the plate. We see that the difference of the two principal stresses can be found by measuring the difference in phase of the two vibrations. This can be done by bringing them into interference in the same plane. For this purpose a Nicol prism (called the *analyser*) is placed behind the plate in such a position as to permit the passage of vibrations in the plane mn perpendicular to the plane OA only. The components of the vibrations (d), which pass through the prism, have the amplitudes $OB_1 = OB \sin \alpha = (a/2) \sin 2\alpha$ and $OC_1 = OC \cos \alpha = (a/2) \sin 2\alpha$. The resultant vibration in the plane mn is therefore

$$\frac{a}{2} \sin 2\alpha \cos p(t - t_1) - \frac{a}{2} \sin 2\alpha \cos p(t - t_2) \\ = \left(a \sin 2\alpha \sin p \frac{t_1 - t_2}{2} \right) \sin p \left(t - \frac{t_1 + t_2}{2} \right). \quad (f)$$

This is a simple harmonic vibration, whose amplitude is proportional to $\sin p[(t_1 - t_2)/2]$; hence the intensity of the light is a function of the difference in phase $p(t_1 - t_2)$. If the stresses σ_x and σ_y are equal, t_1 and t_2 are also equal, the amplitude of the resultant vibration (f) is zero and we have darkness. There will be darkness also whenever the difference in stresses is such that

$$p \frac{t_1 - t_2}{2} = n\pi, \quad (g)$$

where n is an integer. The maximum intensity of light is obtained when the difference in stresses is such that

$$\sin p \frac{t_1 - t_2}{2} = \pm 1.$$

Imagine that instead of the element $abcd$, Fig. 217, we have a strip of a transparent material under simple tension. By gradually increasing the tensile stress we obtain a dark picture of the strip on the screen each time equation (g) is fulfilled. In this manner we can establish experimentally for a given material of a given thickness the stress corresponding to the interval between two consecutive dark pictures of the specimen. For instance, for one kind of "phenolite" plate, 1 mm. thick, this stress was found⁴⁴ to be 1,620 lbs. per sq. in. Hence for a plate 1/4 in. thick, the corresponding stress will be $1,620/6.35 = 255$ lbs. per sq. in. With this information we can determine the stress in a strip under tension by counting the number of intervals between the consecutive dark images occurring during the gradual loading of the specimen. If we use a strip in pure bending, we obtain a picture such as is shown in Fig. 218. The parallel dark fringes indicate

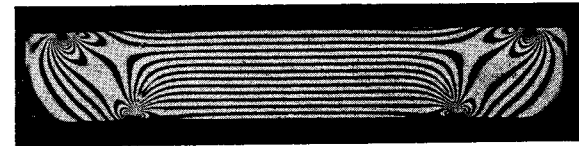


FIG. 218.

that in the portion of the strip at a considerable distance from the points of application of the loads the stress distribution is the same in all vertical cross sections. By counting the number of fringes we can determine the magnitudes of the stresses, as the stress difference between two consecutive fringes is the same as the stress difference between two con-

⁴⁴ Z. Tuzi, Sci. Papers, Inst. Phys. Chem. Research, Tokyo, Vol. 12, 1929, p. 247.

secutive dark images in simple tension. By watching the strip while the load is applied gradually, we may see how the number of dark fringes increases with increase of load. The new ones always appear at the top and the bottom of the strip and gradually move toward the neutral plane so that the fringes become more and more closely packed. The stress at any point is then obtained by counting the number of fringes which pass over the point.

The method of counting the number of dark fringes passing a chosen point can be used also for any plane stress distribution. As it is seen from our previous discussion, this number gives generally the difference between the two principal stresses at the point. For a complete determination of the stress at the point it remains then to find the directions of the principal stresses and their sum. Equation (f) shows that the intensity of the light passing through the analyzer is proportional to $\sin 2\alpha$, where α is the angle between the plane of polarization and the plane of one of the principal stresses, Fig. 217. If these two planes coincide, $\sin 2\alpha$ is zero and we obtain a dark spot on the screen. Hence in examining a stressed transparent model in polarized light we observe not merely the dark fringes discussed before but also dark lines connecting the points at which one of the principal stress directions coincides with the plane of polarization. By rotating both Nicol prisms, polarizer and analyzer, and marking dark lines on the image of the stressed plate for various directions of the plane of polarization, we obtain the system of so-called *isoclinic lines* which join together points with the same directions of principal stresses. Having these lines, we can draw the lines which are tangential at each point to the principal axes of stress. These latter lines are called the *trajectories* of the principal stresses, see p. 123, Part I. Thus the directions of the principal stresses at each point of the plate can be obtained experimentally.

The sum of the principal stresses can also be obtained experimentally by measuring the change Δh in the thickness

h of the plate due to the stresses σ_x and σ_y ⁴⁵ and using the known relation

$$\Delta h = \frac{\mu h}{E} (\sigma_x + \sigma_y). \quad (h)$$

Having the difference of the two principal stresses from the photo-elastic test and their sum from expression (h), we can readily calculate the magnitude of the principal stresses. The fringes obtained in a plate with fillets submitted to the action of pure bending are shown as an illustration in Fig. 219.

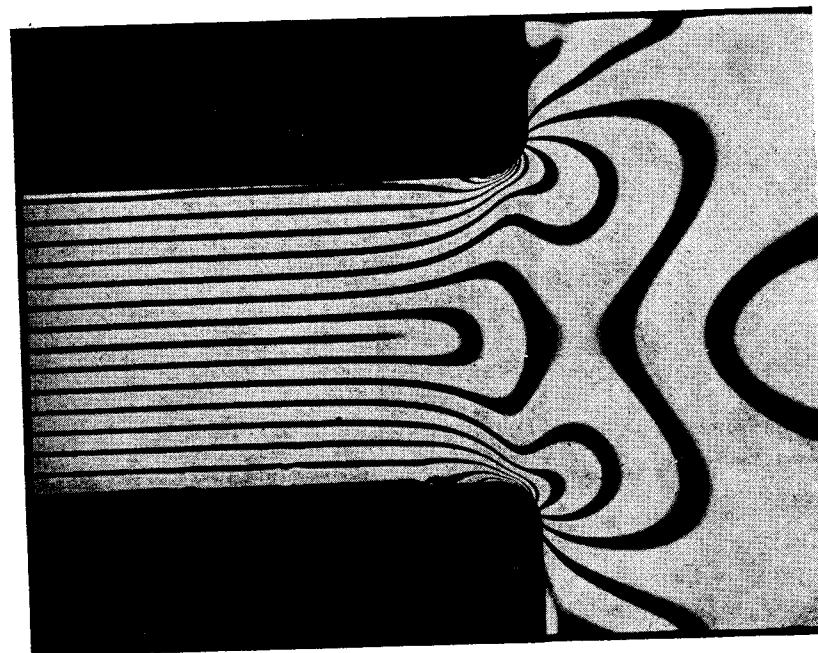


FIG. 219.

From the fact that the fringes are crowded at the fillets it may be concluded that a considerable stress concentration takes place at those points.

⁴⁵ This method was suggested by A. Mesnager, loc. cit., p. 346. The necessary lateral extensometer was developed and successfully used by A. M. Wahl, see paper by R. E. Peterson and A. M. Wahl, Journal of Appl. Mech., Vol. 2, 1935, p. 1.

In the previous discussion of the photo-elastic stress analysis it was always assumed that we were dealing with two-dimensional problems. More recently considerable efforts have been made to expand the photo-elastic method on three-dimensional problems and some promising results have already been obtained.⁴⁶

65. Stresses at the Point of Load Application.—In discussing a symmetrical wedge under tension (see p. 312) it was indicated that in each point of that wedge there is only a simple tension in the radial direction. By making the angle 2α of the wedge equal to π and changing from tension to compression we obtain the case in which a concentrated force is pressing normally on a straight edge of a large plate, Fig. 220. An element such as shown at point A undergoes a

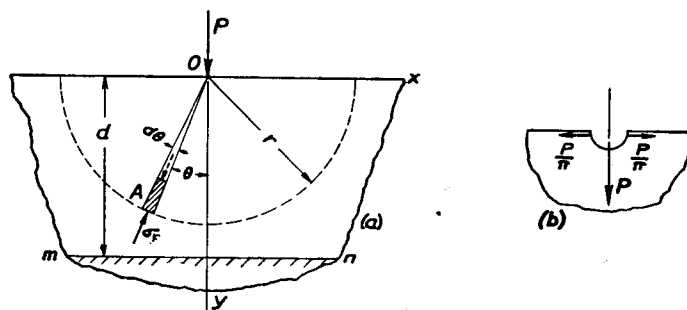


FIG. 220.

simple compression in the radial direction and the compressive stress, from equation (a), p. 312, is

$$\sigma_r = k \frac{P \cos \theta}{hr} \quad (a)$$

where r is the radial distance from the point of application of the load and h the thickness of the plate. The factor k is

⁴⁶ See paper by M. Hetényi, Journal of Appl. Mech., Vol. 5, p. 149, 1938. See also R. Weller, Journal Applied Phys., Vol. 10, p. 266, 1939.

determined from the fact that the stresses σ_r distributed along the length of the semi circle shown in the figure by the dotted line keep in equilibrium the load P . Hence

$$2h \int_0^{\pi/2} \sigma_r \cos \theta r d\theta = P.$$

Substituting for σ_r its expression (a) we obtain

$$k = \frac{2}{\pi}$$

and expression (a) becomes

$$\sigma_r = \frac{2P}{\pi} \cdot \frac{\cos \theta}{hr}. \quad (283)$$

If we consider a horizontal plane mn at a distance d from the edge of the plate, Fig. 220, the normal compressive stress acting on that plane is

$$\sigma_y = \sigma_r \cos^2 \theta = \frac{2P \cos^3 \theta}{\pi hr} = \frac{2P \cos^4 \theta}{\pi hd}. \quad (284)$$

It is seen that the pressure rapidly diminishes as the angle θ increases. It is seen also that the stresses increase with a decrease of the distance d . Knowing the stresses produced by the action of one concentrated load P and using the method of superposition we can readily discuss the cases in which several loads are acting.⁴⁷

If a concentrated force is acting at the middle of a rectangular beam of a narrow cross section of a depth d the highly concentrated stresses given by expression (283) are superposed on bending stresses in the beam and a complicated stress distribution results near the point of the load application. The photoelastic picture of this stress distribution is shown in Fig. 221. It is seen that the perturbation in stress distribution produced by the concentrated load is of a localized character and is of importance only in the close vicinity of

⁴⁷ See "Theory of Elasticity," p. 82.

the point of application of the load. If we consider a cross section of the beam at a distance from the load larger, say, than one half the depth of the beam, the stress distribution in that cross section is approximately that given by the simple beam formula. The number of fringes diminishes as the distance of the cross section from the load increases as it should be since the magnitude of the bending moment decreases as we approach the beam supports.

By making the resultant of the horizontal components of the radial pressures $h\sigma_r d\theta$ for each half of the dashed semi-

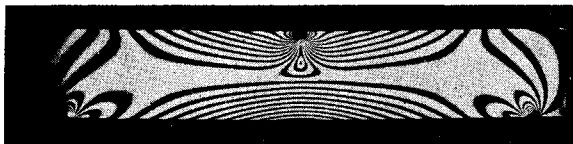


FIG. 221.

circle in Fig. 220 (a), it can be shown that the concentrated force P produces a "wedging" action represented in Fig. 220 (b) by the two equal and opposite forces of the magnitude P/π . In the case of the beam of a depth d and thickness h , Fig. 221, these forces acting at a distance $d/2$ from the axis of the beam produce in the middle cross section not only tensile stresses

$$\sigma_x' = \frac{P}{\pi d h} \quad (b)$$

but also bending stresses given by the expression

$$\sigma_x'' = -\frac{Pd}{2\pi} \frac{y}{I_z}, \quad (c)$$

in which $Pd/2\pi$ is the bending moment produced by the horizontal forces P/π , y is the distance from the axis of the beam, taken positive downwards, and $I_z = hd^3/12$ is the moment of inertia of the cross section. Superposing the stresses (b) and (c) upon the bending stresses given by the ordinary beam formula, we find that the tensile stress in the most remote fiber

of the beam in the loaded cross section is

$$(\sigma_x)_{y=d/2} = \frac{Pl}{4} \cdot \frac{6}{hd^2} + \frac{P}{\pi d h} - \frac{3P}{\pi d h} = \frac{Pl}{4} \cdot \frac{6}{hd^2} \left(1 - \frac{4}{3\pi} \frac{d}{l} \right). \quad (d)$$

The second term in the parenthesis represents the "wedging action" of the load P . It is seen that in the case of short beams this action is of a considerable magnitude. The photoelastic experiments are in a very satisfactory agreement with expression (d).⁴⁸

The discussion of stress distribution at the point of application of a concentrated load can be expanded on the case in which instead of a plate, Fig. 220, we have a large body with a plane surface on which a concentrated load is acting. It can be shown that in this case the stresses are inversely proportional to the square of the distance from the point of application of the load.⁴⁹

66. Contact Stresses in Balls and Rollers.

—If two elastic bodies, say two balls, are pressing on each other, a small surface of contact is formed as a result of local deformation. The pressures distributed over this surface are called contact pressures. The magnitude of these pressures and the stresses produced in the bodies can be calculated by using equations of the theory of elasticity.⁵⁰ We will give here only the final results of such investigation. In the case of two balls compressed by forces P (Fig. 222) the pressures are distributed over a small *circle of contact* mn , the radius of which

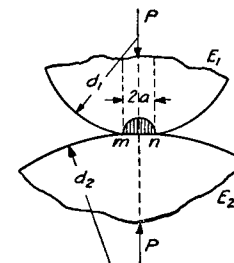


FIG. 222.

⁴⁸ See experiments by Carus Wilson, loc. cit., p. 346.

⁴⁹ This problem was discussed by J. Boussinesq, see his book, "Application des Potentiels," Paris, 1885. See also "Theory of Elasticity," p. 328, 1934.

⁵⁰ This problem was solved by H. Herz, Gesammelte Werke, Vol. I, 1895. The discussion of the problem and the bibliography are given in "Theory of Elasticity," p. 339.

is given by the equation:

$$a = 0.88 \sqrt[3]{\frac{P}{2} \frac{\frac{1}{E_1} + \frac{1}{E_2}}{\frac{1}{d_1} + \frac{1}{d_2}}}. \quad (285)$$

In this E_1 and E_2 are the moduli of the two balls and d_1 and d_2 the corresponding diameters. The maximum pressure occurs at the center of the *circle of contact* and is given by the equation:

$$p_{\max} = 1.5 \frac{P}{\pi a^2}. \quad (286)$$

Due to local deformation the centers of the balls approach one another by the distance

$$\lambda = 0.77 \sqrt[3]{2P^2 \left(\frac{1}{E_1} + \frac{1}{E_2} \right)^2 \left(\frac{1}{d_1} + \frac{1}{d_2} \right)}. \quad (287)$$


When the diameters of the balls and the moduli of elasticity are equal, the above equations become

$$a = 0.88 \sqrt[3]{\frac{Pd}{2E}}; \quad p_{\max} = 0.62 \sqrt[3]{\frac{4PE^2}{d^2}}; \quad \lambda = 1.54 \sqrt[3]{\frac{2P^2}{E^2d}}. \quad (288)$$

When a ball of diameter d is forced against an elastic body having a plane surface, the required formulae are obtained by substituting $d_1 = d$, $d_2 = \infty$ in eqs. (285)–(287). Assuming $E_1 = E_2 = E$, we find for this case

$$a = 0.88 \sqrt[3]{\frac{Pd}{E}}; \quad p_{\max} = 0.62 \sqrt[3]{\frac{PE^2}{d^2}}; \quad \lambda = 1.54 \sqrt[3]{\frac{P^2}{E^2d}}. \quad (289)$$

In the case of a *ball in a spherical seat* (Fig. 223), the sign of d_2 in eqs. (285)–(287) must be changed. Then for the case $E_1 = E_2 = E$, we find

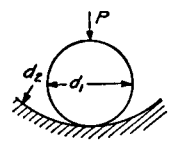

$$a = 0.88 \sqrt[3]{\frac{P}{E} \frac{d_1 d_2}{d_2 - d_1}}; \quad p_{\max} = 0.62 \sqrt[3]{PE^2 \left(\frac{d_2 - d_1}{d_2 d_1} \right)^2}. \quad (290)$$

FIG. 223.

It is interesting to note that in the cases represented by eqs. (288) and (289) the maximum compressive stress at the center of the

surface of contact depends on the magnitude of the ratio P/d^2 , i.e., the maximum stress remains constant if the above ratio is kept constant. This justifies the usual practice of determining the safe diameter of the ball by taking a definite magnitude of load per square inch of the diametral section of the ball. Since the material at the center of the surface of contact is prevented from lateral expansion, it is in a condition of compression from all sides and may sustain very high pressures (see art. 83). In experiments⁵¹ with hardened crucible steel the allowable compressive force P in the case of a ball pressed against a plane surface may be expressed by the equation:

$$P_{\max} = 700d^2,$$

in which d is in inches and P in pounds. Substituting in the second of eqs. (289), we find p_{\max} equal to approximately 530,000 lbs. per sq. in.

In the general case of compression of two bodies having the same modulus E , let $1/r_1$ and $1/r_1'$ denote the principal curvatures at the point of contact of one of the bodies, and $1/r_2$ and $1/r_2'$ of the other,⁵² φ the angle between the normal planes containing curvatures $1/r_1$ and $1/r_2$. The *surface of contact* for the general case is an ellipse, the semi-axes of which are given by the equations

$$a = \alpha \sqrt[3]{\frac{Pm}{n}}; \quad b = \beta \sqrt[3]{\frac{Pm}{n}}, \quad (291)$$

in which P is the compressive force and

$$m = \frac{4}{\frac{1}{r_1} + \frac{1}{r_1'} + \frac{1}{r_2} + \frac{1}{r_2'}}; \quad n = \frac{4E}{3(1 - \mu^2)}.$$

The constants α and β are taken from the table 24 below for each particular case. The angle θ in the first column of the table is calculated from the equation

$$\cos \theta = \frac{B}{A}, \quad (a)$$

⁵¹ See Stribeck, V. D. I., 1901, p. 73; Schwinning, V. D. I., 1901, p. 332, and A. Bauschlicher, V. D. I., 1908, p. 1185.

⁵² The principal curvatures are the maximum and the minimum curvatures and these are in planes at right angles. The curvature of a body is considered as positive if the corresponding center of curvature is within the body.

in which

$$A = \frac{2}{m}; \quad B =$$

$$\frac{1}{2} \sqrt{\left(\frac{1}{r_1} - \frac{1}{r_1'}\right)^2 + \left(\frac{1}{r_2} - \frac{1}{r_2'}\right)^2 + 2 \left(\frac{1}{r_1} - \frac{1}{r_1'}\right) \left(\frac{1}{r_2} - \frac{1}{r_2'}\right) \cos 2\phi}. \quad (b)$$

TABLE 24.—CONSTANTS FOR CALCULATING THE SEMI-AXES OF THE ELLIPSE OF CONTACT

θ degrees	α	β	θ degrees	α	β
20	3.778	0.408	60	1.486	0.717
30	2.731	0.493	65	1.378	0.759
35	2.397	0.530	70	1.284	0.802
40	2.136	0.567	75	1.202	0.846
45	1.926	0.604	80	1.128	0.893
50	1.754	0.641	85	1.061	0.944
55	1.611	0.678	90	1.000	1.000

The expression for the maximum pressure at the center of the surface of contact is then

$$p_{\max} = 1.5 \frac{P}{\pi ab}. \quad (292)$$

In the case of *rollers in compression*, Fig. 224, the contact area is a narrow rectangle whose width b is given by the equation:⁵³

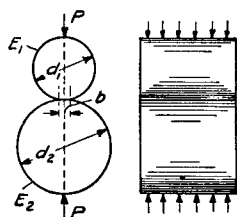


FIG. 224.

$$b = 2.15 \sqrt{\frac{P'}{2} \frac{d_1 d_2}{d_1 + d_2} \left(\frac{1}{E_1} + \frac{1}{E_2} \right)}, \quad (293)$$

in which P' denotes the compressive force per unit length of the roller. The maximum unit pressure at the middle of the *rectangle of contact* is

$$p_{\max} = 0.59 \sqrt{2P' \frac{d_1 + d_2}{d_1 d_2} \frac{1}{\frac{1}{E_1} + \frac{1}{E_2}}}. \quad (294)$$

⁵³ See A. Föppl, *Technische Mechanik*, Vol. 5, 1907, p. 351.

In the particular case in which the moduli for both rollers are equal

$$b = 2.15 \sqrt{\frac{P' d_1 d_2}{E(d_1 + d_2)}}; \quad p_{\max} = 0.59 \sqrt{P'E \frac{d_1 + d_2}{d_1 d_2}}. \quad (295)$$

If one of the diameters be taken as infinitely large as in the case of a roller in contact with a plane surface, eqs. (293) and (294) reduce to

$$b = 2.15 \sqrt{\frac{P'd}{E}}; \quad p_{\max} = 0.59 \sqrt{\frac{P'E}{d}}. \quad (296)$$

It will be seen that the maximum stress remains constant if P' varies in the same proportion as d . This justifies the practice of determining the safe dimensions on the basis of the diametral cross sectional area of the roller. The allowable compressive force P' in the case of ordinary steel rollers in bridges, for instance, is obtained from the equation:

$$P' = 700d.$$

Substituting this into eq. (296), we find the maximum pressure is about 85,000 lbs. per sq. in.⁵⁴

Problems

1. Determine the maximum pressure at the surface of contact C in a single row ball bearing, shown in Fig. 225. The ball diameter is $d = 1.5$ in., the radius of the grooves 1 in., the diameter of the outer race 8 in. and the greatest compressive force on one ball $P = 5,000$ lbs.

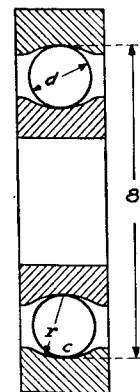


FIG. 225.

Solution. Using the notation of page 357,

$$r_1 = r_1' = \frac{1.5}{2} = \frac{3}{4} \text{ in.}; \quad r_2 = -1 \text{ in.};$$

$$r_2' = -4 \text{ in.};$$

$$m = \frac{4}{\frac{2}{1.5} + \frac{2}{1.5} - \frac{1}{1} - \frac{1}{4}} = 2.823;$$

$$n = \frac{4 \times 30 \times 10^6}{3 \times .91};$$

⁵⁴ For testing of steel rollers see W. M. Wilson, Univ. of Illinois, Engr. Exp. Sta. Bull. 162, 1927; 191, 1929; 263, 1934. See also V. P. Jensen, Iowa Engr. Exp. Sta., Bull. 138, 1937. Fatigue test of rollers discussed in art. 80.

$$2A = \frac{4}{m} = \frac{4}{2.823} = 1.417; \quad 2B = \frac{1}{1} - \frac{1}{4} = 0.750.$$

Substituting in eq. (a) (p. 357),

$$\cos \theta = \frac{0.750}{1.417} = 0.529; \quad \theta = 58^\circ.$$

Then from the table, by interpolation,

$$\alpha = 1.536, \quad \beta = 0.701.$$

The semi-axes of the ellipse of contact are, from eqs. (291),

$$a = 1.536 \sqrt{\frac{5,000 \times 2.823 \times 3 \times 0.91}{4 \times 30 \times 10^6}} = 0.105 \text{ in.},$$

$$b = 0.701 \sqrt{\frac{5,000 \times 2.823 \times 3 \times 0.91}{4 \times 30 \times 10^6}} = 0.048 \text{ in.}$$

Then, from eq. (292),

$$p_{\max} = 1.5 \frac{5,000}{\pi ab} = 475,000 \text{ lbs. per sq. in.}$$

Such high stresses can be sustained by hardened steel due to the fact that at the center of the ellipse of contact the material is compressed not only in the direction of the force P but also in the lateral directions.

2. Determine the surface of contact and the maximum pressure between two circular cylinders whose axes are mutually perpendicular. We have such a problem, for instance, in contact pressures at the point of contact of a wheel with cylindrical boundary and a rail.⁵⁵

Solution. Denoting by r_1 and r_2 the radii of the cylinders and using the notation of page 357,

$$\frac{1}{r_1'} = 0; \quad \frac{1}{r_2'} = 0; \quad \varphi = \frac{\pi}{2}; \quad m = \frac{4}{\frac{1}{r_1} + \frac{1}{r_2}}; \quad n = \frac{4E}{3(1 - \mu^2)};$$

$$A = \frac{1}{2} \left(\frac{1}{r_1} + \frac{1}{r_2} \right); \quad B = \frac{1}{2} \sqrt{\frac{1}{r_1^2} + \frac{1}{r_2^2} - \frac{2}{r_1 r_2}} = \pm \frac{1}{2} \left(\frac{1}{r_1} - \frac{1}{r_2} \right).$$

⁵⁵ The problem of contact pressures becomes more and more important as the axial load of modern locomotives is increased. For discussion of this problem, see the paper by H. Fromm, V. D. I., Vol. 73, 1929, p. 957.

The sign must be chosen so as to make B positive. From eq. (a)

$$\cos \theta = \pm \frac{\frac{1}{r_1} - \frac{1}{r_2}}{\frac{1}{r_1} + \frac{1}{r_2}}$$

Knowing θ , we get the semi-axes of the ellipse of contact from eqs. (291) and the maximum pressure from eq. (292).

In the particular case of two cylinders of equal radii, $\cos \theta = 0$, and from the table on p. 358 it can be concluded that the surface of contact has a circular boundary.

3. Find the maximum pressure between the wheel with a cylindrical rim of radius $r_1 = 15.8$ in. and the rail with the radius of the head $r_2 = 12$ in. if $P = 1000$ lbs. and Poisson's ratio $\mu = 0.25$.

Answer. The semi-axes of the ellipse of contact are

$$a = 0.0946 \text{ in.} \quad \text{and} \quad b = 0.0792 \text{ in.}$$

$$p_{\max} = \frac{3}{2} \frac{P}{\pi ab} = 63,600 \text{ lbs. per sq. in.}$$

CHAPTER VIII

DEFORMATIONS BEYOND ELASTIC LIMIT

67. Pure Bending of Beams the Material of Which Does Not Follow Hooke's Law.—The experiments with beams the material of which does not follow Hooke's law indicate that during pure bending the cross sections of the beam remain plane; hence elongations and contractions of longitudinal fibers are proportional to their distances from the neutral surface. Taking this as a basis of our further discussion and assuming that during bending there exists the same relation between stress and strain as in the case of simple tension and compression, we can find without difficulty the stresses produced in the beam by a bending moment of a given magnitude.¹ Let us begin with a beam of rectangular cross section, Fig. 226, and assume that the radius of curvature of the neu-

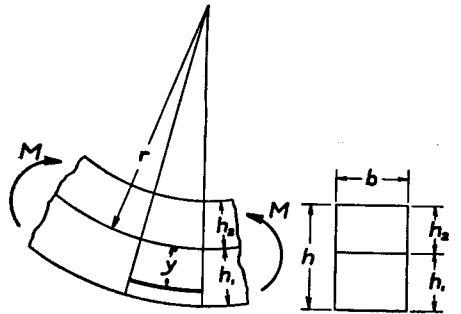


FIG. 226.

tral surface produced by the moments M is equal to r . In such a case the unit elongation of a fiber a distance y from the neutral surface is

$$\epsilon = \frac{y}{r}. \quad (a)$$

¹ This theory has been developed by Saint Venant in his notes to the Navier's book: "Résumé des leçons. . ." 3d ed., p. 173, 1864. See also paper by Eugen Mayer, Physik. Zeitschr., 1907 and Dissertation by H. Herbert, Göttingen, 1909.

Denoting by h_1 and h_2 the distances from the lower and the upper surfaces of the beam respectively to the neutral axis, we find that the elongations in the utmost fibers are

$$\epsilon_1 = \frac{h_1}{r}, \quad \epsilon_2 = -\frac{h_2}{r}. \quad (b)$$

It is seen that the elongation or contraction of any fiber is readily obtained provided we know the position of the neutral axis, say ratio h_1/h_2 , and the radius of curvature r . These two quantities can be found from the two equations of statics:

$$\int_A \sigma dA = b \int_{-h_2}^{h_1} \sigma dy = 0, \quad (c)$$

$$\int_A \sigma y dA = b \int_{-h_2}^{h_1} \sigma y dy = M. \quad (d)$$

The first of these equations states that the sum of normal forces acting on a cross section of the beam vanishes, since these forces represent a couple. The second equation states that the moment of the same forces with respect to the neutral axis is equal to the bending moment M .

Equation (c) is now used for determining the position of the neutral axis. From equation (a) we have

$$y = r\epsilon, \quad dy = r d\epsilon. \quad (e)$$

Substituting into equation (c) we obtain

$$\int_{-h_2}^{h_1} \sigma dy = r \int_{\epsilon_2}^{\epsilon_1} \sigma d\epsilon = 0. \quad (f)$$

Hence the position of the neutral axis is such that the integral $\int_{\epsilon_2}^{\epsilon_1} \sigma d\epsilon$ vanishes. To determine this position we use the curve AOB in Fig. 227, which represents the tension-compression test diagram for the material of the beam, and we denote by Δ the sum of the absolute values of the maximum elonga-

tion and the maximum contraction, which is

$$\Delta = \epsilon_1 - \epsilon_2 = \frac{h_1}{r} + \frac{h_2}{r} = \frac{h}{r}. \quad (g)$$

To solve equation (f), we have only to mark the length Δ on the horizontal axis in Fig. 227 in such a way as to make equal the two areas shaded in the figure. In this manner we obtain the strain ϵ_1 and ϵ_2 in the utmost fibers; equations (b) then give

$$\frac{h_1}{h_2} = \left| \frac{\epsilon_1}{\epsilon_2} \right|. \quad (h)$$

This determines the position of the neutral axis. Observing that elongations ϵ are proportional to the distance from the neutral axis, we conclude that the curve AOB also represents the distribution of bending stresses along

the depth of the beam, if h is substituted for Δ . In calculating the radius r we use equation (d). Substituting for y and dy their expressions (e), we represent equation (d) in the following form:

$$br^2 \int_{\epsilon_2}^{\epsilon_1} \sigma \epsilon d\epsilon = M. \quad (i)$$

By observing that $r = h/\Delta$ from equation (g), the equation (i), after a simple transformation, can be written as follows:

$$\frac{bh^3}{12} \cdot \frac{1}{r} \cdot \frac{12}{\Delta^3} \int_{\epsilon_2}^{\epsilon_1} \sigma \epsilon d\epsilon = M. \quad (j)$$

Comparing this result with the known equation

$$\frac{EI}{r} = M \quad (k)$$

for bending of beams following Hooke's law, we conclude that beyond the proportional limit the curvature produced by a

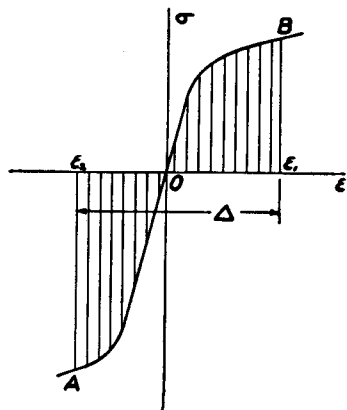


FIG. 227.

moment M can be calculated from the equation:

$$\frac{E_r I}{r} = M, \quad (297)$$

in which E_r is the *reduced modulus* defined by the expression:

$$E_r = \frac{12}{\Delta^3} \int_{\epsilon_2}^{\epsilon_1} \sigma \epsilon d\epsilon. \quad (298)$$

The integral in this expression represents the moment with respect to the vertical axis through the origin O of the shaded area shown in Fig. 227. Since the ordinates of the curve in the figure represent stresses, and the abscissas, strain, the integral and also E_r have the dimension of lb. in.⁻², i.e., the same dimension as the modulus E . The magnitude of E_r for a given material, i.e., for a given curve in Fig. 227, is a function of Δ or of h/r . Taking several values of Δ and using each time the curve in Fig. 227 as was previously explained, we de-

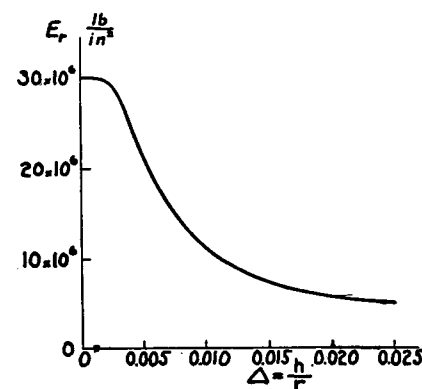


FIG. 228.

termine for each value of Δ the corresponding utmost elongations ϵ_1 and ϵ_2 , and from expression (298) the corresponding value of E_r . In this way a curve representing E_r as a function of $\Delta = h/r$ is obtained. In Fig. 228 such a curve is shown for structural steel with $E = 30.10^6$ lbs. per square inch and the proportional limit 30,000 lbs. per square inch. In such a case, for $\Delta < 0.002$, E_r remains constant and equal to E .

With such a curve the moment corresponding to any assumed curvature can be readily calculated from equation (297), and we can plot a curve, Fig. 229, giving the moment M as a function of Δ . For small values of Δ the material follows Hooke's law, and the curvature is proportional to the bending moment M , as shown in the figure by the straight line OC . Beyond the proportional limit the rate of change of the curvature is always increasing as the moment increases.

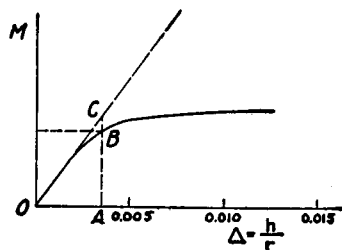


FIG. 229.

If instead of a rectangle we have any other symmetrical shape of the cross section, the width b of the cross section is variable, and equations (c) and (d) must be written in the following form:

$$\int_{-h_2}^{h_1} b \sigma dy = r \int_{\epsilon_2}^{\epsilon_1} b \sigma d\epsilon = 0, \quad (l)$$

$$\int_{-h_2}^{h_1} b \sigma y dy = r^2 \int_{\epsilon_2}^{\epsilon_1} b \sigma \epsilon d\epsilon = M. \quad (m)$$

Take as an example the case of a \perp section, Fig. 230. If we denote by ϵ' the longitudinal strain at the junction of the web and of the flange, the equations (l) and (m) can be written in the following form:

$$\int_{\epsilon_2}^{\epsilon'} \sigma d\epsilon + \int_{\epsilon'}^{\epsilon_1} \frac{b_1}{b} \sigma d\epsilon = 0, \quad (n)$$

$$br^2 \left(\int_{\epsilon_2}^{\epsilon'} \sigma \epsilon d\epsilon + \int_{\epsilon'}^{\epsilon_1} \frac{b_1}{b} \sigma \epsilon d\epsilon \right) = M. \quad (o)$$

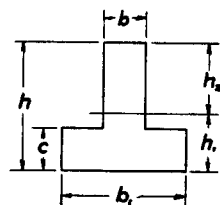


FIG. 230.

We see that in this case the ordinates of the tensile test curve in that portion corresponding to the flange of the cross section must be magnified in the ratio b_1/b . In determining the position of the neutral axis we proceed as in the preceding case: use the tension-compression test diagram, Fig. 231, and mark on the horizontal axis such a position of the assumed length $\Delta = h/r$ that the two shaded areas become numerically equal. In this manner the strains ϵ_1 and ϵ_2 in the utmost fibers are obtained. The strain ϵ' at the junction of the web and the flange is obtained from the equation

$$\frac{\epsilon_1 - \epsilon'}{\Delta} = \frac{c}{h},$$

in which c is the thickness of the flange, Fig. 230. Having determined the position of the neutral axis and observing that the expression in the parentheses of equation (o) represents the moment of the shaded areas in Fig. 231 with respect to the vertical axis through the origin O , we can readily calculate from equation (o) the moment M , corresponding to the assumed value of $\Delta = h/r$. In this manner a curve similar to that shown in Fig. 229 can be constructed for a beam of \perp section. An I beam can also be treated in a similar manner.

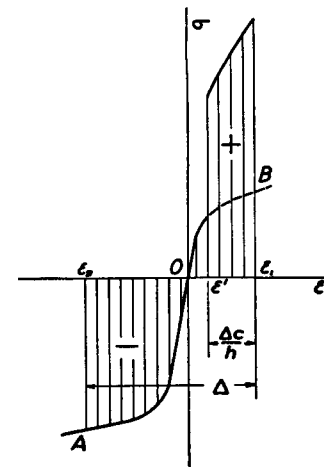


FIG. 231.

In the previous examples the tension-compression test diagram AOB was used for determining the position of the neutral axis and the magnitude of the radius of curvature, r . If there exists an analytical expression for the curve AOB , the above quantities can be obtained by calculation alone without using the graphical method shown in Fig. 227 and Fig. 231. A very general equation for stress-strain curves was used by Saint Venant.² He assumed that for

² Loc. cit., p. 362.

bending beyond the proportional limit the distribution of tensile and compressive stresses along the depth of the beam can be represented by the following equations:

$$\left. \begin{aligned} \sigma &= \sigma_0 \left[1 - \left(1 - \frac{y}{a} \right)^m \right], \\ \sigma' &= \sigma'_0 \left[1 - \left(1 - \frac{y_1}{b} \right)^n \right], \end{aligned} \right\} \quad (p)$$

in which σ_0 and σ'_0 and also a and b are certain constants which, together with the exponents m and n , define the stress distribution curves shown in Fig. 232. For very small distances y and y_1 we can assume that

$$\left(1 - \frac{y}{a} \right)^m \approx 1 - \frac{my}{a}, \quad \text{and} \quad \left(1 - \frac{y_1}{b} \right)^n \approx 1 - \frac{ny_1}{b},$$

and equations (p) give

$$\sigma = \frac{\sigma_0 m y}{a} = \frac{\sigma_0 m r \epsilon}{a}, \quad \text{and} \quad \sigma' = \frac{\sigma'_0 n y_1}{b} = \frac{\sigma'_0 n r \epsilon}{b}.$$

Hence

$$\frac{\sigma_0 m r}{a} = E_1, \quad \text{and} \quad \frac{\sigma'_0 n r}{b} = E_2, \quad (q)$$

where E_1 and E_2 are the moduli of the material for very small tension and compression respectively. If these two moduli of the material are equal, the two curves given by equations (p) have a common tangent at the neutral axis and we have

$$\frac{\sigma_0 m}{a} = \frac{\sigma'_0 n}{b}. \quad (r)$$

By using expressions (p) in equations of equilibrium (c) and (d), the position of the neutral axis and the radius of curvature can be calculated in each particular case. Taking, for example, $m = n = 1$ and using

expressions (q) we obtain, from equations (p),

$$\sigma = \frac{E_1 y}{r}, \quad \sigma' = \frac{E_2 y_1}{r}. \quad (s)$$

This is the case in which the material of the beam follows Hooke's

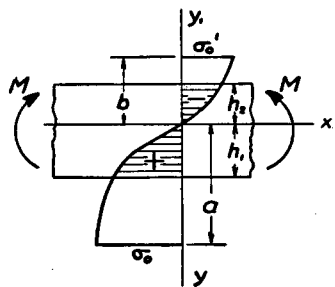


FIG. 232.

law but has a modulus in tension different from its modulus in compression. Substituting expressions (s) into equation (c) and assuming that the beam has a rectangular cross section, we obtain

$$E_1 h_1^2 = E_2 h_2^2,$$

which, together with the equation $h_1 + h_2 = h$, gives

$$h_1 = \frac{h \sqrt{E_2}}{\sqrt{E_1} + \sqrt{E_2}}, \quad \text{and} \quad h_2 = \frac{h \sqrt{E_1}}{\sqrt{E_1} + \sqrt{E_2}}$$

From equation (d) we then find

$$\frac{E_1 h_1}{r} \cdot \frac{b h_1}{2} \cdot \frac{2}{3} h = \frac{b h^3}{12} \cdot \frac{1}{r} \cdot \frac{4 E_1 E_2}{(\sqrt{E_1} + \sqrt{E_2})^2}.$$

It is seen that in this case the curvature is obtained from equation (297) by using for the reduced modulus the value

$$E_r = \frac{4 E_1 E_2}{(\sqrt{E_1} + \sqrt{E_2})^2}. \quad (299)$$

This modulus is sometimes used in calculating the buckling load for a column compressed beyond the proportional limit of the material.³

As another example let us assume that the stress-strain curves in tension and compression are identical; then $m = n$, $a = b$ and $\sigma_0 = \sigma'_0$ in equations (p). Assuming also that $a = b = h/2$ we find, from equation (d), for a rectangular beam:

$$M = \sigma_{\max} \cdot \frac{b h^2}{6} \cdot \frac{3m(m+3)}{2(m+1)(m+2)}. \quad (300)$$

The neutral axis in this case goes through the centroid of the cross section. The curves giving the stress distribution for various values of the exponent m are shown in Fig. 233. With increasing values of m the moment approaches the value:

$$M = \frac{3}{2} \cdot \sigma_{\max} \cdot \frac{b h^2}{6}.$$

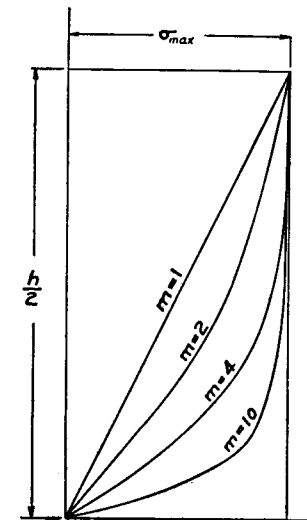


FIG. 233.

³ "Theory of Elastic Stability," p. 156.

In the case of structural steel with a pronounced yield point the stretching of the material during yielding (the horizontal portion at B in the tensile test diagram of Fig. 2a, p. 6, Part I) may be many times larger than the elastic elongation, say from 10 to 15 times larger. It may also be assumed for steel that the yield point stress is the same in tension and compression. Then the tension-compression test

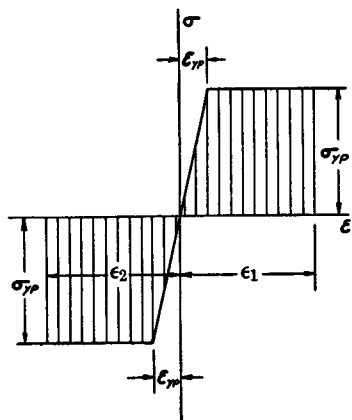


FIG. 234.

diagram can be represented with sufficient accuracy by the straight lines shown in Fig. 234. With a rectangular beam as an example, the strains ϵ_1 and ϵ_2 in the outermost fibers during bending beyond yield point are always equal, and equation (i) gives:

$$br^2\sigma_{Y.P.}(\epsilon_1^2 - \frac{1}{3}\epsilon_{Y.P.}^2) = M, \quad (t)$$

where $\epsilon_{Y.P.} = \sigma_{Y.P.}/E$ is the elastic elongation at the yield-point stress. If $\epsilon_{Y.P.}$ is small in comparison with ϵ_1 , the second term

in the parentheses of equation (t) can be neglected, and we obtain

$$br^2\epsilon_1^2\sigma_{Y.P.} = M. \quad (u)$$

The distribution of stresses over the cross section of the beam is then represented by two rectangles, and the corresponding bending moment has the magnitude

$$M_{ult} = \frac{bh^2}{4}\sigma_{Y.P.}, \quad (v)$$

which is obtained by substituting $\epsilon_1 = h/2r$ into equation (u). Denoting by $M_{Y.P.}$ the magnitude of bending moment at which the stress in the most remote fibers first arrives at the yield point, we have $\sigma_{Y.P.} = 6M_{Y.P.}/bh^2$ and equation (v) becomes

$$M_{ult} = \frac{3}{2}M_{Y.P.} \quad (301)$$

At the value M_{ult} of the bending moment all fibers of the

beam are in the condition of yielding and this yielding continues without increase in resisting moment as long as the stress-strain relation is as given by the diagram in Fig. 234. It will stop only when hardening of the material due to stretching becomes noticeable, but at that time the curvature of the beam due to plastic deformation becomes so large that it cannot be allowed in permanent structures; hence the value (v) of the bending moment must be considered as its *ultimate value*.

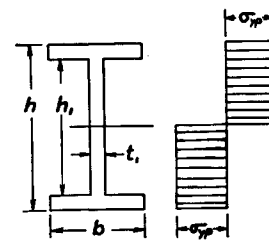


FIG. 235.

Applying the same reasoning in the case of an I-beam, Fig. 235, and assuming that at the ultimate values of the bending moment the stress in all fibers has the value $\sigma_{Y.P.}$, we obtain

$$M_{ult} = \frac{\sigma_{Y.P.}}{4} [t_1 h_1^2 + b(h^2 - h_1^2)]. \quad (302)$$

The moment at which yielding begins is obtained if we multiply $\sigma_{Y.P.}$ by the section modulus, which gives

$$M_{Y.P.} = \frac{\sigma_{Y.P.}}{4} \left[\frac{2t_1 h_1^3}{3h} + \frac{b(h^2 - h_1^2)(h + h_1)}{2h} \right]. \quad (w)$$

Since in usual cases the difference between h and h_1 is comparatively small, we see from expressions (302) and (w) that the ratio $M_{ult} : M_{Y.P.}$ is much smaller for I-beams than for rectangular beams. Hence a comparatively small increase in the moment above the value $M_{Y.P.}$ may bring the beam to a critical condition.⁴

68. Bending of Beams by Transverse Loads Beyond Elastic Limit.—In the case of bending of beams by transverse loads we neglect the action of shear on deflection⁵ and assume

⁴ It was assumed in the above discussion that the beam is bent in the plane of its maximum rigidity and that lateral buckling of the compressed flange is prevented.

⁵ The effect of shear has been discussed by A. Eichinger, Final Report, Second Congress International Assoc. Bridge and Structur. Engng., Berlin, 1938.

that the relation between the bending moment and the curvature is represented by equation (297) derived for pure bending. Then the area-moment method (see p. 144, Part I) can be applied in calculating deflections beyond the proportional limit.

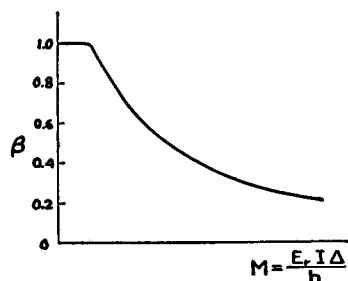


FIG. 236.

It is only necessary to observe that the flexural rigidity in this case is not constant but varies with the magnitude of the bending moment. To establish the relation between these two quantities for rectangular beams, we use the curve in Fig. 229. For any value of $\Delta = h/r$ the ordinate \overline{AB} gives the corresponding value of the bending moment, and the ordinate \overline{AC} represents the moment which we would have if the material followed Hooke's law. Hence

$$\overline{AB} : \overline{AC} = E_r : E.$$

In this way we obtain for each assumed value of the bending moment the ratio $E_r I / EI$ of the reduced flexural rigidity to the initial flexural rigidity of the beam. Denoting this ratio

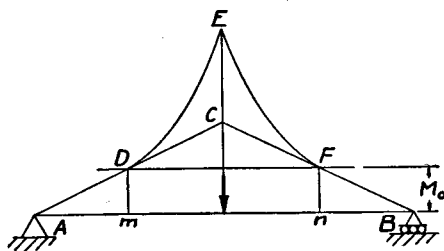


FIG. 237.

by β we represent it as a function of the bending moment M by the curve shown in Fig. 236. To illustrate how this curve can be used in the calculation of deflections, let us consider the case of a simply supported beam loaded at the middle, Fig. 237. The bending moment diagram in this case is the

triangle ACB . Let M_0 be the magnitude of that bending moment up to which the material follows Hooke's law. In such a case the portion mn of the beam is stressed beyond its proportional limit and the reduced flexural rigidity, which varies along this portion of the beam, instead of the initial flexural rigidity, must be used in calculating deflections. Proceeding as in the case of beams of variable cross section (see p. 211, Part I), we divide the ordinates of the bending moment diagram by the corresponding values of β , taken from Fig. 236. In this manner the *modified* bending moment diagram $ADEFB$ is obtained. Considering the modified bending moment area as a fictitious load and proceeding in the usual way, we obtain the deflection at any cross section of the beam by dividing by EI the bending moment produced at that cross section by the fictitious load.

We have discussed here only the case of a rectangular beam, but the same method is applicable in other cases provided the curve for the factor β , similar to that shown in Fig. 236, is obtained. Such a curve can be constructed by using the method illustrated in Fig. 231, or its ordinates can be calculated if the stress-strain relation beyond the proportional limit of the material is given analytically as by equations (p) in the preceding article.

In the case of a material such as steel, which has a pronounced yield point, Fig. 234, the bending of a rectangular beam beyond the yield point does not mean immediate failure of the beam. The yielding starts in the outermost fibers of the cross section with the maximum bending moment while the rest of the beam continues to work elastically. By plotting a load-deflection diagram for such a beam, we find that the shape of this diagram is quite different from the stress-strain diagram for the simple tension test of steel. When yielding of the material begins, we obtain in the load-deflection diagram only a slight deviation from a straight line, and a considerable flattening of the curve occurs only at a much higher load when yielding spreads over a large portion of the material of the beam. The amount of this flattening

of the load-deflection diagram and the magnitude of the corresponding permanent deflection of the beam depend upon the percentage of plastic flow at the yield point in the tension-compression test curve for the material. Assume, for example, that plastic flow at the yield point is $1\frac{1}{2}$ per cent, i.e., about fifteen times larger than the elastic elongation at the proportional limit of structural steel. If the outermost fibers of the beam undergo this much plastic flow, the stress distribution will approach that represented by two rectangles, and the corresponding bending moment is then seen (equation 301) to approach the value one and one-half times greater than the moment $M_{Y.P.}$ at which yielding first begins. •The curvature in this case, from equation (g) of the preceding article, is

$$\frac{1}{r} = \frac{\Delta}{h} = \frac{0.03}{h}.$$

This large curvature will occur only in those portions of the beam where the bending moment approaches the above high value of $1\frac{1}{2}M_{Y.P.}$. This indicates that there will be a tendency for the bending to concentrate at the section of the maximum bending moment, and the deflection curve beyond the yield point will have a different shape from that below the elastic limit. In the case of bending of a beam by a force at the middle, Fig. 237, the yielding will occur principally at the middle, where a considerable curvature will result, while the remaining portions of the beam will be only slightly bent.

If, instead of a solid rectangular cross section, we take an I-section, the effect of plastic flow at the yield-point stress on the load-deflection diagram will be much more pronounced. This is obvious since most of the material is concentrated at the flanges of the beam, and consequently most of the fibers at the cross section of maximum bending moment begin to yield at about the same time. This yielding of material results finally in lateral buckling of the flanges.⁶ Hence the maximum load that an I-beam may carry is only slightly

⁶ "Theory of Elastic Stability," p. 273.

larger than the load that first produces yield-point stress in the flanges. From this discussion it may be seen that when we take the loading which first produces a yield-point stress as the basis for determining the allowable stress in a beam, the factor of safety for the loading which produces unpermissible damage depends on the shape of the cross section. In the case of a rectangular beam, this extra safety factor is considerably higher than in the case of an I-beam. In structural design this difference is usually disregarded, and beams of any cross section are designed on the basis of yield-point stress.⁷ It is also usually assumed that up to this point our elementary formulas for calculating stresses, based on Hooke's law, are sufficiently accurate.

In our discussion of bending of beams by transverse loads it was assumed that the problem was statically determinate so that the construction of the bending moment diagram did not require any discussion of the deflection curve. In the statically indeterminate cases the problem becomes more involved, since beyond the proportional limit redundant forces and moments are no longer proportional to the acting loads, and the principle of superposition does not hold. Sometimes, however, the problem can be simplified by using a symmetry consideration. Assuming, for instance, that the ends of the beam in Fig. 237 are built-in, we conclude, from symmetry, that the bending moment vanishes at the quarter points, and the deflection curve consists of four identical portions which can be obtained in the same way as for a cantilever loaded at the end. In the case of a uniformly loaded beam with built-in ends we conclude from symmetry that the moments at the ends are equal. The magnitude of these moments can be obtained by trial and error method. It is necessary to assume some value for these moments and construct the modified bending moment diagram, as explained for the case shown in Fig. 237. The correct value of the moments is evidently that value at which the total fictitious load, represented by the modified bending moment area, vanishes.

⁷ Another way of beam design is discussed on p. 376.

It may be seen from the above discussion that in the case of bending beyond the proportional limit the calculation of redundant forces and redundant moments requires usually a complicated investigation. In the case of such materials, however, as structural steel, which has a pronounced yield point, the analysis of statically indeterminate structures can be simplified very much if we limit our consideration to that stage of loading at which the structure reaches the *critical condition* and begins to yield without a further increase in the load. Take again, as an example, the uniformly loaded beam with built-in ends, and assume that the intensity of the load is gradually increasing. At a certain magnitude of this load the redundant moments at the ends reach the value $M_{Y.P.}$, and the material begins to yield. The corresponding bending moment diagram, calculated on the assumption that Hooke's law holds up to the yield point, is shown in Fig. 238, *a*. Proceeding further with the increasing load, we observe that a stage will be reached at which the redundant moments become equal to M_{ult} . This loading condition is not yet critical for our beam, since the moment at the middle remains smaller than the M_{ult} value, and the beam can withstand the load action. With a further increase in load, owing to yielding of the material, the moments at the ends do not change their magnitude, and further deflection occurs as in the case of a simply supported beam.⁸ The critical condition is finally reached when the bending moment at the middle becomes equal to M_{ult} . The corresponding bending moment diagram is shown in Fig. 238, *b*. At this load the local bending at the ends and at the center proceeds without any further increase in load, and a considerable plastic deformation will be produced before the hardening of material begins to counteract the yielding.

It was already shown (see p. 371) how the magnitude of M_{ult} can be calculated for a beam of a given cross section. Knowing M_{ult} , we can readily construct the bending moment

⁸ Any hardening of material is entirely neglected in this discussion.

diagram for the critical condition, and determine the *critical value* of the load. For instance, in the case of a uniform load, Fig. 238, *b*, we find the critical value of load intensity from the equation:

$$\frac{q_{cr} l^2}{8} = 2M_{ult}.$$

At the same time, the load intensity at which yielding begins, Fig. 238, *a*, is defined by the equation:

$$\frac{q_{Y.P.} l^2}{8} = 1\frac{1}{2} M_{Y.P.}.$$

Hence

$$\frac{q_{cr}}{q_{Y.P.}} = \frac{4}{3} \frac{M_{ult}}{M_{Y.P.}}.$$

It is seen that the ratio $q_{cr}/q_{Y.P.}$ depends on the shape of the cross section of the beam. For rectangular beams this ratio is equal to 2.

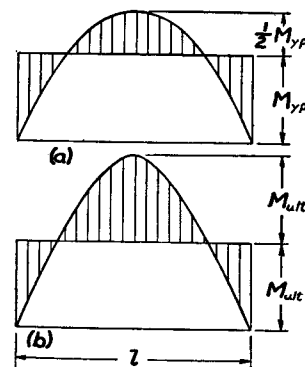


FIG. 238.

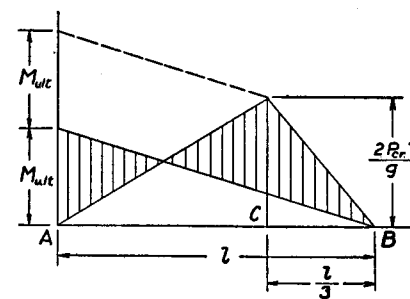


FIG. 239.

A similar discussion can be repeated for any other kind of loading of a beam with built-in ends and also for beams with other end conditions or for continuous beams; in each case the magnitude of the critical load can be readily established. For example, in Fig. 239 the bending moment diagram is shown for the critical condition of the beam built-in at the

left end, simply supported at the right end, and loaded at the third point C . This diagram is readily constructed if we observe that at the critical condition the bending moments at A and C are equal to M_{ult} . The critical value of the load at which yielding at A and C proceeds without a further increase in the load is given by the equation:

$$\frac{2}{9} P_{cr} l = 1\frac{1}{3} M_{ult}.$$

In Fig. 240 the bending moment diagram for the critical condition of a uniformly loaded continuous beam is shown. The

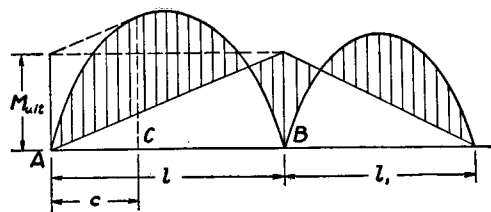


FIG. 240.

magnitude of q_{cr} and the distance c defining the position of the critical cross section C are obtained from the two conditions: 1) the bending moment at C is a maximum, and 2) its magnitude, as also the magnitude of the moment at B , is equal to M_{ult} , which give

$$\frac{q_{cr} l}{2} - \frac{M_{ult}}{l} - q_{cr} c = 0,$$

$$\frac{q_{cr} l}{2} c - \frac{q_{cr} c^2}{2} - \frac{M_{ult} c}{l} = M_{ult}.$$

From these equations we find

$$c = l(\sqrt{2} - 1), \quad q_{cr} = \frac{2M_{ult}}{l^2(3 - 2\sqrt{2})}.$$

From these examples it can be appreciated that the calculation of the critical loads can be readily made in various particular cases of statically indeterminate beams. This

calculation is usually simpler than that required in determining the values of the loads at which yielding begins, since we do not need to go into analysis of the statically indeterminate systems.⁹

It was already indicated that under the action of the critical loads the steel structures undergo considerable deformation which is not permissible under normal service conditions; hence it is important to consider those critical loads in the design and to determine the safe load on the structure dividing the magnitude of the critical load by a proper factor of safety. Such a procedure appears logical in the cases of steel structures submitted to the action of stationary loads, since in such cases a failure owing to the fatigue of metal is excluded, and only failure due to yielding of metal has to be considered.¹⁰

69. Residual Stresses Produced by Inelastic Bending.—

If a beam is bent beyond the elastic limit, some permanent set is produced, and the deformation does not vanish after the load is removed. The fibers which suffered a permanent set prevent the elastically stressed fibers from recovering their initial length after unloading, and in this way some *residual stresses* are produced. To determine the distribution of these stresses over the cross section, let us begin with the simplest case of a rectangular beam in which the stress distribution in bending beyond the yield point can be represented by two rectangles, $oklm$ and $opr n$, shown in Fig. 241, *a*. We assume also that the material, if stretched beyond the yield point and

⁹ M. Grüning, Handbuch f. Bauing. Bd. IV, Der Eisenbau, 1929, Grüning-Kulka, "Die Bautechnik," 1928, p. 274.

¹⁰ Such a method of determining safe dimensions of steel structures was proposed by N. C. Kist, "Der Eisenbau," vol. 11, 1920. The experiments for determining critical loads were made by Maier-Leibnitz, "Die Bautechnik," 1928, and by K. Girkmann, "Die Bautechnik," 1932. A theoretical discussion of the bending of beams beyond the yield point was given by J. Fritsche, Bauingenieur, 1930 and 1931. The combination of bending with compression was discussed by K. Girkmann, Sitzungsber. Akad. Wiss. Wien, Abt. IIa, vol. 140, 1931. In this country the question of design on basis of the critical loading has been discussed by J. A. Van den Broek, Trans. A. S. C. E. Vol. 105, 1940, p. 638.

then unloaded, follows Hooke's law during unloading, as shown in Fig. 241, *b* by the dotted line. As a result of this assumption it can be concluded that the bending stresses which are subtracted while unloading the beam follow the linear law indicated in Fig. 241, *a* by the line m_1n_1 . The difference between the two stress distributions, rectangular

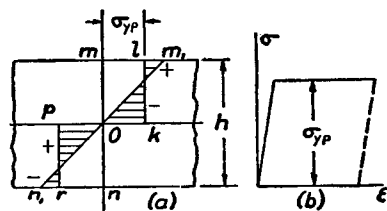


FIG. 241.

while loading and triangular while unloading, shown by the shaded areas in Fig. 241, *a*, represents the stresses which remain in the beam after unloading. These are the residual stresses produced in the beam by plastic deformation.

The signs of these stresses, shown in the figure, are obtained by assuming that the initial bending produced the curvature convex downward. Since the rectangular and the triangular stress distributions both represent the bending moment of the same magnitude, it can be concluded that the moment with respect to the axis pok of the triangle omm_1 is equal to the moment of the rectangle $oklm$ about the same axis. Hence the stress represented in the figure by the length mm_1 must be equal to $1\frac{1}{2}\sigma_{Y.P.}$, and the maximum tension and compression which remain in the most remote fibers after unloading the beam is equal to $\frac{1}{2}\sigma_{Y.P.}$. The residual stresses in the fibers near the neutral surface are as high as $\sigma_{Y.P.}$. It may be seen that the stress distribution represented in the figure by the shaded areas reduces to two equal and opposite couples, with the value $\sigma_{Y.P.}bh^2/27$, which are in equilibrium. The existence of these residual stresses can be shown experimentally by sawing the beam along the neutral plane. Then each half of the beam obtains a certain curvature. If a beam with such residual stresses as indicated in Fig. 241, *a* is bent again by moments of the same magnitude and in the same direction as in the previous experiment, the stresses produced by these moments and represented by the straight line m_1n_1 , will be superposed on

the residual stresses, given by the shaded areas, so that the resultant stress distribution will be that represented by the rectangles $oklm$ and $onrp$. The maximum resultant stress is $\sigma_{Y.P.}$, and no yielding will occur during this second bending. Hence the residual stresses produced by the first bending are of such a nature as to increase the bending moment which can be sustained by the bar elastically provided the direction of bending is unchanged. This phenomenon of improving the elastic capacity of a structure by a preliminary loading and creation of suitable residual stresses is sometimes used in practice. Some particular cases will be discussed later (see art. 74).

In a more general case of inelastic bending of a rectangular beam the stress distribution is given by a curve such as the curve n_1om_1 in Fig. 242, *a*. Assuming again that during

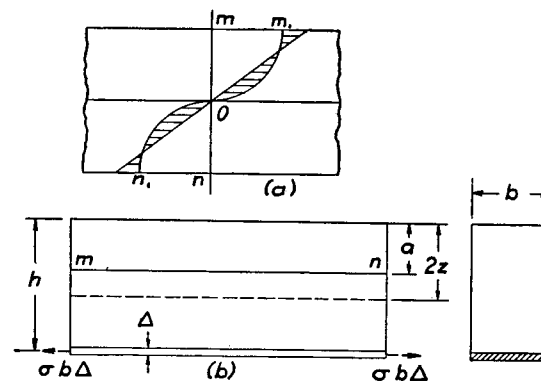


FIG. 242.

unloading the material of the beam follows Hooke's law, we find that the residual stresses produced by plastic flow are distributed as shown in the figure by the shaded areas. If the curve n_1om_1 is determined as explained in article 67, the magnitude of the residual stress can be readily obtained for each fiber. If the curve n_1om_1 is unknown, the residual stress distribution can be investigated experimentally by taking off from the beam, one after the other, thin layers parallel to the

neutral plane and by measuring after each cut the elastic deformation which ensues in the beam.

Assume that the residual stress at the lower side of the beam is tension of a magnitude σ . Then the removal of a thin layer of a thickness Δ , indicated in Fig. 242, *b*, evidently produces the same deformation in the rest of the beam as would be produced by the application of the two equal and opposite forces $\sigma b \Delta$, shown in the figure by the dotted arrows. We shall find that after cutting off the thin layer the axis of the beam acquires an elongation and a curvature given by the formulas:

$$d(\epsilon) = \frac{\sigma b \Delta}{E b h}, \quad d\left(\frac{1}{r}\right) = \frac{\sigma b \Delta (h - \Delta) 12}{2 E b (h - \Delta)^3} \approx \frac{\sigma b \Delta h}{2 E I}. \quad (a)$$

It is seen that if the curvature $d(1/r)$ is measured, σ , the magnitude of the residual tensile stress in the most remote fiber, is readily calculated from the equation (a). The determination of the residual stress σ_a in a fiber *mn* at a distance *a* from the upper side of the beam, Fig. 242, *b*, is more involved. By taking off one layer after the other we finally reach the layer *mn*, and we can determine the stress in it by using an equation similar to equation (a). This stress, however, will have a magnitude σ'_a different from the residual stress σ_a , since the cutting off layer after layer produces changes of stresses in the remaining portion of the beam. It is evident that only after investigation of these changes will the determination of the required residual stress σ_a be possible. Let us assume that by taking off layer after layer we reached the fibers indicated by the dotted line in Fig. 242, *b*, at a distance $2z$ from the upper side of the beam. If a new thin layer of thickness Δ is now taken off, the stress σ'_z in this layer is obtained from the equation:

$$d\left(\frac{1}{r}\right) = \frac{\sigma'_z b z \Delta}{E I_z}, \quad \text{where} \quad I_z = \frac{b(2z)^3}{12}$$

from which

$$\sigma'_z = \frac{d(1/r) E I_z}{b z \Delta}. \quad (b)$$

The removing of this layer will produce in the fiber *mn* a direct stress of the magnitude

$$\frac{\sigma'_z b \Delta}{2 b z}, \quad (c)$$

and a bending stress of the magnitude

$$\frac{\sigma'_z b z \Delta (a - z)}{I_z}. \quad (d)$$

Formulas (c) and (d) give us the changes in the stress of the fiber *mn* owing to the removal of one layer. Taking now into consideration all thin layers by varying $2z$ from *h* to *a*, we obtain the total change in the stress of the fiber *mn* as follows:

$$\Sigma \frac{\sigma'_z \Delta}{2z} + \Sigma \frac{\sigma'_z b z \Delta (a - z)}{I_z}, \quad (e)$$

where σ'_z for each step is calculated from formula (b) by using in it the measured values of $d(1/r)$. The required residual stress σ_a in the fiber *mn* is now obtained by subtracting the quantity (e) from the stress σ'_a , which is found by substituting *a* for $2z$ in formula (b). Hence

$$\sigma_a = \sigma'_a - \Sigma \frac{\sigma'_z \Delta}{2z} - \Sigma \frac{\sigma'_z b z \Delta (a - z)}{I_z}. \quad (f)$$

This method of experimental determination of longitudinal residual stresses can be applied not only in the case of bending but also in other cases of prismatical bars submitted to longitudinal plastic deformation (see art. 71). It was, for example, successfully applied in measuring residual stresses in cold drawn brass tubes.¹¹ To take off thin layers of metal a special chemical solution was used in that work. The changes in curvature were measured optically. In this way complete information regarding residual stresses in cold drawn tubes can be obtained. Such information is of great practical importance in developing the proper technique in manufacturing tubes.

70. Torsion Beyond the Elastic Limit.—Let us begin with the torsion of circular shafts and assume that beyond the elastic limit the cross sections of the twisted shaft continue to

¹¹ This method was developed by N. N. Dawidenkow, *Journal of Techn. Phys.*, Vol. 1, 1931, Leningrad, and *Zeitschrift für Metallkunde*, Vol. 24, 1932, p. 25. See also the doctor's thesis by C. G. Anderson, University of Michigan, 1935. Another method suitable for measuring residual stresses in rolled sections such as I-beams and channels was developed by J. Mathar, *Archiv für das Eisenhüttenwesen*, Vol. 6, 1932-33, p. 277.

remain plane and their radii remain straight.¹² In such a case the shearing strain γ at a distance r from the axis of the shaft is determined by the same formula as in the case of torsion within the elastic limit (see p. 261, Part I):

$$\gamma = r\theta, \quad (a)$$

where θ is the angle of twist per unit length of the shaft. To determine the magnitude of the torque which is required for producing the twist θ , it is necessary to know the relation between shearing strain γ and shearing stress τ beyond the proportional limit. Assume that the

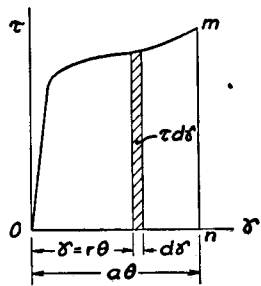


FIG. 243.

diagram in Fig. 243 gives the required relation.¹³ If a is the outer radius of the shaft, the maximum shearing strain is $a\theta$ and the corresponding maximum shearing stress is given by the ordinate mn in the diagram of Fig. 243. In the same way the shearing stress at any distance r from the axis can be readily obtained from the diagram. The torque M_t which must be applied to produce

the assumed magnitude θ of the twist is now obtained from the equation of statics:

$$\int_0^a 2\pi r^2 dr \tau = M_t. \quad (b)$$

Substituting in this equation from equation (a)

$$r = \frac{\gamma}{\theta}, \quad dr = \frac{d\gamma}{\theta},$$

¹² This theory was developed by Saint Venant, *Journal de Mathématiques*, Vol. 16, 1871, p. 373. See also I. Todhunter and K. Pearson, *History of the Theory of Elasticity*, Vol. 2, Part I, p. 170. For a further discussion of this subject see A. Nadai, "Plasticity," 1931, p. 126.

¹³ Such a diagram can be obtained experimentally by making a torsion test on thin tubes. To eliminate the possibility of buckling, the wall thickness can be only locally reduced to a small value by making a circumferential groove of a rectangular shape in a thicker tube.

we obtain

$$\frac{2\pi}{\theta^3} \int_0^{a\theta} \gamma^2 \tau d\gamma = M_t. \quad (c)$$

The integral on the left side of this equation has a simple geometrical meaning; namely, it represents the moment of inertia with respect to the vertical axis $o\tau$ of the area $omno$ in Fig. 243. After calculating this moment of inertia for any assumed value of $a\theta$, the corresponding torque is readily obtained from the equation (c). Hence a curve representing the relation between M_t and θ can be plotted if the diagram in Fig. 243 is given. Since the abscissas in Fig. 243 are proportional to the radial distances, the curve om also represents to a certain scale the shearing stress distribution along a radius of the shaft. If during the twist the material follows Hooke's law at all times, we have $\tau = \gamma G = r\theta G$, and equation (b) gives

$$2\pi\theta G \int_0^a r^3 dr = \theta GI_p = M_t, \quad (d)$$

which is the known equation for torsion within the elastic limit.

If the material of the shaft has a very pronounced yield point, the curvilinear portion of the diagram in Fig. 243 can be replaced by the horizontal line with the abscissa $\tau_{Y.P.}$. Hence, for a considerable angle of twist the distribution of shearing stresses along a radius of the shaft approaches uniform distribution. The corresponding magnitude of torque we call by $(M_t)_{ult.}$ Its value is obtained by substituting $\tau_{Y.P.}$ for τ in equation (b), which gives

$$(M_t)_{ult.} = \frac{2\pi G^3}{3} \tau_{Y.P.} \quad (e)$$

When the torque reaches this value, a further twist of the shaft proceeds without a further increase in torque up to the point at which the hardening of the material becomes noticeable. For comparison we calculate also the value of the torque $(M_t)_{Y.P.}$ at which yielding begins. For this purpose we

use equation (d) and substitute in it the value of θ at which yielding begins. This latter value is obtained from equation (a) by taking $r = a$ and $\gamma = \gamma_{Y.P.}$, which gives

$$\theta_{Y.P.} = \frac{\gamma_{Y.P.}}{a} = \frac{\tau_{Y.P.}}{aG}.$$

Hence, from equation (d),

$$(M_t)_{Y.P.} = \theta_{Y.P.} I_p = \frac{\pi a^3}{2} \tau_{Y.P.} \quad (f)$$

It is seen, from equations (e) and (f), that

$$(M_t)_{ult} : (M_t)_{Y.P.} = \frac{4}{3}.$$

If, after applying the torque $(M_t)_{ult}$, we unload the shaft, some residual stresses will remain in it. The magnitude of these stresses can be obtained by repeating the same reasoning which was applied in the case of bending (p. 379). Let the ordinates of the horizontal line mn in Fig. 244 represent the shearing stress $\tau_{Y.P.}$ produced by the moment M_{ult} and uniformly distributed along the radius of the shaft. During unloading of the shaft the material follows Hooke's law, and

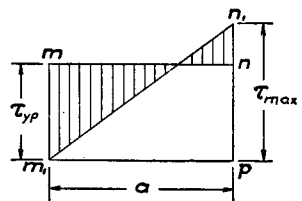


FIG. 244.

the torsional stresses which are to be subtracted while unloading the shaft follow the linear law indicated in Fig. 244 by the line m_1n_1 . The difference between the two stress distributions, rectangular while loading and triangular while unloading, represents the stresses which remain in the shaft after unloading. The distribution of these stresses along a radius of the shaft is shown in Fig. 244 by the shaded areas. The magnitude of the ordinate n_1p , denoted by τ_{max} , is found from the fact that the rectangular and the triangular stress distributions both represent a torque of the same magnitude M_{ult} . For the rectangular stress distribution this torque is

given by the formula (e). The formula for the same torque and for the triangular stress distribution is obtained by substituting τ_{max} for $\tau_{Y.P.}$ in the formula (f):

$$\frac{2\pi a^3}{3} \tau_{Y.P.} = \frac{\pi a^3}{2} \tau_{max},$$

$$\tau_{max} = 1\frac{1}{3} \tau_{Y.P.}$$

It is seen that the residual torsional stress at the surface of the shaft is equal to $\frac{1}{3} \tau_{Y.P.}$. Near the center that stress is equal to $\tau_{Y.P.}$.

The distribution of residual torsional stresses can be investigated experimentally. For this purpose it is necessary to machine off successive thin layers of metal from the shaft and measure, after removing each layer, the change in the angle of twist of the shaft.¹⁴

If the material of the shaft has a pronounced yield point, the membrane analogy (see p. 267) can be used to advantage in studying torsion beyond the yield point. When the magnitude of the torque is somewhat larger than $(M_t)_{Y.P.}$, the outer portion of the shaft is in the condition of yielding while the inner portion continues to deform elastically. To extend the membrane analogy to this case, it is necessary to use, together with the membrane, a rigid cone ACB , Fig. 245, the slope of which represents the yield point stress $\tau_{Y.P.}$ to the proper scale. If a small pressure p is acting on the membrane, the deflections are also small, and the conical surface does not interfere with the free deflection of the membrane. Hence its surface defines the stress distribution for the case of an elastic torsion, such as was previously discussed (see p. 268). With an increase in pressure the deflections of the membrane also increase, and finally the outer portion of the membrane comes into contact with the rigid cone as shown in Fig. 245. This condition represents torsion

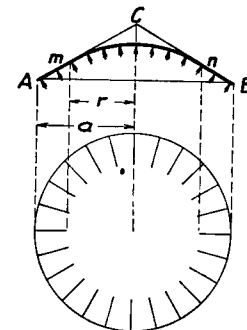


FIG. 245.

¹⁴ A further discussion of this subject can be found in A. Nadai's "Plasticity," 1931, p. 266.

beyond the yield point. The outer portion of the membrane, coinciding with the cone, has the constant slope corresponding to the yield point stress $\tau_{Y.P.}$. The inner portion mn of the membrane corresponds to the inner portion of the shaft, which is in an elastic condition. The double volume between the membrane and the plane of the boundary AB continues to represent the torque. From this we conclude that the double volume of the cone must give us the value of $M_{ult.}$ Since the slope of the cone is $\tau_{Y.P.}$, its height is equal to $a\tau_{Y.P.}$, and its double volume is $\frac{2}{3}\pi a^2 a\tau_{Y.P.}$ which coincides with the expression (e).

The same method can also be used in the case of non-circular cross sections of shafts, and is very useful in determining these portions of the shaft in which yielding begins. Consider as an example a rectangular shaft. In investigating torsion of this shaft beyond its yield point the membrane must be used together with a rigid roof surface, Fig. 246, which has a constant slope at all points representing to a certain scale the yield point stress $\tau_{Y.P.}$. It is

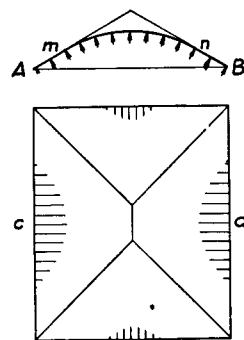


FIG. 246.

evident that the membrane, deflecting under increasing uniform pressure, touches the roof first at points c and d , the middle points of the longer sides of the rectangle. At these points the yielding begins and at a higher pressure some portions of the membrane will coincide with the roof as indicated in the figure by the shaded areas. These areas define the regions where the material yields. In the rest of the shaft we have only elastic deformation. A further increase in pressure on the membrane increases the portions of contact with the roof, as well as the regions of plastic deformation. The double volume

between the roof and the plane AB evidently gives the magnitude of M_{ult} for the rectangular shaft.

If a rectangular bar of wrought iron is twisted beyond the yield point, the regions of plastic flow can be revealed by a proper etching of the cross section. After etching, there appears in plastic regions of the cross section dark parallel lines of such directions as shown in Fig. 246. These lines indicate the layers parallel to the axis of the shaft along which the sliding of the metal, produced by the yield point stress, occurs.¹⁵

¹⁵ Interesting photographs of these lines, obtained for various shapes of twisted bars, are shown in the paper by A. Nadai, Trans. A. S. M. E., Vol. 53, p. 29, 1931.

71. Plastic Deformation of Thick Cylinders under the Action of Internal Pressure.¹⁶—Discussing an elastic deformation of a thick-walled cylinder under the action of internal pressure p , we found (see p. 239) that the radial and the tangential stresses at a radial distance r from the axis of the cylinder are represented by the formulas:

$$\sigma_r = \frac{a^2 p}{b^2 - a^2} \left(1 - \frac{b^2}{r^2} \right), \quad \sigma_t = \frac{a^2 p}{b^2 - a^2} \left(1 + \frac{b^2}{r^2} \right), \quad (a)$$

where a and b are the inner and the outer radii of the cylinder respectively. The maximum tangential tension and the maximum radial compression occur at the inner surface of the cylinder. At that surface also the maximum shearing stress acts. The magnitude of it is

$$\tau_{\max} = \left(\frac{\sigma_t - \sigma_r}{2} \right)_{r=a} = \frac{pb^2}{b^2 - a^2}. \quad (b)$$

By gradually increasing the internal pressure, we finally reach a point when the material at the inner surface begins to yield. This occurs when the maximum shearing stress (b) becomes equal to the yield point stress $\tau_{Y.P.}$ ¹⁷ Substituting this value into formula (b), we find that the pressure at which yielding begins is

$$p_{Y.P.} = \tau_{Y.P.} \frac{b^2 - a^2}{b^2}. \quad (c)$$

Assuming, for example, $b = 2a$, we find that in this particular case $p_{Y.P.} = 0.750\tau_{Y.P.}$. With a further increase in pressure the plastic deformation penetrates deeper and deeper into the wall of the cylinder and finally at a certain pressure, which we

¹⁶ An investigation of plastic flow in thick cylinders submitted to inner pressure was made by Saint-Venant; see C. R., Vol. 74, 1872, p. 1009; see also Todhunter and Pearson, History of the Theory of Elasticity, Vol. 2, part I, p. 172, and the paper by L. B. Turner, Cambridge Phil. Soc. Trans., Vol. 21, 1913, p. 377.

¹⁷ The question of yielding of a material under various stress conditions is discussed in article 83. We assume here that $\tau_{Y.P.}$ has the same value as in the case of torsion (see p. 385).

shall call p_{ult} , the entire wall of the cylinder is brought into the state of yielding. The distribution of stresses in the wall at this yielding condition can be investigated without much difficulty if we assume that the material has a very pronounced yield point, which means that the yielding proceeds under the action of a constant shearing stress equal to $\tau_{Y.P.}$. This gives us for every point in the region of plastic deformation the equation:

$$\frac{\sigma_t - \sigma_r}{2} = \tau_{Y.P.} \quad (d)$$

Another equation for determining the principal stresses σ_r and σ_t is obtained by considering the equilibrium of an element of the wall, shown in Fig. 142. From our previous discussion (see p. 236) the equation of equilibrium is

$$\sigma_t - \sigma_r - r \frac{d\sigma_r}{dr} = 0. \quad (e)$$

Substituting for the difference of the principal stresses its value from equation (d), we obtain

$$\frac{d\sigma_r}{dr} = \frac{2\tau_{Y.P.}}{r}. \quad (f)$$

The integration of this equation gives

$$\sigma_r = 2\tau_{Y.P.} \log r + C. \quad (g)$$

The constant of integration C is obtained from the condition that at the outer surface of the cylinder, i.e., at $r = b$, the radial stress σ_r vanishes. This gives

$$0 = 2\tau_{Y.P.} \log b + C, \quad C = -2\tau_{Y.P.} \log b.$$

Substituting this value of the constant of integration C into equation (g), we obtain

$$\sigma_r = 2\tau_{Y.P.} \log \frac{r}{b}. \quad (303)$$

This gives for the inner surface of the cylinder

$$(\sigma_r)_{r=a} = 2\tau_{Y.P.} \log \frac{a}{b}, \quad (304)$$

and the pressure which is required to bring the entire wall of the cylinder into the state of plastic flow is

$$p_{ult} = -(\sigma_r)_{r=a} = -2\tau_{Y.P.} \log \frac{a}{b}.$$

Taking again $b = 2a$, we find $p_{ult} = 2\tau_{Y.P.} \log 2 = 0.693(2\tau_{Y.P.})$.

Having expression (303) for radial stresses, we obtain tangential stresses from equation (d), which gives

$$\sigma_t = 2\tau_{Y.P.} \left(1 + \log \frac{r}{b} \right). \quad (305)$$

If $b = 2a$, this expression becomes

$$(\sigma_t)_{r=a} = 2\tau_{Y.P.} \left(1 + \log \frac{a}{b} \right) = 0.307(2\tau_{Y.P.}),$$

$$(\sigma_t)_{r=b} = 2\tau_{Y.P.}$$

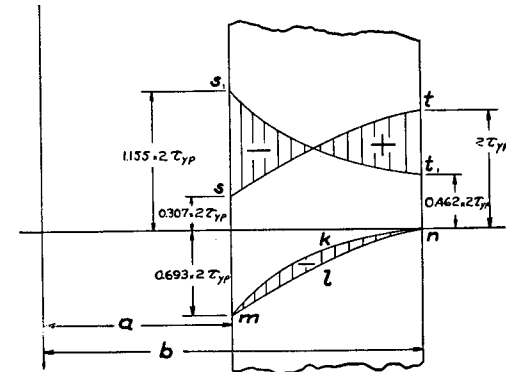


FIG. 247.

The distribution of stresses σ_r and σ_t along the thickness of the wall for the particular case $b = 2a$ is shown in Fig. 247 by the curves mn and st respectively. If, after bringing the material of the cylinder to the condition of yielding, we remove

the internal pressure, some residual stresses remain in the wall of the cylinder. These stresses can be readily calculated if we assume that during unloading the material of the cylinder follows Hooke's law. In such a case the stresses which are to be subtracted while unloading the cylinder are given by the expressions (a) if we substitute in these expressions p_{ult} instead of p . These stresses for the particular case $b = 2a$ are shown in Fig. 247 by the curves s_1t_1 and mkn . The shaded areas then give us the residual stresses in the wall of the cylinder. It is seen that owing to the plastic deformation, considerable compressive tangential stresses are produced in the portion of the cylinder wall.¹⁸ If a cylinder with such residual stresses is again loaded by the internal pressure equal to p_{ult} the tangential stresses produced by this pressure and given by the curve s_1t_1 will be superposed on the residual stresses, given by the shaded areas, so that the resultant stress distribution will be that represented by the curve st . The maximum resultant stress is $2\tau_{Y.P.}$, and no yielding will occur during this second application of the internal pressure. Hence the residual stresses produced by the plastic expansion of the cylinder are of such a nature as to increase the pressure which can be sustained by the cylinder elastically. This fact is sometimes used in manufacturing guns which must withstand high internal gas pressures.¹⁹

It was assumed in our discussion that the applied inner pressure is such as to bring the entire cylinder to the condition of yielding, but the method can also be applied without any difficulty to cases in which only the inner portion of the cylinder wall is in the state of yielding while the outer portion is in the elastic state. Assume that a pressure p' , larger than $p_{Y.P.}$ but smaller than p_{ult} , is applied, and let c be the radius of the

¹⁸ It is assumed that this compressive stress is less than yield point stress and that no yielding occurs during unloading. The case of yielding during unloading was studied by L. B. Turner, loc. cit., p. 389.

¹⁹ The description of this use of the initial plastic deformation can be found in the book by L. Jacob, "Résistance et Construction des Bouches à Feu. Autofretage," Paris. See also S. J. Brown, United States Naval Institute Proceedings, Vol. 46, 1920, p. 1941.

cylindrical surface separating the plastic region of the wall from the elastic. There will be a radial pressure acting between these two regions which we shall call X . The magnitude of this pressure can be found from a consideration of the outer, elastic, portion of the wall. The maximum shearing stress τ_{max} in this portion is found from equation (b) by substituting c instead of a and X instead of p in that equation which gives

$$\tau_{max} = \frac{Xb^2}{b^2 - c^2}.$$

Since the cylindrical surface $r = c$ separates the elastic and the plastic zones, the material at that surface just reaches the yield point. Hence $\tau_{max} = \tau_{Y.P.}$. The equation for determining the pressure X is then

$$\tau_{Y.P.} = \frac{Xb^2}{b^2 - c^2}, \quad (h)$$

and we obtain

$$X = \frac{\tau_{Y.P.}(b^2 - c^2)}{b^2}. \quad (i)$$

Having this pressure, we can readily calculate the stresses at any point in the elastic region of the wall by using equations similar to equations (a).²⁰

For calculating stresses in the plastic region of the wall we use equation (g). The constant of integration C is found from the condition that for $r = c$, $\sigma_r = -X$, which gives

$$-X = 2\tau_{Y.P.} \log c + C, \quad C = -X - 2\tau_{Y.P.} \log c.$$

Substituting this value of C in equation (g) and using expression (i) we obtain

$$\sigma_r = 2\tau_{Y.P.} \log \frac{r}{c} - \frac{\tau_{Y.P.}(b^2 - c^2)}{b^2}. \quad (306)$$

Taking r equal to the inner radius a of the cylinder, we obtain

²⁰ The radius c instead of a and X instead of p must be used in these equations.

the magnitude p' of the pressure which must be used to produce the plastic flow in the wall up to the depth corresponding to the radius $r = c$. This pressure is

$$p' = -2\tau_{Y.P.} \log \frac{a}{c} + \frac{\tau_{Y.P.}(b^2 - c^2)}{b^2}. \quad (307)$$

Taking our previous example where $b = 2a$ and assuming $c = 1.5a$, we find from equation (307) that $p' = 0.624(2\tau_{Y.P.})$.

The distribution of tangential stresses σ_t is obtained from equation (d), which gives

$$\sigma_t = 2\tau_{Y.P.} + \sigma_r = 2\tau_{Y.P.} \log \frac{r}{c} + \tau_{Y.P.} \frac{b^2 + c^2}{b^2}. \quad (308)$$

For $r = c$ the first term on the right side vanishes and the value of σ_t becomes equal to the value of the tangential stress produced by pressure X in the adjacent elastic zone of the wall. Equations (307) and (308) give us the stresses produced in the inner portion of the cylinder wall, which undergoes plastic deformation. For the outer portion, which remains elastic, equations similar to equations (a) must be used. In this way the problem of stress distribution for the case of a cylinder which undergoes only a partial plastic deformation is completely solved.

If, after partial yielding of the cylinder wall, the inner pressure p' is removed, some residual stresses will remain in the wall of the cylinder. The inner portion of the wall, in which plastic deformation occurred, does not return to its initial diameter and undergoes a pressure from the side of the outer elastic portion of the wall. The stress distribution produced in this way is similar to that produced by shrink-fit pressures in built-up cylinders (see art. 45). To calculate these stresses we proceed in exactly the same way as was explained before and illustrated in Fig. 247.

All these calculations are based on the assumption that beyond the yield point the material yields without an increase in stress. If this is not the case, the residual stresses cannot be calculated as explained above, and recourse must be made

to an experimental determination of residual stresses. In such cases a method similar to that used in determining residual bending stresses can be applied. We machine off thin layers of the metal one after the other beginning from the inner surface of the cylinder, and after each cut measure the strain produced in the axial and the circumferential directions at the outer surface of the cylinder. Such measurements furnish sufficient information for calculating residual stresses.

Residual stresses in cylinders can be produced not only by the plastic deformation described above, but also by non-uniform cooling and by volume changes of metals during recrystallization in various processes of heat treatment. Sometimes these stresses become of primary importance as, for instance, in big forgings, and several methods of their determination have been developed.²¹

²¹ The first investigation of this kind was made by N. Kalakoutzky, St. Petersburg, 1887. See also N. Kalakoutzky, Investigation into the Internal Stress in Cast Iron and Steel, London, 1888. The complete solution of the problem was given by G. Sachs, Zeitschr. f. Metallkunde, Vol. 19, 1927, p. 352 and Zeitschr. Ver. Deutsch. Ing., Vol. 71, 1927, p. 1511. These two papers contain a complete bibliography of the subject. Further improvements in the methods of measuring residual stresses in tubes were made by N. N. Dawidenkow, Journal of Technical Physics, Vol. 1, 1931, S. Petersburg. See also G. Sachs, Trans. of the A. S. M. E., 1939, p. 821. The bibliography on plastic deformation of metals and on residual stresses is given in "Handbuch der Metallphysik," Vol. 3, part I, by G. Sachs, Leipzig, 1937.

CHAPTER IX

MECHANICAL PROPERTIES OF MATERIALS

72. Tension Test.—The most common method of investigating mechanical properties of metals is by the tension test.¹ For this test circular cylindrical specimens and sometimes specimens of rectangular cross section are used. To make the results of test comparable, certain proportions for tensile test specimens have been established, which are recognized as *standard proportions*. In this country, for instance, the standard tensile test specimen is circular, with $\frac{1}{2}$ in. diameter and 2 in. gage length, so that

$$\frac{l}{d} = 4 \quad \text{or} \quad l = 4.51 \sqrt{A},$$

where $A = \pi d^2/4$ is the cross sectional area of the specimen. In central Europe two different proportions of circular specimens are in use: (1) a long specimen for which $l = 10d = 11.3\sqrt{A}$ and (2) a short specimen for which $l = 5d = 5.65\sqrt{A}$. In the case of rectangular specimens it is preferable to take the same relation between the length and the cross sectional area as for circular specimens.² The length of the cylindrical portion of the specimen is always somewhat greater than the gage length and is usually at least $l + d$. The ends of the specimen are generally made of heavier section to prevent the specimen from breaking in the grips of the testing machine, where the stress conditions are more severe, due to local irregularities in stress distribution. The long type of cylin-

¹A description of the procedure of testing and of testing machines can be found in the book by Batson and Hyde, *Mechanical Testing*, 1922. See also O. Wawrziniok, *Handbuch d. Materialprüfungswesens*, Berlin, 1923, K. Memmler, *Das Materialprüfungswesen*, Stuttgart, 1924, and "Handbuch d. Werkstoffprüfung," E. Siebel, 1940.

²The British Engineering Standards Assn. recommends 8-in. gage length for rectangular specimens of plate material for boilers.

drical specimen is represented in Fig. 248 (a), which shows also the spherical seats in the grips of the machine, used to insure central application of the load. Figure 248 (b) shows a flat

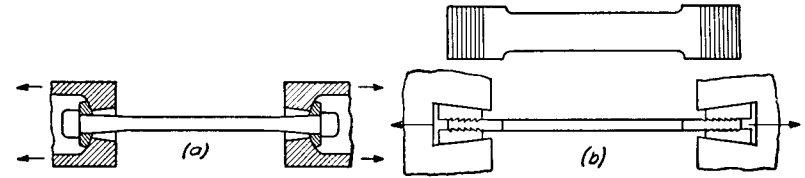


FIG. 248.

rectangular specimen. Tensile test machines are usually provided with a device which automatically draws a tensile test diagram representing the relation between the load P and the elongation δ of the specimen. Such a diagram exhibits very important characteristics of the material. Figure 249, for instance, shows a series of diagrams for carbon steel with various contents of carbon. These indicate that as the carbon content increases the strength of the steel increases but at the same time the elongation before fracture decreases, i.e., the material loses ductility.

The *strength* and the *ductility* are the two important characteristics usually obtained from the tensile test.³ For defining the strength of a material the *proportional limit*, the *yield point* and the *ultimate strength* are usually determined (see p. 6, Part I).

In determining the proportional limit sensitive extensometers are necessary to detect the slightest deviation from

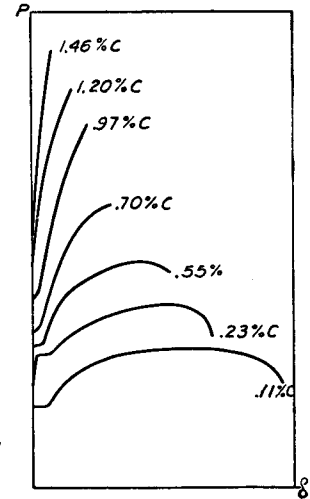


FIG. 249.

³A complete bibliography on tensile tests is given in the books by G. Sachs, "Der Zugversuch," Leipzig, 1926, and "Mechanische Technologie der Metalle," Leipzig, 1925. These books present modern developments in investigating mechanical properties of materials. See also C. W. MacGregor's paper presented at the Annual Meeting of Am. Soc. Test. Mat. 1940.

proportionality in the tensile test diagram. Obviously the position found for this limit depends a good deal on the sensitivity of the instruments. In order to get a greater uniformity in results, a certain amount of permanent set or a certain deviation from proportionality is often taken as the basis for determining the proportional limit. The International Congress for Testing Materials at Brussels (1906) defined the proportional limit, which experiments show to be the same as the elastic limit for steel, as that tensile stress at which the permanent set is 0.001 per cent. Recently there has been a tendency to increase this limiting magnitude of permanent set to 0.01 per cent.⁴

The *yield point* is a very important characteristic for such a material as structural steel. At this stress the specimen elongates a considerable amount

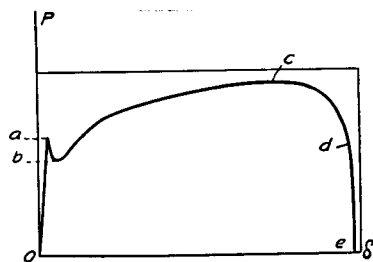


FIG. 250.

(in the case of mild steel sometimes more than 1 per cent) without increase in load. Sometimes the yielding is accompanied by an abrupt decrease in load and the tensile test diagram has a shape such as is represented in Fig. 250.

In such a case the upper and lower limits of the load at *a* and *b*, divided by the initial cross sectional area, are called the *upper* and *lower yield points* respectively. The position of the upper yield point is affected very much by the speed of testing, the form of the specimen and by the shape of the cross section.⁵ The lower yield point is usually considered as a true characteristic of the material, which can be used as a basis for determining working stresses.⁶

⁴ See paper by P. Ludwik, "Bruchgefahr und Materialprüfung," Schweiz. Verband für die Materialprüfungen der Technik, Bericht, nr. 13, 1928, Zürich.

⁵ See paper by Kühnel, V. D. I., Vol. 72, 1928, p. 1226, and paper by M. Moser, Forschungsarbeiten, nr. 295, Berlin, 1927. See also C. W. MacGregor, Trans. A. S. M. E., Vol. 53, 1931, p. 187.

⁶ C. Bach first indicated the importance of determining the lower

Due to the relatively large stretching of the material at the yield point it is not necessary to use sensitive extensometers to determine this point. It can be determined with the simplest instruments or can be taken directly from the tensile test diagram. For structural carbon steel the stress at yield point is about 55–60 per cent of the ultimate strength. Structural steel with about 1 per cent Si has a stress at yield point about 70–80 per cent of the ultimate which may be the same as for carbon steel. Such a high value for the yield point justifies the usual practice of taking higher working stresses for this kind of steel.

There are materials which do not have a pronounced yield point; in such cases the stress at which the permanent set (plastic elongation) reaches the value 0.2 per cent is sometimes considered as the yield point. It must be kept in mind that the yield point defined in this manner does not represent a definite physical characteristic of the material and its position depends upon the arbitrarily chosen permanent set. In the case of structural steel with a pronounced yield point the amount of stretching at yield point is usually greater than 0.2 per cent and the actual yield point coincides with that defined by the above 0.2 per cent permanent set limit.

The *ultimate strength* is usually defined as the stress obtained by dividing the maximum load reached before breaking the specimen, point *c* in Fig. 250, by the *initial* cross sectional area. This quantity is very often taken as a basis for determining working stresses.

The area under the tensile test diagram *Oacde* (Fig. 250) represents the work required to produce fracture. This quantity is also sometimes used as a characteristic property of the material. It depends on not only the strength but also the ductility of the material.

The *ductility of metals* is usually considered to be characterized by the *elongation* of the gage length of the specimen during a tensile test and by the *reduction in area* of the cross section at the fracture.

yield point. See V. D. I., Vol. 58, 1904, p. 1040, and V. D. I., Vol. 59, 1905, p. 615.

In the first stage of plastic elongation, from a to c in the diagram, Fig. 250, the specimen elongates uniformly along its length and this uniform elongation is accompanied by a uniform lateral contraction so that the volume of the specimen remains practically constant.⁷ At the point c the tensile force reaches a maximum; further extension of the specimen is accompanied by diminishing of the load. At this stage of plastic elongation the deformation becomes localized, *necking* begins, and the specimen takes the shape shown in Fig. 251.



FIG. 251.

It is difficult to determine with accuracy the moment when necking begins and to establish separately the magnitude of the uniform stretching and the magnitude of the elongations due to necking. It is customary, therefore, to measure the total increase in the gage length when the specimen is fractured. The *elongation* is then defined as the ratio of this total elongation of the gage length to its initial length. In practice the elongation at fracture is usually given in per cent. If l is the original gage length and δ the total elongation, the elongation at failure in per cent is

$$\epsilon = \frac{\delta}{l} \cdot 100. \quad (a)$$

This elongation is usually taken as the measure of the ductility of a material. *Elongation* obtained in this manner depends on the proportions of the specimen. The increase in the gage length, due to necking, is a large part of the total increase and is practically the same for a short gage length as it is for a long one. Hence the *elongation* as defined by eq. (a) becomes larger the shorter the gage length. For steel the elongation obtained for specimens with $l = 5d$ is usually 1.22 as large as obtained for a specimen of the same material with $l = 10d$. Experiments show also that local deformation at the neck depends very much on the shape of the cross section; hence

⁷ The small elastic deformation in which the volume does change can be neglected in comparison with the comparatively large plastic deformation.

this shape affects the elongation of the specimen. This shows that comparable results with respect to elongation can be obtained only by using geometrically similar specimens.

The *reduction in area* at the cross section of fracture is usually expressed in per cent of the original cross sectional area as follows:

$$q = \frac{A_0 - A_1}{A_0} \cdot 100, \quad (b)$$

in which A_0 is the initial cross sectional area and A_1 the final cross sectional area at the fracture.

If we assume that longitudinal strain is uniformly distributed over the cross section of fracture and that the volume of the material is constant, the unit elongation ϵ_1 at this cross section is determined by the equation

$$A_1(1 + \epsilon_1) = A_0,$$

from which

$$\epsilon_1 = \frac{A_0}{A_1} - 1$$

or, using eq. (b),

$$\epsilon_1 = \frac{q}{100 - q}. \quad (c)$$

This quantity is sometimes called ⁸ the *effective elongation*. It is usually much larger than the elongation $\epsilon = \delta/l$ determined from the total elongation δ of the gage length. Some results in static tests of certain steels are given in the table on pp. 497-498.

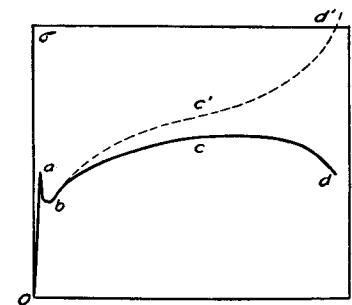


FIG. 252.

In defining the yield point and the ultimate strength the area used in calculating the stress was taken as the original cross sectional area.

The curve $Oabcd$ in Fig. 250 and Fig. 252 was obtained in this manner. This curve represents the *true stress* only so long as

⁸ See P. Ludwik, *Elemente der Technologischen Mechanik*, Berlin, 1909.

the elongation is small. For larger elongations the reduction in cross sectional area must be considered in order to get the true stress. The curve $bc'd'$ in Fig. 252 was obtained by multiplying the ordinates of the $Oabcd$ curve by the ratio A_0/A of the original cross-sectional area to the varying cross sectional area A as it was at each instant during the tensile test. From this curve it is evident that, although the load decreases from the point c on, the true stress continues to increase and has its maximum value at the moment of fracture.

The relation between σ and ϵ represented by a *true tensile test curve*, such as curve $bc'd'$, has a definite physical meaning so long as the bar continues to stretch uniformly. After the beginning of necking the elongation is not uniformly distributed along the length of the bar and the quantity $\epsilon = \delta/l$ no longer has a simple physical meaning. In investigating this portion of a tensile test it has proved very useful to construct curves in which the true stress σ is plotted against the reduction in area q (eq. b).⁹ A curve of this kind

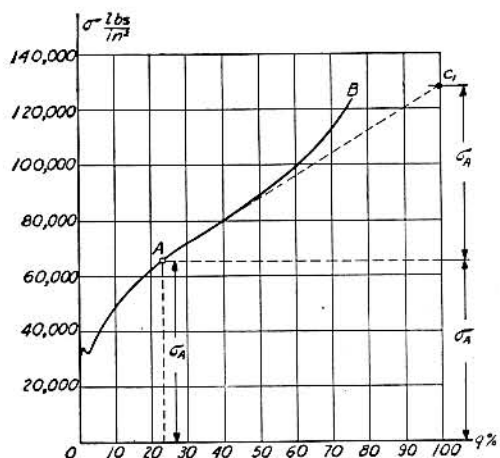


FIG. 253.

obtained with mild steel (0.05% carbon) is shown in Fig. 253.¹⁰ The

⁹ See paper by F. Körber and W. Rohland, Mitteilungen K. W. Institut, Vol. 5, 1924, p. 37.

¹⁰ See paper by P. Ludwik, "Bruchgefahr und Materialprüfung" Diskussions, Bericht nr. 35 der Eidg. Materialprüfungsanstalt, Zürich, 1928.

point A of this curve corresponds to the beginning of necking,¹¹ and the portion AB of the curve represents the process of necking. It can be seen that the true stress increases up to the moment of fracture. Some applications of this type of curve are given later.¹²

73. Compression Test.—

The compression test is principally used for testing brittle materials such as stone, concrete and cast iron. In testing stone and concrete, cubic specimens are often used. In compressing them between the plane surfaces of the testing machine it is usually assumed that the compressive force is uniformly distributed over the cross section. The actual stress distribution is much more complicated, even if the surfaces are in perfect contact. Due to friction on the surfaces of contact between the specimen and the compressing head of the machine, the lateral expansion which accompanies compression is prevented at these surfaces and the material in this region is in a more favorable stress condition. As a result of this the type of fracture obtained in a compression test of cubic specimens of concrete is of the sort shown in the photograph, Fig. 254. The material in contact with the machine remains unaffected while the material at the sides is crushed out. In order to obtain the true resistance to compression of a material such as concrete, the influence of friction at the surfaces of contact must be eliminated or minimized. For this purpose A. Föppl covered the surfaces of contact with paraffin.¹³ The ultimate strength obtained in such a manner was greatly reduced and the type of failure

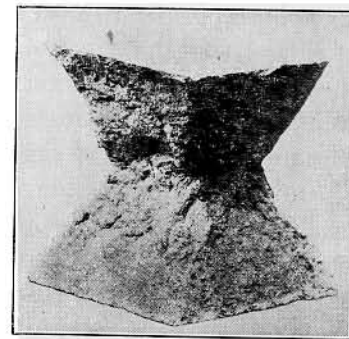


FIG. 254.

¹¹ It can be shown that in such diagrams as OAB the tangent AC , at the point A , representing the beginning of necking, cuts the ordinate at $q = 100$ per cent at a height of $2\sigma_A$.

¹² The Bibliography related to the analysis of tensile test diagrams is given in the paper by C. W. MacGregor, The Annual Meeting, A. S. T. M., 1940.

¹³ A. Föppl, Mitteilungen aus dem Mech. Techn. Laboratorium in München, nr. 27, 1900.

was completely different; a cubic specimen fails by subdividing into plates parallel to one of the lateral sides. Another method of eliminating the effect of friction forces is to use specimens in the form of prisms having the height in the direction of compression several times larger than the lateral dimensions. The middle portion of the prism then approaches a condition of uniform compression.¹⁴ A very interesting method of producing a uniform compression on cylindrical specimens used in Kaiser Wilhelm Institute¹⁵ is shown in Fig. 255. The portions of the testing machine in contact with the cylindrical

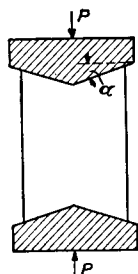


FIG. 255.

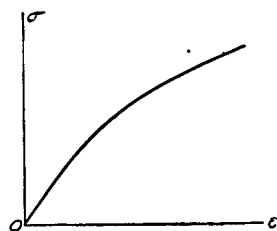


FIG. 256.

specimen and the ends of the specimen are machined to conical surfaces with the angle α equal to the angle of friction. Thus the effect of friction is compensated for by the wedge action and uniform compression results.

Compression tests of materials such as concrete, stone and cast iron show that these materials have a very low proportional limit.¹⁶ Beyond the proportional limit the deformation increases at a faster rate relative to the load and the compression test diagram has a shape such as shown in Fig. 256. Sometimes it is desirable to have an analytical expression for such a diagram. For these cases C. Bach proposed¹⁷

¹⁴ See L. Prandtl and Rinne, *Neues Jahrbuch für Mineralogie*, 1907. See also W. Gehler, *Der Bauingenieur*, Vol. 9, 1928, p. 21. Cylindrical specimens with height twice the diameter are sometimes used in testing concrete.

¹⁵ *Mitteilungen K. W. Institut, Düsseldorf*, Vol. 9, 1927, p. 157.

¹⁶ The proportional limit for cast iron in tension was determined by Grüneisen, *Berichte d. Deutschen Phys. Gesellschaft*, 1906.

¹⁷ See C. Bach, *Elasticität u. Festigkeit*, V ed. 1905, Berlin, p. 67.

the exponential law given by the equation:

$$\epsilon = \frac{\sigma^n}{E}, \quad (a)$$

in which n is a number depending on the properties of the material. Bach found the values $n = 1.09$ for pure cement and $n = 1.13$ for granite.

Compression tests of ductile materials show that the shape of the diagram depends very much on the proportions of the specimen. As the dimension in the direction of the compression decreases, the effect of friction at the ends becomes more and more pronounced and the compression test diagram becomes steeper. For instance Fig. 257 shows the results of

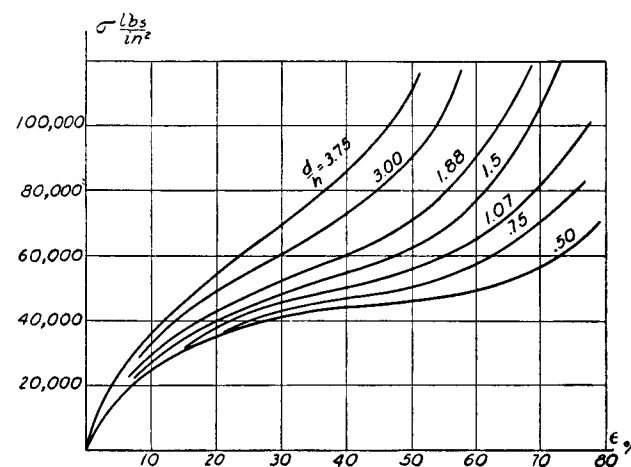


FIG. 257.

compression tests¹⁸ on copper cylinders with various ratios d/h of the diameter to the height of the specimen. In compression tests of such ductile materials as copper, fracture is seldom obtained. Compression is accompanied by lateral expansion and a compressed cylinder ultimately assumes the shape of a flat disc.

¹⁸ See G. Sachs, *Grundbegriffe der Mechanischen Technologie der Metalle*, Leipzig, 1925, p. 36.

74. Strain Hardening.—It is well known that plastic deformation causes ductile materials such as mild steel, copper, and aluminum to become harder. Their strength increases and at the same time their ductility, as given by elongation or lateral contraction in the simple tensile test, decreases. This hardening effect of plastic deformation is also shown by the phenomenon of the *increase of the yield point* of the ductile material when subjected to stretching beyond the initial yield point. Figure 258 shows a tensile test diagram for mild steel.¹⁹ After stretching the bar to the point *C* it was unloaded. During this unloading the material followed an approximately

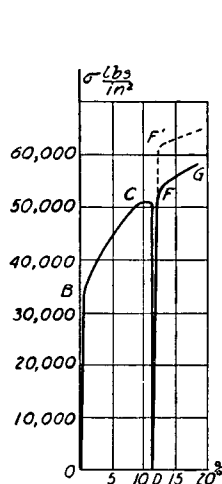


FIG. 258.

straight line law as shown by the line *CD* on the diagram. Repeating the loading of the bar, the line *DF* was obtained along which the material approximately followed Hooke's law. At the point *F*, which corresponds to the previous loading at *C*, the curve abruptly changed character and traced the portion *FG*, which can be considered as a prolongation of the curve *BC*. This is the *raising of the yield point* produced by stretching the material. If an interval of time, say several

¹⁹ See Ewing, "Strength of Materials," 1914, p. 35.

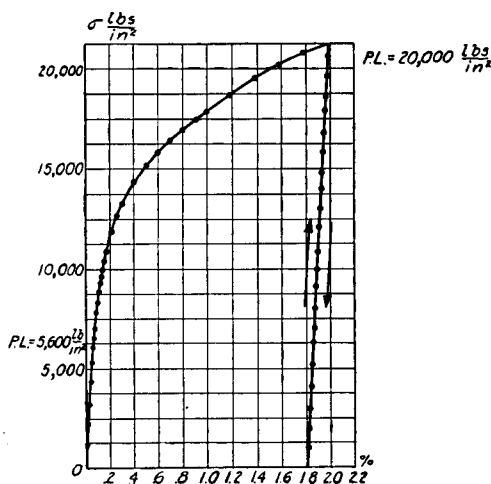


FIG. 259.

days, is allowed to elapse after unloading, then upon reloading a still higher yield point may be obtained, as indicated by the dotted line at *F'*. In Fig. 259 are shown the results of a tensile test of die cast aluminum.²⁰

The initial proportional limit of the material was 5,600 lbs. per sq. in. After stretching the specimen 2 per cent, the proportional limit upon reloading was found to be 20,000 lbs. per sq. in.

More complete investigations show that the time which elapses between unloading and reloading is of great influence on the stress strain curve during reloading. If reloading begins immediately after unloading, accurate measurements show that there are deviations from the straight line law at very low stress, and the proportional limit is greatly lowered. But if a considerable interval of time elapses between unloading and reloading, the material recovers its elastic properties completely. Figure 260 shows the curves obtained by Ewing with mild steel which show that, if reloading follows in ten minutes after overstrain, the material does not follow Hooke's law, but after 5 days it has partially recovered its elasticity and after 21 days it has almost completely recovered it.

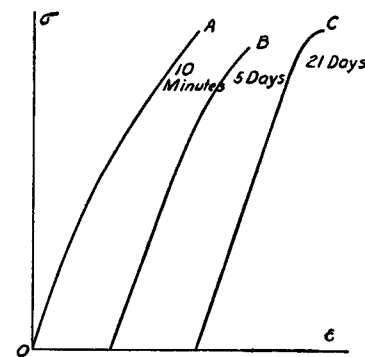


FIG. 260.

The experiments show that if the material is submitted to mild heat treatment after unloading, say in a bath of 100° Centigrade, the recovery of elastic properties occurs in a much shorter interval of time. Figure 261 shows the results of such a test made on a steel bar by I. Muir.²¹ The initial tensile test is represented by the curve *A*. Curve *B* represents the reloading of the same bar ten minutes after unloading. A considerable deviation from Hooke's law is noticeable. Curve *C* is the diagram obtained with the same bar after a second

²⁰ Westinghouse Elec. Mfg. Co. Research Laboratory.

²¹ I. Muir, Phil. Trans. Roy. Soc., 1899.

unloading and after keeping it at a temperature of 100° Centigrade for 4 minutes. It may be seen that after this treatment the material completely recovered its elastic properties.

The phenomenon of hardening due to plastic deformation is encountered in many technological processes such as rolling

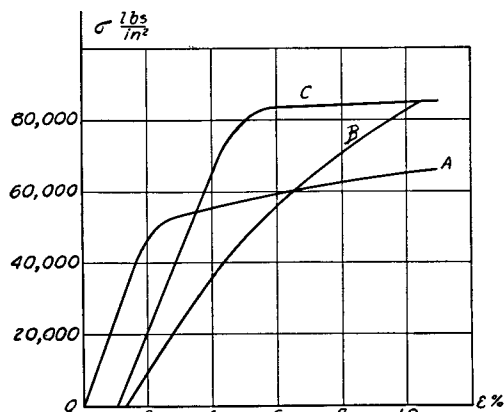


FIG. 261.

of bars or drawing tubes and wires at low temperature, cutting sheet metals by shears, and drawing and punching holes. In all these cases the part of the material which undergoes plastic deformation becomes harder and its ductility is greatly reduced.²² To eliminate this undesirable effect of strain hardening it is customary to anneal the material, which reestablishes the initial ductility.²³

Sometimes the strain hardening of ductile materials finds a practical application in manufacturing. It is common practice to submit the chains and cables of hoisting machines to a certain amount of overstrain to eliminate undesirable stretching of these parts in service. The cylinders of hydraulic

presses are sometimes submitted to an initial internal pressure sufficient to produce a permanent deformation in the walls. The strain hardening and the residual stresses produced by this prevent any permanent set in service. The overstraining of metal is sometimes used in the manufacture of guns (see p. 243). By stretching the metal in the wall of a gun beyond the initial yield point and afterwards submitting it to a mild heat treatment, the elastic properties of the material are improved; at the same time initial stresses are produced which combine with the stresses produced by the explosion to give a more favorable stress distribution. Turbine discs and rotors are sometimes given an analogous treatment. By running these parts at overspeed, a permanent set is obtained around the central hole, which raises the yield point of the material there and produces initial stresses, which are in a favorable direction.²⁴ Die cast aluminum fans are sometimes submitted to overstrain at the bore to prevent any possibility of their loosening on the shaft in service. A considerable plastic flow of metal is sometimes produced in pressing the hub of locomotive wheels onto their axles and this has proved to have a favorable effect. Copper bars in the commutators of electric machinery are submitted to considerable cold work by drawing to give them the required strength.

In using overstrain in this manner to raise the yield point and improve the elastic properties of a structure, it is necessary to keep in mind (1) that the hardening disappears if the structure is submitted to annealing temperatures and (2) that the stretching of metal in a certain direction, while making it stronger with respect to tension in this direction, does not proportionately improve the mechanical properties with respect to compression in the same direction.²⁵ This phenomenon is clearly shown in Fig. 262, which represents tests

²⁴ See A. Nadai and L. H. Donnell, *Trans. A. S. M. E.*, Vol. 51, 1929, p. 173.

²⁵ This phenomenon was discovered by J. Bauschinger, *Mitteilungen aus dem Mech. Techn. Laboratorium in München*, 1886. See also Dinglers, *Polytech. Journal*, Vol. 266, 1886.

²² For a general discussion of the properties of cold worked metals see the paper by Z. Jeffries and R. S. Archer, *Chemical and Metallurgical Eng.*, Vol. 27, 1922, p. 747. See also G. Masing and M. Polanyi, *Kaltreckung und Verfestigung*, Springer, Berlin, 1923.

²³ See paper by Rees, *Iron and Steel Inst. Journal*, 1923.

made with electrolytic copper.²⁶ Curve (a) shows the mechanical properties of the copper in the annealed condition. The proportional limit and yield point²⁷ in this condition are very low. Such material cannot be used in structures which

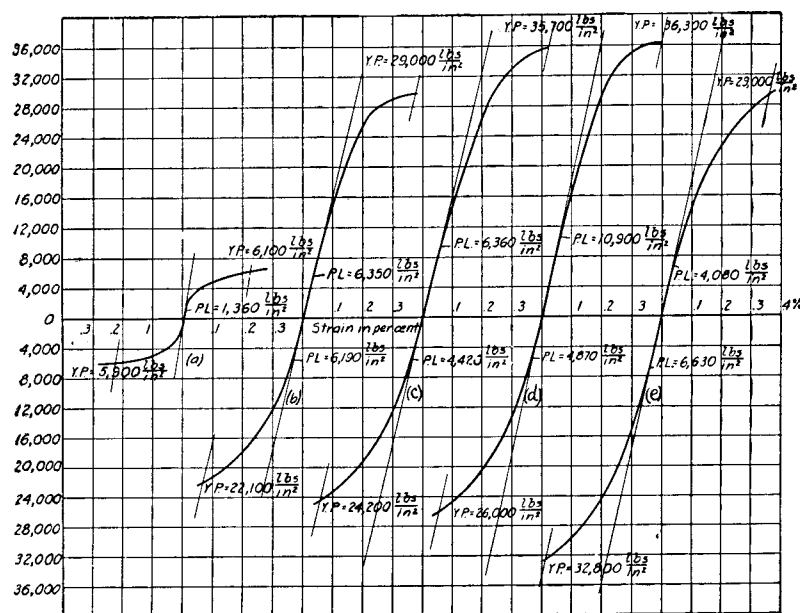


FIG. 262.

are submitted to the action of appreciable stresses. Curve (b) represents tensile and compression tests of the same material after giving the bar an elongation of 15 per cent. The proportional limit and yield point have been raised considerably, especially in tension. Curves (c) and (d) show the results of tests after a stretching of 20 per cent and 25 per cent. The additional stretching produces still further improvement of the mechanical properties, especially in tension. At the same time the proportional limit in compression is somewhat lowered. Curve (e) represents tensile and compressive tests on a bar, which had been drawn through a die,

²⁶ Westinghouse Elec. Mfg. Co. Research Laboratory.

²⁷ The yield point is defined as the point where unit elongation or unit compression is 0.2 per cent.

reducing the cross sectional area of the bar by 15 per cent. In the drawing process the material is submitted not only to longitudinal tension but also to lateral compression. To this fact must be attributed the difference between curves (b) and (e). Although in both cases the bar received about the same reduction in cross sectional area, the material drawn through a die showed better mechanical properties with respect to compression than the material which was subjected to a uniform longitudinal stretching in a testing machine.

This fact that stretching a metal in a certain direction does not improve the mechanical properties in compression in the same proportion as it does in tension must not be overlooked in cases in which the material is submitted to reversal of stresses (see article 78).

It must also be kept in mind that strain hardening, while raising the yield point of a material, does not affect the ultimate

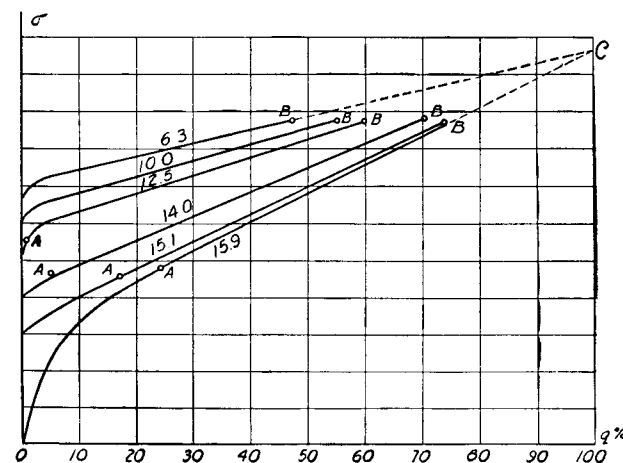


FIG. 263.

strength of the material in the same proportion, and the true stress at fracture is probably unchanged. At the same time the elongation and reduction in area at fracture are considerably reduced due to strain hardening. Curves representing the true stress as a function

of the reduction in area ϵ (p. 402) are especially useful in investigating the effect of strain hardening. Several curves of this kind obtained with drawn copper²⁸ are shown in Fig. 263. The lowest line represents a tensile test of the copper wire in its initial condition. The other curves represent tensile tests of the same copper wire after various degrees of drawing. The amount of cold work is indicated by the reduction in the diameter, the magnitude of which is given on each curve in millimeters. Points *A* indicate the beginning of necking and points *B* the moment of fracture. Between *A* and *B* the diagrams are straight lines which intersect, when prolonged, at a common point *C*. These curves indicate that cold work does not affect the true stress at fracture and affects only slightly the true stress at the beginning of necking. At the same time it affects considerably the elongations and the lateral contraction of the materials.

In concluding this discussion it should be mentioned that there are indications²⁹ that material which has suffered yielding at a certain place is more sensitive at this place to chemical actions and there is a tendency for corrosion to enter the metal along the surfaces of sliding. This phenomenon is of particular importance in the case of boilers and other containers submitted simultaneously to stresses and to chemical action.

75. Strain Hardening and Residual Stresses.—In discussing the causes of strain hardening of metals it is necessary to consider the crystalline structure of the metals. A metallic test specimen is a conglomerate of crystals so small in size that a cubic inch usually contains millions of them. In studying the plastic deformation of such crystalline materials it has proved very useful to investigate the mechanical properties of a single crystal. Methods of preparing large single crystals have been developed in recent years so that it is now possible to have tensile test specimens of considerable size consisting

²⁸ See paper by W. Müller, *Forschungsarbeiten*, nr. 211 (1918). See also G. Sachs, loc. cit., p. 397.

²⁹ See paper by F. Körber and A. Pomp, *Mitteilungen K. W. Institut*, Vol. 8, 1926, p. 135. See also S. W. Parr and F. G. Straub, *Engineering*, Vol. 124, 1927, p. 216.

of a single crystal.³⁰ Tensile tests of such specimens show that the mechanical properties of crystals depend greatly on the direction of the tension with respect to the directions of the axes of the crystal. In the case of copper, for instance, the ratio of the maximum tensile strength to its minimum value is 3 : 1.³¹ The plastic deformation of these specimens consists in sliding in certain direction along certain crystallographic

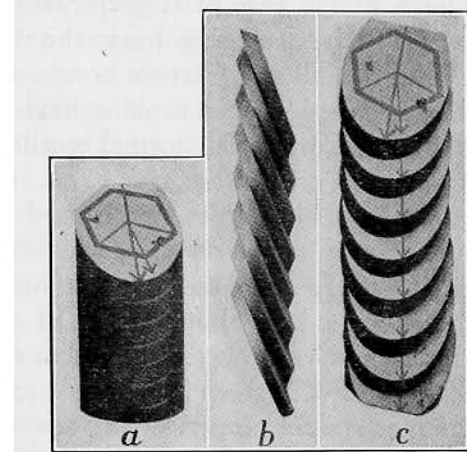


FIG. 264.

planes, as schematically indicated in Fig. 264.³² The beginning of sliding depends upon the magnitude of the shearing stress along these planes in the direction of sliding and is independent of the normal stress acting on the same plane. As the elongation of the specimen is continued the number of planes along which the sliding occurs increases and likewise

³⁰ The development of methods for producing large crystals of metals is due to the work of H. C. Carpenter and C. F. Elam, *Proc. Roy. Soc.*, Vol. 100A, 1921, p. 329; P. W. Bridgman, *Proc. Amer. Acad. Sc.*, Vol. 60, 1925, p. 306; C. A. Edwards and Pfeil, *Jour. Iron and Steel Inst.*, Vol. 109, 1924, p. 129. The first large crystals of copper were obtained by J. Czochralski, *V. D. I.*, 1923, p. 536.

³¹ See J. Czochralski, "Moderne Metallkunde," Berlin, 1924, p. 206.

³² See H. Mark, M. Polanyi and E. Schmid, *Zeitschrift f. Phys.*, Vol. 12, 1922, p. 58; see also G. I. Taylor and C. F. Elam, *Proc. Roy. Soc.*, Vol. 102A, 1923, p. 643, Vol. 108A, 1925, p. 28. G. I. Taylor, *Proc. Roy. Soc., A*, Vol. 145, p. 362, 1934.

the magnitude of the shearing stress acting on these planes. This increase in stress necessary to continue the stretching of the specimen represents the *strain hardening* of a single crystal. Due to the type of sliding indicated in Fig. 264 (b) an originally circular, single crystal specimen of ductile material becomes elliptical in cross section and, if stretched to destruction, becomes wedge-shaped instead of cone-shaped at the cross section of fracture. In the case of single crystals of brittle materials, such as rock salt, stretching due to the sliding action described above is very small and fracture occurs as the result of the overcoming of cohesion over a plane having a certain crystallographic direction, when the normal tensile stresses on this plane reach a certain critical limit.

Crystalline materials, such as the metals used in industry, are conglomerates of very small crystals, which can be seen only with a special microscope on a plane surface, finely polished and etched in a special manner. In an ordinary tensile test specimen these crystals are located at random, and the mechanical characteristics given by a tensile test represent an average of the mechanical properties in various directions of an individual crystal.³³ Due to the small size and large number of crystals these average values are usually independent of the direction in which a specimen is cut from a block of material,³⁴ and such a material can be considered as isotropic in calculating stresses and deflections in large structures.

Observations with a microscope of the deformation of the small individual crystals in a specimen during a tensile test show that the deformation of these crystals in conglomerate is

³³ Intercrystalline material is neglected in this discussion. Experiments show that planes of slidings and fractures always go through the crystals and not between them.

³⁴ Cold work may produce some differentiation in the orientation of crystals along certain directions. The mechanical properties of a tensile test specimen will then depend on the orientation of the specimen with respect to the direction of the cold working. Bibliography on this subject can be found in the paper by G. Sachs, O. Bauer and F. Göler, *Zeitschr. f. Metallkunde*, Vol. 20, 1928, p. 202. See also paper by W. Köster, Bericht nr. 23, d. Eidg. Materialprüfungsanstalt, 1927, Zürich.

of the same nature as in the case of a single crystal specimen. In each individual crystal sliding of the sort shown in Fig. 264 begins when the tensile stress in the specimen reaches a certain value, depending upon the orientation of that crystal with respect to the direction of the tension. On the polished surface this sliding is indicated by microscopic lines, called *slip bands*. This sliding stops at the boundary of the crystal; in the neighboring crystals the planes of sliding may have another direction and sliding may start when the stress in the specimen reaches a different value. It is generally believed that such slidings in individual small crystals unfavorably situated with respect to the tensile stress in the specimen are the cause of small deviations from Hooke's law and a small permanent sets at a comparatively low tensile stress in materials which, in general, follow Hooke's law.

When the material has a pronounced yield point and the tensile stress in the specimen reaches this point, a large plastic deformation takes place, which consists in the sliding of considerable portions of the specimen along planes inclined about 45° to the axis of the specimen, i.e., along the planes in which the shearing stress is a maximum. These planes of sliding usually begin at points of stress concentration, for instance, near the fillets at the ends of the specimen, and gradually spread over the length of the specimen.³⁵ If the surface of a specimen has been polished, these planes of sliding are revealed on the surface by easily discernible lines (see Fig. 214). These lines were first noticed by Lueders and are called *Lueders' lines*.³⁶ Due to the described deformation the individual crystals become strain hardened and if the specimen is unloaded and loaded again it will be found that the yield point is raised.

There is another point of importance. Since some individual crystals may receive a permanent set during a tensile test, while neighboring crystals, more favorably orientated,

³⁵ See paper by C. W. MacGregor, loc. cit., p. 398.

³⁶ An investigation of these lines in various cases was made by Hartman; see his book, "Phénomènes qui accompagnent la déformation permanente," 1900.

may only deform elastically, it follows that after unloading there may remain in the stretched specimen some *residual stresses* in the individual crystals. The crystals which received a permanent set do not return completely to their initial shape, and as a result of this there will be some "wedging effect" on the neighboring crystals. The possibility of such stresses can be demonstrated by the system of three bars shown in Fig. 265. Assume that all three bars are of the same material and the same cross-sectional area. We know that under the action of the load P the stress in the middle bar is larger than in the inclined bars (see p. 19, Part I); i.e., like the crystals mentioned above, this element of the system is less favorably situated than the others. If the load is gradually increased, this bar will reach the yield point first. Let the straight line OA (Fig. 265, b) represent the load deflection diagram for this sys-

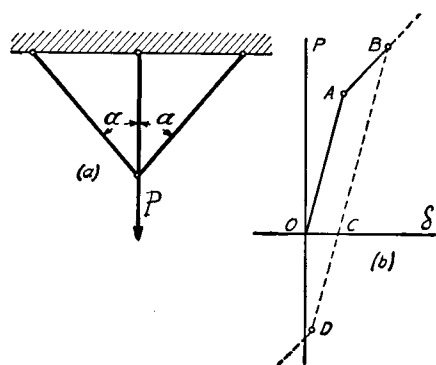


FIG. 265.

tem under elastic conditions. At A the vertical bar begins to yield and any further increase in the load will be taken by the inclined bars only.³⁷ Hence beyond the point A an increase in the load produces a greater increase in the deflection than when all three bars were in the elastic state, and the load deflection diagram follows some such line as AB . If, on reaching B , the system is gradually unloaded, the deformation in the reverse direction, due to the elastic behavior of all

³⁷ It is assumed that the material has a pronounced yield point and that after yielding a considerable stretching can occur without increase in stress.

three bars, follows the linear law represented by the straight line BC , parallel to OA . When the load is entirely removed the deflection OC still remains and there will therefore be tensile stresses in the inclined bars and a compressive stress in the vertical bar, even after unloading. These are *residual stresses* due to the plastic deformation of the middle bar. If the system is reloaded, the load deflection diagram will be the same straight line CB as during unloading and the yield point of the system will have been raised to the point B , corresponding to the initial loading. If, after unloading, the system is reloaded with a vertical force in the upward direction, compressive stresses will be produced in the bars, which superpose on the residual stresses. Since the vertical bar already has an initial compression, a force at D (Fig. 265, b) smaller than that corresponding to the point A will be sufficient to bring the middle bar to the yield point, if we assume that the yield point of the material in compression is the same as in tension. Hence the original loading raised the yield point of the system in the direction of this loading but lowered the yield point in the opposite direction. This discussion shows that the presence of residual stresses may explain why a bar strain hardened by stretching has a higher yield point in tension than in compression (see p. 410).

The residual stresses produced by uniform stretching of a bar of a crystalline material are of an extremely localized type. They are confined to microscopical regions around the crystals which suffered plastic deformation at a comparatively low average stress in the specimen. In the process of drawing or rolling, residual stresses of a less localized type are sometimes produced. In drawing a bar through a die, for instance, the metal at the outside is stretched more than the metal at the middle. Hence drawn bars have considerable residual stresses in tension at the surface and in compression at the middle. In drawn copper bars of narrow rectangular cross section the distribution of these stresses at a distance from the ends is approximately as shown in Fig. 266 (a). If the bar is cut lengthwise, there will be bending such as shown in Fig. 266 (b).

Measurement of this bending shows that the maximum residual stresses produced in drawing the copper bars are of the same order as the yield point of the material.³⁸ These stresses

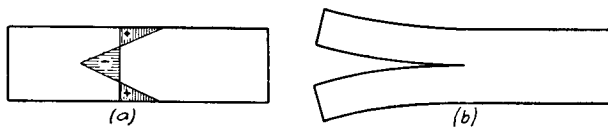


FIG. 266.

are of great practical importance. They cause undesirable warping in the process of machining³⁹ and to them must be attributed also *season cracking* in various copper alloys which have been cold worked and not properly annealed afterwards.⁴⁰

76. Types of Failures.⁴¹—In the previous article two kinds of fracture of a single crystal specimen were mentioned. In a crystal of a ductile material there is a plastic deformation preceding fracture which consists of sliding along certain planes and there is a considerable reduction in cross-sectional area before fracture occurs. In this case the strength depends principally upon *the resistance to sliding*. In the case of a crystal of brittle material fracture occurs without appreciable reduction in the cross section and is due to overcoming the cohesive forces on a certain crystallographic plane. Here the strength depends principally upon *the resistance to separation*. These two types of failure, *sliding failure* and *separation failure*,

³⁸ Direct measurements made on commutator bar copper in the research laboratory of the Westinghouse Elec. and Mfg. Co. showed stresses of 22,000 lbs. per sq. in. in bars which were reduced 15 per cent in area by drawing.

³⁹ The first systematic investigation of these stresses was made by E. Heun. See *Zeitschr. f. Metallographie*, Vol. 1, 1910, p. 16; *Stahl u. Eisen*, Vol. 31, 1911, p. 760; *Mitteilungen Materialprüf. Amt*, Vol. 35, 1917, p. 1; *Naturwiss.*, Vol. 9, 1921, p. 321. For further discussion see art. 69, p. 379.

⁴⁰ See "The Failure of Metals under Internal and Prolonged Stress," published by Faraday Soc., London, 1921. See also G. Masing, *Zeitschr. f. Metallkunde*, 1924, p. 257.

⁴¹ A complete bibliography on this subject is given in the paper by P. Ludwik, "Bruchgefahr und Materialprüfung," *Diskussionsbericht* nr. 35, der Eidg. Materialprüfungsanstalt, Zürich, 1928. See also P. Ludwik, *Forschungsarbeiten*, nr. 295, 1927, Berlin.

are encountered also in crystalline materials which consist of an aggregate of small crystals. In the case of brittle materials such as cast iron, fracture occurs without appreciable plastic deformation and on a cross section perpendicular to the direction of tension. This is a *separation failure*. A specimen of a ductile material such as mild steel undergoes considerable plastic deformation and reduction in cross sectional area due to sliding along planes inclined 45° to the axis of the specimen before fracture occurs. This is *sliding failure*. In studying these two distinct kinds of fracture the theory has been forwarded⁴² that the strength of a material can be described by two characteristics, the resistance of the material to *separation* and the resistance to *sliding*. If the resistance to sliding is greater than the resistance to separation, we have a brittle material and fracture will occur as a result of overcoming cohesive forces without appreciable deformation. If the resistance to separation is larger than resistance to sliding, we have a ductile material. The sliding over inclined planes begins first and fracture occurs only after a considerable reduction in the cross sectional area, after which, due to strain hardening, the resistance to sliding may become larger than the resistance to separation.

The relation between the resistance to separation and the resistance to sliding does not remain constant for the same material. It depends very much upon the velocity of deformation and upon the temperature at which a test is made. There are evidences that the resistance to sliding increases as the velocity of deformation increases and as the temperature is lowered. At the same time the resistance to separation is not affected to the same degree by these two factors. This would explain why a bar of a metal such as zinc can be bent like a ductile material under slow loading while the same bar fractures without plastic deformation if the loading is applied suddenly.⁴³ Another example of this is asphalt. It may flow under the action of its own weight if the forces act a long

⁴² See P. Ludwik, loc. cit., p. 418.

⁴³ P. Ludwik, *Stahl u. Eisen*, Vol. 43 (1923), p. 1427.

time, but it proves to be brittle under the action of suddenly applied forces. In both of these cases the resistance to sliding was less than the resistance to separation under slow deformation and the materials behaved in a ductile manner. At high speed the ratio between the two kinds of resistance was reversed and they behaved like brittle materials.

The type of fracture depends also on the manner of testing. If the loading is of such a nature that fracture due to separation is prevented, a considerable plastic deformation may be obtained in a material usually considered brittle. This phenomenon is illustrated by the plastic deformation of rocks submitted to large pressures on all sides.⁴⁴ Likewise a ductile material may have a fracture of the brittle type if the form of the specimen or the type of stress distribution is such that plastic deformations, due to sliding, are prevented. This latter case is of great practical importance and it is worth while to examine in more detail the conditions under which such a brittle fracture may occur. Experience shows that these fractures sometimes occur under the action of residual stresses due to cold work or under the action of thermal stresses, and that they can be attributed to one of the following two causes: (1) a three-dimensional stress condition; (2) a form preventing sliding.

The ductility of materials such as structural steel is usually determined from a simple tensile test. In such a test there is a constant ratio between the maximum tensile stress and the maximum shearing stress equal to two. Under such conditions the resistance to sliding is overcome first and the sliding type of failure results. Imagine now a three-dimensional stress condition such as that represented in Fig. 51, Part I, by Mohr's circles. The maximum shearing stress in this case is equal to $(\sigma_x - \sigma_z)/2$ and if σ_z is nearly the same as σ_x the maximum tensile stress may be many times larger than the maximum shearing stress. In this case fracture due to overcoming the cohesive forces on the plane on which the maximum tensile stress is acting may occur before there can

⁴⁴ See Th. v. Kármán, *Forschungsarbeiten*, nr. 118, 1912, Berlin.

be any sliding. Such a fracture is not accompanied by appreciable plastic deformation and has the type of a brittle failure, although the material may be very ductile under a simple tensile test. Figure 267 represents the beginning of fracture at the neck of a tensile test specimen of a ductile material.⁴⁵ In the middle portion of the cross section at the neck there is a three-dimensional stress condition. Due to the necking, elements here undergo tension in not only the axial direction, but also in the radial direction. This causes a crack of a brittle type at the center of the cross section, as shown in the figure. At the same time material near the surface continues to yield by sliding, and a sliding fracture finally takes place near the boundary.

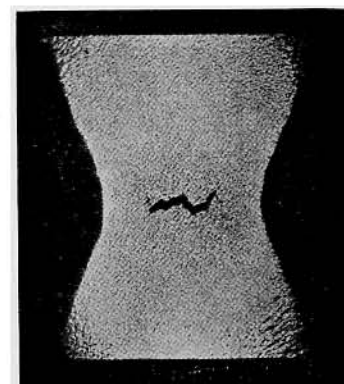


FIG. 267.

The effect of the form on the type of fracture may be shown by making tensile tests on grooved specimens of the shape shown in Fig. 268. Due to the presence of the portions of larger diameter D , sliding along 45° planes at the groove is inhibited, and reduction of the cross-sectional area at the groove during a tensile test is partially prevented. It is natural that this action should increase as the width δ of the groove decreases. In the following table are given some results of such tests obtained with two different materials: ⁴⁶ (1) *carbon steel* with a proportional limit 56,000 lbs. per sq. in., yield point 64,500 lbs. per sq. in., ultimate strength 102,000,

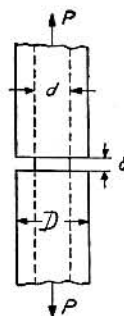


FIG. 268.

⁴⁵ In this case the material was aluminum; see P. Ludwik, V. D. I., Vol. 71, 1927.

⁴⁶ These tests were made at the Westinghouse Elec. and Mfg. Co. Research Laboratory; see also the tests by P. Ludwik u. R. Scheu, *Stahl u. Eisen*, Vol. 43, 1923, p. 999.

lbs. per sq. in., elongation $26\frac{1}{2}$ per cent, reduction in area 55 per cent; (2) *nickel chrome steel* with a proportional limit 80,000 lbs. per sq. in., yield point 85,000 lbs. per sq. in., ultimate strength 108,000 lbs. per sq. in., elongation 27 per cent, reduction in area 69 per cent. These figures were obtained from ordinary tensile tests on normal cylindrical specimens $\frac{1}{2}$ in. in diameter and with 2-in. gage length; the original cross-sectional area was used in calculating the stresses. The specimens of the type shown in Fig. 268 had $d = \frac{1}{2}$ in., $D = 1\frac{1}{2}$ in. and $\delta = \frac{1}{8}$ in., $\frac{1}{16}$ in., $\frac{1}{32}$ in.

TABLE 25.—ULTIMATE STRENGTH OF CYLINDRICAL AND GROOVED SPECIMENS

Carbon Steel	δ	Ultimate Strength		NiCr Steel	δ	Ultimate Strength	
		Orig. Area	Red. Area			Orig. Area	Red. Area
Norm. spec.	$\frac{1}{32}$ in.	163,000	176,000	Norm. spec.	$\frac{1}{32}$ in.	193,000	237,000
	$\frac{1}{16}$ "	164,000	177,000		$\frac{1}{16}$ "	184,000	232,000
	$\frac{1}{8}$ "	143,000	158,000		$\frac{1}{8}$ "	154,000	199,000
		102,000	227,000			108,000	348,000

The table shows that in all cases the breaking load for the grooved specimens was larger than for cylindrical specimens. With the grooved specimens only a small reduction in area took place and the appearance of the fracture was like that of brittle materials. The true ultimate strength of the cylindrical specimens was larger than that of the grooved specimens, because the fracture of the cylindrical specimens occurred after considerable plastic flow; this caused strain hardening and increased not only the resistance to sliding but also the resistance to separation.

An effect analogous to that of the narrow groove in Fig. 268 may be produced by internal cavities in forgings and castings. Thermal stresses and residual stresses may combine with the effect of stress concentration at the cavity to produce a crack and the resulting fracture will have the characteristics of a brittle failure without appreciable plastic flow, although the material may prove ductile in simple tensile tests.

The combination of a grooved or notched form of specimen with great velocity of application of the load may produce a still more pronounced "groove effect." These conditions are realized in impact tests of notched bars. Another type of fracture of ductile materials without appreciable plastic deformation is that caused by reversal of stresses. This is of great practical importance and will be discussed in the article on fatigue of metals (see p. 428).

77. Time Effect and Hysteresis.—Observation⁴⁷ shows that when a tensile load is applied to a bar it does not produce the complete elongation immediately. There is a certain *creep*, that is, the bar continues to elongate slowly for a considerable length of time. This *time effect* depends on the material of the bar and on the magnitude of the stresses involved. In the case of a single crystal specimen, loaded within the proportional limit, the time effect is very small and can be explained by considering thermodynamical and electrical effects. Assume that the bar is loaded quickly as represented by the portion *OA* of the tensile test diagram (Fig. 269). This process of elongation may be considered to be *adiabatic*; it is accompanied by a lowering of the temperature of the bar due to increase in its volume. The bar gradually warms up to the initial temperature and thereby elongates an additional amount *AB* without change of load. Then a quick unloading gives the straight line *BC* on the diagram. At *C*, due to the decrease in the volume, in the process of unloading the bar has a temperature higher than the initial; after a time, cooling causes it to shorten the amount *CO*. Although the deformations *AB* and *CO* are very small, this discussion shows how there may be a certain time effect due to thermal causes in the case of an ideal elastic substance within the proportional limit.⁴⁷ An analogous effect due to electrical causes may also be observed under certain conditions.⁴⁸ In the case of non-homogeneous materials, such as

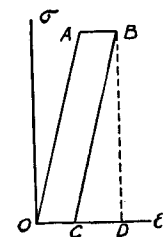


FIG. 269.

⁴⁷ W. Thomson, Quarterly Journal of Math., 1855.

⁴⁸ See A. F. Joffe, "The Physics of Crystals," New York, 1928.

commercial metals, the time effect is much larger. It cannot be explained by thermal causes alone and is usually attributed to the continuation of sliding deformation within unfavorably orientated crystals after the load has been applied. The time effect after unloading is explained by residual stresses, which continue to produce sliding within unfavorably orientated crystals and thus cause creep in the material for some time after the removal of the load.

In discussing the time effect on tensile and compressive test diagrams, we must distinguish between metals having a comparatively low melting point such as lead or zinc and metals having much higher melting temperatures such as steel or copper.⁴⁹ Experiments show that tensile and compressive test diagrams of metals of the first group depend very much upon the speed with which the experiments are made. Figure 270, for instance, represents compression test diagrams for lead

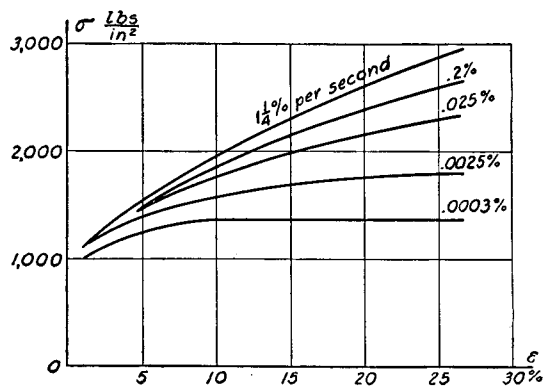


FIG. 270.

at different speeds of loading.⁵⁰ In these diagrams the true compressive stress is used, plotted against compressive strain. The speeds of shortening in per cent per second are indicated

⁴⁹ These metals when at temperatures nearer their own melting points show the characteristics of the first class of metals at room temperature (see p. 462).

⁵⁰ See paper by E. Siebel and A. Pomp, *Mitteilungen K. W. Institut*, Vol. 10, 1928, p. 63.

on the curves. If the speed of unit compression is 0.0003 per cent per second, the load remains practically constant after reaching a unit compression of 10 per cent. This large effect of speed with such metals is explained by the fact that they recrystallize at room temperature. Hence the hardening effect of plastic deformation may be removed by recrystallization if the loading process goes slowly enough.

In the case of metals with a high melting point the speed has much less effect. Figure 271 represents compression test

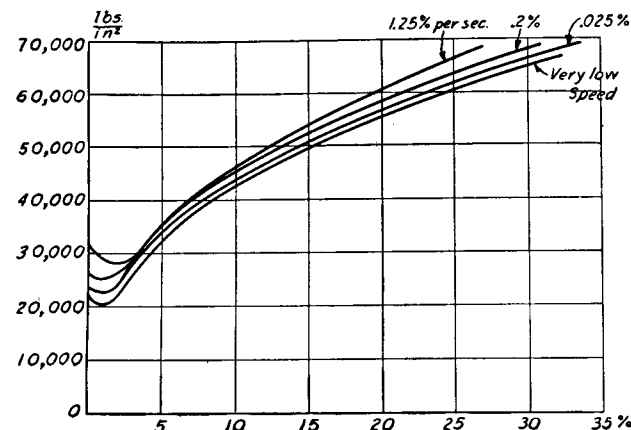


FIG. 271.

diagrams at different speeds of loading for steel. Again the true compressive stresses are plotted against unit compression in per cent. It will be seen that the most important effect of speed is that on the position of the lower yield point. At a high-speed of loading the yield point of mild steel is about 30 per cent higher than its value with a low speed of testing. This phenomenon is important in the impact testing of metals and explains why fracture in dynamical tests requires more work than in static tests on specimens of the same material.

This discussion of the time effect shows that even under the most ideal conditions, when the specimen is a single crystal (Fig. 269), there may be some difference between the curve which represents loading of the specimen and the curve which

represents unloading. This means that a certain amount of energy is dissipated during a loading-unloading cycle. In Fig. 269 the area $OABD$ represents the work done during the process of loading (see p. 281, Part I), the area BCD , the work restored during unloading, and hence the area $OABC$ represents the energy dissipated per cycle. This quantity is very small and can be eliminated if the process of loading and unloading is carried out so quickly that no appreciable exchange in heat takes place. We have such conditions, for instance, in high-frequency vibrations produced in a single crystal specimen. The dissipation of energy, due to electrical causes, as in a quartz crystal, can be eliminated by choosing a certain crystallographic direction for the tension and compression.⁵¹ This property has found wide application in the generation of sustained electric vibrations. Due to very small energy losses, quartz oscillators show a very sharp resonance effect at high frequencies.

If a single crystal specimen is stretched beyond the proportional limit until sliding takes place in the crystal, and it is then unloaded and loaded again, a stress-strain diagram like that in Fig. 272 will be obtained. After repeated loading and unloading we may arrive⁵² at a condition in which there is no noticeable change in the permanent set at C . The cycle $ABCD$ will then be "elastic." The energy dissipated during each cycle represented by the area $ABCD$ is usually larger than that discussed in connection with Fig. 269 and cannot be entirely explained by the thermal or electrical causes mentioned. Such *looping* may also be obtained with multicrystalline materials, such as the commercial metals, and with amorphous materials such as glass. This phenomenon is called *elastic hysteresis*. In multicrystalline materials it can be partially explained as described before (see p. 424), but the complete explanation is still unknown.⁵³

⁵¹ See the book by A. Joffe, loc. cit., p. 423.

⁵² It is assumed that the stress is not very large, so that a large number of loadings and unloadings will not produce a fatigue fracture.

⁵³ See the theory of hysteresis by Bennewitz, *Physikal. Zeitschr.*, Vol. 21, 1920, p. 703, and Vol. 25, 1924, p. 417. A very interesting

The areas of these *hysteresis loops*, representing the energy dissipated per cycle, are of practical interest, as the amount of this energy determines the *damping properties of the material*.

Measurements made by Rowett⁵⁴ with steel showed that this energy increases as the cube of the maximum stress during each cycle. This subject has also been studied by B. Hopkinson⁵⁵ and more recently by O. Föppl.⁵⁶ Hysteresis loops may be demonstrated by using the model shown in Fig. 273.⁵⁷ It consists of a fixed base A and two movable wooden blocks B and C , which can slide along the steel rod

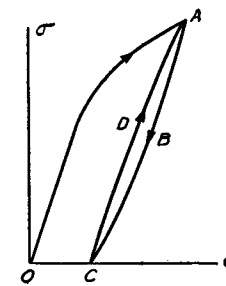


FIG. 272.

fixed in A . The block B can slide freely while the block C , attached to B by the helical spring, moves against an adjustable friction. Figure 273 (*b*) represents the relation between the force P applied to block B and the displacement of this block. At m the friction of the block C is overcome and sliding continues without increase in the load. Figure 273 (*c*) shows the cycle obtained by applying a load first in one direction and then in the other. Other phenomena in tension and compression, such as deviation from the straight line law at the proportional limit, sudden yielding at the yield point, hysteresis loops, residual stresses, etc., may be demonstrated with a model consisting of several units similar to that in Fig. 273, put side by side with all the blocks B clamped together. Each unit represents a crystal in a multicrystalline specimen. The

mechanical model illustrating time effect and hysteresis was developed by L. Prandtl; see *Zeitschr. f. Angew. Math. u. Mechanik*, Vol. 8, 1928, p. 85.

⁵⁴ Rowett, *Proc. Roy. Soc.*, Vol. 89, 1913, p. 528.

⁵⁵ B. Hopkinson and G. T. Williams, *Proc. Roy. Soc. (A)*, Vol. 87, 1912.

⁵⁶ O. Föppl und E. Becker, *Forschungsarbeiten*, nr. 304, 1928. See also Reports of the International Congress of Applied Mechanics, Zürich, 1926, and *Mitteilungen des Wohler-Instituts*, Braunschweig, Heft 30, 1937. For bibliography on hysteresis see H. Fromm, *Handbuch Phys. und Techn. Mech.*, Vol. 4, 1, p. 436, 1931.

⁵⁷ Such a model was used for demonstrations by C. F. Jenkin. See *Engineering*, Vol. 114, 1922, p. 603.

beginning of sliding of the individual blocks C represents yielding in individual crystals. By adjusting the friction in the blocks C , diagrams of various types can be obtained. When the friction of the individual blocks differs greatly, there will be a large difference between the proportional limit

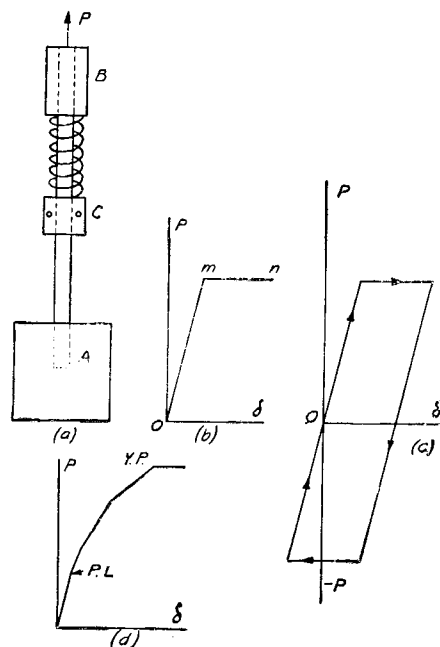


FIG. 273.

and the yield point, as in Fig. 273 (d). By making the frictions equal, a diagram such as in Fig. 273 (b) is obtained representing a well-defined yield point. If the friction of individual blocks C differs, then they will begin to slide at different positions of B and, after unloading, certain forces will remain in the springs, representing residual stresses produced by stretching multicrystalline specimens.

78. The Fatigue of Metals.⁵⁸—Machine parts are very often subjected to varying stresses and it is very important to

⁵⁸ This subject is very completely discussed in the two recent books: "The Fatigue of Metals," by H. J. Gough, 1924, London; "The Fatigue

know the strength of materials under such conditions.⁵⁹ It is well known that, under repeated loading and unloading or reversed stresses, failure can be produced by stresses smaller than the ultimate strength of the material obtained in the static test and that the magnitude of these stresses required to produce failure decreases as the number of *cycles* of stresses increases. This phenomenon of the decreased resistance of a material to varying stresses is called *fatigue*, and the testing of a material by such stresses is called an *endurance test*.

If σ_{\max} and σ_{\min} are respectively the maximum and minimum values of the varying stress, then the algebraic difference

$$R = \sigma_{\max} - \sigma_{\min} \quad (a)$$

is called the *range of stress*. The cycle is completely defined if the range and the maximum stress are given. The average stress is

$$\sigma_m = \frac{1}{2}(\sigma_{\max} + \sigma_{\min}). \quad (b)$$

In the particular case of *reversed stress* $\sigma_{\min} = -\sigma_{\max}$, $R = 2\sigma_{\max}$, $\sigma_m = 0$. Any cycle of varying stresses can be obtained by superposing a cycle of *reversed stress* on the steady average stress. The maximum and minimum values of the varying stress are then given by the following formulas:

$$\sigma_{\max} = \sigma_m + \frac{R}{2}; \quad \sigma_{\min} = \sigma_m - \frac{R}{2}. \quad (c)$$

There are various methods of applying the load in an endurance test. The specimen can be subjected to direct tension and compression, to bending, to torsion or to some combi-

of Metal," by H. F. Moore and J. B. Koppers, 1927, New York. Both these books contain a very complete bibliography on the subject. For additional information see the mimeographed lectures of H. J. Gough given at Mass. Inst. of Techn. during summer school, June 21 to July 16, 1937.

⁵⁹ J. O. Roos found from examination of a large number of fractures of machine parts that 80 per cent could be attributed to fatigue, Proc. Intern. Assoc. Testing Mat., 1912.

nation of these. The simplest way is by reversed bending.⁶⁰ A common cantilever form of fatigue test bar⁶¹ is shown in Fig. 274. The cross section of the specimen is varied along the length in such a manner that the maximum stress occurs between cross sections mn and m_1n_1 and is practically constant within that region. The effect of stress concentration is

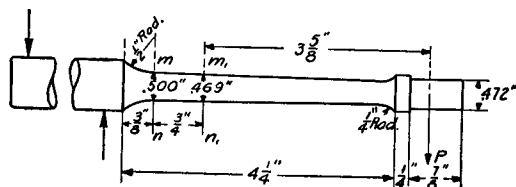


FIG. 274.

eliminated by using a large fillet radius and by increasing the diameter of the bar near the fillet. The load P is always downward, while the specimen rotates. The stress therefore changes sign every half revolution and the number of cycles of stress is equal to the number of revolutions of the machine. The stress is a completely *reversed stress*, the average stress being zero and the range of stress twice σ_{\max} . By taking several specimens and testing them at various loads P , a curve such as shown in Fig. 275 can be obtained. Here σ_{\max} is represented as a function of the number of cycles n necessary to produce fracture. The curve shown was obtained with mild steel. At the beginning σ_{\max} decreases rapidly as n increases but after 4-5 millions of cycles there is no longer any appreciable change in σ_{\max} and the curve approaches asymptotically the horizontal line $\sigma_{\max} = 27,000$ lbs. per sq. in. The stress corresponding to such an asymptote is called the *endurance limit* of the material tested for *reversed stresses*. It

⁶⁰ There are evidences that the endurance limit obtained from bending tests coincides with that obtained by testing under direct stress. See paper by P. L. Irwin, Proc. Amer. Soc. Test. Mat., Vol. 25, 1925, and Vol. 26, 1926. A further discussion of this subject is given by R. D. France, Proc. Amer. Soc. Test. Mat., Vol. 31, 1931.

⁶¹ See McAdam, Chemical and Met. Engr., 1921. The same type of specimen is used also by the Research Laboratory of the Westinghouse Elec. and Mfg. Co.

is now a usual practice in endurance tests to plot the curve σ against $\log n$. In this manner a definite mark of discontinuity in the curve, defining the magnitude of the endurance limit, has been disclosed.

There is a great difference between the fractures of mild steel specimens tested statically and those tested by alternating

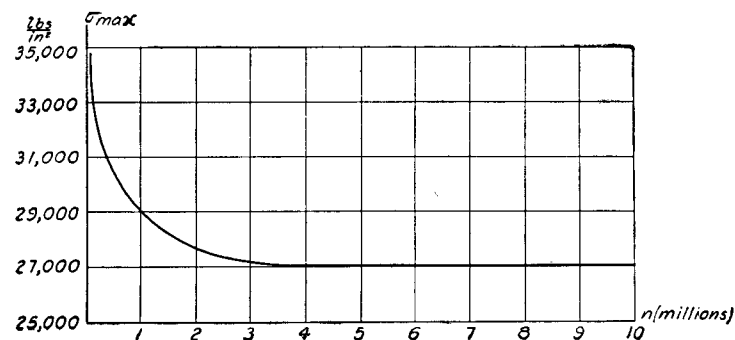


FIG. 275.

stresses. In the first case a considerable plastic flow precedes fracture, and the surfaces at the ruptured section show a silky, fibrous structure due to the great stretching of the crystals. A fatigue crack, however, looks entirely different. A crack starts at a certain place, due to a local defect in the material, or due to stress concentration produced by an abrupt change in the cross section. Once formed, it spreads due to stress concentration at its ends under the action of alternating stresses, and this spreading progresses until the cross section becomes so reduced that the remaining portion fractures suddenly under the load. Two zones can usually be distinguished in a fatigue fracture, one due to the gradual development of a crack and the other due to sudden fracture. The latter resembles the fracture of a tensile test specimen with a narrow deep groove (see p. 421) in which the form prevents sliding and fracture occurs as a result of overcoming the cohesive forces; this fracture is of the *brittle* type, such as occurs in cast iron, even if the material is ductile. In the case of cantilever test specimens

(Fig. 274) the maximum stresses are at the outer fibers; the fatigue crack is usually started at the circumference and spreads towards the center. Where there is stress concentration due to fillets, grooves or holes, the crack usually starts at the most highly stressed portion and spreads from this point as a center; in such cases fracture reveals concentric rings with respect to this starting point. This is a very familiar type of fracture in machine parts which have been submitted to alternating stresses. It is thus evident that the "brittle" type of a fatigue fracture is due to the peculiar mechanism of fracture and not to "crystallization."

W. Fairbairn was the first to state, on the basis of experiments on a full size, wrought iron girder,⁶² that there is a *limiting stress*, which can be applied safely an infinite number of times. Although it cannot be proved by direct test, all experimental evidence⁶³ supports the statement, now generally accepted, that for most metals there is a definite limiting range of stress which can be withstood for an infinite number of cycles without fracture.

It is of great practical importance to know how quickly the σ - n curve approaches the asymptote as the number of cycles necessary to establish the endurance limit depends upon this. Experiments show that for ferrous metals the endurance limit can be established with sufficient accuracy on the basis of from 6 to 10 millions of cycles. In the case of non-ferrous metals a much larger number of cycles is needed.⁶⁴

It is evident from the above discussion that the determination of the endurance limit for a definite material requires a considerable number of tests and considerable time; hence it would be of practical interest to establish relations between the endurance limit and other mechanical properties which can be determined by static tests. The large amount of experi-

⁶² See W. Fairbairn, Phil. Trans. Roy. Soc., 1864.

⁶³ A large number of endurance test curves were analyzed by O. H. Basquin, Proc. Amer. Soc. for Test. Mat., Vol. 10, 1910.

⁶⁴ See H. F. Moore and J. B. Komers, Bulletin No. 124, Eng. Expt. Stat., University of Illinois, U. S. A.

mental data accumulated has not made it possible to establish such a correlation.⁶⁵ As a rough estimate in the case of ferrous metals the endurance limit for reversal of stresses can be taken equal to from 0.40 to 0.55 ultimate strength obtained in the usual way from tensile tests. When we are working with materials belonging to a group, such as carbon steels, whose mechanical characteristics are very well known, such estimates can be considered reliable. Otherwise estimates of this type are likely to be misleading and recourse must be made to direct endurance test. Some results in endurance tests of certain steels are given in the table on pp. 497, 498.

In the majority of cases the arrangement of endurance tests is such that only the endurance limit for reversed stresses ($\sigma_{\max} = -\sigma_{\min}$) is determined, while in many cases in machine design we have varying stresses which are not completely reversed. It is necessary to know the endurance limits under these varying stresses. A. Wöhler was the first experimenter who studied the phenomenon of fatigue systematically.⁶⁶ He showed that the range of stresses R , necessary to produce fracture, decreases as the mean stress σ_m increases. On the basis of these tests and of Bauschinger's work⁶⁷ W. Gerber proposed⁶⁸ a parabolic law relating the range of stress R with the mean stress σ_m . This is illustrated by several parabolic curves in Fig. 276, in which the mean stress and the range of stress are expressed as fractions of the ultimate strength. The range is a maximum when the stress is completely reversed ($\sigma_m = 0$) and it approaches zero when the mean stress approaches the ultimate strength. If the endur-

⁶⁵ See book by H. J. Gough, loc. cit., p. 428. See also his lectures, loc. cit., p. 429.

⁶⁶ A. Wöhler, Zeitschrift für Bauwesen, Vols. 8, 10, 13, 16 and 20, 1860/70. An account of this work in English is given in Engineering, Vol. 11, 1871; see also Unwin's book, "The Testing of Materials of Construction," 3d ed., 1910.

⁶⁷ J. Bauschinger, Mitteilungen d. Mechanischtechnischen Laboratoriums in München, nr. 13 und 25.

⁶⁸ W. Gerber, Zeitschr. d. Bayerischen Arch.- und Ing.-Vereins, 1874. See also Unwin's book, "Elements of Machine Design," Vol. 1, Chap. 2.

ance limit for reversed stress and the ultimate strength are known, the endurance limit for any varying stress can be obtained from such curves. More recent investigations show that there is no fixed general law connecting the mean stress and the range of stress.⁶⁹ For instance, there are materials⁷⁰ for which the straight lines indicated in dots in Fig. 276 represent the actual relation between R and σ_m better than parabolas. The straight lines OA and OB shown in Fig. 276 and having

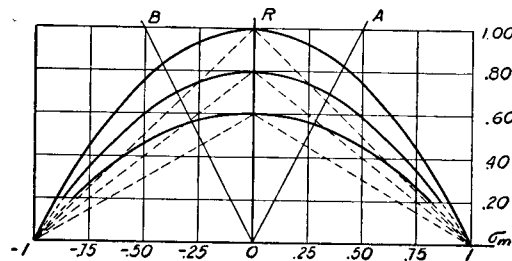


FIG. 276.

slope equal to 2 determine the region AOB in which the stress changes sign during a cycle. Outside of this region the stress always remains tension or compression. Experimental results in the region AOB usually lie between the parabolas and the corresponding straight lines.⁷¹ When the stress is always tension or always compression, the ranges R , obtained by tests, are sometimes not only below Gerber's parabolas but also below the corresponding straight lines.

All the results discussed up to now were obtained from tension-compression or from bending tests, in which cases we have a uniaxial stress condition. In practical problems we very often encounter a combined stress condition, and it is important to know the endurance limit for such conditions. The simplest

⁶⁹ An extensive discussion of this question is to be found in the book by H. J. Gough, loc. cit., p. 428. See also his lectures, loc. cit., p. 429.

⁷⁰ See paper by B. P. Haigh, *Journal Inst. Metals*, Vol. 18, 1927.

⁷¹ Some recent experiments with mild steel do not show that there is any appreciable influence of mean stress σ_m on the magnitude of the range R . See H. J. Gough lectures, loc. cit., p. 429.

case of this kind is pure shear, which we encounter in shafts under torsion. A good many torsion fatigue tests have been made from which the endurance limit can be determined. These tests show that the ratio between the endurance limit in shear and that in tension-compression is not far from 0.50, being usually somewhat above this value.⁷²

By combining reversed torsion with constant axial tension it was found⁷³ that the endurance limit in shear τ is obtained from the equation:

$$\frac{\tau^2}{\tau_e^2} + \frac{\sigma^2}{\sigma_{ult}^2} = 1 \quad (a)$$

in which τ_e is the endurance limit for the reversed torsion without axial tension, σ is the applied axial tensile stress, and σ_{ult} is the ultimate strength of the material in tension.

The combination of reversed bending and reversed torsion acting in phase was investigated by H. J. Gough and H. V. Pollard.⁷⁴ By varying the ratio of the maximum bending moment to the maximum torsion moment, it was found that in the case of mild carbon steel and of nickel-chromium steel the limiting values of the bending stress σ and of the shearing stress are found from the equation:

$$\frac{\sigma^2}{\sigma_e^2} + \frac{\tau^2}{\tau_e^2} = 1, \quad (b)$$

in which σ_e is the endurance limit for bending and τ_e is the endurance limit for torsion.

In the case of brittle materials, such as cast iron, the same experiments showed that the fatigue action depends only on

⁷² In the case of mild steel, W. Mason found this ratio equal to 0.50, *Proc. Inst. Mech. Engrs.*, London, 1917, p. 121. H. F. Moore and T. M. Jasper found the average value of this ratio equal to 0.56, *Bulletin No. 136, Eng. Expt. Sta., University of Illinois*. McAdam found this ratio to vary between 0.55 and 0.68 over a wide range of materials, *Proc. Amer. Soc. Test. Mat.*, Vol. 23, 1923.

⁷³ K. Hohenemser and W. Prager, "*Metallwirtschaft*," Vol. 12, p. 342, 1933; for the description of the machine used for this experiment see paper by E. Lehr and W. Prager in "*Forschung*," Vol. 4, 1933.

⁷⁴ The Institution of Mechanical Engineers, 1935 and 1936.

the magnitude of the maximum principal stress, and that the failure occurs when this maximum approaches the value of the endurance limit found from the usual rotating cantilever tests.

79. Various Factors Affecting Endurance Limit.—After a general discussion of the preceding article let us consider various factors which may affect the results obtained by endurance tests.

Effect of cold work on the endurance limit. In discussing stretching, drawing, and rolling of ductile metals at room temperature it was pointed out (see art. 74) that due to such cold work the material becomes stronger, the yield point is raised and the ultimate strength is somewhat increased. Hence we must expect that cold work will also affect the endurance limit of the material. The experiments made with steel specimens submitted to cold stretching⁷⁵ showed that a moderate degree of stretching produces some increase in the endurance limit. With a further increase in cold working a point may be reached at which some drop in the endurance limit may occur due to overworking.⁷⁶ A further improvement of a cold worked material can be obtained by submitting it, after cold work, to a mild heat treatment—say by leaving the material in boiling water for some time.

Overstressing and understressing. Experiments have been made in which cycles of stress above the endurance limit were applied a number of times before starting a normal endurance test. Such *overstressing* of specimens showed that there is a *limiting number* of cycles of overstress, depending on the magnitude of overstress, below which the endurance limit is

⁷⁵ H. F. Moore and J. B. Kommers, Bull. No. 124, Univ. of Illinois, Eng. Exper. Sta., 1921 and O. J. Horger, Trans. A. S. M. E., Vol. 57A, p. 128, 1935. In Moore's experiments carbon steel, 0.18 per cent C, and the stretching 8 per cent and 18 per cent were used. In Horger's experiments with carbon steel, 0.48 per cent C, the same 8 per cent and 18 per cent stretching were used.

⁷⁶ See H. F. Moore and T. M. Jasper, Bull. No. 136, Eng. Expt. Sta., Univ. of Illinois, and R. M. Brown, Trans. Inst. Engrs., Shipbuilders Scot., 1928.

not affected by overstress, but above which number of cycles the endurance limit was observed to decrease. By plotting the maximum stresses of the cycles of overstress against the limiting numbers of these cycles, a *damage curve*⁷⁷ for the tested material is obtained. The area below this curve defines all those degree of overstressing which do not cause damage. The damage curve is of practical importance when we are dealing with a machine part normally working at cycles of stress below the endurance limit, but subjected from time to time to the cycles of overstress. If the magnitude of overstress is known, the safe number of cycles of overstress is readily obtained from the damage curve.⁷⁸

By running an endurance test at a load just below the endurance limit and then increasing the load by small increments the endurance limit can be raised. This phenomenon is called the *understressing* effect. The amount by which the endurance limit can be raised in this way depends on the material.⁷⁹ For mild steel this amount is sometimes as high as 30 per cent of the original endurance limit, while Armco iron and copper remain practically unaffected by understressing.

Frequency effect. The effect of the frequency of the cycles in endurance tests has also been studied, but no appreciable effect was observed up to a frequency of 5,000 per minute. For higher frequencies some increase in the observed endurance limit with the frequency, was found. Very interesting experiments of this kind have been made by C. F. Jenkin.⁸⁰ Increasing the frequency up to over 1,000,000 cycles per minute he found at that high frequency an increase in the

⁷⁷ H. J. French, Trans. A. S. S. T., Vol. 21, p. 899, 1933, and H. W. Russell and W. A. Welcker, Proc. A. S. T. M., Vol. 36, 1936.

⁷⁸ B. F. Langer suggested a formula for calculating the number of cycles of overstress of various intensities which a machine part can withstand before failure. See "Journal of Applied Mechanics," Vol. 4, p. A-160, 1937.

⁷⁹ H. F. Moore and T. M. Jasper, Bull. No. 142, Univ. of Illinois, Eng. Expt. Sta., 1924; J. B. Kommers, Eng. News Record, 1932.

⁸⁰ C. F. Jenkin, Proc. Roy. Soc., Vol. 109A, 1925, p. 119 and C. F. Jenkin and G. D. Lehmann, Proc. Roy. Soc., Vol. 125A, 1929.

endurance limit of more than 30 per cent for such materials as Armco iron and aluminum. To obtain such high frequencies Jenkin used forced vibrations of small specimens. A rotating beam machine was used by G. N. Krouse⁸¹ for high speed tests 30,000 cycles per minute. For aluminum and brass he found 8 per cent increase in endurance limit at this speed.

Temperature effect. In the previous discussion we were dealing with endurance tests made at room temperature; there are, however, cases when engineering structures and machine parts are submitted to the action of cycles of stresses at low temperature, as, for instance, in the case of aeroplanes, or at high temperature, as in steam turbines and internal combustion engines. Hence, endurance tests at low and at high temperatures are of practical importance. The comparative endurance tests made⁸² at $+20^{\circ}\text{C.}$ and -40°C. with Monel metal, stainless steel, nickel steel and chromium-molybdenum steel showed in all cases some increase in endurance limit with the decrease of temperature. Similar conclusions were also obtained for other materials.⁸³

The endurance tests at *high temperatures* made with various kinds of steels on rotating beam machines⁸⁴ and also on reversed direct stress machines⁸⁵ all indicate that up to 300°C. – 400°C. there is no great effect of temperature on the endurance limit. The maximum endurance limit is usually obtained at 300°C. – 400°C. , while at 100°C. – 200°C. the endurance limit is usually somewhat less than at room temperature. The experiments show also that the σ - n curves do not approach their asymptotes so rapidly as at room temperature, and that more than 10^7 cycles are required for determining the magnitude of the endurance limit.

⁸¹ G. N. Krouse, Proc. A. S. T. M., Vol. 34, 1934.

⁸² H. W. Russell and W. A. Welcker, Proc. A. S. T. M., Vol. 31, p. 122, 1931.

⁸³ W. D. Boone and H. B. Wishart, Proc. A. S. T. M., Vol. 35, 1935.

⁸⁴ H. F. Moore and T. M. Jasper, Bull. No. 152, Univ. of Illinois, Engr. Expt. Sta., 1925 and H. F. Moore, S. W. Lyon and N. P. Inglis, Bull. No. 164, Univ. of Illinois, Engr. Expt. Sta., 1927.

⁸⁵ H. J. Tapsell and J. Bradley, Journal Inst. Met., Vol. 35, 1926.

The phenomenon called *corrosion fatigue* is also of practical importance. This term is used to designate the simultaneous action of corrosion and fatigue. In 1917 Haigh⁸⁶ published the results of some very interesting endurance tests on brasses, in which he found some lowering of the endurance limit when the specimen under alternating stress was subjected to the action of salt water, ammonia, or hydrochloric acid. He pointed out also that the damaging effect of ammonia on brass was not produced unless the corrosive substance and the alternating stresses were applied simultaneously. Further progress in the investigation of *corrosion fatigue* was made by McAdam,⁸⁷ who investigated the combined effect of corrosion and fatigue on various metals and alloys. These tests proved that in most cases a severe corrosion prior to an endurance test is much less damaging than a slight corrosion which takes place simultaneously. Tests with carbon steels with various carbon contents and having endurance limits⁸⁸ in reversed stress varying from 20,000 lbs. per sq. in. to 40,000 lbs. per sq. in. showed that, if the specimens are subjected to the action of fresh water during the endurance tests, the endurance limits are greatly diminished and vary from 16,000 lbs. per sq. in. to 20,000 lbs. per sq. in. These lowered endurance limits are called *corrosion fatigue limits*. The tests showed that while for testing in air the endurance limit increases approximately in the same proportion as the ultimate strength of the steel the results obtained when testing in fresh water are quite different. The corrosion fatigue limit of steel having more than about 0.25 per cent carbon cannot be increased and may be decreased by heat treatment.⁸⁹ It was shown also that by adding enough chromium to increase the ordinary corrosion resistance of

⁸⁶ B. P. Haigh, Journal Institute of Metals, Vol. 18, 1917.

⁸⁷ D. J. McAdam, Proc. Amer. Soc. Test. Matls., Vol. 26, 1926; Trans. Amer. Soc. Steel Treating, Vol. 2, 1927; Proc. Amer. Soc. Test. Matls., Vol. 27, 1927; Proc. International Congress for Testing Materials, Vol. 1, 1928, p. 305, Amsterdam.

⁸⁸ Determined by tests in air.

⁸⁹ McAdam, Proc. International Congress at Amsterdam, Vol. 1, p. 308, 1928.

steel, the corrosion fatigue limit can be raised considerably above that for carbon or nickel steels.⁹⁰

The endurance tests in an atmosphere of steam⁹¹ showed that dry steam does not affect the endurance limit, but in the case of steam containing air or water a lowering of the endurance limit was observed. The experiments in vacuum⁹² showed that the endurance limit of steel is about the same as that obtained from the tests in air, while experiments with copper and brass demonstrated an increase of endurance limit of no less than 14 per cent and 16 per cent respectively.

There are many known cases of failures in service which must be attributed to corrosion fatigue; they include failures of such parts as marine propeller shafts, water-cooled piston rods of marine oil engines, turbine blades, locomotive springs, pump rods in oil wells, boilers and super-heater tubes, and so on. In many cases corrosion-fatigue failures were eliminated by introducing corrosion-resisting materials. The McAdam experiments with corrosion-resisting steels showed that such steels give very satisfactory results in corrosion-fatigue tests. Recent experiments with special bronzes⁹³ showed that phosphor bronze and aluminum bronze, tested under extremely corrosive conditions, have a remarkable corrosion-fatigue resistance, which compares favorably with that of the best stainless steels.

Protective coatings⁹⁴ of parts subjected to corrosion-fatigue and surface cold work⁹⁵ were also successfully used in eliminating corrosion-fatigue failures.

Effect of residual stresses. During heat treatment of machine parts and during welding of structures, considerable residual stresses are usually produced, and the question arises what effect these stresses may have on the endurance limit. The experiments with quenched steel specimens tested in the rotating beam fatigue testing machine showed⁹⁶ that, due to application of cycles of reversed stresses, the initial residual stresses are reduced to less than one quarter of their initial value and that the effect of these stresses on the endurance limit is negligible. Similar conclusions were obtained also from fatigue tests of welded I-beams.⁹⁷

The effect of *surface finish* on the endurance limit has also been studied. Tests were made on 0.49 per cent carbon steel with an ultimate strength of 95,000 lbs. per sq. in. and an ordinary endurance limit of 48,000 lbs. per sq. in. By taking 100 as the endurance limit for highly polished specimens, the following results were obtained for various finishes:⁹⁸ *ground finish* 89, *smooth-turned finish* 84, *rough-turned finish* 81. Tests with 0.02 per cent C steel (Armco iron) gave for the last two types of finish 92 and 88 respectively. Similar experiments were made with 0.33 per cent C steel by W. N. Thomas,⁹⁹ who measured the magnitude of the scratches in various finishes with a microscope; other experiments have been made by W. Zander.¹⁰⁰

The tables on pages 497 and 498 give the results obtained in static and endurance tests of certain steels often used in engineering.

⁹⁰ See McAdam, Trans. Am. Soc. Mech. Engrs., Applied Mech. Divis., 1928.

⁹¹ See T. S. Fuller, Trans. Amer. Soc. Steel Treat., Vol. 19, 1931, p. 97.

⁹² H. J. Gough and D. G. Sopwith, "Journal Inst. Metals," Vol. 49, p. 93, 1932.

⁹³ H. J. Gough and D. G. Sopwith, "Journal Inst. Met.," Vol. 60, p. 143, 1937.

⁹⁴ D. G. Sopwith and H. J. Gough, "Journal of the Iron and Steel Inst.," 1937.

⁹⁵ O. Föppl, O. Behrens und Th. Dusold, "Zeitschr. f. Metallkunde," Vol. 25, 1933.

⁹⁶ See H. Bühler und H. Buchholtz, "Stahl u. Eisen," Vol. 53, p. 1330, 1933, and Mitteil. Forsch. Inst., Verein. Stahlwerke, Dortmund, Vol. 3, p. 235, 1933.

⁹⁷ E. H. Schulz und H. Buchholtz, "Stahl u. Eisen," Vol. 53, p. 545, 1933.

⁹⁸ See H. F. Moore and J. B. Kommers, Bulletin No. 124, loc. cit., p. 683.

⁹⁹ W. N. Thomas, Engineering, Vol. 116, 1923, p. 483. Recent development in investigating surface roughness is discussed in the paper by S. Way, see reference 111, p. 455.

¹⁰⁰ W. Zander, Dissertation, Technische Hochschule Braunschweig, 1928.

80. Fatigue and Stress Concentration.—In discussing stress concentration produced by sharp variation in the cross sections of bars or shafts (see Chapter VII), it was indicated that such stress concentration is especially damaging in the case of varying stresses. In machines stress concentration is always present owing to fillets, grooves, holes, keyways, etc., in their parts, and experience shows that most of fatigue cracks start at points of stress concentration. Several examples of such failures will now be briefly discussed. Figure 277 repre-

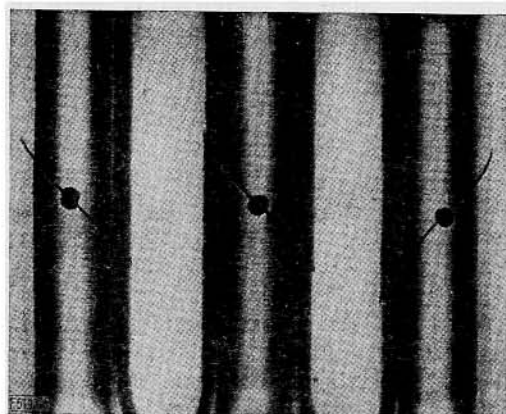


FIG. 277.

sents¹⁰¹ fatigue failures of circular shafts with transverse circular holes subjected to the action of reversed torsion. The maximum stress in such a case occurs at the ends of the diameters of the hole inclined 45 degrees to the axis of the shaft (see p. 317). At these points the cracks start and gradually develop along a helical path following the direction of one of the principal stresses. Figure 278 represents the torsional fatigue failure of a shaft of a large motor-generator set which unfortunately operated near resonance.¹⁰² The

¹⁰¹ See paper by A. Thum, "Forschung," Vol. 9, p. 57, 1938.

¹⁰² This figure and the following three are taken from the paper by R. E. Peterson presented at a conference on "Strength of Materials Problems in Industry," Mass. Inst. Techn., July, 1937. The mechanism of cracks growth is discussed in the paper by R. E. Peterson, Journal of Appl. Mech., Vol. 1, p. 157, 1933.

crack started at the keyway, where a high stress concentration takes place, and gradually developed along the helical path.

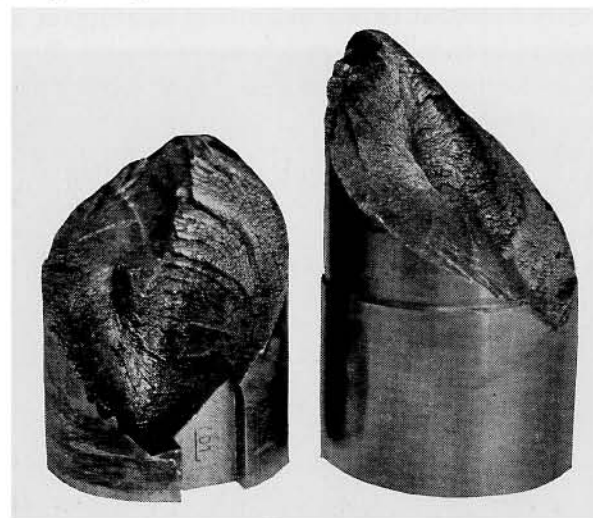


FIG. 278.

The helical crack corresponding to the direction of the second principal stress can also be seen on the photograph. Figure 279 represents torsion failure of a shaft of a Diesel driven generator. A high stress concentration at the small radius

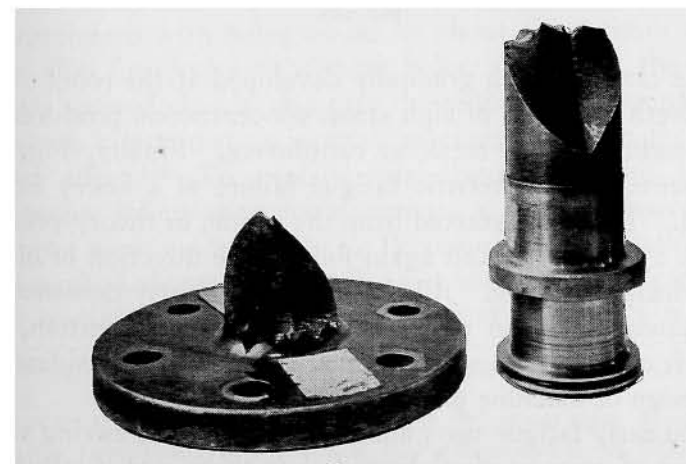


FIG. 279.

fillet resulted in several helical cracks, which, joined together, produce a saw-tooth appearance. In Fig. 280 are shown the

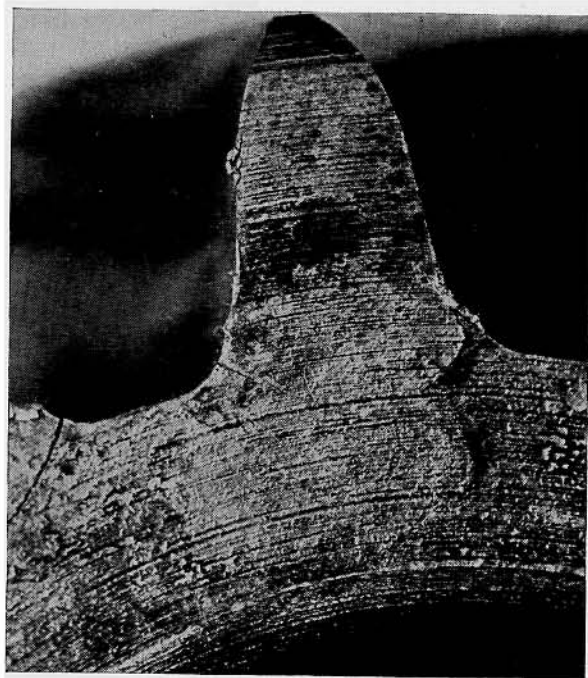


FIG. 280.

fatigue cracks, which gradually developed at the roots of the gear teeth at points of high stress concentration produced by the bending of the teeth as cantilevers. Finally, Fig. 281 represents a characteristic fatigue failure of a heavy helical spring. The crack started from the inside, as theory predicts (see p. 272, Part I), and again follows the direction of one of the principal stresses. All these pictures clearly demonstrate the damaging action produced by stress concentration, and make it clear that this factor must be seriously considered in the design of machine parts.

The early fatigue tests made with specimens having sharp changes of cross section showed that there was a reduction

in strength due to stress concentration, but this reduction was usually found to be much smaller than would be expected from the magnitude of the calculated factor of stress concentration. For instance, in the case of flat steel specimens with small circular holes subjected to direct stress the theoretical factor of stress concentration is equal to three (see p. 313),

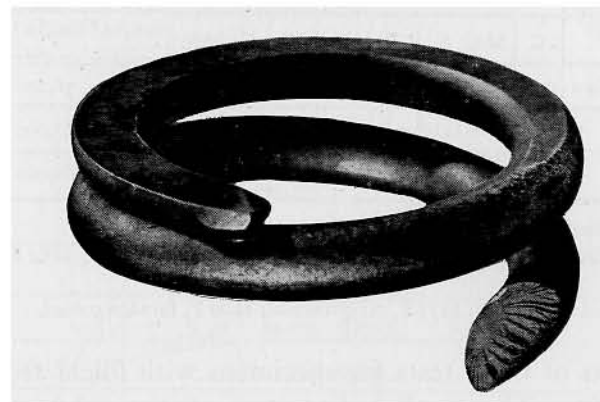


FIG. 281.

and if the magnitude of the peak stress is the controlling factor in endurance tests, it would be expected that the tension-compression load required to produce fatigue failure of specimens with holes would be about three times smaller than that for specimens without holes. However, the experiments showed that in this case the reduction in strength due to stress concentration is small as compared with the calculated effect.¹⁰³ To explain this discrepancy and to give necessary information for designers, a very extensive series of tests were made by R. E. Peterson at the Westinghouse Research Laboratories.¹⁰⁴ Geometrically similar cantilever test specimens varying in diameter from 0.1 in. to 3 in. with a

¹⁰³ B. P. Haigh and J. S. Wilson, "Engineering," Vol. 115, p. 446, 1923.

¹⁰⁴ R. E. Peterson, Trans. A. S. M. E., "Journal Appl. Mech.," Vol. 1, p. 79, 1933, Vol. 1, p. 157, and R. E. Peterson and A. M. Wahl, Trans. A. S. M. E., Journal Appl. Mech., Vol. 3, p. 15, 1936.

fillet or with a transverse circular hole and of different materials, as given in the table below, were tested in special fatigue testing machines.¹⁰⁵

TABLE OF MATERIALS USED IN TESTS

Steel	Chemical Composition								Y.P. lbs./in. ²	Ult. lbs./in. ²	Elong. per cent
	C	Mn	Si	S	P	Ni	Cr	Mo			
Medium ¹ carbon	0.45	0.79	0.18	0.03	0.013	—	—	—	32,500	76,000	32
Ni-Mo ²	0.52	0.68	0.19	—	0.014	2.96	—	0.38	45,500	97,000	26
Ni-Cr ³	0.54	0.65	—	—	—	1.38	0.64	—	91,000	120,000	24

¹ Normalized: 1560 F, air cooled.

² Normalized and drawn: 1750 F, air cooled; 1460 F, air cooled; 1160 F, furnace cooled.

³ Quenched and drawn: 1475 F, oil quenched; 1200 F, furnace cooled.

The results of these tests for specimens with fillets are given in Fig. 282. The smaller diameters of the specimens are taken as abscissae while the ordinates represent the ratios k_f of the endurance test loads for plain specimens to the endurance test loads found for the corresponding test specimens with stress concentration. Similar results were also obtained for specimens with transverse holes. The horizontal lines in Fig. 282 give the values of the factors of stress concentration obtained for each proportion of the fillet by a direct measurement of strain at the points of maximum stress concentration (see p. 341). These values are designated by k_t and are called *theoretical values* of stress concentration in the following discussion. If the fatigue strength of the specimens depends only on the peak stress, k_t must evidently be equal to k_f .

On a basis of his tests, R. E. Peterson came to the following conclusions:

(a) *In some cases fatigue results are quite close to theoretical stress concentration values.* This conclusion is of great prac-

¹⁰⁵ The description of these machines is given in the paper by R. E. Peterson, Proc. Am. Soc. Test. Mat., Vol. 29, p. 371, 1929.

tical importance, since a general idea seems to exist, based on some early experiments, that fatigue data for stress-concentration cases are always well below theoretical values, i.e., on the safe side for design purposes.

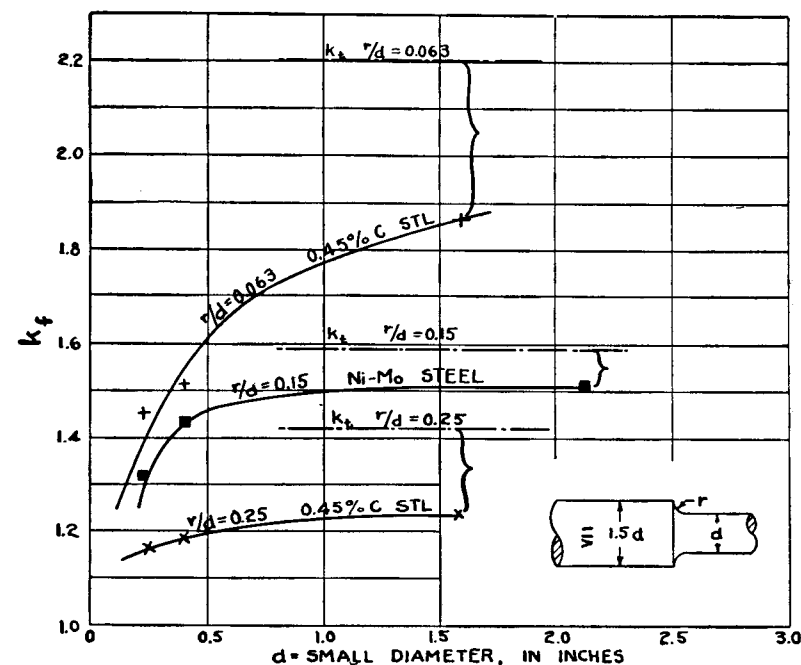


FIG. 282.

(b) *Fatigue results for alloy steels and quenched carbon steels are usually closer to theoretical values than are the corresponding fatigue results for carbon steels not quenched.* It was expected in these tests that theoretical values k_t would be reached for all steels provided specimens were made large enough, but Fig. 282 shows that the fatigue-data curves for normalized 0.45 per cent carbon steel are apparently asymptotic to values considerably below the theoretical.

(c) *With a decrease in the size of specimen the reduction in fatigue strength due to a fillet or hole becomes somewhat less; and for very small fillets or holes the reduction in fatigue strength is*

comparatively small. This can be clearly seen from the curves in Fig. 282.

Another way of presenting fatigue test results showing the extent to which theoretical values k_t of stress concentration are reached, is obtained by introducing the quantity

$$q = \frac{k_f - 1}{k_t - 1}, \quad (a)$$

which is sometimes called the *sensitivity index*. As k_f approaches the value k_t , the value of q approaches unity, and when the stress concentration has only a small effect on fatigue strength, k_f is close to unity, and q approaches zero. By using the experimental data given in Fig. 282 and by plotting the values of q against the diameter magnitudes d , the curves shown in Fig. 283 are obtained. It is seen that the sensitivity

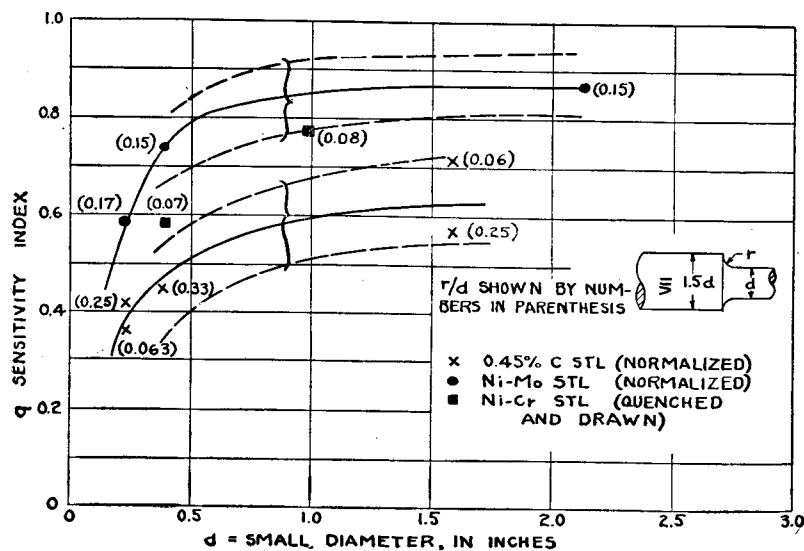


FIG. 283.

index is not a constant. It depends not only on the kind of material but also on the size of specimens. In the case of alloy steels and for larger specimens q approaches the value

of unity, while for a coarser material, 0.45 per cent carbon steel, it approximates a somewhat lower value.¹⁰⁶ Similar curves were also obtained for the specimens with transverse holes.

On the basis of the above discussion the use of the theoretical value k_t of stress concentration can be recommended in the design of larger size machine parts and in the case of the finer-grained steels, such as alloy steels and heat-treated carbon steels. In the cases of smaller dimensions and coarser materials the reduced values of the stress concentration factor which, from equation (a), are

$$k_f = q(k_t - 1) + 1$$

can be used. The values of q , obtained experimentally for fillets and holes and represented for the case of fillets by the full lines in Fig. 283, can be used as a guide in selecting the proper values of k_f in other cases of stress concentration.

To explain the "size effect" in fatigue tests it is necessary to consider grain size of crystalline materials. When we speak of geometrically similar specimens of the same material, their metallographical structure obviously is not geometrically similar, and that fact may affect the fatigue tests. If we consider a region of peak stress, a different result would be expected when only few grains are contained in that region than if many thousands are contained in the same region. The relationship between the sensitivity index q obtained from fatigue tests and the grain size of the materials used is discussed in a recent paper by R. E. Peterson.¹⁰⁷

It can be appreciated that the problem of reducing the damaging effect of stress concentration is of primary importance to designers. Some lowering of stress concentration can be obtained by a proper change in design. For instance,

¹⁰⁶ Tests of cast iron have shown very small effect of stress concentration on fatigue tests results. A. Thum and H. Ude, Zeitschr. V. D. I., Vol. 74, p. 257, 1930.

¹⁰⁷ See Stephen Timoshenko Anniversary Volume, p. 179, 1938.

the design can be considerably improved by eliminating sharp reentrant corners and introducing fillets of a generous radius, by designing fillets of a proper shape, by introducing relieving grooves, etc. But all these measures are sometimes not sufficient to eliminate fatigue failures. As an important example of this kind let us consider the typical failures which occur at the wheel seat of locomotive and railroad-car axles, at the wheel or bearing seats of automobile axles, at the pressed or fitted bits of long drill rods in oil-well operations, etc. All these cases of fitted members subjected to the action of variable stresses have been a constant source of fatigue failures. Considering, for example, the case of a wheel-hub pressed on the axle, Fig. 284, *a*, we can see that a high stress

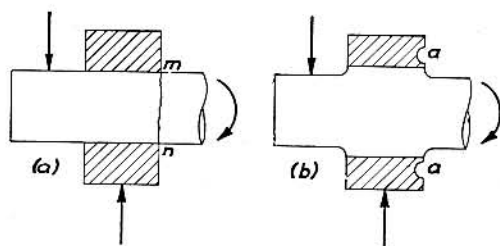


FIG. 284.

concentration is produced at the reentrant corners *m* and *n*. During rolling of the axle the reversal of stress at points *m* and *n* takes place, and finally a fatigue failure over the cross section *mn*, such as shown in Fig. 285, may occur. Stress concentration can be somewhat reduced by introducing raised seats and fillets as shown in Fig. 284, *b*. A further improvement is obtained by introducing the relief groove *a*, Fig. 284, *b*. Although such changes are in the right direction, they are not sufficient in this case. Experience shows that the mere press-fit of a hub on an axle, Fig. 284, *a*, reduces the fatigue strength of the axle to less than half of its initial strength, while the changes shown in Fig. 284, *b*, raise the fatigue strength of the axle perhaps no more than 20 per cent.

To improve the condition and eliminate fatigue failures, the surface cold-rolling of the axle in the region of stress concentration has been successfully applied. The early experiments¹⁰⁸ with surface cold work were made on small

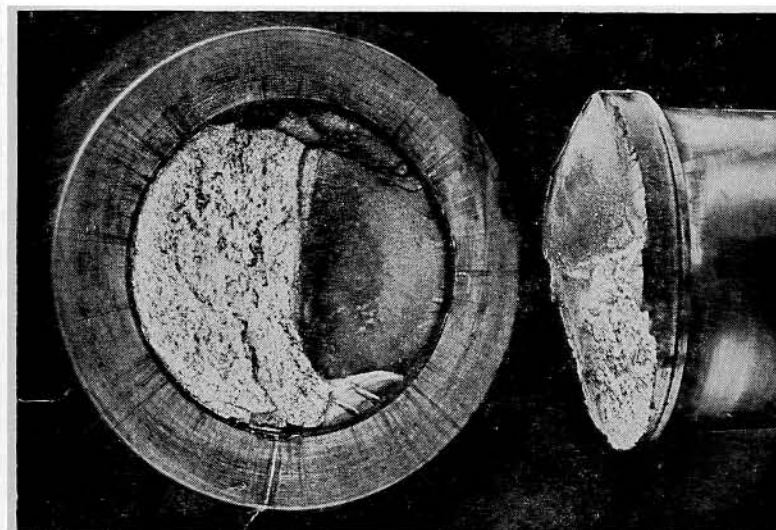


FIG. 285.

specimens, and to get sufficient information for practical application, an extensive series of laboratory tests with larger specimens were made. Three types of fatigue tests made by O. J. Horger at the laboratory of the University of Michigan¹⁰⁹

¹⁰⁸ The improvement of fatigue strength by surface cold-working was introduced by O. Föppl, "Stahl u. Eisen," Vol. 49, p. 575, 1929. It was applied in various fatigue tests at the Wöhler-Institut. See Mitteilungen d. Wöhler-Instituts, Vol. 1 to Vol. 37, 1929-1940. See also A. Thum und F. Wunderlich, Mitteilungen d. Materialprüfungsanstalt, Techn. Hochsch. Darmstadt, Vol. 5, 1934, and R. Kühnel, "Stahl u. Eisen," Vol. 110, p. 39, 1932.

¹⁰⁹ The description of these experiments is given in the papers by O. J. Horger, Journal of Appl. Mech., Vol. 2, p. 128A, 1935; and O. J. Horger and J. L. Maulbetsch, Journal of Appl. Mech., Vol. 3, p. 91A, 1936. The work done at the Westinghouse Research Laboratories is described in the paper by R. E. Peterson and A. M. Wahl, Journal of Appl. Mech., Vol. 2, 1935, p. 1A.

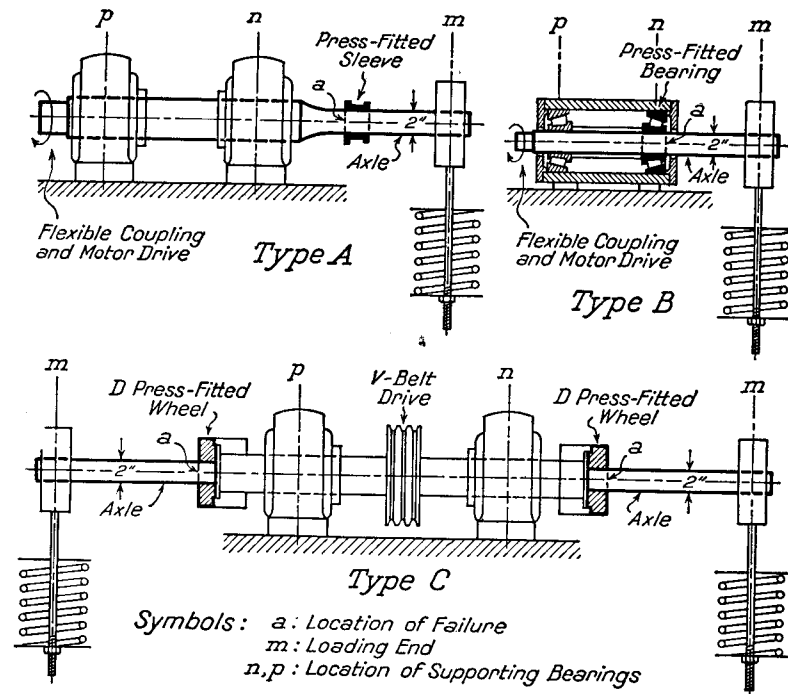


FIG. 286.

are shown in Fig. 286. The properties of the materials used in these tests are listed in the table below.

MATERIALS USED FOR TESTS IN FIG. 286

Steel	Chemical Composition							Y.P. lbs./in. ²	Ult. lbs./in. ²	Elong. per cent
	C	Mn	P	S	Si	Cr	Ni			
S.A.E. ¹ 1045	0.47	0.72	0.015	0.034	0.23	0.03	0.05	47,800	88,800	32
2.75 per cent ² Nickel	0.24	0.86	0.034	0.021	0.24	—	2.79	86,300	111,000	23

¹ Normalized 1620 F and Drawn 1115 F.

² Quenched 1475 F and Tempered 1150 F.

The endurance limits obtained for S.A.E. and for Ni steel from the usual cantilever beam fatigue tests are 34,000 lbs.

per sq. in. and 48,000 lbs. per sq. in. respectively. After pressing on the sleeve, as in tests type A, Fig. 286, the endurance limit of S.A.E. steel was reduced to 15,000 lbs. per sq. in. In tests of types B and C the endurance limits were found to be 12,000 lbs. per sq. in. and 14,000 lbs. per sq. in. respectively. This indicates that owing to press-fit the fatigue strength of specimens was diminished to less than one-half of its initial value. Similar results were also obtained for Ni steel specimens. To improve the fatigue strength the surface of the rest of the specimens was cold-rolled before pressing on the sleeves or hubs by using the device shown in Fig. 287. A lathe was adapted for this rolling operation by supporting the specimen in lathe centers and the rolling device in a transverse slide fixed to the lathe carriage. To secure a

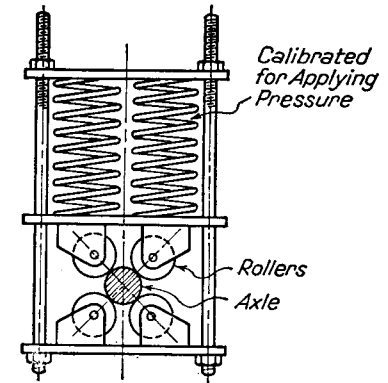


FIG. 287.

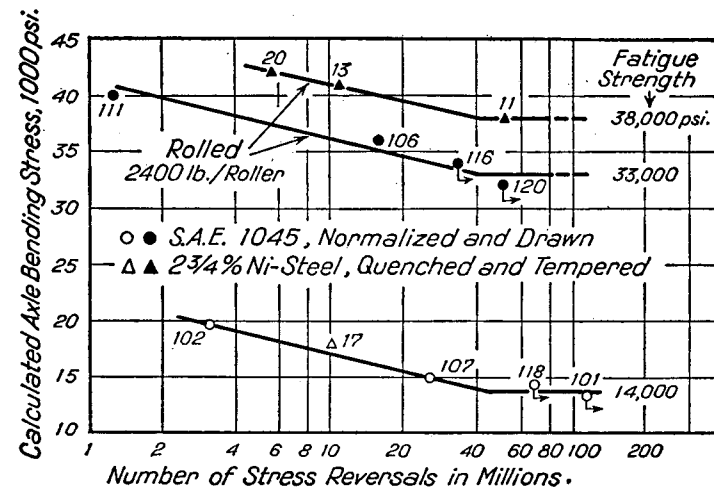


FIG. 288.

sufficiently smooth surface after rolling, the feeds giving more than 40 threads per inch were used.

The results of fatigue tests of Type C, Fig. 286, made with cold-rolled specimens, are shown in Fig. 288. It is seen from these tests that the fatigue strength of S.A.E. steel specimens increased, due to cold rolling, to a value more than twice their initial strength. Similar results were also obtained with Ni steel specimens.

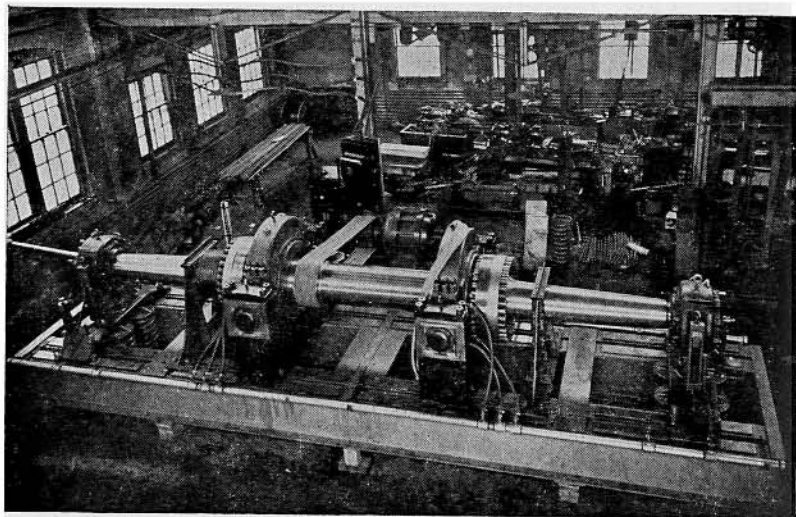


FIG. 289.

A further step in the investigation of the effect of cold-rolling on fatigue strength was made by building special large fatigue-testing machines, in which full size locomotive axles can be tested. Figure 289 represents one of these machines.¹¹⁰ The arrangement is similar to that used in type C tests in Fig. 286, and is the same as was used by Wöhler in his famous fatigue tests of axles.

Another case of fatigue failure under the action of highly concentrated stresses is represented by the *surface failure of*

¹¹⁰ Three machines of this kind are working at present in the research laboratory of the Timken Roller Bearing Company, Canton, Ohio. Figure 285 is taken from these tests.

rollers and gears under the repeated action of contact pressures during rotation. Considering two rotating rollers pressed together by the forces P , Fig. 290, we can calculate the maximum compressive stress at the surface of contact by using the formulas of art. 66. In the case of an ideally smooth surface this calculated stress is the true stress, and the surface fatigue strength of rollers of a given material will depend only on the magnitude of this stress. In actual cases the roller surface has various kinds of unevenness, the magnitudes of which depend on the kind of surface finish. Several examples of surface finish are shown¹¹¹ in magnified form in Fig. 291. Naturally the surface roughness will affect the pressure distribution at the surface of contact of the rollers in Fig. 290,



FIG. 290.

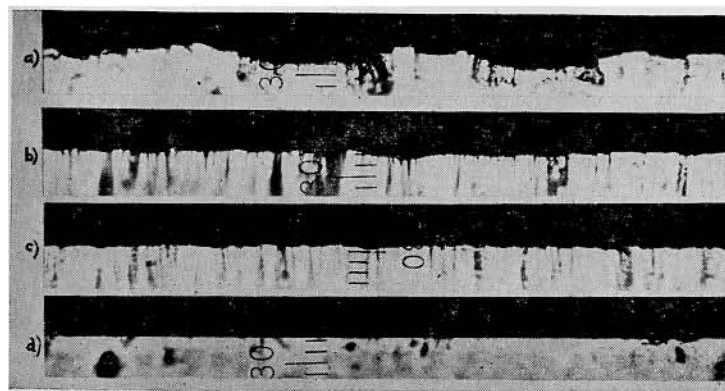


FIG. 291.

and as a result of local overstressing at the points of the most unfavorable irregularities fatigue cracks will start earlier than

¹¹¹ This picture and the two following are taken from the paper by S. Way presented at the meeting of the American Gear Manufacturers Association, May, 1940. Various methods of investigation of surface finish are described in the S. Way paper published in the "Proceedings of the Special Summer Conferences on Friction and Surface Finish," Mass. Inst. Techn., June 1940. In this paper a complete bibliography of the subject is given.

in the case of smooth rollers. This indicates that the fatigue strength of rollers depends on the degree of roughness of their surface.

Experiments show that if the surface fatigue tests are made with lubricated rollers, surface fatigue cracks grow to *pits*. *Pitting cracks*, which sometimes develop in rollers and gears under service conditions, are very undesirable, and



FIG. 292.

considerable efforts were extended in studying the causes of pitting.¹¹² These investigations showed that the causes of growth of pitting cracks are of a hydrodynamical nature. The pitting cracks assume a direction that slopes obliquely into the metal; they are roughly in the form of a conical surface

¹¹² Such investigations were made at Westinghouse Research Laboratories by S. Way; see his paper in *Journal of Applied Mech.*, Vol. 2, 1935.

so that they meet the surface in a curve in the form of a parabola, or V , with the vertex of the V being the part that during rotation is run over first. In Fig. 292, representing the magnified photograph of a roller surface, the starting point of a pit crack is shown by an arrow. It is seen that any oil that enters such a crack will tend to be trapped as the crack passes under the loaded region. A high oil pressure in a crack will produce high tensile stresses at the end of the crack and the crack may be driven further into the metal. This theory explains why oil is necessary for pitting crack growth and why changing the direction of rotation or relief of oil pressure in the crack stops crack growth.

To obtain comparative values of pitting resistance of various materials, the fatigue tests were made¹¹³ with pairs of rollers, Fig. 290, one of each pair being 1.576 in. in diameter, the other being 1.500 in. in diameter, and the width of the test surface being 0.500 in. All rollers had a finely ground surface on which the maximum depth of irregularities was between 0.0001 in. and 0.00018 in. The speed of rotation was between 300 and 500 r.p.m., with lubrication by an oil bath of a machine oil of viscosity 700–900 seconds Saybolt at the operating temperature. The maximum compressive stress, given by equation (295), p. 359, and calculated for compressive load just sufficient to cause at least one pit per square inch of test surface in 10 million cycles was defined as the *pitting limit* of the material. The results of these tests for the case of 0.45 per cent carbon steel and for various heat treatments are represented in Fig. 293 by the curve *B*. The hardness numbers¹¹⁴ of the tested rollers are taken as the abscissas, and the corresponding pitting limits make up the ordinates. For comparison, a straight line giving for the pitting limit the values 324 times the hardness number is also shown. Since pitting is a fatigue failure, we would expect the pitting strength to increase proportionally to hardness.

¹¹³ See S. Way paper, reference 103.

¹¹⁴ The hardness numbers can be considered proportional to the ultimate strength of the surface layer of the roller's material.

The experiments showed that the assumption of a linear relationship between pitting strength and hardness is on the side of conservatism.

The curve *A* in Fig. 293 gives the values of the pitting limits found from the experiments with gears made of the

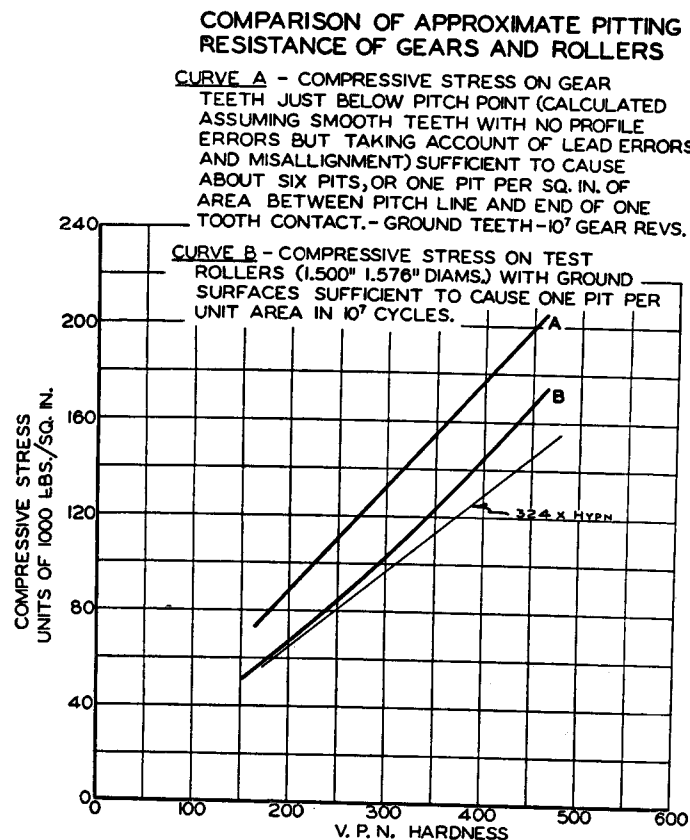


FIG. 293.

same material as the previously discussed rollers. The conditions at the surface of contact of gear teeth are somewhat different from those we had in rollers, the principal difference being the fact that rolling is associated with sliding. This difference of conditions results, as we see, in some increase of the pitting limit.

81. Causes of Fatigue.—Although a great amount of data concerning strength in fatigue has been accumulated, up to now no fundamental theory has been established to explain the cause and the mechanism of the phenomena. A fatigue fracture was formerly attributed to “crystallization” of the metal, making it brittle. Such a theory was advanced on the basis of the appearance of the fracture (see p. 432).

We now know that the individual crystals remain unchanged during an endurance test except that there may be some “slipping” within these crystals.

Bauschinger was the first to start investigation of cycles of stress. He loaded and unloaded the specimens slowly and used sensitive extensometers to establish the stress-strain relation under these conditions.¹¹⁵ In this manner he showed that the *proportional limits* in tension and compression are not fixed points for a given material and that they may be displaced by submitting a specimen to cycles of stress. To explain the fact that the endurance limit for steel under reversed stress is sometimes lower than the proportional limit obtained from static tests, Bauschinger advanced the theory that the material as received from the manufacturer may have its proportional limits in tension and compression raised by cold work and that the true or *natural proportional limits* are those which are established after submitting the material to cycles of stress; these natural proportional limits are supposed to define the *safe range* in fatigue tests.

This idea of Bauschinger was developed further by Bairstow.¹¹⁶ Using a slow loading and unloading machine (2 cycles per minute), with a Martens mirror extensometer fixed on the specimen, he obtained the stress-strain relation for cycles with various ranges of stresses. Figure 294 represents some of Bairstow's results obtained with axle steel (yield point 50,000 lbs. per sq. in. and ultimate strength 84,000 lbs. per sq. in.) under reversed stress (mean stress equal to zero). The line *A* represents the initial tension-compression test with

¹¹⁵ J. Bauschinger, loc. cit., p. 409.

¹¹⁶ L. Bairstow, Phil. Trans. Roy. Soc., Vol. 210A, p. 35, 1911, London.

the range 31,400 lbs. per sq. in.; within these limits the stress-strain relation evidently follows accurately the straight line law.¹¹⁷ After this the specimen was subjected to cycles of reversed stresses of 31,400 and it was observed that the initial straight line *A* develops gradually into a loop of definite shape. This loop as obtained after 18,750 cycles is repre-

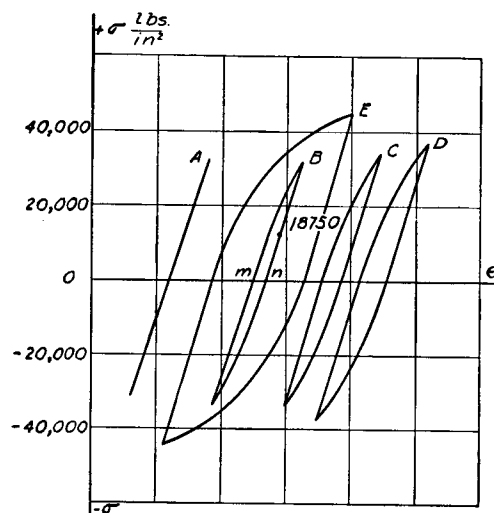


FIG. 294.

sented by the curve *B*. It can be seen that in this case the *initial* proportional limits were higher than the so-called *natural* proportional limits shown after many cycles of reversed stress. Since these limits are below the 31,400 lbs. per sq. in., a *cyclical permanent set* equal to the width *mn* was produced. The loops *C*, *D*, and *E* were obtained after a number of cycles of reversed stress equal to 33,500, 37,500 and 47,000 lbs. per sq. in. respectively sufficient apparently to stabilize the size of the loops. When the width of these loops was plotted against the corresponding maximum stress, Bairstow found that the results of his experiments gave

¹¹⁷ The gage length in these tests was only 0.5 in. and the small "elastic hysteresis" could not be detected by Martens extensometers.

approximately a straight line. The intersection of this line with the stress axis determines the range of stress at which there is no looping effect. The range of stress defined in this manner was assumed by Bairstow to be the *safe range of stress*, and subsequent endurance tests have verified this assumption with sufficient accuracy. Since then various methods for the rapid determination of fatigue ranges on this basis have been developed.¹¹⁸

This measurement of hysteresis loops suggested by Bairstow to determine the safe range of stresses can be replaced by calorimetric measurements. The area of the loop represents the energy dissipated per cycle. It is transformed into heat, and the quantity of this can be measured. The first experiments of this kind were made by Hopkinson and Williams,¹¹⁹ who showed that the areas of the loops as determined by calorimetric methods agree within 6 per cent with the area determined by extensometer measurements. In these tests it was shown also that it is possible to have a certain amount of hysteresis which will never cause destruction, and this can be considered as the true "elastic hysteresis." Some short-time methods for determining endurance limits have also been developed on the basis of these calorimetric measurements.

The first attempt to explain the mechanism of fracture in endurance tests was made by Ewing and Humfrey.¹²⁰ They used a rotating specimen of Swedish iron with a polished surface and examined this surface with a metallurgical microscope after applying cycles of reversed stress. They found that, if stresses above a certain limit were applied, *slip bands* appeared on the surface of some of the crystals after a number of cycles. As the cycles were repeated the number of slip bands increased and some of the previous slip bands

¹¹⁸ See book by H. J. Gough, Chapter 10, loc. cit., p. 428. See also E. Lehr, *Die Abkürzungsverfahren*, Dissertation, Stuttgart, 1925.

¹¹⁹ B. Hopkinson and G. T. Williams, *Proc. Roy. Soc. (A)*, Vol. 87, 1912.

¹²⁰ J. A. Ewing and J. C. W. Humfrey, *Phil. Trans. Roy. Soc. (A)*, Vol. 200, 1903, p. 241.

seemed to broaden out. This broadening process continued till finally cracking occurred, the crack following the marking of the broadened slip bands. They found that a reversed stress of 11,800 lbs. per sq. in. could be applied millions of times without producing any slip bands. A stress of 15,400 lbs. per sq. in. produced only one isolated slip band in the region examined after three million cycles and this line was confined to the middle portion of the crystal. From these tests it was concluded that 15,400 lbs. per sq. in. was the endurance limit for Swedish iron. On the basis of such investigations the theory was advanced that cycles of stress, which are above the safe range, produce slip bands in individual crystals; if we continue to apply such cycles of stress there is a continual sliding along the surfaces accompanied by friction, similar to that between sliding surfaces of rigid bodies. As a result of this friction, according to the theory the material gradually wears along the surfaces of sliding and a crack results.

Further investigation in this direction¹²¹ showed that slip bands may occur at stresses which are much lower than the endurance limit of the material. They may develop and broaden, as was observed by Ewing and Humfrey, without leading to the formation of a crack. This shows that the appearance of slip bands cannot be taken as a basis for determining the endurance limit and cannot explain the mechanism of fatigue cracks. It seems probable that more light will be brought on the causes of fatigue by testing single crystal specimens and by going into the study of the molecular structure of crystals.¹²²

82. Mechanical Properties of Metals at High Temperatures.—There are many cases in which parts of engineering structures are submitted simultaneously to the action of stresses and of high temperatures. Such conditions are found for instance in power plants and chemical industries. Due to the modern tendency to increase the initial temperature of

¹²¹ H. J. Gough and D. Hanson, *Proc. Roy. Soc. (A)*, Vol. 104, 1923.

¹²² See H. J. Gough, *Phil. Trans. Roy. Soc.*, Vol. 226, 1926.

steam¹²³ in power plants, the question of the strength of materials at high temperature has become of practical importance, and a considerable amount of research work has

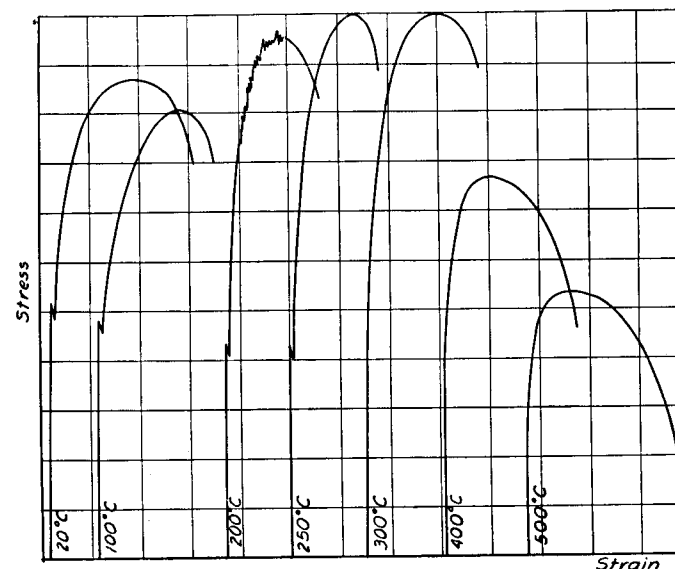


FIG. 295.

been done in this field.¹²⁴ Experiments show that the yield point and ultimate strength of metals in tension depend very much on the temperature. Several tensile test diagrams for medium carbon steel at different temperatures are shown in Fig. 295.¹²⁵ Up to about 250° Centigrade the ultimate

¹²³ Mellanby and Kerr, *Proc. Inst. Mech. Engr.*, London, 1927; Guy, H. L., *Proc. Inst. Mech. Engr.*, 1929, and *The Engineer*, Vol. 147, 1929, p. 136.

¹²⁴ A bibliography on this research work can be found in the "Symposium on effect of temperature on the properties of metals," *Proc. Amer. Soc. Test. Matls.*, Vol. 24, 1924. See also paper by H. J. French, H. C. Cross and A. A. Peterson, *Technologic Papers of the Bureau of Standards*, No. 362, 1928.

¹²⁵ See report of work done at the Westinghouse Research Laboratory by R. B. Wilhelm, *Proc. Amer. Soc. Test. Matls.*, Vol. 24, part 2, 1924, p. 151.

strength of the steel increases, but with further increase in temperature it drops off rapidly. Also the yield point becomes less pronounced as the temperature increases and at 300° C. it cannot be distinguished on the diagram. In Fig. 296 the first portions of the same diagrams are shown to a larger scale. These show that the proportional limit of the

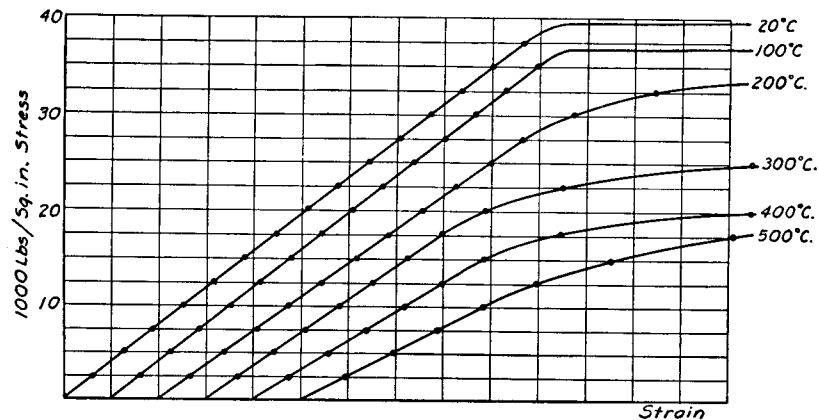


FIG. 296.

steel diminishes as the temperature increases. At the same time there is a decrease in the slope of the straight portions of the diagrams, and hence in the modulus of elasticity. All the results obtained in the above tests are summarized in Fig. 297, which shows that, while the strength of the material decreases as the temperature increases, its ductility, as characterized by elongation and reduction in area, increases.

Experiments at high temperatures show that the results of tensile tests depend very much on the duration of the test. As the duration of the tensile test increases, the load necessary to produce fracture becomes smaller and smaller. In Fig. 298 are shown the tensile test diagrams for the same steel as above at 500° C. and for test durations of 6 minutes, 70 minutes and 240 minutes respectively. It is evident from this that tensile test data obtained from the usual short duration tests (lasting

say 15 or 20 minutes), as given in Fig. 297, are useful only for cases in which the loads act but a short time.¹²⁶

For loads acting over a long period of time and at high

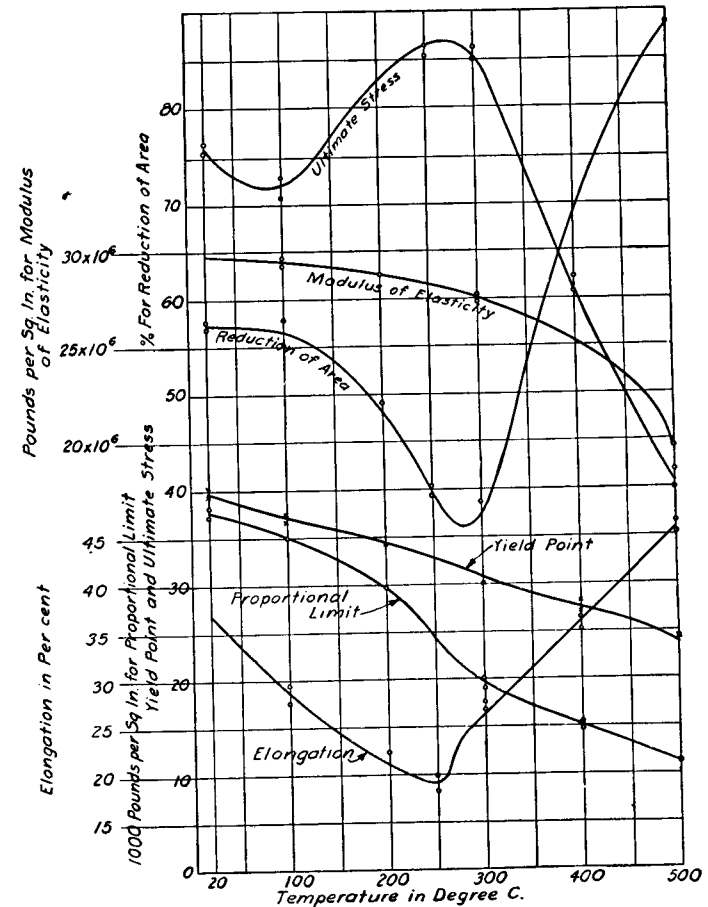


FIG. 297.

temperature, as for instance the weight of a structure or steam pressure in power plants, we need additional information regarding the *time effect*. Experience shows that under such

¹²⁶ To eliminate time effect, vibration tests have been used in determining modulus of elasticity. See paper by G. Versé, *Journal of Appl. Mech.*, Vol. 2, 1935.

conditions a continuous deformation, "creep," may take place, which is the most important factor to be considered in design. Although a considerable amount of research work in this direction has been done ¹²⁷ and much more is now in progress, the question of the behavior of metals under high temperature and prolonged loading cannot be considered completely cleared.

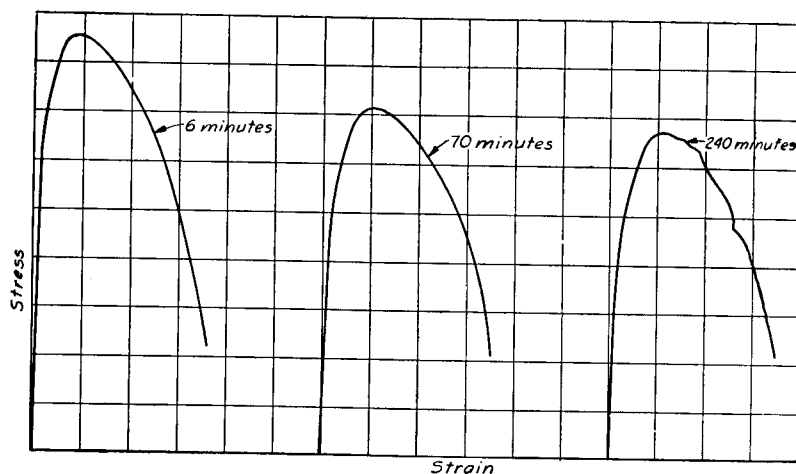


FIG. 298.

In most experiments of this kind the gradual elongation of materials under prolonged tension is studied. Tensile test specimens at high temperature are submitted to a certain

¹²⁷ See papers: J. H. S. Dickenson, Journal of Iron and Steel Inst., Vol. 106, 1922, p. 103; H. J. French and W. A. Tucker, Technologic Papers, Bureau of Standards, No. 296, 1925; T. D. Lynch, N. L. Mochel and P. G. McVetty, Proc. Amer. Soc. Test. Matls., Vol. 25, part 2, 1925; H. J. Tapsell and J. Bradley, Engineering, Vol. 120, 1925, pp. 614 and 746, and Journal Inst. of Metals, Vol. 35, 1926, p. 75; P. G. McVetty and N. L. Mochel, Trans. Amer. Soc. Steel Treating, Vol. 11, 1926, p. 73; A. E. White and C. L. Clark, Trans. Amer. Soc. Mech. Eng., Vol. 48, 1926, p. 1075; H. J. Tapsell and W. J. Clenshaw, Dept. of Scientific and Industrial Research, Eng. Research, Report No. 1, 1927. Information regarding more recent publications see in the book by H. J. Tapsell, "Creep of Metals," 1931; see also Symposium, A. S. T. M., Chicago, 1931; E. L. Robinson, Journal Appl. Mech., Vol. 1, p. 145, 1933 and P. G. McVetty, Proc. Am. Soc. Test. Math., Vol. 37, 1937.

constant load and temperature, and the *progressive creep* under this load is investigated.

The results of such experiments made for a given temperature and for various values of the load can be represented by time-extension curves, such as is shown in Fig. 299.¹²⁸

Curve *A* represents a typical *creep curve* for a relatively high stress. After application of the load *creep* proceeds at a gradually diminishing rate. At point *a* an inflection occurs and the creep rate begins to increase until the test specimen breaks. The curve *B*, corresponding to a somewhat smaller load, has a similar shape. Owing to lower *creep rates* it takes a longer time to produce fracture. As the load is further reduced, similar tests on different specimens give curves *C*, *D*, *E*,

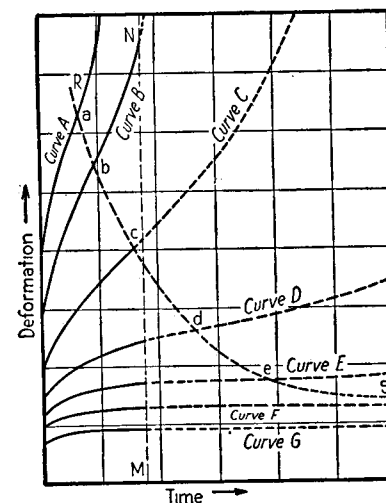


FIG. 299.

F and *G*. As the stress diminishes, a longer and longer time is required to obtain the inflection point on the creep curve. To determine the inflection points for such curves as *F* and *G*, tests of extremely long duration would be required. It is seen that, as the stress decreases, the creep curve is essentially a straight line for a progressively longer period of time as it approaches its inflection point. The working stresses encountered in practice are usually below that corresponding to the curve *G*; hence the assumption that the creep curve approaches a straight line is sufficiently accurate for practical purposes. The slope of this line gives us the *minimum creep rate* for a given stress and a given temperature.

¹²⁸ This figure and the three following are taken from McVetty's papers; see Mechanical Engineering, 1934, p. 149 and Proc. Am. Soc. Test. Mat., Vol. 34, 1938.

The magnitude of this creep rate diminishes as the stress decreases, but there is no conclusive evidence that it will ever vanish—that is, that there is a *limiting stress* at which the specimen can indefinitely resist the stress and high temperature.

In studying the *progressive creep* of tensile test specimens under constant load and high temperature, two phenomena must be kept in mind: (1) hardening of the material due to plastic strain, and (2) removal of this hardening or “*softening*” of the material due to the prolonged action of the high temperature. The mechanism of plastic flow at high temperature is the same as at room temperature. The plastic deformation is due to sliding of the metal. This sliding is accompanied by an increase in the resistance to sliding, which represents the strain hardening (p. 412).

The rate at which the effect of strain hardening is removed depends on the temperature. It was mentioned before (p. 409) that the effect of strain hardening can be eliminated in a short time by *annealing* metal at a certain high temperature which depends on the kind of metal. But the same effect can be obtained at much lower temperatures acting over a longer period of time. It has been shown,¹²⁹ for instance, in investigating the softening of cold worked copper, that the softening produced in 12 minutes at 300° C. would take 10.4 days at 200° C. and that apparently it would take about 300 years to produce the same softening at 100° C.

The time-extension curves, Fig. 299, show that during the initial extension the rate of extension gradually diminishes. This is due to strain hardening. At the inflection point a certain constant rate of extension is established at which the hardening and softening counteract each other; that is, the strain hardening produced by creep is continuously destroyed by the softening effect of the high temperature, and creep continues at a constant rate depending on the magnitudes of stress and temperature.

¹²⁹ See Pilling and Halliwell, Proc. Amer. Soc. Test. Matls., Vol. 25, 1925. See also R. W. Bailey, Journal Inst. of Metals, Vol. 35, 1926.

Since we always have to consider progressive creep in members subjected to the simultaneous action of high temperature and stress, the design must be based on the assumption of a certain duration of service of the structure and of a certain amount of permanent deformation which can be considered as permissible. The working stresses must be chosen in each particular case so that the permanent deformation of the structure during its lifetime will not exceed a definite limit depending on the type of structure. The purpose of long-duration high-temperature tests is to furnish the designer with sufficient information for a satisfactory calculation of the above mentioned permanent deformations due to creep.

The duration of the laboratory tests usually does not exceed a few thousand hours, and for the prediction of the creep deformation during the lifetime of a structure some extrapolation of the laboratory test results becomes necessary. The experiments with various steels show that in the first portion of the creep curves, Fig. 299, the excess of creep rate above the minimum creep rate decreases geometrically as time increases arithmetically. Hence, denoting by ϵ the total inelastic elongation at a certain time t , by v the corresponding creep rate, and by v_0 the minimum creep rate, we can take for the creep rate the expression¹³⁰

$$v = \frac{d\epsilon}{dt} = v_0 + ce^{-\alpha t}, \quad (a)$$

in which c , v_0 and α are certain constants which must be determined from the creep curves. Take, for example, a metal, the creep curves of which for several values of stress and for a constant temperature 850° F. are given in Fig. 300. Measuring the slope in five points of each of these curves, we obtain the five values of the creep rate for each stress at five different values of t , and the curves shown in Fig. 301 are constructed. The horizontal asymptotes to these curves evidently give us the values of v_0 for the applied values of stress.

¹³⁰ See reference 128. For comparison methods of extrapolation of test data see J. Marin, Proc. Am. Soc. Test. Mat., Vol. 37, p. 258, 1937.

Plotting now the values of $\log(v - v_0)$ against time, we obtain the system of inclined parallel lines which indicate that the assumed expression (a) is satisfactorily chosen. From these lines the values of constants c and α in expression (a) are

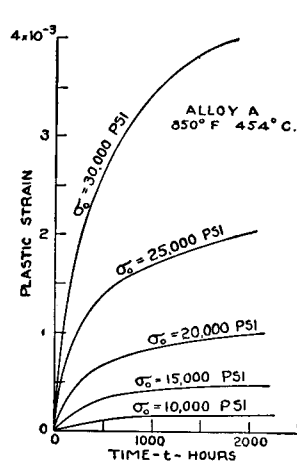


FIG. 300.

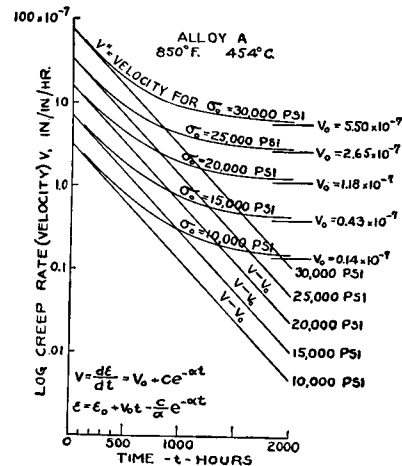


FIG. 301.

obtained by measuring the ordinates of the lines at $t = 0$ and their slope. The plastic elongation is now obtained by the integration of equation (a) which gives

$$\epsilon = \epsilon_0 + v_0 t - \frac{c}{\alpha} e^{-\alpha t}, \quad (b)$$

where ϵ_0 is a constant.

Applying this equation to some specific value of t , for which the plastic elongation is known from Fig. 300, the value of ϵ_0 can be calculated. Hence all the constants entering in the equation (b) are determined by using the curves of Figs. 300 and 301, and we can now apply this equation for calculating ϵ for any given interval of time. In this way the curves shown in Fig. 302 are obtained. Having such a system of curves for a definite material and a definite temperature, a designer can readily select the proper value of working stress if the lifetime of the structure and the permissible plastic deformation are given.

In our previous discussion it has been assumed that plastic flow is accompanied by strain hardening. Experiments show that with increase in temperature the strain hardening becomes less and less pronounced.

The maximum temperature at which strain hardening is observed varies with the material, and in the case of steels it varies with the composition of the steel. For instance, with mild carbon steel (0.17 C) at a stress of 2,200 lbs. per sq. in. no strain hardening was observed¹³¹ at a temperature of 647°C. Under such conditions the time extension curve has a shape such as shown in Fig. 303; i.e., the rate of creep increases continuously with the time. It is

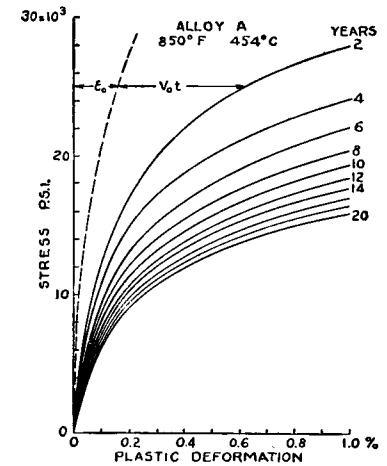


FIG. 302.

interesting to note that the two kinds of time-extension curves shown in Figs. 299 and 303 are associated with different types of fracture. When strain hardening is present, yielding at a certain point in the specimen increases the resistance at this point and the next sliding occurs at some other cross section. As a result of this a uniform elongation takes place and the specimen remains cylindrical up to the beginning of "necking." When strain hardening is absent, the local yielding which begins at the weakest cross section spreads at a decreasing rate towards the ends of the specimen. As a result of this the two parts of a broken specimen are tapered from the ends to the cross section of fracture.

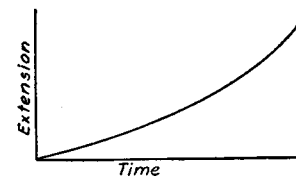


FIG. 303.

¹³¹ Book by H. J. Tapsell, loc. cit., p. 466.

Under the prolonged action of high temperature a metallographic transformation in metal takes place of such a nature that the resistance of the steel to creep is reduced. This effect is more pronounced in the case of high carbon steels. To reduce this structural transformation it is necessary to apply a suitable heat treatment assuring the metallographical stability.¹³²

Most of the data regarding the strength of metals at high temperatures has been obtained from simple tension tests and the strength of metals under combined stress remains an unexplored field. In order to get some information about the creep of steel under such conditions Mr. Bailey made some interesting tests with lead.¹³³ This metal has a low melting point and creep phenomena occur at room temperature. Experiments with combined stresses are much simpler at this temperature and may throw some light on the behavior of steel under combined stresses at high temperature.

The long-duration high-temperature torsion tests with thin tubular steel specimens were made at the University of Michigan by F. L. Everett.¹³⁴ This kind of test has some advantages as compared with usual tensile tests, since the plastic torsional deformation does not affect the cross-sectional dimensions of specimens and since small volume changes owing to temperature fluctuation and to metallographical transformation do not affect the measured angle of twist.

Before concluding this discussion it should be noted that progressive creep may produce a redistribution of stresses in parts submitted to the simultaneous action of stresses and high temperatures. At points of high stress concentration the rate of creep is larger and hence creep will result in a more favorable stress distribution. This fact must be considered in

design. Several examples of this kind have been discussed by Mr. Bailey.¹³⁵

83. Various Strength Theories.¹³⁶—The mechanical properties of structural materials have chiefly been investigated with testing machines which subject specimens to the simplest sort of stress conditions. Most of our information regarding the strength of metals is obtained from simple tensile tests, while the strength of brittle materials such as stone or concrete has mostly been studied by compression tests; we also have a certain amount of information regarding the strength of materials in shear. The strength of materials under more complicated stress conditions than these has only been investigated in exceptional cases. In order to have some basis for determining working stresses for the conditions of combined stress which are often encountered in design, various strength theories have been advanced. The purpose of these theories is to establish laws by which we can, from the behavior of a material in simple tension or compression tests, predict the condition of failure under any kind of combined stress; here failure signifies either *yielding* or *actual rupture* whichever may occur first.

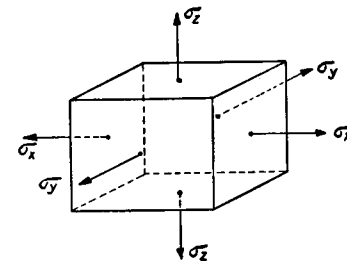


FIG. 304.

In the most general case the stress condition of an element of a stressed body is defined by the magnitude of the three principal stresses, σ_x , σ_y and σ_z , Fig.

¹³⁵ R. W. Bailey, Inst. Mech. Eng., 1927. Engineering, Vol. 124, 1927, p. 44. Vol. 129, 1930; Inst. Mech. Engrs., 1935. See also C. R. Soderberg, Journal Appl. Mech., Vol. 1, p. 131, 1933; G. H. MacCullough, Journal Appl. Mech., Vol. 1, p. 87, 1933. J. Marin, Journal Franklin Inst., Vol. 226, p. 645, 1938.

¹³⁶ A description of these theories can be found in papers by H. M. Westergaard, Jour. Franklin Inst., 1920; A. J. Becker, Bull., nr. 85, Eng. Expt. Stat., University of Illinois; F. Schleicher, Zeitschr. f. Angew. Math. u. Mech., Vol. 5, 1925, p. 199. A. Nadai, Journal Appl. Mech., Vol. 1, p. 111, 1933.

¹³² See F. R. Hensel and E. I. Larsen, Trans. Am. Inst. Min. Metall. Engrs., Vol. 99, p. 55, 1932.

¹³³ See paper presented at the World Power Conference, Tokyo, 1929.

¹³⁴ Trans. Am. Soc. Mech. Engrs., Vol. 53, p. 117, 1931.

304. The following relation between the algebraic values of principal stresses is assumed:

$$\sigma_x > \sigma_y > \sigma_z, \quad (a)$$

in which tension is taken positive and compression negative. The oldest theory, the so-called *maximum stress theory*,¹³⁷ takes the maximum stress as the criterion for strength and assumes that, in the case of ductile materials, yielding starts in an element such as shown in Fig. 304 when the maximum stress becomes equal to the yield point stress of the material in simple tension or the minimum stress becomes equal to the yield point stress of the material in simple compression. This makes the conditions for yielding

$$\left. \begin{aligned} \sigma_x &= \sigma_{Y.P.} \\ \sigma_z &= \sigma_{Y.P.'} \end{aligned} \right\} \quad (309)$$

in which $\sigma_{Y.P.}$ is the yield point in tension and $\sigma_{Y.P.'}$ the yield point in compression. There are many evidences contradicting this theory. We have seen, for instance (Fig. 214), that in the case of simple tension sliding occurs along planes inclined to the axis of the specimen, i.e., on planes where the tensile stress is not a maximum. It is known also that a homogeneous and isotropic material, although weak in simple compression, may sustain very large hydrostatic pressures without yielding. This indicates that the magnitude of the maximum tensile or compressive stress alone does not define the condition for yielding.

Another strength theory, attributed usually to Saint Venant, is the so-called *maximum strain theory*. In this theory it is assumed that yielding of a ductile material starts either when the maximum strain (elongation) becomes equal to the strain at which yielding occurs in simple tension or when the minimum strain (compressive strain) becomes equal to the

¹³⁷ Sometimes called *Rankin's Theory*.

unit strain in simple compression. That is, from eqs. (43, Part I), either

$$\left. \begin{aligned} \frac{\sigma_x}{E} - \frac{\mu}{E}(\sigma_y + \sigma_z) &= \frac{\sigma_{Y.P.}}{E} \\ \frac{\sigma_z}{E} - \frac{\mu}{E}(\sigma_x + \sigma_y) &= \frac{\sigma_{Y.P.'}}{E} \end{aligned} \right\} \quad (310)$$

There are evidences against this theory also. For instance, when a plate is subjected to tension in two perpendicular directions, the maximum strain theory indicates that the yield point must be higher than in the case of simple tension, because the elongation in each of the two directions is somewhat decreased by the tension in the perpendicular direction. This conclusion is not supported by experiments.¹³⁸ Experiments with specimens under uniform hydrostatic pressure also contradict this theory.

Much better agreement with experiment, at least with ductile materials having $\sigma_{Y.P.} = \sigma_{Y.P.'}$, is given by the *maximum shear theory*, which assumes that yielding starts when the maximum shearing stress becomes equal to the maximum shearing stress at yield point in a simple tensile test. Since the maximum shearing stress is equal to half the difference between the maximum and the minimum principal stresses, the condition for yielding is¹³⁹

$$\frac{1}{2}(\sigma_x - \sigma_z) = \frac{1}{2}\sigma_{Y.P.} \quad (311)$$

In machine design the maximum shear theory is now generally used for ductile materials. This theory is in good agreement with experiment and is very simple to apply.¹⁴⁰

¹³⁸ See Wehage, *Mitteilungen d. Techn. Versuchsanstalten*, p. 89, 1888, Berlin.

¹³⁹ This theory is supported by the experiments of J. J. Guest, *Phil. Mag.*, Vol. 50, 1900, p. 69. See also L. B. Turner, *Engineering*, Vol. 86, p. 169; W. A. Scoble, *Phil. Mag.*, 1906, December, and 1910, January; C. A. Smith, *Engineering*, Vol. 88, p. 238.

¹⁴⁰ The comparison of various strength theories as applied in machine design is given by J. Marin, "Product Engineering," May, 1937.

The quantity of strain energy stored per unit volume of the material has also been proposed as a basis for determining starting of yielding.¹⁴¹ By using the general eq. (192) (p. 307, Part I) and equating the energy for the case shown in Fig. 304 to the energy at yield point in simple tension, the condition of yielding is found to be

$$w = \frac{1}{2E} (\sigma_x^2 + \sigma_y^2 + \sigma_z^2) - \frac{\mu}{E} (\sigma_x \sigma_y + \sigma_y \sigma_z + \sigma_x \sigma_z) = \frac{\sigma_{Y.P.}^2}{2E}. \quad (312)$$

To compare the various strength theories let us consider the case of pure shear. In this case the maximum tensile stress is equal to the maximum compressive stress and to maximum shearing stress (article 16, Part I). Then

$$\sigma_x = -\sigma_z = \tau; \quad \sigma_y = 0.$$

Assuming that the material has the same yield point in tension and compression, the conditions for yielding according to the various theories are

$$\tau = \sigma_{Y.P.} \quad \text{from eqs. (309),}$$

$$\tau = \frac{1}{1+\mu} \sigma_{Y.P.} \quad \text{from eqs. (310),}$$

$$\tau = \frac{1}{2} \sigma_{Y.P.} \quad \text{from eq. (311).}$$

Equation (312) for this case gives

$$w = \frac{\sigma_x^2(1+\mu)}{E} = \frac{\sigma_{Y.P.}^2}{2E},$$

from which

$$\tau = \frac{\sigma_{Y.P.}}{\sqrt{2(1+\mu)}}.$$

¹⁴¹ This proposal was first made by Beltrami, Rendiconti, p. 704, 1885; Math. Annalen, p. 94, 1903; see also Girtler, Sitzungsberichte d. Wiener Akad., Vol. 116, IIa, 1907, p. 509, and B. P. Haigh, Engineering, Vol. 109, 1920, p. 158, and Brit. Assoc. for the Adv. of Science, Reports, Edinburgh, 1921.

Taking $\mu = 0.3$, as for steel, we find:

$\tau = \sigma_{Y.P.}$	from the maximum stress theory,
$\tau = 0.77\sigma_{Y.P.}$	from the maximum strain theory,
$\tau = 0.50\sigma_{Y.P.}$	from the maximum shear theory,
$\tau = 0.62\sigma_{Y.P.}$	from the maximum strain energy theory.

It may be seen that the difference between the various theories in this particular case¹⁴² is a considerable one. If we have a circular shaft in torsion, for instance, and assume a certain value for $\tau_{\max} = \tau_{Y.P.}/n$, we will find from eq. (149), Part I, for the various strength theories, the following ratios of diameters:

$$1 : \sqrt[3]{\frac{1}{0.77}} : \sqrt[3]{\frac{1}{0.50}} : \sqrt[3]{\frac{1}{0.62}}, \quad \text{or} \quad 1 : 1.09 : 1.26 : 1.17.$$

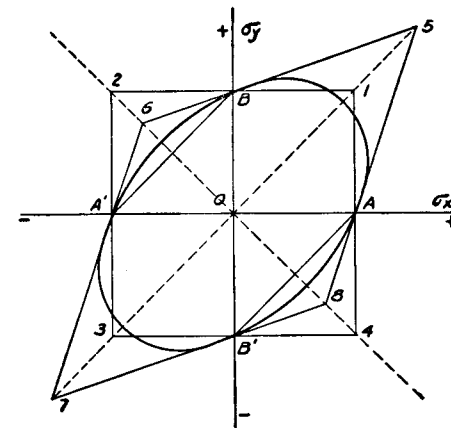


FIG. 305.

Figure 305 compares graphically the four theories presented above for the case when there are only two principal stresses ($\sigma_z = 0$)¹⁴³ and $\sigma_{Y.P.} = \sigma_{Y.P.}'$. The lines in the figure repre-

¹⁴² Comparisons of various strength theories in application to various design problems are given in the paper by Roth; see Zeitschr. f. Math. u. Phys., Vol. 48, 1902.

¹⁴³ See papers by A. J. Becker, loc. cit., p. 473, and B. P. Haigh, loc. cit., p. 476.

sent the values of σ_x and σ_y at which yielding starts, according to the various theories. The maximum stress theory is represented by the square 1234. The lengths OA and OB represent the yield points in simple tension in the x and y directions respectively. In the same manner A' and B' correspond to simple compression. Point 1 represents equal tensions in two perpendicular directions, each equal to the yield point in simple tension. The maximum stress theory states that there is no yielding at any point inside of the square 1234. The maximum strain theory is represented by the rhombus 5678. Since a tension in one direction reduces the strain in the perpendicular direction, two equal tensions, according to the maximum strain theory, can have much higher values at yielding (as represented by point 5) than with the maximum stress theory (point 1). If the two principal stresses are equal and opposite in sign, the maximum strain theory (points 6 and 8) indicates that yielding starts at lower values than the maximum stress theory would indicate. The maximum shear theory is represented by the irregular hexagon $A_1BA'_13B'A_1$. It coincides with the maximum stress theory when both principal stresses are of the same sign, but there is considerable difference between the two theories when the principal stresses have opposite signs. Equation (312) for the maximum strain energy theory reduces, for two-dimensional problems, to

$$\sigma_x^2 + \sigma_y^2 - 2\mu\sigma_x\sigma_y = \sigma_{Y.P.}^2.$$

By plotting this we obtain the ellipse shown in Fig. 305, enclosing all the points at which no yielding takes place, according to the maximum strain energy theory.

The maximum strain energy theory was further developed by Huber.¹⁴⁴ In order to bring the theory into agreement with the

¹⁴⁴ M. T. Huber, *Czasopismo techniczne*, 1904, Lwov (Lemberg). See also R. v. Mises, *Göttinger Nachrichten*, Math. Phys. Kl., 1913, p. 582; H. Hencky, *Zeitschr. f. Angew. Math. u. Mech.*, Vol. 5, 1925, p. 115;

fact that materials can sustain very large hydrostatic pressures without yielding, Huber proposed, when the average stress $\frac{1}{3}(\sigma_x + \sigma_y + \sigma_z)$ is compression, to split the strain energy into two parts, one due to the change in volume and the other due to the distortion, and consider only the second part. Using the notation

$$\frac{1}{3}(\sigma_x + \sigma_y + \sigma_z) = p$$

and eq. (45) (Part I) for the unit change in volume Δ , the strain energy due to the change in volume is

$$w_1 = \frac{p\Delta}{2} = \frac{3(1-2\mu)}{2E} p^2 = \frac{1-2\mu}{6E} (\sigma_x + \sigma_y + \sigma_z)^2.$$

Subtracting this from the total energy w (eq. 312), we find for the energy of distortion

$$w_2 = w - w_1 = \frac{1+\mu}{6E} [(\sigma_x - \sigma_y)^2 + (\sigma_x - \sigma_z)^2 + (\sigma_y - \sigma_z)^2]. \quad (313)$$

In case $p < 0$ it was proposed to use w_2 instead of the total energy w as the condition of yielding.

Applying this also to pure shear and to simple tension we find, from eq. 313, for shear ($\sigma_x = -\sigma_z = \tau$; $\sigma_y = 0$)

$$w_2 = \frac{(1+\mu)\tau^2}{E}$$

and for tension ($\sigma_x = \sigma$; $\sigma_y = \sigma_z = 0$)

$$w_2 = \frac{(1+\mu)\sigma^2}{3E}.$$

The condition of yielding in shear is

$$\frac{(1+\mu)\tau^2}{E} = \frac{(1+\mu)\sigma_{Y.P.}^2}{3E}$$

from which ¹⁴⁵

$$\tau = \frac{1}{\sqrt{3}} \sigma_{Y.P.} = 0.577 \sigma_{Y.P.} \quad (314)$$

F. Schleicher, loc. cit., p. 473, and M. Roß and A. Eichinger, *Proc. Intern. Congress for Applied Mechanics*, 1926, Zürich.

¹⁴⁵ Recent experiments by W. Lode, *Zeitschrift f. Physik*, Vol. 36, 1926, p. 913, *Forschungsarbeiten*, nr. 303, 1928, and of M. Roß and A. Eichinger, *Materialprüfungsanstalt an d. E. T. H., Zürich*, 1926, *Diskussion, Berichte*, nr. 28, 1928, and nr. 34, 1929, agree better with this maximum strain energy theory than with maximum shear theory,

The maximum shear theory was given a further development by O. Mohr.¹⁴⁶ In this development he made use of the representation

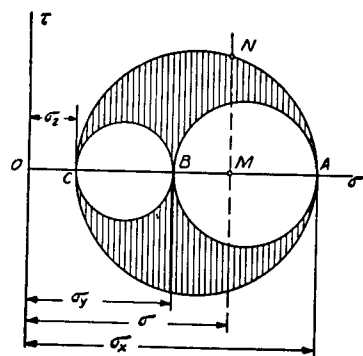


Fig. 306.

of stress conditions on an element of a stressed body by circles, as explained in article 18, Part I. In this representation the normal and shearing components of the stress acting on any plane are given by the coordinates of a certain point in the shaded areas (Fig. 306). Points lying on the same vertical line such as MN represent the stresses on planes with the same normal stress σ and with various shearing stresses. It is natural to assume that the weakest of all these planes is the plane with the maximum shearing stress, whose stress condition is represented by the point N lying on the outer circle. Repeating the same reasoning with points lying on any other vertical line, we finally arrive at the conclusion that the

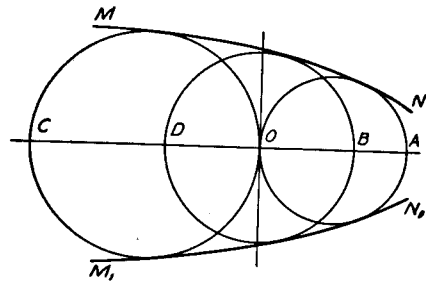


Fig. 307.

weakest plane must be one of the planes whose stress conditions are represented by points on the outer circle ANC . Hence the outer circle alone is sufficient to determine the *limiting stress condition*, i.e., the stress condition at which yielding begins. In Fig. 307 the

but in most cases the difference between these two theories is not so large as to make it of practical importance to introduce the maximum energy theory in machine design. For further development of this theory see the paper by F. Schleicher, loc. cit., p. 473. See also W. v. Burzyński, Sweiz. Bauz., Vol. 94, 1929.

¹⁴⁶ O. Mohr, V. D. I., Vol. 44, 1900, p. 1524. See also his "Abhandlungen aus dem Gebiet d. technischen Mechanik," sec. ed., p. 192, 1914, Berlin.

length OA represents the yield point in simple tension and the circle with the diameter OA represents the condition for yielding in simple tension. In the same manner the circle with the diameter OC represents the condition for yielding in simple compression, and the circle with the diameter DB represents the condition for yielding in pure shear. If several circles of this kind are obtained for a given material by experiments, the envelopes of these circles, in this case MN and M_1N_1 , can be constructed. Then Mohr assumed that any stress condition at which yielding would start is represented by a circle tangent to these envelopes. Assume, for instance, that the envelopes MN and M_1N_1 can be replaced by straight lines

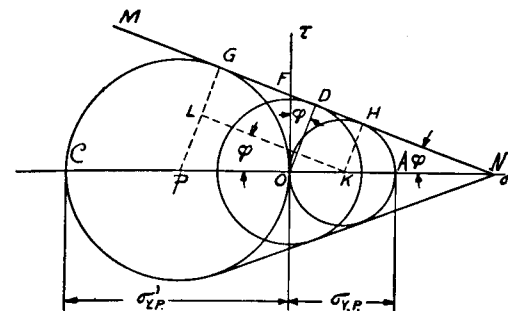


Fig. 308.

(Fig. 308). Then, knowing the limiting condition in simple tension ($\sigma_x = \sigma_{Y.P.}$) and in simple compression ($\sigma_x = \sigma_{Y.P.'}$), the conditions for yielding in pure shear can easily be obtained. From the figure,

$$\overline{OF} = \overline{FG} = \overline{FH} = \frac{1}{2}\overline{GH} = \frac{1}{2}\overline{LK} = \frac{1}{2} \frac{\sigma_{Y.P.} - \sigma_{Y.P.'}}{2} \cos \varphi.$$

Then the stress producing yielding in pure shear, represented by the radius OD of the circle with center at O and tangent to MN , is

$$\tau_{Y.P.} = \overline{OD} = \overline{OF} \cos \varphi = \frac{1}{4}(\sigma_{Y.P.} - \sigma_{Y.P.}') \cos^2 \varphi. \quad (a)$$

The angle φ may be calculated from the triangle KLP , from which

$$\cos \varphi = \frac{\sqrt{PK^2 - PL^2}}{PK} = \frac{\sqrt{-\sigma_{Y.P.}\sigma_{Y.P.'}}}{\frac{1}{2}(\sigma_{Y.P.} - \sigma_{Y.P.}')}. \quad (b)$$

Substituting in (a)

$$\tau_{Y.P.} = - \frac{\sigma_{Y.P.}\sigma_{Y.P.'}}{\sigma_{Y.P.} - \sigma_{Y.P.'}}, \quad (c)$$

when $\sigma_{Y.P.} = -\sigma_{Y.P.}'$, eq. (c) coincides with the maximum shear theory. If we apply eq. (c) to cast iron¹⁴⁷ and assume that the ultimate stress in compression is four times the ultimate stress in tension, we find for the ultimate stress in shear, from (c),

$$\tau_{ult} = \frac{4\sigma_{ult}^2}{5\sigma_{ult}} = 0.8\sigma_{ult} = 0.8 \text{ ult. str. in tension.}$$

This is in satisfactory agreement with experiments made by C. Bach with hollow cast iron cylinders.¹⁴⁸ Very extensive experiments with marble and sandstone have been made by Th. v. Kármán¹⁴⁹ and R. Böker.¹⁵⁰

84. Working Stresses.—The problem of choosing an adequate factor of safety in design of structures and machine parts is of the utmost practical importance. If this factor is taken too low, making the working stresses too high, the structure may prove weak in service. On the other hand if the working stresses are too low the structure becomes unnecessarily heavy and uneconomical. In discussing the various factors to be considered in choosing working stresses let us take a simple example of tension of a prismatical bar. We assume that the yield point of the material is taken as the basis for determining the working stress; then the safe cross sectional area A is obtained from the equation:

$$\frac{\sigma_{Y.P.}}{n} = \frac{P}{A}. \quad (a)$$

We see that the cross-sectional area depends on the magnitude of the external load P , on the yield point of the material, $\sigma_{Y.P.}$, and on the factor of safety n . Obviously the magnitude of this factor, which is sometimes called the *factor of ignorance*, depends on the accuracy with which we know the quantities in eq. (a), namely, the external load and the mechanical prop-

¹⁴⁷ In the case of brittle materials the above theory applies to the ultimate stresses, instead of yield point stresses.

¹⁴⁸ C. Bach, *Elastizität und Festigkeit*, 7th ed., p. 362.

¹⁴⁹ Th. v. Kármán, *Forschungsarbeiten*, nr. 118; see also V. D. I., Vol. 55, 1911.

¹⁵⁰ R. Böker, *Forschungsarbeiten*, nr. 175/176.

erties of the material, and on the accuracy with which this equation represents the maximum stress.

There are cases where the external forces are known with good accuracy. We know exactly, for instance, the hydrostatic pressure acting on a dam if the depth of the water is known. We know accurately the centrifugal forces acting in a rotor having a definite angular velocity. But in the majority of cases the forces are known only approximately and the most unfavorable loading condition for a structure can be estimated only on the basis of long experience. Consider, for instance, the design of a bridge. The weight of the bridge itself and the weight of the train moving across the bridge may be known with satisfactory accuracy. But in designing the bridge dynamic effects must be taken into account. Due to the balance weights the pressure of a locomotive wheel on the rail is not constant and the maximum pressure is larger than the static pressure. Under the action of the moving and varying loads the bridge will be brought into vibration and under such conditions the problem of determining the forces in individual members of the bridge becomes extremely involved. Another type of forces acting on the bridge, which we do not know accurately, is wind pressure. The magnitude of such forces is usually estimated on the basis of experience with existing structures. From this discussion it is obvious that if eq. (a) represents the condition of safety for a member of a bridge, the force P is not known to us exactly and can be estimated only with some approximation. The accuracy with which the estimate can be made will affect the magnitude of the factor of safety.

The magnitude of $\sigma_{Y.P.}$ is also not an exactly known quantity. It may vary to a certain extent for the same material, and this variation depends on the homogeneity of the material. It is quite natural therefore that in the case of such homogeneous materials as steel the factor of safety may be taken lower than in the case of such materials as wood or stone.

The accuracy of the formula itself must also be con-

sidered in choosing the factor of safety. Equation (a) can be considered very accurate for calculating the stresses in a tensile test specimen (see Fig. 248) because special precautions are taken to apply the load centrally and to distribute it uniformly over the weakest cross section. But again taking as an illustration the design of a member of a bridge, it can be appreciated that eq. (a) is only a rough approximation depending usually on the assumption that there are ideal hinges at the joints. The actual stress condition in such a member is very far from simple tension. Due to rigid joints the members of a bridge truss undergo not only direct stress, but also bending. The corresponding bending stresses are sometimes of a considerable magnitude and if they are not taken into account and the simple eq. (a) is used in determining the cross sectional area of the member, then the inaccuracy of eq. (a) in this case is usually compensated for by increasing the factor of safety.

From this discussion it can be seen how difficult it would be to give any definite recommendations regarding the magnitude of the factor of safety and how much this factor depends and always will depend upon the experience and judgment of the designer.

In the following discussion it is assumed that the forces are established on the basis of experience with past practice and that the mechanical properties of the material are known. Methods are then considered for determining the effect of various kinds of stress conditions on the choice of working stresses. Knowledge of this enables us to design a structure in such a manner as to have the same factor of safety in all parts of the structure. It is obvious that this latter requirement must always be fulfilled if the design is to be economical, because the ultimate strength of a structure is determined by the strength at the weakest place.

Let us begin the discussion with the cases in which the *stresses remain constant*, as, for instance, in structures submitted only to static loads or in rotors of machines running continuously at the same speed. The first question to be

considered is whether to take the yield point or the ultimate strength as the limiting stress in determining the working stress. In the case of *ductile materials*, such as structural steel, it seems logical to take the yield point as the basis for determining working stresses, because the considerable deformations, which take place at yield point, are seldom permissible in engineering structures. In the case of brittle materials, such as cast iron or concrete, the working stresses are usually taken as some part of the ultimate strength.

Knowing the yield point $\sigma_{Y.P.}$ of a ductile material,¹⁵¹ the working stress in tension or compression is

$$\sigma_w = \frac{\sigma_{Y.P.}}{n}, \quad (b)$$

where n is the factor of safety. In structural engineering this factor is often taken equal to 2. If the most unfavorable loading condition is taken, the factor of safety is sometimes lowered to 1.5.¹⁵² It must be noted that when the loading is static and the material is ductile the stress concentration due to holes or reëntrant corners is usually disregarded, and the maximum stress is calculated from simple equations such as eq. (a) for direct stress, eq. (149), Part I, for twist and eqs. (58), Part I, for bending.

After having established the working stress for simple tension and compression, the working stress for any other stress condition is usually determined on the basis of the *maximum shear*¹⁵³ theory (p. 475), from which we find for pure shear

$$\tau_w = \frac{\sigma_w}{2} = \frac{1}{2} \frac{\sigma_{Y.P.}}{n}. \quad (c)$$

This magnitude of working stress for shear must be used in all

¹⁵¹ It is assumed that the yield point in tension and compression is the same.

¹⁵² Sometimes the calculations are made for two different conditions: (1) the usual service loading condition and (2) emergency condition, when the most unfavorable loading condition possible is assumed. A lower factor of safety is used for this second condition.

¹⁵³ Application in design of other theories has been discussed by J. Marin, "Product Engineering," May, 1937.

cases of combined stresses; that is, the structure is designed so as to make

$$\frac{\sigma_x - \sigma_z}{2} = \tau_w = \frac{1}{2} \frac{\sigma_{Y.P.}}{n}, \quad (d)$$

in which σ_x and σ_z are the maximum and the minimum principal stresses respectively, so that the left side of eq. (d) represents the maximum shearing stress. In the particular case of combined bending and twist of a circular shaft (art. 62), Part I, we have, for example,

$$\frac{\sigma_x - \sigma_z}{2} = \tau_w = \frac{16}{\pi d^3} \sqrt{M^2 + M_t^2},$$

from which

$$d = \sqrt[3]{\frac{16}{\pi \tau_w} \sqrt{M^2 + M_t^2}}.$$

In the case of *brittle materials* the working stresses in tension and compression are

$$\sigma_w = \frac{\sigma_{ult}}{n_1}; \quad \sigma_w' = \frac{\sigma_{ult}'}{n_1}, \quad (e)$$

in which σ_{ult} is the ultimate strength in tension, σ_{ult}' the ultimate strength in compression and n_1 is the factor of safety. For such materials as concrete or cast iron this factor is usually taken comparatively high, varying in various cases from 4 to 8.

Once we have the working stresses for tension and compression, the working stress for any other stress condition can be obtained by using Mohr's theory as explained on p. 480. In practice the *maximum stress theory* (p. 474) is often used in the case of brittle materials; that is, the dimensions are determined so as to have the maximum tensile stress not larger than the working stress in simple tension and the maximum compressive stress not larger than the working stress in compression. It must be noted that for brittle materials the stress concentration must be taken into account (see Chapter VII) in calculating these maximum tensile and compressive stresses.

It was assumed in the above discussion that the principle of superposition holds, which means that the maximum stress is proportional to the load. Hence the factor of safety n , which we use in determining the working stress, applies also to the external loads, and we can state that the yielding in the structure begins under the load which is n times the actual safe load. If the principle of superposition does not hold, the maximum stress is no longer proportional to the load, and it is necessary to apply the factor of safety to the load and determine the dimensions of the structure in such a manner that the yielding will begin only if the acting loads are increased n times. The application of this method to the case of combined bending and direct stress is discussed in art. 4 (see p. 32). This method is recommended also in the design of columns on a basis of the assumed inaccuracies (see p. 255, Part I).

In discussing plastic deformations in structures, it was pointed out that instead of applying the factor of safety to the load at which yielding begins, we can apply the factor of safety to the load at which a complete failure of the structure occurs. Some applications of this latter method of design are discussed in article 68. Sometimes, as, for example, in aeroplane design, both methods are applied and the two different factors of safety are used—one with respect to the load up to which no yielding occurs, and the other with respect to the load sufficient to produce the complete collapse of the structure.

In the case of *variable stresses* the problem of selection of working stresses becomes more complicated, since the stresses produced by dynamic causes, such as vibrations and impact, are usually known with much less accuracy than the statically produced stresses, and also the properties of materials under the action of variable stresses have not yet been completely studied. As a basis for determining working stresses the fatigue tests are usually taken in this case. If for a given material there are sufficient test data to construct an empirical curve, such as Gerber's parabolas, or straight lines such

as are shown in Fig. 276, the working stress can be selected on a basis of such curves. In most cases, however, we do not have such complete information, and a decision regarding working stresses must be taken on a basis of the known endurance limit σ_e for reversed stresses ($\sigma_{\max} = -\sigma_{\min}$) and the yield point stress in tension $\sigma_{Y.P.}$.

A method sometimes successfully applied in the design of machine parts will now be discussed.¹⁵⁴ We shall begin with a direct variable stress and solve it in two parts, constant mean stress and reversed stress, given by the formulas:

$$\sigma_m = \frac{\sigma_{\max} + \sigma_{\min}}{2}; \quad \sigma_r = \frac{\sigma_{\max} - \sigma_{\min}}{2}.$$

Taking σ_m as abscissa and σ_r as ordinate, we can represent any variable stress by a point in the σ_m, σ_r plane shown in Fig. 309. In this figure, let A represent the yield point in a static

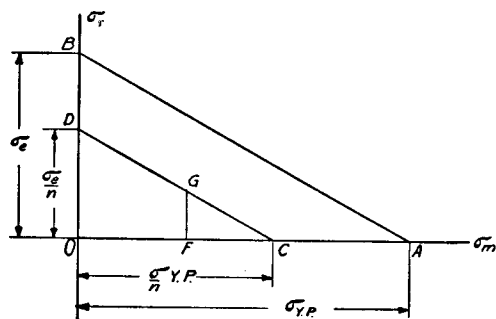


FIG. 309.

tension test ($\sigma_r = 0$), and B the endurance limit for reversed stress ($\sigma_m = 0$). Having these two limiting stresses, let us assume that the limiting stress conditions¹⁵⁵ for other cases are represented by points on the straight line AB . From the

¹⁵⁴ This method is used in machine design of the Westinghouse Electric and Manufacturing Co.; see papers by C. R. Soderberg, Trans. A. S. M. E., Vol. 52, p. 52, 1930; Journal of Appl. Mech. Vol. 1, p. 131, 1933. See also A. M. Wahl, "Machine Design," 1938.

¹⁵⁵ The limiting stress condition is defined as that which produces a failure; that is, fatigue fracture or stretching beyond the permissible limit.

discussion given on page 434 it is evident that such an assumption is on the safe side as compared with Gerber's parabolas and the straight lines of Fig. 276. If we divide \overline{OA} and \overline{OB} by the factor of safety n , we obtain points determining the straight line CD , parallel to AB , which represents *safe stress conditions*. From this line we can determine the safe value of σ_m and σ_r for any value of the ratio σ_r/σ_m . For example, for the stress condition represented by the point G , $\sigma_m = \overline{OF}$, $\sigma_r = \overline{FG}$, and from the similar triangles GFC and DOC we find

$$\frac{\sigma_r}{\frac{\sigma_{Y.P.}}{n} - \sigma_m} = \frac{\sigma_e}{\sigma_{Y.P.}}, \quad (f)$$

from which

$$\frac{1}{n} = \frac{\sigma_r}{\sigma_e} + \frac{\sigma_m}{\sigma_{Y.P.}} \quad (315)$$

and

$$\sigma_r = \frac{\sigma_e}{n} \frac{1}{1 + \frac{\sigma_e}{\sigma_{Y.P.}} \frac{\sigma_m}{\sigma_r}}; \quad \sigma_m = \frac{\sigma_{Y.P.}}{n} \frac{1}{1 + \frac{\sigma_{Y.P.}}{\sigma_e} \frac{\sigma_r}{\sigma_m}}. \quad (316)$$

It is seen that for any given value of the ratio σ_r/σ_m the allowable values of σ_r and σ_m are obtained from equations (316) if the values of σ_e and $\sigma_{Y.P.}$ are known from tests, and the magnitude of the factor of safety n is selected. As an illustration of the application of these equations let us assume that a prismatical bar of steel having $\sigma_{Y.P.} = 42,000$ lbs. per sq. in. and $\sigma_e = 30,000$ lbs. per sq. in. is submitted to repeated stresses, varying between the limits 0 and σ_{\max} . Then

$$\sigma_r = \sigma_m = \frac{\sigma_{\max}}{2}, \quad \frac{\sigma_m}{\sigma_r} = 1,$$

and for $n = 2$ we find, from eqs. 316,

$$\sigma_r = \frac{30,000}{2} \frac{1}{1 + \frac{1}{1.4}} = 8,750 \text{ lbs. per sq. in.};$$

$$\sigma_m = \frac{42,000}{2} \frac{1}{1 + 1.4} = 8,750 \text{ lbs. per sq. in.}$$

Hence

$$\sigma_{\max} = \sigma_m + \sigma_r = 17,500 \text{ lbs. per sq. in.}$$

In the above discussion it is assumed that we are dealing with a prismatical bar and that the direct stress is obtained by dividing the axial force by the cross-sectional area of the bar. If the form of the bar is such that there is stress concentration at certain points, as, for example, in a bar with fillets or in a bar with a hole, this stress concentration must be considered in selecting allowable stresses. Experience shows that a satisfactory design is obtained if the stress concentration is considered only in dealing with the variable portion of the stress and disregarded when calculating the constant mean stress. Some justification of this procedure is obtained if we consider the case in which the acting forces increase above the allowable limit and some yielding of a ductile material, such as steel, occurs at the points of high stress concentration. As a result of such yielding, cycles of stress finally will be established for which $\sigma_{\max} = \sigma_{Y.P.}$. Since for cycles in which $\sigma_{\max} \leq \sigma_{Y.P.}$ the range of stress is practically independent of the magnitude of the mean stress,¹⁵⁶ the omitting of the factor of stress concentration in the calculation of mean stress does not effect the conclusion regarding the fatigue strength. Using the symbols σ_m and σ_r for the nominal values of stresses (neglecting stress concentration) and the symbol k for the factor of stress concentration, which is applied only to variable stress, we obtain the allowable values of σ_m and σ_r by substituting $k\sigma_r$ instead of σ_r in equations (315) and (316), which gives

$$\frac{1}{n} = \frac{k\sigma_r}{\sigma_e} + \frac{\sigma_m}{\sigma_{Y.P.}}, \quad (317)$$

$$\sigma_r = \frac{\sigma_e}{kn} \frac{1}{1 + \frac{\sigma_e}{\sigma_{Y.P.}} \frac{\sigma_m}{k\sigma_r}}, \quad \sigma_m = \frac{\sigma_{Y.P.}}{n} \frac{1}{1 + \frac{\sigma_{Y.P.}}{\sigma_e} \frac{k\sigma_r}{\sigma_m}}. \quad (318)$$

¹⁵⁶ See R. E. Peterson's discussion in Proceedings Am. Soc. Test. Mat., Vol. 37, 1937.

Considering again the bar of the previous example and assuming, for example, that the local stress concentration is such that $k = 2$, we obtain from equations (318)

$$\sigma_r = \frac{30,000}{2 \times 2} \frac{1}{1 + \frac{1}{1.4} \cdot \frac{1}{2}} = 5,530 \text{ lbs. per sq. in.};$$

$$\sigma_m = \frac{42,000}{2} \frac{1}{1 + 1.4 \times 2} = 5,530 \text{ lbs. per sq. in.};$$

$$\sigma_{\max} = \sigma_r + \sigma_m = 11,060 \text{ lbs. per sq. in.}$$

Equations (318) can also be used in bending. Suppose, for instance, that a shaft of steel with $\sigma_{Y.P.} = 42,000$ lbs. per sq. in. and $\sigma_e = 30,000$ lbs. per sq. in. is bent by its own weight while rotating. Then $\sigma_m = 0$ and, assuming, for example, $n = 2$ and $k = 1.7$, we would have

$$\sigma_r = \frac{\sigma_e}{kn} = \frac{30,000}{1.7 \times 2} = 8,800 \text{ lbs. per sq. in.},$$

which represents the maximum nominal bending stress allowable in this case.

Since the endurance limit in shear is usually not far from half the endurance limit in reversed direct stress (see p. 435) we can assume that the maximum shear theory, which was originally proposed for constant stresses, applies also in cases where fracture occurs due to fatigue.¹⁵⁷ Hence for pure shear, using the notations τ_r and τ_m for the reversed and constant parts of the stress, and k for the factor of stress concentration, we find, from eqs. (318),

$$\tau_r = \frac{\sigma_e}{2kn} \frac{1}{1 + \frac{\sigma_e}{\sigma_{Y.P.}} \frac{\tau_m}{k\tau_r}}; \quad \tau_m = \frac{\sigma_{Y.P.}}{2n} \frac{1}{1 + \frac{\sigma_{Y.P.}}{\sigma_e} \frac{k\tau_r}{\tau_m}}. \quad (319)$$

¹⁵⁷ Application of various strength theories to fluctuating stresses is discussed by J. Marin, Journal Appl. Mech., Vol. 4, p. 55, 1937.

Assume, for example, that a shaft of the same material as above is submitted to a pulsating torque such that $\tau_{\min} = \frac{1}{2}\tau_{\max}$ and that the dimensions are such that the factor of stress concentration at the fillets (see p. 335) is $k = 1.7$. Then

$$\tau_m = \frac{\tau_{\max} + \tau_{\min}}{2} = \frac{3}{4}\tau_{\max}; \quad \tau_r = \frac{\tau_{\max} - \tau_{\min}}{2} = \frac{1}{4}\tau_{\max}.$$

Assuming a factor of safety $n = 2$, we find, from eq. (319),

$$\tau_r = \frac{30,000}{2 \times 1.7 \times 2} \frac{1}{1 + \frac{1}{1.4} \times \frac{3}{1.7}} = 1,950 \text{ lbs. per sq. in.};$$

$$\tau_m = \frac{42,000}{4} \frac{1}{1 + 1.4 \times \frac{1.7}{3}} = 5,860 \text{ lbs. per sq. in.};$$

$$\tau_{\max} = \tau_m + \tau_r = 7,810 \text{ lbs. per sq. in.}$$

Equation (319) can also be used for the general case of stress condition represented in Fig. 304, provided the plane of maximum shear remains immovable in the material, while the principal stresses vary.¹⁵⁸ In this case

$$\tau_{\max} = \left(\frac{\sigma_x - \sigma_z}{2} \right)_{\max}, \quad \tau_{\min} = \left(\frac{\sigma_x - \sigma_z}{2} \right)_{\min}$$

and the quantities

$$\tau_m = \frac{\tau_{\max} + \tau_{\min}}{2} \quad \text{and} \quad \tau_r = \frac{\tau_{\max} - \tau_{\min}}{2}$$

are determined from eqs. (319).

There are sometimes more complicated cases, when not only the magnitude of the maximum shearing stress but also the position in the body of the plane in which it occurs changes. The simplest case of this kind is that of combined bending and torsion. For this case the nominal value of the maximum shearing stress is (see eq. 161, p. 278, Part I)

¹⁵⁸ Such a condition we have, for example, in the case of combined reversed bending and reversed torsion if the bending and the torsion moments are in phase.

$$\tau_{\max} = \frac{16}{\pi d^3} \sqrt{M^2 + M_t^2}, \quad (g)$$

where M and M_t are the maximum values of the bending and of the twisting moments respectively. In calculating the diameter d from this equation we substitute $\sigma_{Y.P.}/2n$ for τ_{\max} , as for static conditions, and take care of fluctuation of stresses by multiplying M and M_t by certain numerical factors m and m_1 , so that the equation for determining d becomes

$$\frac{\sigma_{Y.P.}}{2n} = \frac{16}{\pi d^3} \sqrt{(mM)^2 + (m_1M_t)^2}. \quad (320)$$

The values of m and m_1 depend on the relative values of the moments M and M_t and on their fluctuation. A satisfactory working formula will be obtained if the values m and m_1 are chosen so as to satisfy the two extreme conditions: (1) when $M_t = 0$, and we have a fluctuating bending and (2) when $M = 0$, and we have a fluctuating torque. For these two extreme conditions equation (320) gives

$$\frac{\sigma_{Y.P.}}{2n} = \frac{16}{\pi d^3} mM, \quad (h)$$

$$\frac{\sigma_{Y.P.}}{2n} = \frac{16}{\pi d^3} m_1 M_t. \quad (i)$$

The first of these equations corresponds to the fluctuating bending and the second to the fluctuating torsion. Both these cases were already discussed, and we have only to adjust the factors m and m_1 so as to bring equations (h) and (i) into coincidence with the previous equations (318) and (319). Let us begin with the case of fluctuating bending and use the symbols M_m and M_r for the mean value and the variable value of the fluctuating bending moment M , so that

$$M = M_m + M_r. \quad (j)$$

The corresponding nominal values of stresses are

$$\sigma_m = \frac{32M_m}{\pi d^3} \quad \text{and} \quad \sigma_r = \frac{32M_r}{\pi d^3}, \quad (k)$$

and

$$M = M_m + M_r = \frac{\pi d^3}{32} (\sigma_m + \tau_r).$$

Substituting this value of M in the equation (h), we obtain

$$\frac{\sigma_{Y.P.}}{n} = m(\sigma_m + \tau_r). \quad (l)$$

If there is no stress concentration, this equation must coincide with equation (315). Hence

$$\frac{m(\sigma_m + \tau_r)}{\sigma_{Y.P.}} = \frac{\sigma_r}{\sigma_e} + \frac{\sigma_m}{\sigma_{Y.P.}}, \quad (m)$$

and

$$m = \frac{1 + \frac{\sigma_r}{\sigma_m} \frac{\sigma_{Y.P.}}{\sigma_e}}{1 + \frac{\sigma_r}{\sigma_m}}. \quad (n)$$

Since $\sigma_{Y.P.}$, σ_e and the ratio σ_r/σ_m are known, the factor m is readily calculated from the equation (n). If there is stress concentration, the equation (l) must coincide with equation (317) and we obtain

$$m = \frac{1 + k \frac{\sigma_{Y.P.}}{\sigma_e} \frac{\sigma_r}{\sigma_m}}{1 + \frac{\sigma_r}{\sigma_m}}. \quad (o)$$

Considering in the same manner the fluctuating torque given by equation (i), we obtain

$$m_1 = \frac{1 + k_1 \frac{\sigma_{Y.P.}}{\sigma_e} \frac{\tau_r}{\tau_m}}{1 + \frac{\tau_r}{\tau_m}}, \quad (p)$$

in which k_1 is the factor of stress concentration in torsion, which is generally different from k , the factor for bending.

It is seen that for given values of the fluctuating bending and torsion moments the values of the factors m and m_1 can

be calculated from equations (o) and (p). The necessary diameter is then obtained from equation (320).

As an example take a shaft of the same material as considered before and assume that the bending moment M is completely reversed¹⁵⁹ and the torque fluctuates in such a way that $M_i = (M_i)_m(1 \pm 0.1)$. If the proportions of fillets are such that the factor of stress concentration in bending¹⁶⁰ $k = 1.7$ and the factor of stress concentration in twist $k_1 = 1.7$,¹⁶¹ then by substituting $\sigma_m = 0$ and $\tau_r = 0.1\tau_m$, we obtain from eqs. (o) and (p)

$$m = k \frac{\sigma_{Y.P.}}{\sigma_e} = 1.7 \times 1.4 = 2.38; \quad m_1 = \frac{1 + 1.7 \times 1.4 \times 0.1}{1 + 0.1} = 1.13.$$

The diameter of the shaft can be obtained by substituting these in eq. (320).

In the previous discussion it was assumed that the dimensions are determined by strength considerations only. There are sometimes additional requirements which must be considered in design. There are cases in which a limiting deflection is prescribed and must be taken as a basis for calculating the dimensions. The deflection is of great importance in cases in which vibration of the system is to be considered. Sometimes there are requirements regarding the maximum deflection of beams or girders. Shafts must sometimes satisfy requirements regarding the angle of twist per unit length.

In the case of structures submitted to the action of high temperature the design must be based on the assumption of a certain duration of service of the structure and of a certain amount of distortion which can be considered as permissible. The working stresses are chosen so that the distortion of the structure during its life time will not exceed a definite limit depending on the type of structure (see art. 82).

¹⁵⁹ This is always the case when the rotating shaft is under the action of loads fixed in space.

¹⁶⁰ If we determine k from the same table as used for the two-dimensional problem shown in Fig. 210, we shall always be on the safe side.

¹⁶¹ It is assumed that the stress concentrations in bending and twist are at the same point. This is approximately true at the fillets of shafts of variable diameter.

From all this discussion it may be seen that the choice of working stresses is a very important and at the same time a very complicated problem. In establishing the factor of safety n the designer must always be guided by past experience. The above discussion giving a comparison of the working stresses for various stress conditions is not intended to replace the use of past experience but may be helpful in interpreting this experience and in arriving at a design which is equally strong in all parts. It may be useful also in making comparisons of different designs and in comparing the strengths of existing structures. The study of actual failures and the investigation of the causes of these failures in the light of the above theoretical discussion form a very useful method for acquiring a deeper knowledge of the strength of our structures.¹⁶² Combining such an analysis of failures with theoretical investigations of the stress distribution in various cases and with laboratory investigations of the strength of materials under various stress conditions will enable us to accumulate a more reliable knowledge, of the actual strength of structures. When we have such knowledge, the present specifications for working stresses in various branches of engineering can be considerably improved. This will without doubt result in an economy of material and in greater reliability for structures and machines.

¹⁶² In this respect such publications as Technical Reports, British Engine, Boiler, El. Insurance Co. are of great practical importance.

Mechanical Properties of Steels

Num- ber	Material	State	Proport. Limit lbs./in. ²	Yield Point lbs./in. ²	Ultim. Strength lbs./in. ²	Elong. on 2 ins. %	Reduction Area %	Endur- ance Limit lbs./in. ²	Remarks
1 ¹	.37 C, .55 Mn	Annealed at 850° C.	36,500	37,800	70,000	32	49	± 29,000	Bar 2½ in. diam.
2 ¹	"	Normalized at 850° C.	38,000	41,500	79,200	29	46	± 29,300	"
3 ¹	"	Heat-treated, Water at 850° C., Temp. at 550° C.	65,000	69,000	105,000	22	56	± 51,000	"
4 ²	.49 C, .46 Mn	Normalized at 910° C.	44,700	47,100	91,500	27	40	± 33,000	Bar 1½ in. square
5 ²	"	Heat-treated, Oil at 790° C., Temp. at 430° C.	75,800	78,800	121,800	11.3	51	± 64,000	"
6 ¹	.35 C, .45 Mn, 3.4 Ni	Rolled	47,000	60,000	105,000	21	42	± 41,000	Plate 3½ ft. x 2 ft. x 2 in.
7 ¹	"	Annealed at 840° C.	52,000	60,000	104,000	22	49	± 44,000	"
8 ¹	"	Normalized at 840° C., Temp. at 730° C.	52,000	56,000	94,000	25	48	± 47,500	"
9 ¹	"	Heat-treated, Water at 800° C., Temp. at 600° C.	72,000	77,000	107,000	23	56	± 52,000	"

Mechanical Properties of Steels (Continued)

Num- ber	Material	State	Proport. Limit lbs./in. ²	Yield Point lbs./in. ²	Ultim. Strength lbs./in. ²	Elong. on 2 ins. %	Reduction Area %	Endur- ance Limit lbs./in. ²	Remarks
10 ²	.24 C, .37 Mn, 3.3 Ni, .87 Cr	Annealed at 780° C.	56,700	60,000	87,000	33	67	± 49,000	Bar 2 in. x 1 in.
11 ²	"	Heat-treated, Oil 830° C.	115,000	128,000	138,000	18	62	± 68,000	"
12 ³	.30 C, .56 Mn, 4.3 Ni, 1.4 Cr	Air-hardened from 800° C.	45,000	177,000	244,000	10.8	37	± 102,000	Bar 1½ in diam.
13 ³	"	Air-hardened from 800° C., Temp. 600° C.	92,000	142,000	157,000	17.5	55	± 80,000	"
14 ¹	.32 C, .74 Mn .32 Si	Cast	20,000	33,500	76,000	26	34	± 30,500	Bar 2¼ in. x 1¼ in.
15 ¹	"	Annealed at 925° C.	37,000	41,000	80,000	27	40	± 35,000	"
16 ¹	"	Normalized at 925° C.	40,500	46,000	85,000	28	46	± 35,000	"

¹ Research Laboratory, Westinghouse El. & Mfg. Co. See Applied Elasticity, S. Timoshenko and J. M. Lessells, 1924, p. 522.

² Bulletin of Univ. of Illinois, nr. 136, p. 33. H. F. Moore and T. Jasper.

³ Engineering Steels, p. 209, L. Aitchison, 1921.

AUTHOR INDEX

- Almen, J. O., 183
 Anderson, C., 383
 Archer, R. S., 408
 Axelson, K., 167
- Bach, C., 398, 404, 482
 Bailey, R. W., 468, 472, 473
 Bairstow, L., 459
 Bantlin, A., 107
 Barker, L. H., 263
 Basquin, O. H., 432
 Batson, R. G., 396
 Bauer, O., 414
 Baugher, J. W., 243
 Baumann, R. W., 85
 Bauschinger, J., 409, 433, 459
 Bauschlicher, A., 357
 Becker, A. J., 477
 Becker, E., 427, 473
 Behrens, O., 440
 Beke, J., 85
 Bell, H. C., 180
 Beltrami, 476
 Bennewitz, 426
 Bierett, G., 85
 Biezeno, C. B., 112, 113
 Biot, M. A., 1
 Bleich, Fr., 85
 Blumenfeld, 85
 Böker, R., 482
 Boobnov, J., 20, 41, 121
 Boone, W. D., 438
 Böttcher, K., 75
 Boussinesq, J., 104, 324, 355
 Bradley, J., 438, 466
 Brauer, H., 100
 Brecht, W. A., 183
 Bredt, R., 100, 278
 Bresse, J. A. C. H., 90, 218
 Brewster, D., 346
 Bridgman, P. W., 413
 Brown, R. M., 436
- Brown, S. J., 392
 Bruno, Eck, 145
 Bryan, G. H., 225
 Buchholtz, H., 441
 Buckley, 301
 Bühler, H., 441
 Burges, R. W., 193
 Burke, W. F., 90
 Burzyński, W., 480
 Byerley, 44
- Carpenter, H. C., 413
 Carrington, H., 142
 Castigliano, A., 91
 Chitty, L., 343
 Chwalla, E., 56, 219, 228, 230, 234
 Clarck, C. L., 466
 Clapeyron, 239
 Clenshaw, W. J., 466
 Coates, W. M., 167
 Codron, C., 154
 Coker, E. G., 85, 322, 346
 Cook, G., 170, 220
 Cox, H. L., 75, 94
 Cross, H. C., 463
 Crumbiegel, J., 342
 Czochralski, J., 413
- Davidenkow, N. N., 383, 395
 Den Hartog, J. P., 324
 De Forest, A. V., 346
 Dickenson, J. H. S., 466
 Dietrich, O., 346
 Dinnik, A., 208, 219
 Domke, O., 193
 Donath, M., 253
 Donnell, L. H., 250, 345, 409
 Driessen, M. G., 254
 Dusold, Th., 440
 Düsterbehn, F., 112
- Ebner, H., 59

- Edwards, C. A., 413
 Eichelberg, G., 264
 Eichinger, A., 371, 479
 Elam, C. F., 413
 Engesser, F., 211
 Ensslin, M., 154
 Euler, L., 185
 Everett, F. L., 472
 Ewing, J. A., 406, 461

Fairbairn, W., 225, 432
 Favre, H., 347
 Fisher, A., 253
 Föppl, A., 277, 329, 358, 403
 Föppl, O., 427, 440, 451
 France, 430
 French, H. J., 437, 463, 466
 Friedmann, H., 93
 Fritsche, J., 379
 Frocht, M. M., 85, 319, 338
 Fromm, H., 360, 427
 Fry, A., 346
 Fuller, T. S., 440

Garabedian, G. A., 149
 Gehler, W., 404
 Gerber, W., 433
 Girkmann, K., 56, 379
 Girtler, 476
 Göhner, O., 305, 307
 Göler, F., 414
 Golovin, H., 65
 Goodier, J. N., 264
 Gough, H. J., 75, 94, 428, 429, 433, 434, 440, 461, 462
 Goupil, M., 90
 Grammel, R., 177, 251, 254
 Grashof, F., 65
 Greenhill, A. G., 324
 Greer, E., 346
 Griffith, A. A., 55, 267, 271, 323
 Gross, S., 183
 Grüneisen, 404
 Grüning, M., 379
 Guest, J. J., 475
 Guy, H. L., 463

Haigh, B. P., 434, 439, 445, 476, 477

- Halliwell, 468
 Halphen, 193
 Hanson, D., 462
 Hartman, 415
 Hayashi, I
 Hearle, H., 254
 Held, A., 254
 Hencky, H., 144, 148, 250, 478
 Hensel, F. R., 472
 Herbert, H., 362
 Herz, H., 355
 Hetényi, M., 15, 50, 322, 352
 Heun, E., 418
 Hill, H. N., 85
 Hodgkinson, B., 253
 Hohenemser, K., 435
 Höhn, E., 167
 Holmberg, E. O., 167
 Honegger, C., 250
 Hopkinson, B., 427, 461
 Horger, O. J., 243, 436, 451
 Hovgaard, W., 107
 Huber, K., 283
 Huber, M. T., 478
 Huggenberger, A., 167, 243
 Humfrey, J. C. W., 461
 Hummel, 343
 Hurlbrink, E., 219

Inglis, C. E., 318
Inglis, N. P., 438
 Irwin, P. L., 430

Jacob, L., 392
 Jacobsen, L. S., 330, 334
 Janicki, W., 243
 Jasper, 435, 436, 437, 438
 Jeffries, Z., 408
 Jenkin, C. F., 427, 437
 Jensen, V. P., 359
 Joffe, A. F., 423, 426
 Johnston, B. G., 277
 Johnston, R. S., 345

Kalakoutzky, N., 395
 Kannenberg, B. G., 112
 Kappus, R., 295, 296
 Kármán, Th., 56, 107, 110, 194, 420, 482

 Kayser, H., 346
 Kelvin, Lord, 324
 Kent, C. H., 176
 Kerr, 463
 Kirsch, G., 313
 Kist, N. C., 379
 Koch, J. J., 113
 Kollbrunner, C. F., 219
 Kolossoff, G., 318
 Kommers, J. B., 429, 432, 436, 437, 441
 Körber, F., 345, 402, 412
 Köster, W., 414
 Krouse, G. N., 438
 Kuhn, P., 59
 Kühnel, 398, 451

Lamb, H., 104, 120
 Lamé, 239
 Langer, B. F., 1, 437
 Larmour, J., 324
 Larsen, E. I., 472
 Laszlo, A., 183
 Laszlo, F., 250
 Lees, C. H., 263
 Lehmann, G. D., 437
 Lehr, E., 318, 346, 435, 461
 Lobo, G., 154
 Lode, W., 479
 Longbottom, J. G., 100
 Lorenz, R., 170
 Ludwik, P., 398, 401, 418, 419, 421
 Lynch, T. D., 466
 Lyon, S. W., 438
 Lyse, I., 277

Maier-Leibnitz, 379
 Maillart, R., 55
 Malkin, I., 253
 Marbec, M., 90
 Mark, H., 413
 Marin, J., 469, 473, 475, 485, 490
 Martin, H. M., 253
 Masing, G., 408, 418
 Mason, W., 435
 Mathar, J., 85, 383
 Mattimore, J. D., 180
 Maulbetsch, J. L., 451
 Maxwell, J. C., 346

- Mayer, E., 362
 Mayer, Mita, 90
 Mayor, R., 104
 Mayrose, H. E., 113
 McAdam, 430, 435, 439, 440
 MacCullough, G. H., 473
 McGivern, J. G., 324
 MacGregor, C. W., 397, 398, 403, 415
 McVetty, P. G., 466, 467
 Meissner, E., 167
 Mellanby, 463
 Memmler, K., 194, 396
 Mesnager, A., 312, 346, 351
 Michell, A. G. M., 230
 Michell, J. H., 312, 329, 336
 Mindlin, R. D., 329
 Mises, R., 193, 224, 478
 Möchel, N. L., 466
 Mohr, O., 480
 Moore, H. F., 429, 432, 435, 436, 437, 438, 441
 Mörsch, E., 97
 Moser, M., 398
 Muir, I., 407
 Müller-Breslau, H., 112
 Müller, W., 412

Nádai, A., 148, 250, 384, 387, 388, 409, 473
 Nägel, A., 264
 Nelson, C. W., 243
 Neuber, H., 320, 321, 337
 Neumann, F. E., 346
 Newell, J. S., 37
 Nicolai, E. L., 219
 Niles, A. S., 37, 295
 Nusselt, W., 264

Olsson, R. G., 254
 Osgood, W. F., 44
 Ostenfeld, A., 283, 293

Parr, S. W., 412
 Pasternak, I
 Pearson, K., 55, 65
 Perry, I., 307
 Peterson, A. A., 463

- Peterson, R. E., 341, 351, 442, 445, 446, 449, 451, 490
 Pfeil, 413
 Pfeiderer, C., 154
 Pichler, O., 146
 Pilling, 468
 Pippard, A. J. S., 343
 Poisson, 135
 Polanyi, M., 408, 413
 Pollard, H. V., 435
 Pomp, A., 412, 424
 Pöschl, T., 167
 Prager, W., 1, 435
 Prandtl, L., 211, 230, 266, 404, 427
 Prescott, T., 278
 Pretschner, W., 295
 Preuss, E., 85, 342

 Quednau, H., 264

 Rees, 408
 Reinhardt, E., 93
 Reinhardt, K., 100
 Reissner, E., 56
 Reissner, H., 56, 85, 167, 225, 284
 Résal, H., 65, 90, 93
 Ribière, C., 65
 Rinne, 404
 Ritchie, E. G., 113
 Robinson, E. L., 466
 Rohland, W., 402
 Roos, J. O., 429
 Roš, M., 479
 Roth, 477
 Rötscher, F., 342
 Rowett, 427
 Rühl, D., 85
 Runge, C., 167
 Russell, G. M., 142
 Russell, H. W., 437, 438

 Saalschütz, 193
 Sachs, G., 395, 397, 405, 412, 414
 Saint-Venant, 113, 149, 265, 307, 362, 367, 384, 389
 Sanden, K., 1, 170
 Scheu, R., 421
 Schilhansl, M., 154
 Schleicher, F., 1, 473, 479, 480
 Schmid, E., 413
 Schulz, E. H., 441
 Schwinning, 357
 Scoble, W. A., 475
 Searle, G. F. C., 120
 Seegar, M., 55
 Shearer, G. W., 307
 Siebel, E., 345, 424
 Slater, A., 159
 Smith, C. A., 475
 Smith-Petersen, N. O., 180
 Soderberg, C. R., 473, 488
 Sonntag, R., 329
 Sopwith, D. G., 75, 94, 440
 Southwell, R. V., 220
 Steinhardt, O., 112
 Stodola, A., 253, 264, 343
 Straub, F. G., 412
 Strauch, F., 85
 Stribeck, 357
 Stutz, I., 112
 Schwerin, E., 100

 Tait, 307, 324
 Takemura, K., 85
 Tapsel, H. J., 438, 466, 471
 Taylor, G. I., 55, 267, 271, 413
 Taylor, J. H., 154
 Terzaghi, K., 167
 Thomas, W. N., 441
 Thompson, W., 307, 423
 Thum, A., 442, 449, 451
 Timpe, A., 65
 Trefftz, E., 329
 Tucker, W. A., 466
 Turner, L. B., 389, 392, 475
 Tuzi, Z., 347, 349

 Ude, H., 449
 Unold, G., 112
 Unwin, 433

 Van der Fleet, A. P., 32, 41
 Van den Broek, J. A., 91, 379
 Versé, G., 465
 Voropaëff, M., 85, 343

- Wadlow, E. C., 91
 Wagner, H., 295, 297
 Wahl, A. M., 107, 154, 179, 183, 341, 351, 445, 451, 488
 Waters, E. O., 154, 180
 Wawrziniok, O., 396
 Way, S., 125, 441, 455, 456
 Weber, C., 55, 266, 283, 297, 301, 328
 Wehage, 475
 Welcker, W. A., 437, 438
 Weller, R., 352
 Westergaard, H. M., 144, 159, 329
 Westphal, M., 170
 Weyrauch, J. J., 97
 White, A. E., 466
 Wieghardt, 1
 Wilhelm, R. B., 463
 Willers, F. A., 329, 332

 Williams, G. T., 427, 461
 Wilson, C., 346, 355
 Wilson, J. S., 445
 Wilson, W. M., 359
 Winkler, E., 65
 Wishart, H. B., 438
 Wöhler, A., 433
 Wunderlich, F., 451
 Wyss, T., 342

 Yosokawa, Y., 85
 Young, D. H., 215

 Zander, W., 441
 Zavriev, K. S., 33
 Zimmermann, A., 1, 35
 Zulzer, R., 264

SUBJECT INDEX

Numbers refer to pages

- Arch, hinged at the ends, 94
 - buckling of a circular, 219
- Assembly stresses in built-up cylinders, 241
- Balls and rollers, 355
- Ball bearings, stresses in, 359
- Bars, curved, Chapter II, 65
- Beams, on elastic foundation, 1
 - on elastic supports, 20
- Belleville spring, 182
- Bending, beyond elastic limit, 362
 - combined with direct stress, 25
 - in thin shells, 164
 - of bars with small curvature, 104
 - of curved bars, 65
 - of curved tubes, 107
 - of helical springs, 308
 - of thin plates, 119
- Buckling load, 184
 - effect of shearing force on, 209
 - energy method in investigating, 199
- Buckling, lateral, of beams, 229
 - of bars of variable cross section, 198, 207
 - of built-up columns, 211
 - of a circular arch, 219
 - of a circular ring, 216
 - of compression members, 184
 - of latticed struts, 211
 - of a pillar uniformly loaded, 205
 - of plate girders, 228
 - of plates, 224
 - of a rectangular frame, 195
 - of tubes, 219
 - of tubular sections, 228
- Buckling with torsion, 295
- Built-up, columns, 211
 - cylinders, 241
- Carbon steel, effect of carbon on the
 - tensile properties, 397
 - fatigue tests on, 497
 - high temperature tests of, 463
 - mechanical properties of, 497
 - overstrain of, 406
- Cast iron, compression tests on, 404
- Castigliano theorem, application to curved bars, 81
- Center of twist, 51, 292
- Chain link, 87
 - with a stud, 93
- Circular hole, in rotating disc, 246
 - in tension member, 313, 317
 - in twisted shafts, 317, 324
 - with a bead, 317
- Circular membrane, 144
- Circular plate, loaded at the center, 146
 - of a variable thickness, 145
 - symmetrically loaded, 135
 - uniformly loaded, 139
 - with concentric loading, 149
 - with a hole at the center, 151
- Circular ring, bending by two opposite forces, 80
 - buckling of, 216
 - deflection curve of, 101
 - twist of, 172
- Cold work effect, in tension, 406
 - in fatigue, 436
- Cold rolling of surface, 451
- Collapse of tubes under external pressure, 219
- Columns, theory of, 184
- Combined, bending and compression, 25
 - bending and tension, 39
- Combined stress, failure under, 473
- Compound cylinders, 241
- Compression of balls and rollers, 355
- Compression tests, 403

- Concentration of stress, Chapter VII, 312
 in shafts of variable diameter, 335
 in tension compression members, 312
 in torsion of tubular sections, 326
 in twist of shafts, 317, 324
- Conical ring, 182
- Conical tank, 161
- Contact stresses, 355
- Continuous struts, 35
- Corrosion fatigue, 439
- Creep at high temperature, 466
- Creep rate, 467
- Creep in torsion, 472
- Critical load, 184
 determination of, by energy method, 199
 for a bar with built-in ends, 188
 for a bar with one end built-in, another hinged, 190
 for a hinged bar, 187
 for a pillar, 187
 for continuous struts, 191
- Critical pressure for a circular ring, 216
 for an arch, 219
 for a tube, 219
- Critical stress, 189
- Crystal, mechanical properties of, 413
- Curved bars, bending perpendicular to the plane of initial curvature, 112
 bending stresses in, 65
 deflection of, 79
 neutral axis in, 66
 of circular cross section, 73
 of rectangular cross section, 69
 of T and I cross section, 72
 of trapezoidal cross section, 71
 theory of bending of, Chapter II, 65
 with circular axis, 101
 with small initial curvature, 104
- Curved tubes, of circular cross section, 107
 of rectangular cross section, 111
- Cylinder, built-up, 241
 deformation of thick-walled, 236
 deformation of thin-walled, 162
 plastic deformation of, 389
 shrink fit stresses in, 241
 stresses in, 239
- thermal stresses in, 174
 thin, with spherical heads, 164
- Cylindrical shell, 162
 thermal stresses in, 173
- Cylindrical surface, bending of plates to a, 119
- Cylindrical tube, buckling under pressure, 219
 deformation symmetrical about the axis, 165
 shrink fit stresses in, 169
 with reinforcing ring, 169, 171
- Damage** curve, 437
- Damping properties of materials, 427
- Deflection of beams, under direct and lateral loading, 25
 on elastic foundation, 1
 with small initial curvature, 104
- Deflection, of circular rings, 101
 of conical rings, 182
 of curved bars, 79
 of flanges, 180
- Deflection of plates, circular, having central hole, 151
 circular, with clamped edge, 139
 circular, with supported edge, 140
 rectangular, 155
 rectangular, long, uniformly loaded, 119
- Deflection of rails, 8
- Deflection of struts, 25
 of tie-rods, 39
- Discontinuity stresses in thin-walled vessels, 165
- Discs, rotating, of constant thickness, 245
 stresses in, 247
 of varying thickness, 253
- Dovetail joint, 322
- Drum, rotating, 169
- Ductility, 399
 and stress concentration, 322
- Effect** of time, in tensile tests, 423
 in high temperature tests, 464
- Effective elongation, 401
- Effective width, 55, 112
- Elastic foundation, beams on, 1

- Elastic, hysteresis, 426, 461
 stability, 185
- Elastic properties, effect of speed on the, 425
 effect of temperature on the, 462
- Elliptical hole, in tension member, 318
 in twisted shaft, 325
- Elliptical ring, 90
- Elongation, in tensile test, 400
 effective, 401
- Endurance limit, in bending, 430
 in combined stress, 435
 in shear, 435
- Endurance test, 429
- Energy method, in column theory, 199
- Euler's column formulae, 185
- Exponential law, 405
- Eye-shaped ends, 85
- Factor**, of safety, 482
 of stress concentration, 319
- Failure, types of, 418
- Fatigue failures, 443
- Fatigue of metals, 428
 causes of, 459
 corrosion and, 439
 effect of cold work on, 436
 effect of form of test bars on, 442
 effect of residual stresses on, 441
 effect of speed on, 437
 effect of surface finish on, 441
 effect of understressing or overstressing on, 436
 temperature effect on, 438
- Fillet, stress concentration produced at, 320, 335, 339
- Flanges of tubes, bending of, 180
- Flexural rigidity of a plate, 120
- Flywheel rim, stress in, 98
- Foundation, elastic, 1
- Fracture, various types of, 418
- Frames, buckling of, 195
- Gears**, fatigue failures in, 444, 458
- Grooves, effect on stress concentration, in tension member, 319, 338
 in twist, 325
 effect on the type of fracture, 421
- Girders, buckling of the web of, 228
- Helical** springs, 304
- High temperature tests, 462
- Hole, circular, in tension member, 313
 in twisted shaft, 317, 324
 reinforced, 317
- Hole, elliptical, 318
- Hook, stresses in a, 75
- Hydrodynamical analogy in torsion, 324
- Hysteresis, 423
 elastic, 426, 461
 loops of, 427
 model for demonstrating, 427
- I-beams**, buckling of, 229
 torsion of, 275, 283
- Keyway**, stresses at, 325
- Lamé's** theory of thick-walled cylinders, 236
- Lateral loads on struts, 25
 on tie-rods, 39
- Latticed struts, 211
- Link of a chain, stress in, 87
 with a stud, 93
- Local bending in thin shells, 165
- Local stress, at fillets, 320, 335, 339
 at holes in a tension member, 313
 at holes in a twisted shaft, 317, 324
 at keyway, 325
- Loop of hysteresis, 427
- Lueders' lines, 343
- Membrane** analogy in torsion, 267, 387
- Membrane, circular, 144
- Membrane stresses, in shells, 164
- Middle plane of a plate, 130
- Models, in stress analysis, 342
- Modulus, of foundation, 1
 reduced, 365, 369
- Mohr's strength theory, 480
 application in twist of cast iron, 482
- Neutral**, axis in curved bars, 66
 surface in a plate, 130

- Notch, hyperbolic, stress concentration produced by, 321, 338
- Overstrain**, strain hardening, 406
effect on fatigue, 436
- Overstraining, of materials in machine parts, 409
recovery after, 407
residual stresses due to, 416
- Photo-elastic method**, 346
- Pillars, 184
- Pipes, bending of curved, 107
buckling of, 219
flanges, of, 180
reinforced, 171
- Piston ring, 92
- Pitting cracks, 456
- Pitting limit, 457
- Plasticity, Chapter VIII, 362
- Plastic, bending, 362
torsion, 383
deformation of thick cylinders, 389
- Plate, bending to a cylindrical surface, 119
buckling of, 224
circular, loaded at the center, 146
circular, symmetrically loaded, 135
circular, with a central hole, 151
circular, with concentric loading, 149
pure bending of, 129
rectangular, 121, 155
thermal stresses in, 133
- Polarized light, application in stress measurements, 346
- Proportional limit, 397
initial, 460
natural, 460
- Pure bending of plates, 129
- Railroad track stresses**, 8
- Range of stress, in fatigue tests, 429
effect of average stress on, 434
safe, 459
- Rate of extension at high temperature, 467
- Rectangular plate, 155
buckling of, 224
- Reduced length, 189
- Reduced width, 57
- Reduced modulus, 365, 369
- Reduction of area, 401
- Residual stresses due to plastic flow, 379, 386, 392, 416
experimental determination of, 382
- Reversed stress, 429
- Rings, circular, bending by two opposite forces, 80
circular, bending by forces perpendicular to the plane of the ring, 112
circular, buckling of, 216
elliptical, 90
stresses in rotating, 248
symmetrical, submitted to uniform pressure, 89
with parallel sides and semicircular ends, 87
- Rollers, stresses in, 355
fatigue failure of, 454
- Rotating discs, of variable thickness, 253
solid of uniform thickness, 245
with the hole at the center, 246
- Rotor, stresses produced by inertia forces, in 249, 252
- Roughness of surface, 455
- Season cracking**, 418
- Sensitivity index, 448
- Separation failure, 418
- Shaft, fatigue failure of, 443
non-circular, 265
of variable cross section, 329
stress concentration in, 329
- Shear center, 53, 292
- Shear theory, 475
application to thick-walled cylinders, 240
- Shearing force, effect on critical load, 209
- Shell, thin, 159
local bending in, 164
- Shrink fit stresses, 241
- Single crystal, mechanical properties of, 413
strain hardening of, 413
- Size effect in fatigue tests, 449
- Slenderness of a strut, 189
- Sliding failure, 418

- Slip bands, 415, 461
- Speed effect, in compression tests, 424
in tensile tests, 425
- Spherical shell, thin, 160
- Spherical seat, 356
- Spiral spring, 90
- Spring, Belleville, 182
spiral, 90
helical, 304
fatigue failure of, 445
- Square plate, rectangular plate, 115
- Stability, elastic, Chapter IV, 184
- Standard specimens, 396
- Strain energy, 476
- Strain hardening, at room temperature, 406
at high temperature, 471
of aluminum, 407
of copper, 409
of single crystals, 412
of wire, 411
- Strength theories, 473
- Strength at high temperature, 465
- Stress concentration, Chapter VII, 312
and fatigue, 442
at the point of load application, 352
in bending, 335
in tension, 313
in torsion, 324, 329
- Stresses, residual, 379, 386, 392, 416
thermal, 133, 258
- Struts, 184
approximate formulas for deflections of, 49
laterally loaded, 25
latticed, 211
trigonometric series applied to bending of, 44
- Superposition method, 29
limitation of, 59
- Surface failure, 454
- Surface rolling, 453
- Surface roughness, 455
- Tank**, conical, 161
cylindrical, 173
- Temperature effects, on the elastic properties, 462
on the modulus of elasticity, 464
- Tensile test, 396
- Thermal stresses, in cylinders, 258
in cylindrical shells, 174
in plates, 133
- Theory of strength, 473
maximum shear, 475
maximum strain, 474
maximum strain energy, 476
maximum stress, 474
- Thick-walled cylinder, 236
plastic deformation of, 389
- Thin-walled cylinder, 162
local bending in, 164
- Three moment equation, 36
- Thrust, on columns, 184
of an arch, 94
- Tie-rods laterally loaded, 39
- Time effect, in tension, 423, 465
at high temperature, 465
- Torsion, beyond elastic limit, 383
hydrodynamic analogy in, 324
membrane analogy in, 267
of a circular ring, 177
of channels, 275, 288
of I-beams, 275, 283
of non-circular shafts, 265
of rolled profile sections, 274
of shafts of variable diameter, 329
of thin strips, 301
of tubular sections, 278
- Torsion and tension, 299
- Torsion at high temperature, 472
- Torsional buckling, 295
- Trigonometric series, application to bending, 44
- Tubes, local bending in, 164
thermal stresses in, 173
- Twist center, 53, 292
- Ultimate strength**, 397
effect of high temperature on, 465
in shear, for cast iron, 482
- Ultimate value of bending moment, 370, 371

- Ultimate load, on a beam, 377
- Variable** cross section, buckling of bars
 of, 198, 207
 shafts of, 329
- Vessels, subjected to internal pressure, 159
 local bending in thin, 164
- Working** stresses, 482
 for brittle materials, 486
 for combined bending and compression,
 32
- for ductile materials, 485
 for simultaneous bending and torsion,
 492
 for variable stresses, 487
- Yield** point, 397, 398
 at high temperature, 464
 bending beyond, 362
 raising of the, 406
 speed effect on, 425
 under combined stress, 473